

Eagle•Cadet

Flex


USER MANUAL

VERSION: NEW ISSUE

CONTENT

- 1. External view and description of keys**
- 2. Features and Icon Definitions**
- 3. Turning on the pager**
- 4. Various functions**
 - 4.1. Receive and read messages**
 - 4.2. Message protection and unlock**
 - 4.3. Delete messages**
 - 4.4. Messages deletion selectively**
 - 4.5. Turn-off the pager**
 - 4.6. Time setting**
 - 4.7. Date setting**
 - 4.8. Alert setting**
 - 4.9. Audio alert setting**
 - 4.10. Alarm setting**
- 5. Attentions**

1. Appearance

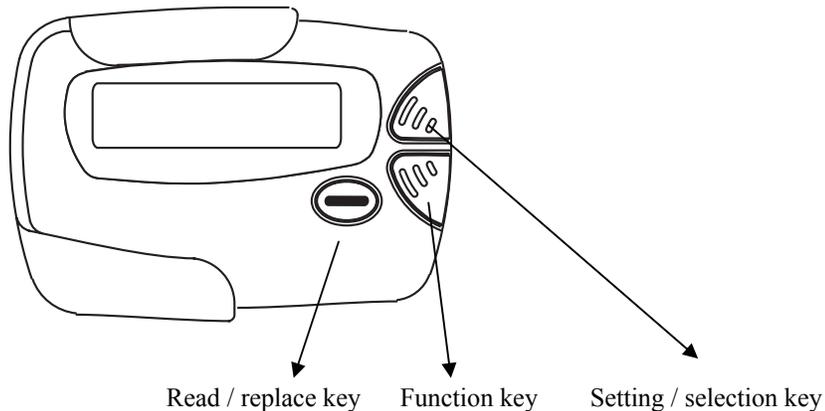

2. Table of display icons of the pager

◆ Menu indication icons

- 🔊 Sound alert mode is on
- 🔇 Mute / vibration mode is on
- 🔔 Alarm is on

◆ Message status display icons

- 📄 Message serial number and message resource indication icon
- 🔒 Message protection \ lock icon
- ▶ Message continue icon
- 📄 Duplicate message icon

◆ Function selection icons


- 🕒 Time setting
- 🔊 Sound alert setting
- 🔇 Mute / vibration mode setting
- 🔔 Alarm setting
- ✂ Message deletion

◆ Other display icons

- 🔋 Low battery warning
- 📶 Flash when out of receiving area

3. Turning on the pager

- ◆ After installed the battery, the pager will give out alert or vibration. Press Read / replace key then time and date will display on the menu.
- ◆ Turn on the pager to display:

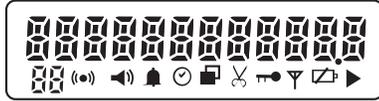

- ◆ Standby mode display while the pager is on audio alert



- ◆ Standby mode display while the pager is on vibration alert




Now your pager is in standby mode and can receive messages at any time.

- ◆ In standby mode with date displaying, press setting / selection key and the menu will display the week as follows:



You may press setting / selection key to select date or week as the standby mode display.

- ◆ Standby mode display while the pager is turned off:

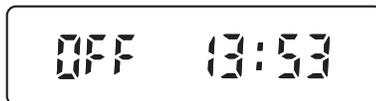

If needing to turn off the pager, you can select the “OFF?” function. Then press the setting /selection key to turn off the pager.

4. Usage of function selection

In standby mode, press function key to startup the function selection. You can press function key repeatedly till needed function emerges on the menu, then press setting /selection key to confirm and exert that function.

Note: If you want to retreat from any functions without any changes, please press Read / replace key . Or within 8 seconds, the pager will automatically return to standby mode display if no keys pressed.

- ◆ “SET ALERT?” function. Please consult “Alert setting”.



- ◆ “OFF?” function.



- ◆ “SET TIME?” function. Please consult “Time setting”.



- ◆ “SET DATE?” function. Please consult “Date setting”.




- ◆ “SET AUDIO?” function. Please consult “Audio alert setting”.



- ◆ “SET ALARM?” function. Please consult “Alarm setting”.



- ◆ “CLEAR ALL?” function. Please consult “Delete message”.

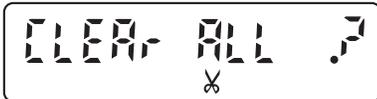

[If no message, all messages locked, or all message unread, “CLEAR ALL?” function will not emerge in function options.]

4.1. Receive and read messages

- ◆ Press Read / replace key to read messages. If there’s no message restored in the pager, “NO PAGES” indication will emerge on the menu.



- ◆ When the pager has received messages, unread messages will display as follows:



*showing there're 2 unread messages
and timed sound to remind the unread messages in a period of time.*

- ◆ When you press key to read messages, the content of the message will emerge on the menu.



first part of the menu [received message: 861 579 0234, time of receiving: at 13:53 noon of April 27.]

digit at the foot left corner shows the 8th message, and press Read / replace key again to show the time of receiving message on the menu.




second part of the menu [received message: 861 579 0234, time of receiving: at 13:53 noon of April 27.]

digit at the foot left corner shows the 1st address code and function call A .

- ◆ Press setting /selection key to read next message.
- ◆ At any time when you are reading messages, only pressing function key for 5 seconds you can return to standby mode. Your pager can automatically store the received messages and the time and date of receiving every message. When memory is full, “MEMORY FULL” indication will emerge to displace the time and date display on standby mode menu. Under such a circumstance, the receiving of any new message will lead to permanent deletion of the oldest and unlock message.



If the pager is full of unread messages and one unread message has been displaced by a newcome message, “OVERFLOW” indication will emerge on the pager.

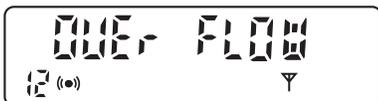

If the pager receives a duplicate message repeatedly, duplicate message icon will emerge on the message menu to show that the message is a duplicate one. Under such a circumstance, the receiving time of the message will be updated to the latest. If it's the same message with different resource, the two messages will not be regarded as the duplicate.


4.2. Message protection and unlock

You can “lock” or “protect” maximum of 15 messages in order not to be displaced by the newcome message when memory overflows.

- ◆ In order to lock or protect some message, press function key while reading the message. When “PROTECT?” emerges on the menu, press setting /selection key to lock the message. And the lock icon shows that the message has been locked.



- ◆ In order to unlock a message, press function key first, then press setting /selection key to unlock the locked message while reading the message.

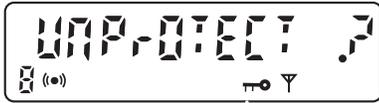


Note: “FULL” indication will emerge on the menu when you press setting /selection key to protect one more message while already having 15 messages locked.



4.3. Messages deleting selectively

- ◆ In order to selectively delete messages, press function key twice while reading messages. Then “DELETE?” indication will emerge on the menu.

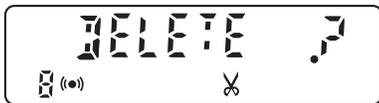

- ◆ Press setting /selection key to confirm the selective deletion.

4.4. Delete messages

The pager has two way of deleting messages.

- 1) Select “CLEAR ALL?” function to delete all read and unlock messages.
- 2) Select “DELETE?” selectively deleting function to delete some read message.




Press setting /selection key to confirm that all unlock and read message will be deleted.

Note: “CLEAR ALL?” function will not display in function selection items under the following circumstances:

- 1) No message stored.
- 2) All messages unread.
- 3) All messages have been read and locked.

4.5. Time setting

- ◆ When displaying “SET TIME?” function, press setting /selection key to enter time setting mode.

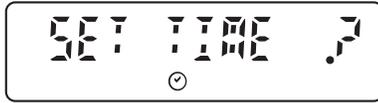


- 1) Press setting /selection key to move cursor from one flashing adessive to another. The order is HH—>MM—>A / P—>12Hr/24Hr.
 - 2) Press function key to adjust digit to the required time.
- ◆ Repeat step 1 and 2 until every digit gets to the required time. You can select 12 or 24 hour time display mode.
 - ◆ You may press Read / replace key to confirm your adjusted setting at any adessive.



- ◆ The pager will enter “SET DATE?” function option after time setting.

4.6. Date setting


- ◆ When displaying “SET DATE?” function, press setting /selection key to enter date setting mode.
- ◆ Press setting /selection key to move cursor from one adessive to another. The order is [MM—DD—YY].
- ◆ Press function key to adjust every digit to the required date.
- ◆ Repeat above steps until digit at every adessive gets to the required date.
- ◆ You may press Read / replace key to confirm your setting at any adessive.

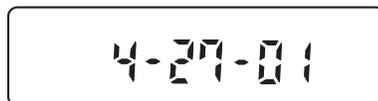

4.7. Alert setting

For “SET ALERT” function, there’s 3 alert modes.

- 1) “AUDIO?” alert selection: press Setting / selection key to set sound alert; or press function key to enter next option.

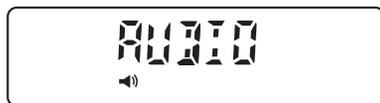

- 2) “MOTOR?” alert selection: press Setting / selection key to set vibration alert; or press function key to enter next option.



- 3) “MUTE?” alert selection: press Setting / selection key to confirm mute alert and enter mute receiving time setting. In this mode, the received message will only display on the menu without


sound or vibration.



4.8. Audio alert setting

For “SET AUDIO?” function, you can select one alert from the 5 alerts or 12 melody alerts for receiving messages or turning on the pager.

- ◆ When “SET AUDIO?” function emerges on the menu, press setting /selection key .
- ◆ Press function key till you get your desired alerts.After each selection, the pager will give out example alert for about 2 seconds.
- ◆ Press Setting / selection key to confirm your selection.

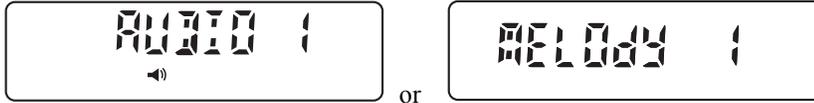

Note: if your pager is in mute or motor status, “SET AUDIO?” function will not appear in function selection items.

4.9. Time setting of mute receiving

You may set mute receiving time for 1 to 10 hours. By the time the pager will give out short alert and change to sound alert receiving mode. Or set permanent mute receiving until

resetting other alert mode.



This shows permanent mute receiving. Press setting /selection key to confirm this setting or press function key to enter next option.



It shows 1 hour mute receiving. The pager will give out short alert 1 hour later and enter sound alert receiving mode. Press setting /selection key to confirm this setting or press function key to enter next option

4.10. Alarm setting

Alarm function may be used for everyday alarm or dating reminder.

Note: You can set maximum of 3 alarms. Alarm 1 and 2 is for everyday timed alarm; alarm 3 is for dating reminder, only ringing once at some set time and not repeating ringing the next day.

- ◆ In “SET ALARM?” function, press setting /selection key to enter alarm setting mode.




- ◆ Press function key to select from alarm 1 , 2 or 3.



- ◆ Press Setting / selection key to confirm your selection.
- ◆ Press function key to select turning on or off alarm.
- ◆ Press setting /selection key to move to the adessive needed changing, then press function key to adjust to your needed alarm time.
- ◆ Repeat the above steps till digit in every adessive is adjusted to needed alarm time.
- ◆ Press Read / replace key to confirm your adjustment.

Alarm icon in standby mode or OFF mode shows an alarm is ON. Alarm icon will not display when all alarm released.

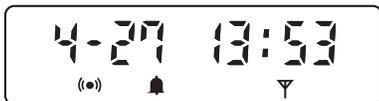

The pager will give out alert and display “ALARM” indication and flashing alarm ON icon when any alarm rings at set time.



5. Attentions:

- ◆ Avoid humidity, high temperature, magnetic field and fierce bumping.
- ◆ Please sent to service center for repair. Don't tear open and repair it yourself if there's something wrong with caller.
- ◆ The pager can receive signal within the range covered by elective wave call system emits.

United Communications Corporation

888-763-7550

www.uccwireless.com