RFID Access Control System(No keypad)

User Manual

Please read the operation steps before installation

I. Introduction

This series Access Controller is the use of industrial-grade single-door controller chip design, operating procedures of humanized operation, a management card to add and delete users, you can change the door delay time, the material used Japanese import resin sealing compound and it is very stable and with high capacity, fast response, simple operation. This is the ideal equipment for high waterproof requirements and can be working in a bad environment, and other places.

II. Functional description

- 1. 2000 users capacity(ID/IC optional)
- 2. Add or delete user card by the management card
- 3. Change the door relay time by the management card
- 4. Can be connected a additional Wiegand card reader
- 5. The signal to open the door is output by relay directly(NO / NC optional)

III. Technical parameters

				
	1	Working DC power	DC power supply: 12 ± 10%;	
			Voltage current <0.1A	
	2	Maximum output	lock current: ≤ 2000MA	
	3	Ambient temperature	-20 ℃ ~ 70 ℃	
	4	Relative humidity	20% ~ 90%	
	5	Storage capacity	2000 user card, 1 card management	
	6	Read Range	3-15CM	
	7	Reader types	EM or MF1 card	

IV. Operating instructions

1. Setting the Management Card

Please connect Brown line and GND line and power on, the red light will be bright. There will be three seconds to add the management card,. After finished adding the Management Card , then you will hear beeps twice and red&green light will be flashes both. Please power off and remove the brown line, and power on again , then adding management card is finished.

If you would like to replace the management card, please operate the process as above ,then the new management card will be instead of the old.

2.Format the old data

Please connect purple line and GND line and power on. After 3 seconds , then you will hear beeps twice, the red&green light will be flashed both. Please power off and remove the purple line, and power on again , then all the users data will be cleared up.

Note: When the user data i cleared up and it can't be restored, please use caution.

- 3. Setting the delay time for open the door
- 1, Connect Gray, brown and purple lines together.

- 2, Connect Red and Black line to 12V power supply. RED and Green light will blinking together.
- 3, swipe master card, how many times you swipe master card, it is how many seconds for door open delay.
- 4, make gray and brown and purple seperate.
- 5, After make seperate, the LED will become RED.
- 6, Set successfully.

Note: Initialize the RFID Access control ,its default relay time is 10 seconds.

4. Add user card

Please power on RFID Access Control and swipe management card and wait for a second ,then red light will be off and green light will be flashed, please swipe the new user card, then you will hear Didi twice,it means enrollment successfully. IF you add a registered user card, you will hear a long-beep sound when you swipe card. For the registered card ,you can't be added it again. After finished adding new cards, please swipe your management card to exit. If you not swipe management card, the rfid access control system will be exited after 10 seconds.

5. Delete user card

Please power on RFID Access Control and swipe card twice in a second, red light will be off, the green light will be flashed and swiping card that need to be deleted then you will hear the beeps twice, it shows that deleting user card successfully. (IF you delete a unregistered user card, you will hear a long-beep sound when you swipe card.)After finished deleting ,please swipe your management card to exit. If you not swipe management card, the rfid access control system will be exited after 10seconds.

V. Wiring instructions

, i de la constantia del constantia della constantia della constantia della constantia dell			
Red	+ (9-12V)		
Black	GND		
Green	NC		
White	COM	Only relay control signals output	
Blue	NO		
Yellow	OPEN	Normal open button ,the other is connected GND (press the button closed)	
Orang	External reader D0		
е			
Light	External Reader D1		
green			
Pink	lighting control and voice control wires		
Brown	Add the management card and initialize the access control		
Purple	Formatted user data		
Gray	GND		