

Model 1185

Shuttle Buggy

Contents	Page
Safety Information	2
Unfolding	3
Fitting Footplate	6
Fitting Upholstery	7
Adjustments	8
Safety Information	

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

This vehicle is intended for children from 4 years and up to a maximum weight of 50kg.

WARNING - It may be dangerous to leave your child unattended.

WARNING - Ensure that all the locking devices are engaged before use.

WARNING - Use a harness as soon as your child can sit unaided.

WARNING - Any load attached to the handle affects the stability of the pram / pushchair.

WARNING - Always use the crotch strap in combination with the waist belt.

Continued.....

WARNING - Check that the pram body or seat unit attachment devices are correctly engaged before use.

WARNING - This product is not suitable for running or skating.


The footplates must not be used when transferring in or out of the buggy.

Never leave an occupied buggy unattended.

The buggy is not designed for off road use or for use on soft surfaces such as sand.

ONLY 1 child to be transported at any time.


Unfolding

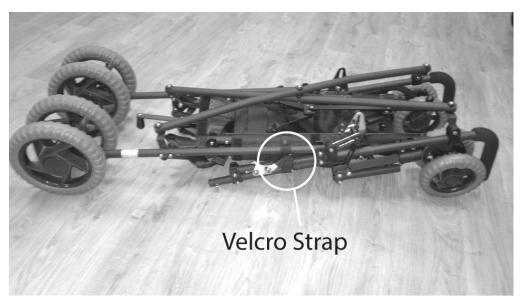


Before attempting to open the buggy make sure the Velcro transport strap is un-done.

Simply hold both push handles and lift them up, the buggy will unfold into position.

The locking levers must now be operated:-

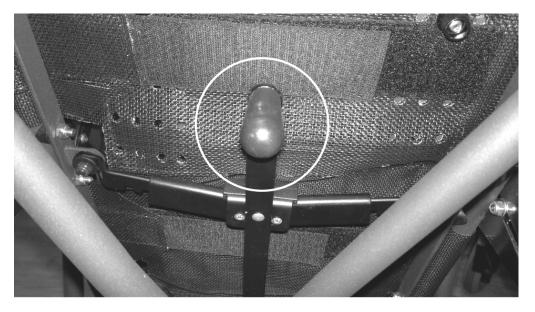

Above shows the backrest locking lever. When unfolding the buggy this must be pushed down to lock the backrest in the open position.

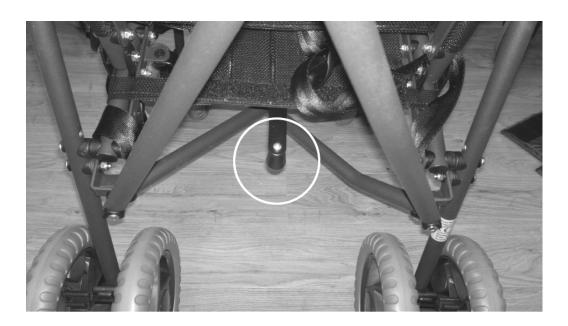

The image above shows the seat locking lever. When unfolding the buggy this must be pushed fully forward.

Also ensure the frame locking lever is fully located as shown below - there is a lever each side of the buggy.



The buggy is now fully unfolded. If the buggy feels loose recheck all frame locks to ensure the stability of the buggy before allowing any person to sit in it.

Fitting the Footplates

Insert the footrest stem tube into the receiving tube and tighten with the allen key provided as shown below.





If the footrest needs to be adjusted the bolt needs to slackened, adjusted and then re-tightened before use.

Note - the footplate must be 'swung away' before fording the buggy for transportation purposes.





Simply lift the footrest and swing away to the outside of the buggy as shown above.


Fitting Upholstery

Seat:-

The seat is secured using velcro strips. Simply align the strips and secure the seat in position.

Backrest:-

The upper fixing points for the harness need to be removed. These can be removed by undoing the small finger wheels on the rear of the backrest. Align the back upholstery holes with the holes on the backrest mesh and refit the screws and tighten the finger wheels as shown below.

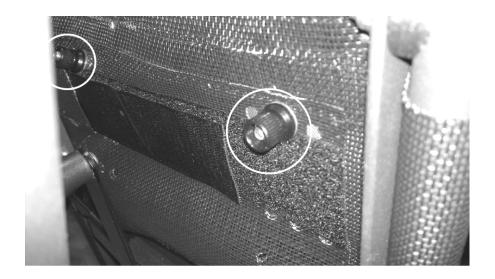




Backrest Angle

The backrest can be set in either a vertical position to a semi reclined position.

Release the locking lever as shown below and set the backrest to the desired angle and push the lever back over to lock in position.

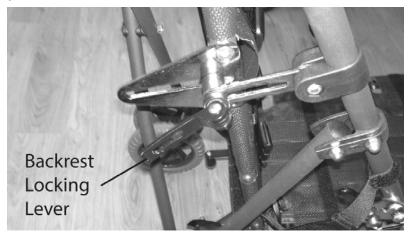


Castors

The rear castors both have a parking brake fitted. It is operated by the red pedal located between the wheels. Simply press the pedal down to lock the wheels



The front wheels can either be locked in the forward direction or be unlocked to enable them to swivel.

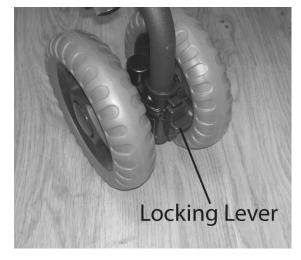

WARRANTY TERMS AND CONDITIONS

Standard Terms

This is to certify that your ROMA MEDICAL product is guaranteed for a period of one year from the date of purchase. The warranty is not transferable.

The manufacturer will not accept liability for damage caused by any misuse, unauthorised alterations or non-observance of the instructions set out in this user manual.

The guarantee excludes parts, which have been subjected to natural wear and tear during this period (Tyres and plastic parts)

wodel No:	•
Serial No:	•
Purchase Date:	