

LISTEN.
THINK.
SOLVE.SM

PowerFlex[®]

DSI[™] COMMUNICATION ADAPTERS



ControlNet[™] ADAPTER

DeviceNet[™] ADAPTER

EtherNet/IP[™] ADAPTER

LonWorks[™] ADAPTER

PROFIBUS[™] DP ADAPTER

RS-232 DF1 MODULE

COMPACT I/O[™] MODULE

DSI EXTERNAL COMMUNICATIONS KIT

DSI WIRELESS INTERFACE MODULE



PowerFlex[®]
Communications

PRODUCT PROFILE

22-COMM-C ControlNet™ ADAPTER

The PowerFlex® DSI ControlNet adapter provides redundant coaxial ControlNet connections for PowerFlex 40 or PowerFlex 400 drives. The adapter provides a means to control, configure, and collect data over a ControlNet network. It can also be used with other Allen-Bradley products that support a DSI adapter, such as the DSI External Communications Kit (22-XCOMM-DC-BASE), which enables PowerFlex 4 drives to connect to a ControlNet network.

PRODUCT HIGHLIGHTS

Internal Mount – The adapter mounts internal to the drive to save panel space and is field installable. PowerFlex 40 B frame drives require an additional front cover 22B-CCB, PowerFlex 40 C frame drives require 22B-CCC, and PowerFlex 400 C frame drives require 22C-CCC.

Configuration – The adapter has rotary switches for setting the node address and a jumper for configuring Single or Multi-Drive operating modes.

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive. These tools include the PowerFlex DSI HIM or drive-configuration software such as DriveExplorer™ or DriveExecutive™.

Single / Multi-Drive Operation –

The adapter can be used in two modes:

- Single - 1 network node consists of 1 drive.
- Multi-Drive - 1 network node can contain up to 5 drives. In this cost-saving configuration, the 22-COMM-C adapter is installed in a PowerFlex 40 or 400 drive and up to four additional PowerFlex 4, 40 or 400 drives can be connected over their built-in RS-485 ports. Each drive can be individually controlled, configured, and monitored through the single ControlNet connection. The adapter can also be installed in a DSI External Communications Kit using this operation mode to communicate with up to 5 PowerFlex 4-Class drives.


I/O Messaging – I/O messaging is used to transfer time-critical data, such as data that controls the drive. The following data can be sent and received by the adapter:

- Logic Status / Speed Feedback
- Logic Command / Speed Reference

Explicit Messaging – Explicit messaging involves non time-critical information that is typically triggered by the application (ladder program in a controller, etc.). The adapter supports:

- Reading / writing of drive parameters
- Reading / writing of adapter parameters

PowerFlex®
Communications

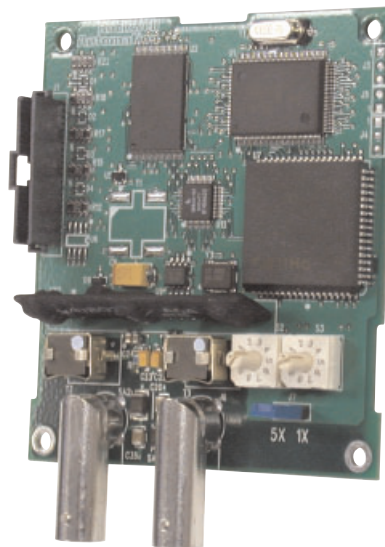

User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action - The scanner is idle (controller in program mode.)
- Comm Fault Action - Network communications have become disrupted.

Available actions include:

- Fault - The drive is faulted and stopped.
- Stop - The drive is stopped using the current deceleration rate and is not faulted.
- Zero Data - The adapter zeros the I/O data transmitted to the drive.
- Hold Last - The adapter continues sending the I/O data prior to the fault and the drive continues in its present state.
- Send Fault Configuration - The user specifies the Logic Command and Speed Reference data that is sent to the drive, allowing complete flexibility in configuring a fault action.

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex DSI HIM, DriveExplorer or DriveExecutive. View actual Logic Status / Speed Feedback and Logic Command / Speed Reference data being transmitted to and from the controller.

Flash Upgradeable – The adapter can be flash updated in the field using DriveExplorer, DriveExecutive, or ControlFLASH to take full advantage of new firmware features as they become available.


PARAMETERS

No.	Name	Description
01	Mode	Displays the Single or Multi-Drive operating mode selected with the Operating Mode Jumper (J7) on the adapter.
02	CN Addr Cfg	Sets the ControlNet node address if the Node Address Switches are set to "00". (Updates Parameter 03 - [CN Addr Act] after a reset.)
03	CN Addr Act	Displays the ControlNet node address actually used by the adapter.
04	CN Rate Cfg	Sets the ControlNet data rate (megabits per second) at which the adapter communicates. (Updates Parameter 05 - [CN Rate Act] after a reset.)
05	CN Rate Act	Displays the ControlNet data rate (megabits per second) actually used by the adapter.
06	CN Active Cfg	Displays the source from which the adapter node address is taken. This will be either switches or Parameter 02 - [CN Addr Cfg] in EEPROM. It is determined by the settings of the Node Address Switches on the adapter. If the Node Address Switches = "00" on power up, then Parameter 02 - [CN Addr Cfg] is used to configure the adapter's ControlNet address.
07	Reset Module	Resets the adapter or sets parameter defaults settings.
08	Comm Flt Action	Sets the action that the adapter and drive will take if the adapter detects that network communications have been disrupted. This setting is effective only if I/O that controls the drive is transmitted through the adapter.
09	Idle Flt Action	Sets the action that the adapter and drive will take if the adapter detects that the controller is in program mode. This setting is effective only if I/O that controls the drive is transmitted through the adapter.
10	Flt Cfg Logic	Sets the Logic Command or Speed Reference data that is sent to the drive if any of the following is true: — Parameter 08 - [Comm Flt Action] is set to "Send Flt Cfg" and communications are disrupted. — Parameter 09 - [Idle Flt Action] is set to "Send Flt Cfg" and the controller is in program mode.
11	Flt Cfg Ref	
12	DSI I/O Cfg	Sets the configuration of the drives that are active in the Multi-Drive mode, and identifies the DSI connections that would be attempted on a reset or power cycle.
13	DSI I/O Act	Displays the drives that are active in the Multi-Drive mode.
14	Drv 0 Addr	Sets the corresponding node addresses of the daisy-chained drives when the adapter Operating Mode Jumper (J7) is set for Multi-Drive operation.
15	Drv 1 Addr	
16	Drv 2 Addr	
17	Drv 3 Addr	
18	Drv 4 Addr	
19	Ref Adjust	Sets the percent scale factor for the Speed Reference from the network.


SPECIFICATIONS

Communications	Network	Protocol	ControlNet
		Data Rate	5 Mbps
	Drive	Protocol	DSI
		Data Rate	19.2 Kbps
Electrical	Consumption	Drive	275 mA @ 5VDC
		Network	N/A
Regulatory Compliance		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50178 and EN61800-3
		CTick	AS/NZS 2064, Group 1, Class A

EXAMPLE I/O IMAGE - SINGLE MODE

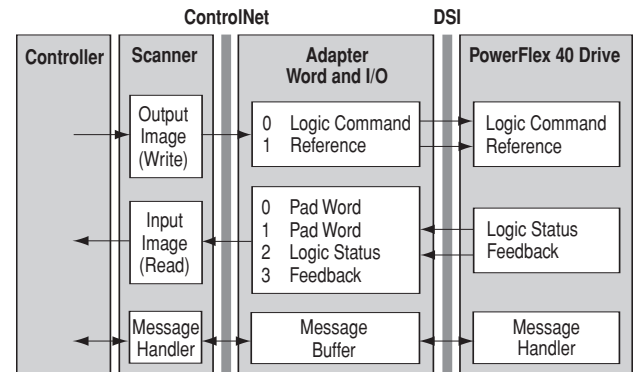

EXAMPLE I/O IMAGE - MULTI-DRIVE MODE

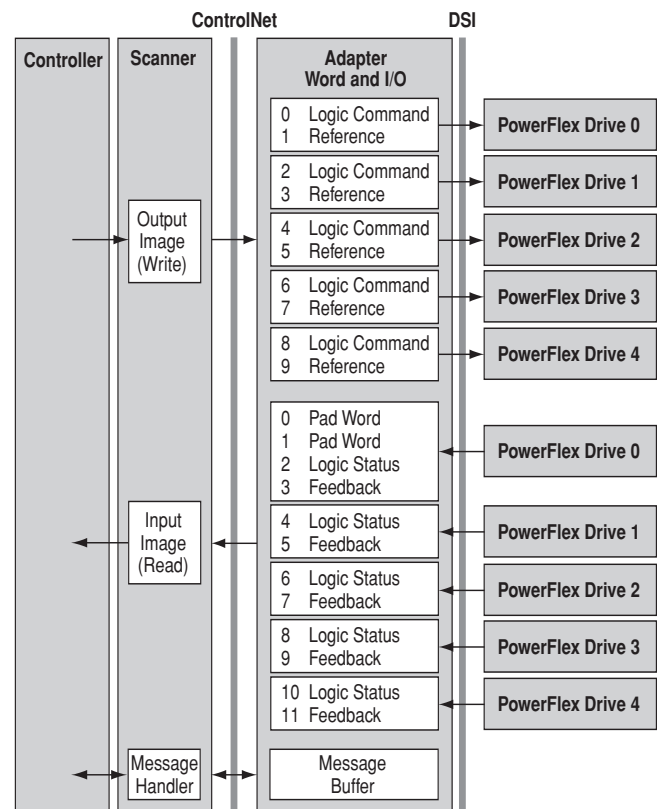

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

22-COMM-D DeviceNet™ ADAPTER



The PowerFlex® 22-COMM-D adapter provides a DeviceNet network connection for PowerFlex 40 AC drives and other DSI-based host devices with an internal communications slot. The adapter provides a means to control, configure and collect data over a DeviceNet network.

PRODUCT HIGHLIGHTS

Internal Mount – The adapter mounts internal to the drive to save panel space, and is field installable. PowerFlex 40 drives require an additional front cover (22B-CC*).

Configuration Switches – The adapter has DIP switches for setting the node address (0-63), data rate (125/250/500/Auto kbps), and a jumper for Single / Multi-drive modes.

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive. These tools include the PowerFlex HIM, or drive-configuration software such as DriveExplorer™ or DriveExecutive™.

Single / Multi-drive Operation – The adapter can be used in two modes:

- Single – 1 network node consists of 1 drive.
- Multi-drive – 1 network node can contain up to 5 drives. In this cost-saving configuration, the 22-COMM-D is installed in a PowerFlex 40 drive and up to four additional PowerFlex 40 or 40 drives can be connected over their built-in RS-485 ports. Each drive can be individually controlled, configured, and monitored through the single DeviceNet connection.

I/O Messaging – I/O messaging is used to transfer time-critical data, such as data that controls the drive. The following data can be sent and received by the adapter:

- Logic Command / Reference
- Logic Status / Feedback


It supports Polled, Change-of-State(COS), and Cyclic I/O methods.

Explicit Messaging – Explicit messaging involves non time-critical information that is typically triggered by the application (ladder program in a controller, etc.). The adapter supports:

- Reading / writing of drive parameters
- Reading / writing of adapter parameters

Automatic Device Replacement (ADR)

Support – Allows a scanner to upload and store the adapter and drive configuration settings. Upon replacing a faulty drive with a new unit, the scanner can automatically download the configuration data and set the node address.

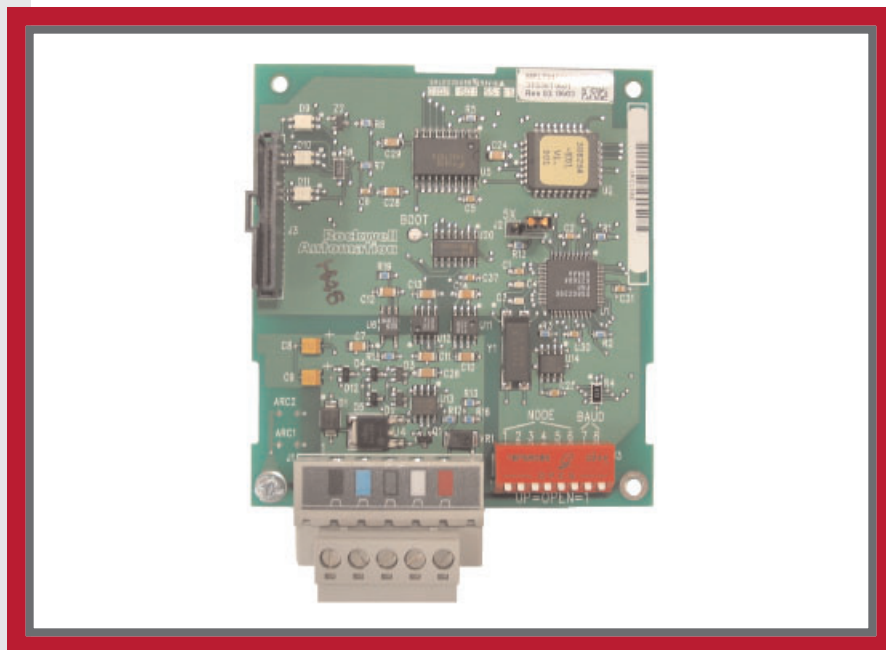

User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action – the scanner is idle (controller in program mode)
- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the adapter zeros the I/O data transmitted to the drive
- Hold Last – the adapter continues sending the I/O data prior to the fault and the drive continues in its present state
- Send Fault Configuration – the user specifies the Logic Command and Reference data that is sent to the drive, allowing complete flexibility in configuring a fault action

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex HIM, DriveExplorer or DriveExecutive. View actual Logic Command/Reference, Logic Status/Feedback data being transmitted to/from the controller.

Flash Upgradeable – The adapter can be flash updated in the field using DriveExplorer, DriveExecutive or ControlFLASH, to take advantage of new firmware features as they become available.

DeviceNet
CONFORMANCE TESTED


PARAMETERS

No.	Name	Description
01	Mode	Displays the mode selected by the jumper on the adapter (Single or Multi-Drive).
02	DN Addr Cfg	Sets the DeviceNet node address after a reset or power cycle.
03	DN Addr Act	Displays the DeviceNet node address currently used by the adapter.
04	DN Rate Cfg	Sets the DeviceNet data rate after a reset or power cycle.
05	DN Rate Act	Displays the data rate actually used by the adapter.
06	Reset Module	Used to reset the adapter or set defaults.
07	Comm Flt Action	Sets the action that the adapter will take if it detects that communications have been disrupted.
08	Idle Flt Action	Sets the action that the adapter will take if it detects that the scanner is idle.
09	DN Act Cfg	Displays the source from which the adapter node address and data rate are taken.
10	Flt Cfg Logic	Sets the data that is sent to the drive if any of the following is true: <ul style="list-style-type: none"> Parameter 07 - [Comm Flt Action] is set to Send Flt Cfg and communications are disrupted. Parameter 08 - [Idle Fault Action] is set to Send Flt Cfg and the scanner is put into Program mode.
11	Flt Cfg Ref	
12	COS Status Mask	Sets the mask of the Logic Status word.
13	COS Fdbk Change	Sets the hysteresis band to determine how much the Feedback can change before it triggers a COS operation.
14	COS/Cyc Interval	Displays the amount of time that a scanner will wait to check for data in the adapter.
15	DSI I/O Config	Selects the I/O that is transferred through the adapter.
16	DSI I/O Act	Displays the I/O that the adapter is actively transmitting.
17	Drv 0 Addr	Sets the corresponding node addresses of the daisy-chained drives used in Multi-Drive mode.
18	Drv 1 Addr	
19	Drv 2 Addr	
20	Drv 3 Addr	
21	Drv 4 Addr	


SPECIFICATIONS

Communications	Network	Protocol	DeviceNet
	Drive	Data Rates	125K, 250K, 500K, Autobaud
Electrical	Consumption	Protocol	DSI
		Drive (DPI)	150mA @ 5VDC
Regulatory Compliance		Network	60mA @ 24VDC
		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50178 and EN61800-3

EXAMPLE I/O IMAGE - SINGLE MODE

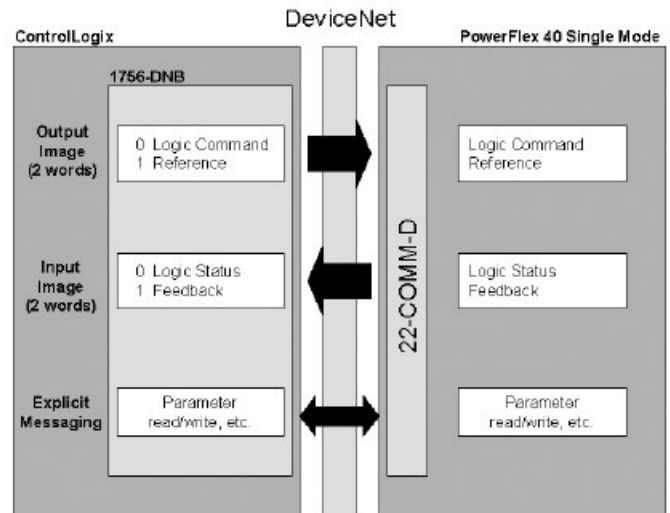

EXAMPLE I/O IMAGE - MULTI-DRIVE MODE

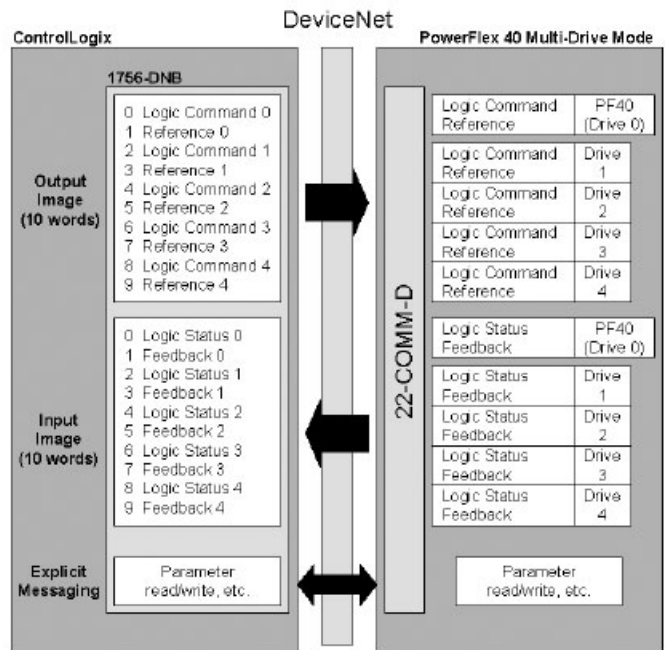

EDS FILES

The EDS files can be created on-line using RSNetWorx for DeviceNet or downloaded from:

<http://www.ab.com/drives/eds.html>

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

22-COMM-E EtherNet/IP™ ADAPTER



The PowerFlex® 22-COMM-E adapter provides an EtherNet/IP network connection for PowerFlex 40 AC drives and other DSI-based host devices with an internal communications slot. The adapter provides a means to control, configure and collect data over an EtherNet/IP network.

PRODUCT HIGHLIGHTS

Internal Mount – The adapter mounts internal to the drive to save panel space, and is field installable. PowerFlex 40 drives require an additional front cover (22B-CC*).

Configuration Switches – The adapter has DIP switches for enabling /disabling the web pages and for setting Single / Multi-drive modes.

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive. These tools include the PowerFlex HIM, or drive-configuration software such as DriveExplorer™ or DriveExecutive™.

Single / Multi-drive Operation – The adapter can be used in two modes:

- Single – 1 network node consists of 1 drive.
- Multi-drive – 1 network node can contain up to 5 drives. In this cost-saving configuration, the 22-COMM-E is installed in a PowerFlex 40 drive and up to four additional PowerFlex 40 or 40 drives can be connected over their built-in RS-485 ports. Each drive can be individually controlled, configured, and monitored through the single EtherNet/IP connection.

I/O Messaging – I/O messaging is used to transfer time-critical data, such as data that controls the drive. The following data can be sent and received by the adapter:


- Logic Command / Reference
- Logic Status / Feedback

Explicit Messaging – Explicit messaging involves non time-critical information that is typically triggered by the application (ladder program in a controller, etc.). The adapter supports:

- Reading / writing of drive parameters
- Reading / writing of adapter parameters

Web Interface – Use a web browser such as Microsoft™ Internet Explorer™ to access the drive over the Intranet or Internet.

- TCP/IP Configuration - View TCP/IP configuration data and Ethernet diagnostic information.
- Email Notification - Configure email notification if a specific fault or alarm occurs, if any fault or alarm occurs, or if the drive is reset.

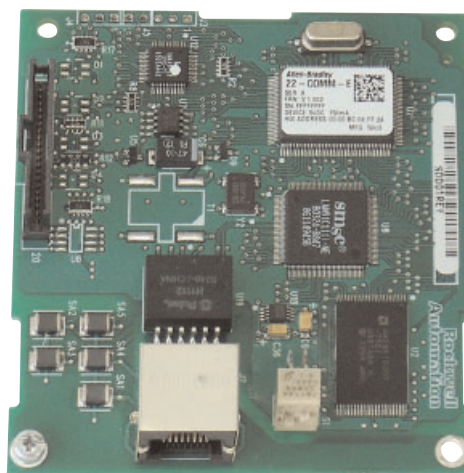

- DSI Device Browse - View every DSI device, including the drive and connected peripherals. Provides general device information, diagnostics, and event/fault queue display.
- Online User Manuals – Link to view the user manual online over the Internet.
- Software Tools Web Site – Link to the DriveExplorer and DriveExecutive Internet web sites.
- Launch Drive Software Tools – Directly launch DriveExplorer or DriveExecutive software already on your PC, and have the tool automatically connect to the drive.

User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action – the scanner is idle (controller in program mode)
- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the adapter zeros the I/O data transmitted to the drive
- Hold Last – the adapter continues sending the I/O data prior to the fault and the drive continues in its present state
- Send Fault Configuration – the user specifies the Logic Command and Reference data that is sent to the drive, allowing complete flexibility in configuring a fault action

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex HIM, DriveExplorer or DriveExecutive. View actual Logic Command/Reference, Logic Status/Feedback data being transmitted to/from the controller.

Flash Upgradeable – The adapter can be flash updated in the field using DriveExplorer, DriveExecutive or ControlFLASH, to take advantage of new firmware features as they become available.




PARAMETERS

No.	Name	Description
01	Mode	Displays the mode selected by the jumper on the adapter (Single or Multi-Drive).
02	BOOTP	Sets the DeviceNet node address after a reset or power cycle.
03	IP Addr Cfg 1	Sets the respective bytes in the IP address, where the represented address is: Cfg1.Cfg2.Cfg3.Cfg4.
04	IP Addr Cfg 2	
05	IP Addr Cfg 3	
06	IP Addr Cfg 4	
07	Subnet Cfg 1	Sets the bytes of the subnet mask, where the represented mask is: Cfg1.Cfg2.Cfg3.Cfg4.
08	Subnet Cfg 2	
09	Subnet Cfg 3	
10	Subnet Cfg 4	
11	Gateway Cfg 1	Sets the bytes of the gateway address, where the represented address is: Cfg1.Cfg2.Cfg3.Cfg4.
12	Gateway Cfg 2	
13	Gateway Cfg 3	
14	Gateway Cfg 4	
15	EN Rate Cfg	Configures the network data rate at which the adapter communicates.
16	EN Rate Act	Displays the data rate actually used by the adapter.
17	Reset Module	Used to reset the adapter or set defaults.
18	Comm Flt Action	Sets the action that the adapter will take if it detects that communications have been disrupted.
19	Idle Flt Action	Sets the action that the adapter will take if it detects that the scanner is idle.
20	Flt Cfg Logic	Sets the data that is sent to the drive if any of the following is true:
21	Flt Cfg Ref	
		<ul style="list-style-type: none"> Parameter 18 - [Comm Flt Action] is set to Send Flt Cfg and communications are disrupted. Parameter 19 - [Idle Fault Action] is set to Send Flt Cfg and the scanner is put into Program mode.
22	DSI I/O Config	Selects the I/O that is transferred through the adapter.
23	DSI I/O Act	Displays the I/O that the adapter is actively transmitting.
24	Drv 0 Addr	Sets the corresponding node addresses of the daisy-chained drives used in Multi-Drive mode.
25	Drv 1 Addr	
26	Drv 2 Addr	
27	Drv 3 Addr	
28	Drv 4 Addr	
29	Web Enable	Displays the setting of the web pages switch on the adapter when the adapter was last reset. (Enables / Disables using web pages)
30	Web Features	Sets the access to the web interface and web configurable features.


SPECIFICATIONS

Communications	Network	Protocol	EtherNet/IP
		Data Rates	10/100 Mbps, Full/Half Duplex
Electrical	Drive	Protocol	DSI
	Consumption	Drive (DPI)	350mA @ 5VDC
Regulatory Compliance		Network	N/A
		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50178 and EN61800-3


EXAMPLE I/O IMAGE - SINGLE MODE

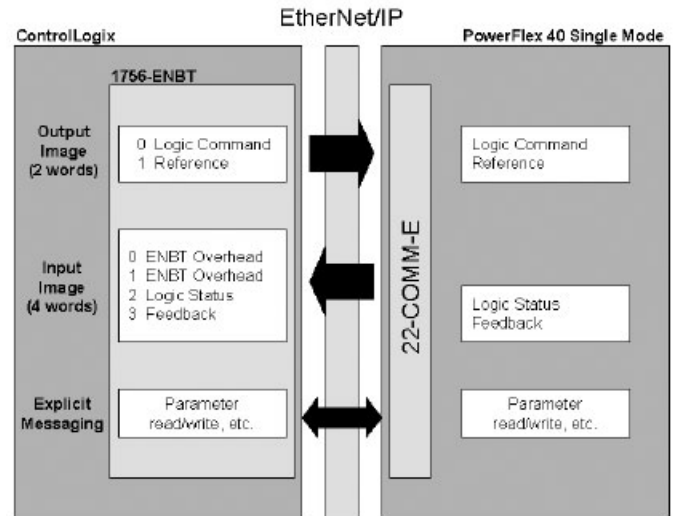

EXAMPLE I/O IMAGE - MULTI-DRIVE MODE

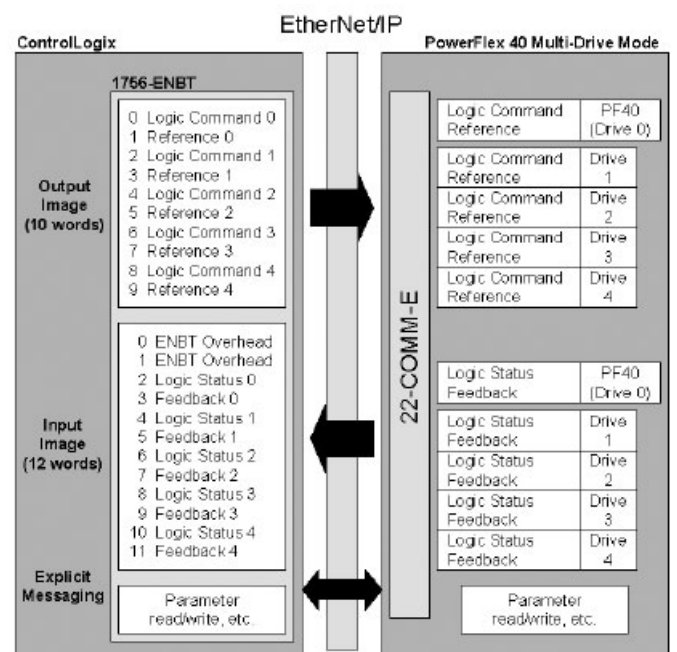


MAIN WEB PAGE

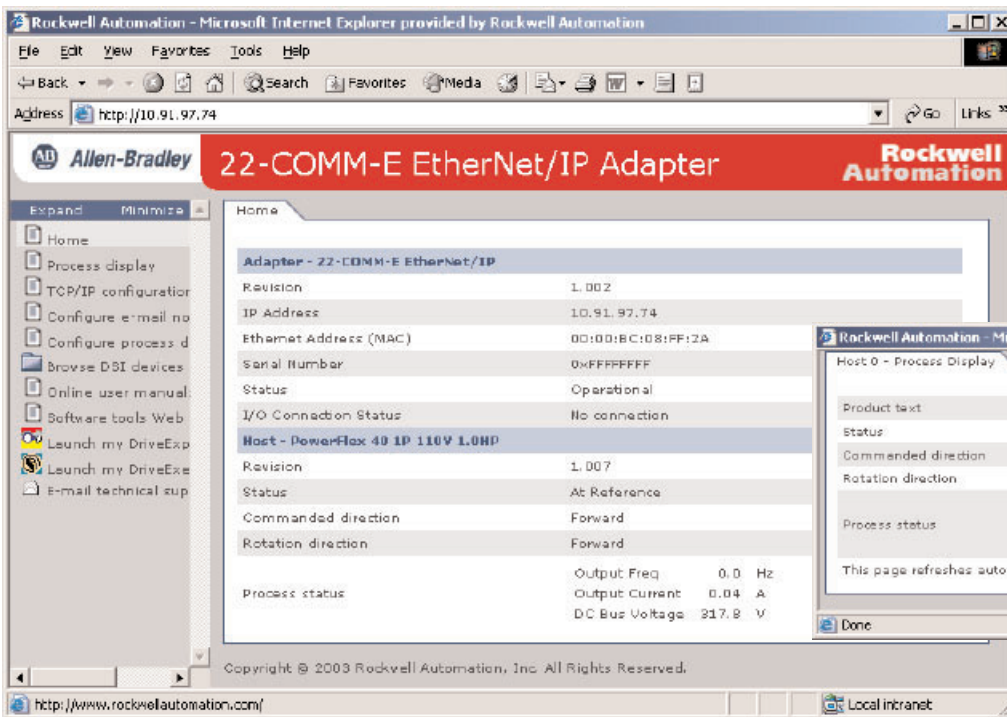


AUTO-REFRESH
PROCESS DISPLAY

AUTO-REFRESH
PROCESS DISPLAY
CONFIGURATION

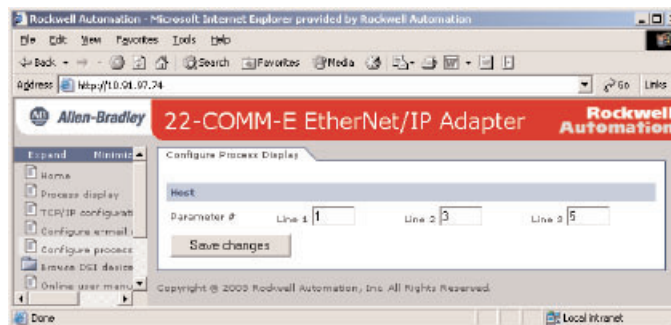

EXAMPLE FAULT
NOTIFICATION
EMAIL

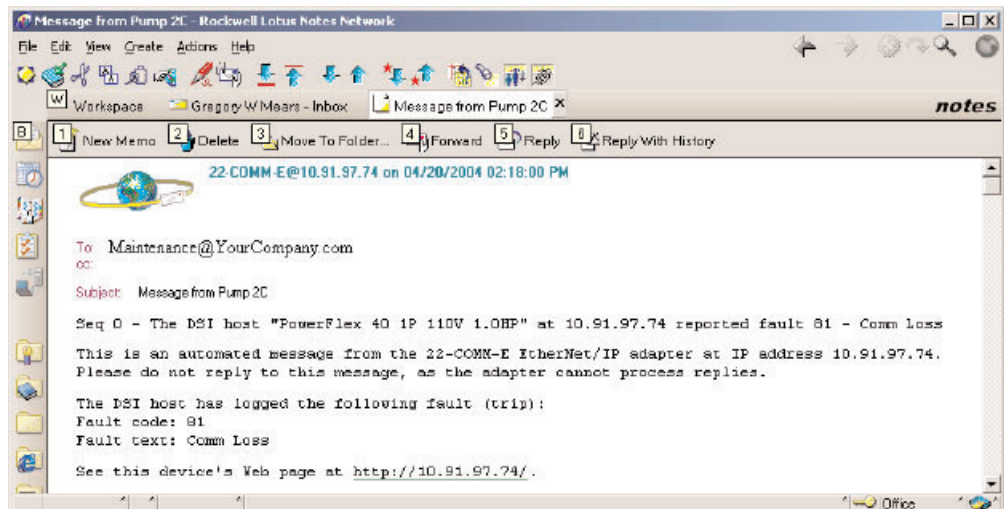

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

22-COMM-L LonWorks™ ADAPTER



The PowerFlex® DSI LonWorks™ adapter provides an internal LonWorks connection for PowerFlex 40 and PowerFlex 400 drives. It can also be used with other Allen-Bradley products that support a DSI adapter, such as the DSI External Communications Kit (22-XCOMM-DC-BASE) which enables PowerFlex 4 drives to connect to a LonWorks network. (PowerFlex 4 drives cannot support an internally-mounted adapter.) The adapter provides a means to control, configure and collect data over a LonWorks network.

PRODUCT HIGHLIGHTS

Internal Mount – The adapter mounts internal to the drive to save panel space, and is field installable. PowerFlex 40 B frame drives require an additional front cover 22B-CCB, PowerFlex 40 C frame drives require 22B-CCC and PowerFlex 400 C frame drives require 22C-CCC.

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive. These tools include the PowerFlex DSI HIM, or drive-configuration software such as DriveExplorer™ or DriveExecutive™ through a 22-SCM-232 serial converter module.


LonMark Functional Profile – “Variable Speed Motor Drive: 6010” Support – The adapter supports the standard functional profile used by the HVAC industry for drives, which provides a common set of system network variables and configuration properties.

Additional “Manufacturer Defined” Network Variables – Additional “Manufacturer Defined” network variables are also provided:

- Parameter Read / Write
- Metering
- Configuration

Resource Files – The following resource files are included on 3.5” disk with the adapter:

- XIF File
- Type File (TYP)
- Format File (FMT)
- Language File (ENU)

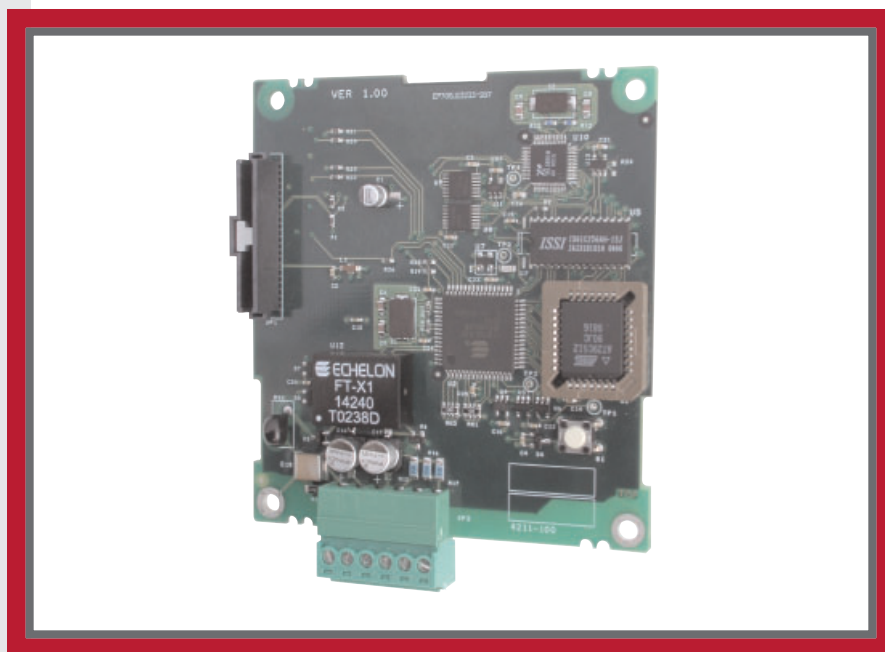

- Functional Profile Template (FPT)

User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action – the scanner is idle (controller in program mode)
- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the adapter zeros the I/O data transmitted to the drive
- Hold Last – the adapter continues sending the I/O data prior to the fault and the drive continues in its present state
- Send Fault Configuration – the user specifies the Logic Command and Speed Reference data that is sent to the drive, allowing complete flexibility in configuring a fault action

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex DSI HIM, DriveExplorer or DriveExecutive. View actual Logic Command / Speed Reference and Logic Status / Speed Feedback data being transmitted to and from the controller.

Flash Upgradeable – The adapter can be flash updated in the field using Third-party software tools such as Echelon® LonMaker™ for Windows or the LOADAPP Neuron Chip Application Download Utility to take advantage of new firmware features as they become available.

PARAMETERS

No.	Name	Description
01	Send Service Pin	Broadcasts a LON Service Pin message from the Neuron Chip to provide the Neuron ID.
02	Neuron State	Displays the state of the Neuron Chip
03	Reset Module	Resets the adapter or sets the adapter parameters to factory default.
04	Neuron ID	Displays the Neuron Chip ID.
05	Clear Counters	Clears the network diagnostic counters.
06	Comm Flt Action	Sets the action that the adapter will take if it detects that network communications have been disrupted.
07	Flt Cfg Logic	Sets the Logic Command data that is sent to the drive if Parameter 08 – [Comm Flt Action] is set to “Send Flt Cfg” and communications are disrupted.
08	Flt Cfg Ref	Sets the Speed Reference data that is sent to the drive if Parameter 08 – [Comm Flt Action] is set to “Send Flt Cfg” and communications are disrupted.
09	Idle Flt Action	Sets the action that the adapter and drive will take if the adapter detects that the controller is in program mode. This setting is effective only if I/O that controls the drive is transmitted through the adapter.
10	Idle Cfg Logic	Sets the Logic Command data that is sent to the drive if Parameter 09 – [Idle Flt Action] is set to “Send Flt Cfg” and the controller is in program mode.
11	Idle Cfg Ref	Sets the Speed Reference data that is sent to the drive if Parameter 09 – [Idle Flt Action] is set to “Send Flt Cfg” and the controller is in program mode.
12	RcvHrtBeat Time	Sets the time used as a Receive Heartbeat timer and triggers the fault action in Parameter 06 – [Comm Flt Action].

RESOURCE FILES


The resource files can also be downloaded at:
<http://www.ab.com/drives/22-comm/22-comm-1>

SPECIFICATIONS


Communications	Drive	Protocol	DSI
		Data Rate	78 Kbps
Electrical	Drive	Protocol	DSI
	Consumption	Drive	50 mA @ 5 VDC
Regulatory Compliance		Network	N/A
		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN61800-6-4: 2001, EN61000-6-2: 2001

VARIABLE SPEED MOTOR DRIVE PROFILES

Node Object

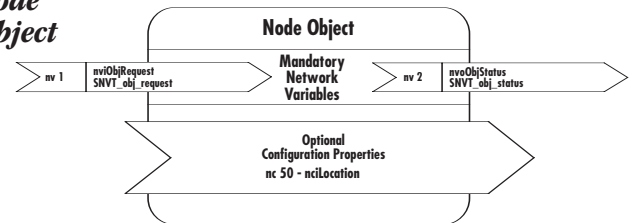

Drive Object

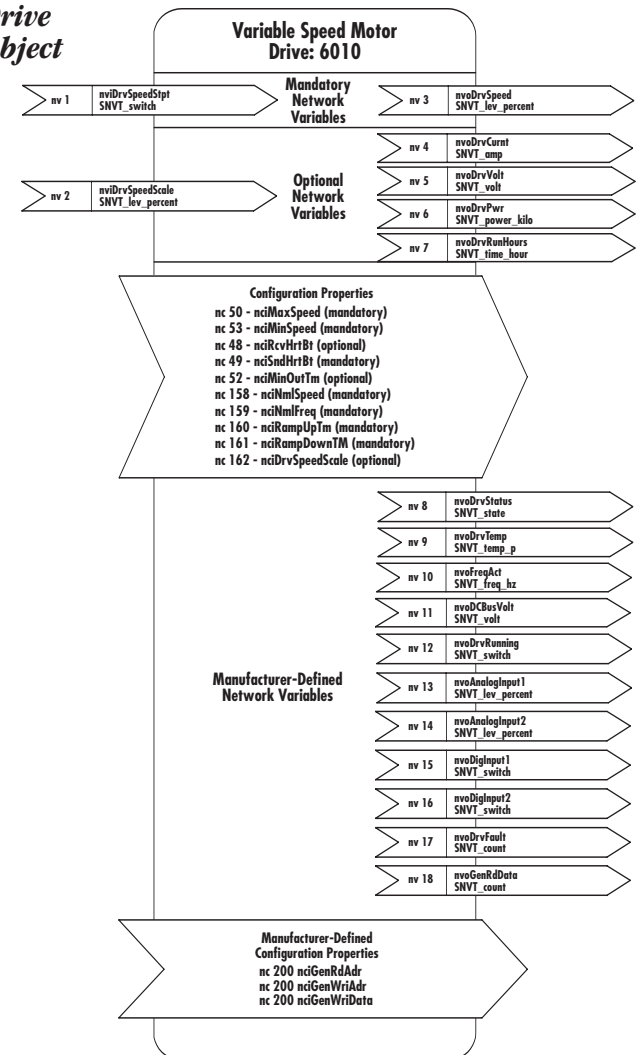

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 22COMM-PP001C-EN-P – December 2005

Copyright ©2005 Rockwell Automation, Inc. All Rights Reserved. Printed in USA.

PRODUCT PROFILE

22-COMM-P PROFIBUS DP™ ADAPTER

The PowerFlex® 22-COMM-P adapter provides a PROFIBUS DP network connection for PowerFlex 40 and 400 AC drives and other DSI-based host devices with an internal communications slot. The adapter provides a means to control, configure and collect data over a PROFIBUS DP network.

PRODUCT HIGHLIGHTS

Internal Mount – The adapter mounts internal to the drive to save panel space, and is field installable. PowerFlex 40 B frame drives require 22B-CCB, PowerFlex 40 C frame drives require 22B-CCC and PowerFlex 400 C frame drives require 22C-CCC.

Configuration Switches – The adapter has DIP switches for setting the node address (1-127), and jumpers for byte swapping (Intel or Motorola format) and Single / Multi-drive modes.

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive. These tools include the PowerFlex HIM, or drive configuration software such as DriveExplorer™ or DriveExecutive™.

Single / Multi-drive Operation – The adapter can be used in two modes:

- Single – 1 network node consists of 1 drive.
- Multi-drive – 1 network node can contain up to 5 drives.

In this cost-saving configuration, the 22-COMM-P is installed in a PowerFlex 40 or 400 drive and up to four additional PowerFlex 4, 40 or 400 drives can be connected over their built-in RS-485 ports. Each drive can be individually controlled, configured, and monitored through the single PROFIBUS DP connection.

I/O Messaging – I/O messaging is used to transfer time-critical data, such as data that controls the drive. The following data can be sent and received by the adapter:

- Logic Command / Reference
- Logic Status / Feedback


It also supports synch and freeze modes.

Explicit Messaging – Explicit messaging involves non time-critical information that is typically triggered by the application (ladder program in a controller, etc.).

The adapter supports:

- Reading / writing of drive parameters
- Reading / writing of adapter parameters

PowerFlex®
Communications

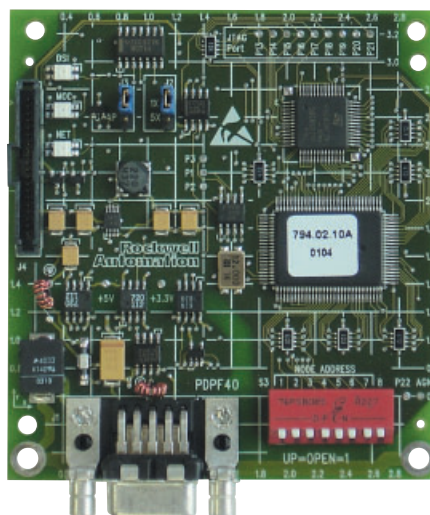

Compliance Tested – PNO compliance tested

User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action – the scanner is idle (controller in program mode)
- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the adapter zeros the I/O data transmitted to the drive
- Hold Last – the adapter continues sending the I/O data prior to the fault and the drive continues in its present state
- Send Fault Configuration – the user specifies the Logic Command and Reference data that is sent to the drive, allowing complete flexibility in configuring a fault action

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex HIM, DriveExplorer or DriveExecutive. View actual Logic Command/Reference and Logic Status/Feedback data being transmitted to/from the controller.

Flash Upgradeable – The adapter can be flash updated in the field using DriveExplorer, DriveExecutive, or ControlFLASH, to take advantage of new firmware features as they become available.




PARAMETERS

No.	Name	Description
01	Mode	Displays the mode selected by the J2 jumper (Single or Multi-Drive).
02	Reserved	
03	Reserved	
04	P-DP Addr Actual	Displays the node address actually used by the adapter.
05	P-DP Rate Actual	Displays the data rate actually used by the adapter.
06	Reserved	
07	Reserved	
08	Reset Module	Used to reset the adapter or set defaults.
09	Comm Flt Action	Sets the action that the adapter will take if it detects that communications have been disrupted.
10	Idle Flt Action	Sets the action that the adapter will take if it detects that the scanner is idle.
11	DSI I/O Config	Selects the I/O that is transferred through the adapter.
12	DSI I/O Active	Displays the I/O that the adapter is actively transmitting.
13	Flt Cfg Logic	Sets the data that is sent to the drive if any of the following is true:
14	Flt Cfg Ref	<ul style="list-style-type: none"> Parameter 09 - [Comm Flt Action] is set to Send Flt Cfg and communications are disrupted. Parameter 10 - [Idle Fault Action] is set to Send Flt Cfg and the scanner is put into Program mode.
15	Reserved	
16	Reserved	
17	Drv 0 Addr	Sets the corresponding node addresses of the daisy-chained drives used in Multi-Drive mode.
18	Drv 1 Addr	
19	Drv 2 Addr	
20	Drv 3 Addr	
21	Drv 4 Addr	
22	Reserved	
23	Reserved	
24	P-DP State	Displays the state of the PROFIBUS controller.

SPECIFICATIONS

Communications	Network	Protocol	PROFIBUS
		Data Rates	9600-12M bps (autobauds)
Electrical	Drive	Protocol	DSI
	Consumption	Drive (DPI)	370mA @ 5VDC
Regulatory Compliance		Network	N/A
		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50178 and EN61800-3


EXAMPLE I/O IMAGE - SINGLE MODE

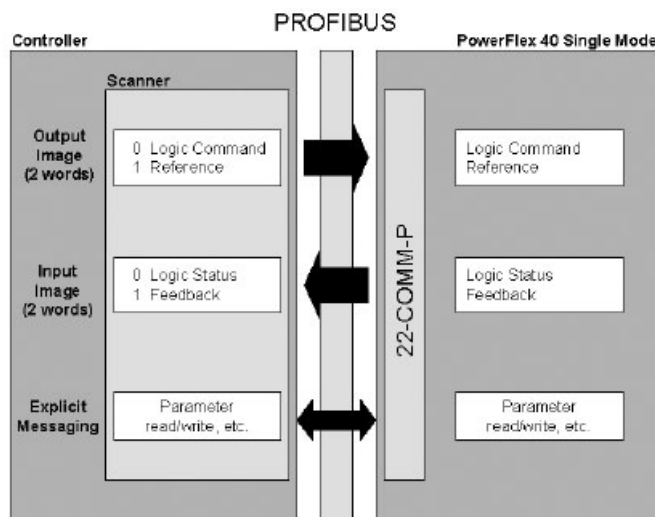

GSD FILE

The GSD file is provided on 3.5" disk with the adapter and can be downloaded at: <http://www.ab.com/drives/22-comm/22-comm-p>

EXAMPLE I/O IMAGE - MULTI-DRIVE MODE

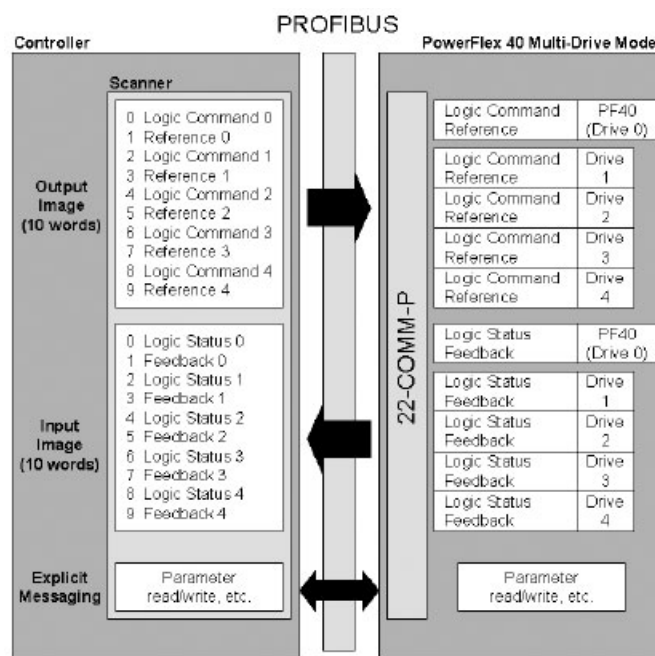

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

22-SCM-232 RS-232 DF1™ MODULE

The PowerFlex® 22-SCM-232 provides an RS-232 DF1 connection for PowerFlex 4 and 40 AC drives and other DSI-based host devices. The module provides a means for drive software tools, such as DriveExplorer™ and DriveExecutive™, to communicate with drive products. It also allows various Allen-Bradley controllers, from MicroLogix to ControlLogix, to control and read/write data to PowerFlex 4 and 40 AC drives.

PRODUCT HIGHLIGHTS

External Mount – The module connects externally and is powered by the drive.

DSI Routing – Allows DriveExplorer to connect to a PowerFlex 4 and 40 AC drive using a 22-SCM-232 serial converter and then route out over EtherNet/IP, DeviceNet, or RS-485 to access other PowerFlex 4 and 40 AC drives (1-to-many connection). This eliminates the need for a separate network connection and interface.

DriveExplorer Lite Included –

A DriveExplorer Lite CD is included with the 22-SCM-232. DriveExplorer Lite is freeware and can also be downloaded at: http://www.ab.com/drives/driveexplorer/free_download.html

Modbus RTU Master Support –

The module can also be configured to operate as a Modbus RTU Master. The module converts both the media (RS-232 to RS-485) and the protocol (DF1 to Modbus RTU). Any Allen-Bradley controller capable of originating and receiving DF1 messages via its front port can be used to control and read/write data on a Modbus RTU network:

- MicroLogix 1000 (Series C or later discrete controllers, and all analog controllers)
- MicroLogix 1200/1500
- SLC 5/03, 5/04, 5/05
- PLC-5
- ControlLogix, CompactLogix

PowerFlex®
Communications



Modbus RTU Pass-Thru Support – The module can also be configured to operate as a RS-232 (DB-9) to RS-485 (RJ45) serial converter, where Modbus RTU messages pass-thru both directions in the module.

Flash Upgradeable – The module can be flash updated in the field using DriveExplorer, DriveExecutive or ControlFLASH, to take advantage of new firmware features as they become available. The module is also the primary connection mechanism for flashing drives and other peripherals.

ACCESSORIES


Do you have a PC with only a USB connection? Use a USB to Serial adapter, such as an Allen-Bradley 9300-USBS, to connect to the RS-232 side of the 22-SCM-232. The adapter is a small, portable unit with no AC power required. It has also been tested with Allen-Bradley DriveExplorer and DriveExecutive software tools.

Do you want to connect to a drive without having to open the enclosure door? Use a GracePort™ interface, such as a P-A20-B3RX (Nema 4/12 interface) or P-A20-F3RO (Nema 4/12 interface with AC outlet), available from Grace Engineered Products Inc. (<http://www.grace-eng.com>).

PARAMETERS

No.	Name	Description
01	Adapter Cfg	Sets the operation of the serial converter (Auto, Master, Slave, RTU Master, and RTU Pass-thru).
02	DF1 Addr Cfg	Configures the DF1 address used for the serial converter.
03	DF1 Rate Cfg	Configures the data rate used for the serial port.
04	Comm Flt Action	Sets the action that the module will take if it detects that communications have been disrupted.
05	Reset Module	Used to reset the adapter or reset defaults.
06	Clear DF1 Counts	Used to clear the DF1 statistical parameters (7-15).
07	DF1 Packets Sent	Displays the number of DF1 packets sent by the serial converter.
08	DF1 Packets Rcvd	Displays the number of DF1 packets received by the serial converter.
09	Undelivered Msgs	Displays the number of DF1 packets sent by the serial converter and not acknowledged.
10	ENQs Sent	Displays the number of ENQs sent by the serial converter.
11	ENQs Received	Displays the number of ENQs received by the serial converter.
12	NAKs Received	Displays the number of NAKs received by the serial converter.
13	NAK Bad Packet	Displays the number of NAKs received by the serial converter because of bad packets.
14	NAK No Memory	Displays the number of NAKs received by the serial converter because of insufficient buffer memory.
15	Duplicate Msgs	Displays the number of duplicate messages sent by the serial converter.
16	DF1 Addr Actual	Displays the actual DF1 address used by the serial converter.
17	DF1 Rate Actual	Displays the actual data rate used by the serial converter.


SOFTWARE TOOL CONNECTION EXAMPLE

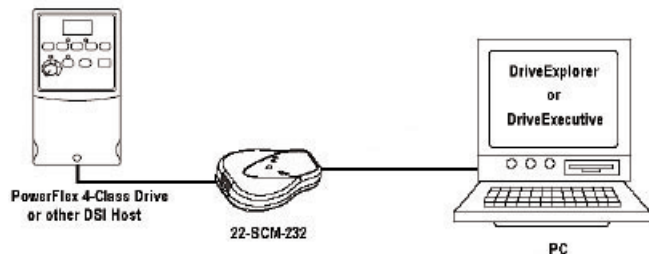


SPECIFICATIONS

Communications	Network	Protocol	NRS-232: DF1, Modbus RTU RS-485: DSI, Modbus RTU
		Data Rates	9600-38.4k bps
	Drive	Protocol	DSI, Modbus RTU
		Data Rates	19.2 kbps
Electrical	Consumption	Drive (DPI)	170mA @ 5VDC
		Network	N/A
Regulatory Compliance		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50178 and EN61800-3
		CTick	AS/NZS 2064, Group 1, Class A


POINT-TO-POINT SYSTEM EXAMPLE

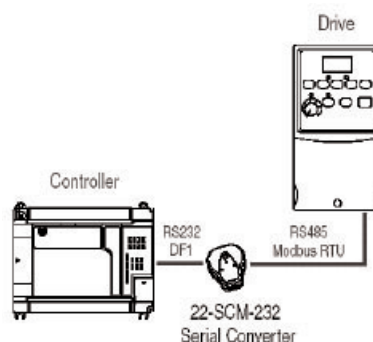

MULTIPLE-DRIVE SYSTEM EXAMPLE

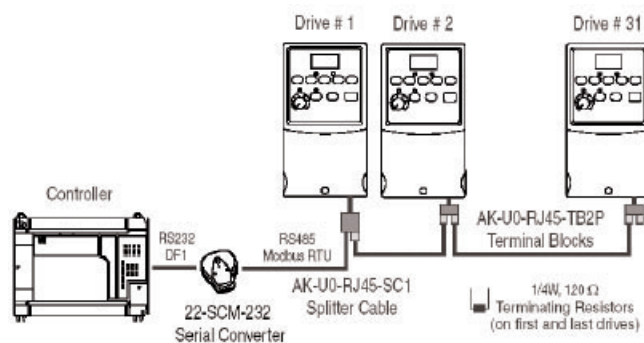

DRIVEEXPLORER LITE

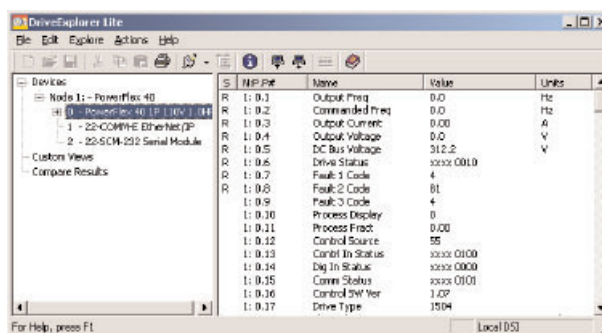

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

1769-SM2 COMPACT I/O™ MODULE

PowerFlex®
Communications

The 1769-SM2 module provides a direct 1769 platform connection for PowerFlex® 4, 40, and 400 AC drives, other DSI-based host devices, and Modbus RTU-based host devices such as PowerFlex 70, 700, and 700S AC drives equipped with 20-COMM-H adapters. The 1769-SM2 can be used with MicroLogix™ 1500 and CompactLogix™ controllers, and remote 1769-based nodes such as the 1769-ADN DeviceNet™ adapter to control, configure, and collect data.

PRODUCT HIGHLIGHTS

1769 Platform Connectivity – The module can be used in 1769-based systems, such as:

- MicroLogix 1500 controllers
- CompactLogix controllers
- Remote 1769-based node adapters (1769-ADN DeviceNet, etc.)

Three DSI/Modbus RTU Channels – 3 channels are provided and can be configured for:

- Single-Drive Mode – One PowerFlex 4, 40 or 400 AC drive per channel (3 drives total)
- Multi-Drive Mode – Up to five PowerFlex 4, 40 or 400 AC drives per channel (15 drives total)
- Modbus RTU Master – Connect Modbus RTU Slave devices, including 3rd Party devices and PowerFlex 70, 700, and 700S AC drives equipped with 20-COMM-H adapters

I/O Messaging – I/O messaging is used to transfer time-critical data, such as data that controls the drive. The following data can be sent and received by the adapter:

- Logic Status/Speed Feedback
- Logic Command/Speed Reference

Explicit Messaging – Explicit messaging involves non time-critical information that is typically triggered by the application (ladder program in a controller, etc.). The adapter supports the reading/writing of parameters, etc. in the drive and to any connected DSI peripheral(s).

Multiple Configuration Tool Options – A number of configuration tools can be used to configure the adapter and the connected drive.

When the 1769-SM2 is set to “Parameter” mode, tools like the PowerFlex DSI HIM, or drive-configuration software such as DriveExplorer™ or DriveExecutive™ can be used. When set to “Controller” mode, software tools such as RSLogix 500™, RSLogix 5000™ or RSNetWorx for DeviceNet™ can be used.



User Configurable Fault Responses – Selects the action that the adapter and drive will take for the following two conditions:

- Idle Fault Action – the scanner is idle (controller in program mode)
- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the adapter zeros the I/O data transmitted to the drive
- Hold Last – the adapter continues sending the I/O data prior to the fault and the drive continues in its present state
- Send Fault Configuration – the user specifies the Logic Command, Speed Reference, and Datalink data that is sent to the drive, allowing complete flexibility in configuring a fault action

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using a PowerFlex DSI HIM, DriveExplorer or DriveExecutive. View actual Logic Status/Speed Feedback, Logic Command/Speed Reference, and Datalink data being transmitted to/from the controller.

Flash Upgradable – The adapter can be flash updated in the field using DriveExplorer, DriveExecutive or ControlFLASH to take full advantage of new firmware features as they become available.

PARAMETERS

No.	Name	Description
01	Config Mode	Displays the module's configuration mode.
02	DSI Mode	Displays the module's operating mode (single or multi-drive).
03	Reset Module	Used to reset the module or set defaults.
04	Idle Action 1	Sets the action that the module and CH1 drive take if the module detects that the controller was switched to Program mode or Test mode.
05	Ftr Cfg Logic 1	Sets the data that is sent to the CH1 drive if Parameter 04 - [Idle Action 1] is set to "Send Ftr Cfg" and the controller is put into Program or Test mode.
06	Ftr Cfg Ref 1	
07	DSI I/O Cfg 1	
08	DSI I/O Act 1	
09	Drv 0 Addr 1	Sets the corresponding node addresses of the daisy-chained CH1 drives when the module Operating Mode Switch (SW2) is set for Multi-drive operation.
10	Drv 1 Addr 1	
11	Drv 2 Addr 1	
12	Drv 3 Addr 1	
13	Drv 4 Addr 1	
14	RTU Baud Rate 1	Sets the baud rate used by the CH1 drives when the module is operating in the Multi-drive mode and Parameter 07 - [DSI I/O Cfg 1] is set to "RTU Master".
15	RTU Parity 1	Sets the parity used by the CH1 drives when the module is operating in the Multi-drive mode and Parameter 07 - [DSI I/O Cfg 1] is set to "RTU Master".
16	RTU Rx Delay 1	Sets the inter-character delay used by the CH1 drives to detect the end of a receive packet when the module is operating in the Multi-drive mode and Parameter 07 - [DSI I/O Cfg 1] is set to "RTU Master".
17	RTU Tx Delay 1	Sets the inter-frame delay used by the CH1 drives to delay the sending of a transmit packet when the module is operating in the Multi-drive mode and Parameter 07 - [DSI I/O Cfg 1] is set to "RTU Master".
18	RTU MsgTimeout 1	Sets the amount of time in seconds that the module will wait for a response from a Modbus RTU CH1 slave when the module is operating in the Multi-drive mode and Parameter 07 - [DSI I/O Cfg 1] is set to "RTU Master".
19	Idle Action 2	Sets the action that the module and CH2 drive take if the module detects that the controller was switched to Program mode or Test mode.
20	Ftr Cfg Logic 2	Sets the data that is sent to the CH2 drive if Parameter 19 - [Idle Action 2] is set to "Send Ftr Cfg" and the controller is put into Program or Test mode.
21	Ftr Cfg Ref 2	
22	DSI I/O Cfg 2	
23	DSI I/O Act 2	
24	Drv 0 Addr 2	Sets the corresponding node addresses of the daisy-chained CH2 drives when the module Operating Mode Switch (SW2) is set for Multi-drive operation.
25	Drv 1 Addr 2	
26	Drv 2 Addr 2	
27	Drv 3 Addr 2	
28	Drv 4 Addr 2	
29	RTU Baud Rate 2	Sets the baud rate used by the CH2 drives when the module is operating in the Multi-drive mode and Parameter 22 - [DSI I/O Cfg 2] is set to "RTU Master".
30	RTU Parity 2	Sets the parity used by the CH2 drives when the module is operating in the Multi-drive mode and Parameter 22 - [DSI I/O Cfg 2] is set to "RTU Master".
31	RTU Rx Delay 2	Sets the inter-character delay used by the CH2 drives to detect the end of a receive packet when the module is operating in the Multi-drive mode and Parameter 22 - [DSI I/O Cfg 2] is set to "RTU Master".
32	RTU Tx Delay 2	Sets the inter-frame delay used by the CH2 drives to delay the sending of a transmit packet when the module is operating in the Multi-drive mode and Parameter 22 - [DSI I/O Cfg 2] is set to "RTU Master".
33	RTU MsgTimeout 2	Sets the amount of time in seconds that the module will wait for a response from a Modbus RTU CH2 slave when the module is operating in the Multi-drive mode and Parameter 22 - [DSI I/O Cfg 2] is set to "RTU Master".
34	Idle Action 3	Sets the action that the module and CH3 drive take if the module detects that the controller was switched to Program mode or Test mode.
35	Ftr Cfg Logic 3	Sets the data that is sent to the CH3 drive if Parameter 34 - [Idle Action 3] is set to "Send Ftr Cfg" and the controller is put into Program or Test mode.
36	Ftr Cfg Ref 3	
37	DSI I/O Cfg 3	
38	DSI I/O Act 3	
39	Drv 0 Addr 3	Sets the corresponding node addresses of the daisy-chained CH3 drives when the module Operating Mode Switch (SW2) is set for Multi-drive operation.
40	Drv 1 Addr 3	
41	Drv 2 Addr 3	
42	Drv 3 Addr 3	
43	Drv 4 Addr 3	
44	RTU Baud Rate 3	Sets the baud rate used by the CH3 drives when the module is operating in the Multi-drive mode and Parameter 37 - [DSI I/O Cfg 3] is set to "RTU Master".
45	RTU Parity 3	Sets the parity used by the CH3 drives when the module is operating in the Multi-drive mode and Parameter 37 - [DSI I/O Cfg 3] is set to "RTU Master".
46	RTU Rx Delay 3	Sets the inter-character delay used by the CH3 drives to detect the end of a receive packet when the module is operating in the Multi-drive mode and Parameter 37 - [DSI I/O Cfg 3] is set to "RTU Master".
47	RTU Tx Delay 3	Sets the inter-frame delay used by the CH3 drives to delay the sending of a transmit packet when the module is operating in the Multi-drive mode and Parameter 37 - [DSI I/O Cfg 3] is set to "RTU Master".
48	RTU MsgTimeout 3	Sets the amount of time in seconds that the module will wait for a response from a Modbus RTU CH3 slave when the module is operating in the Multi-drive mode and Parameter 37 - [DSI I/O Cfg 3] is set to "RTU Master".

SPECIFICATIONS

Communications	Network	Protocol	DSI/Modbus RTU
		Data Rates	DSI: 19.2 kbps Modbus RTU: 300 – 38.4 kbps
Electrical	Consumption	Controller Drive	350 mA @ 5 VDC 0 mA @ 24 VDC (supplied by Compact I/O power supply)
Regulatory Compliance		UL	UL508C
		cUL	CAN/CSA C22.2 No. 14-M91
		CE	EN50081-2 and EN61000-6-2
		CTick	AS/NZS 2064, 1997, Group 1, Class A

EXAMPLE I/O IMAGE

Single-Drive Mode


Output Image	Input Image	Word		
		CH1	CH2	CH3
Module Control Word	Module Status Word		0	
Logic Command	Logic Status	1	3	5
Speed Reference	Speed Feedback	2	4	6

Multi-Drive Mode


	Output Image	Input Image	Word		
			CH1	CH2	CH3
Drive 0	Module Control Word	Module Status Word		0	
	Logic Command	Logic Status	1	11	21
	Speed Reference	Speed Feedback	2	12	22
Drive 1	Logic Command	Logic Status	3	13	23
	Speed Reference	Speed Feedback	4	14	24
Drive 2	Logic Command	Logic Status	5	15	25
	Speed Reference	Speed Feedback	6	16	26
Drive 3	Logic Command	Logic Status	7	17	27
	Speed Reference	Speed Feedback	8	18	28
Drive 4	Logic Command	Logic Status	9	19	29
	Speed Reference	Speed Feedback	10	20	30

EXAMPLE SYSTEMS


Example MicroLogix 1500 Single Mode System Arrangement

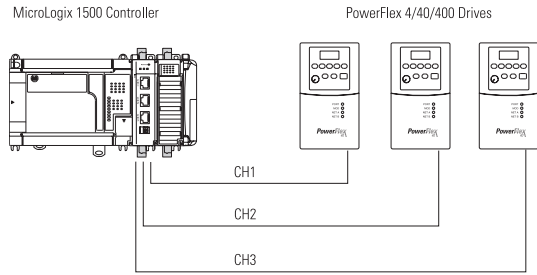


Example MicroLogix 1500 Multi-Drive Mode System Arrangement

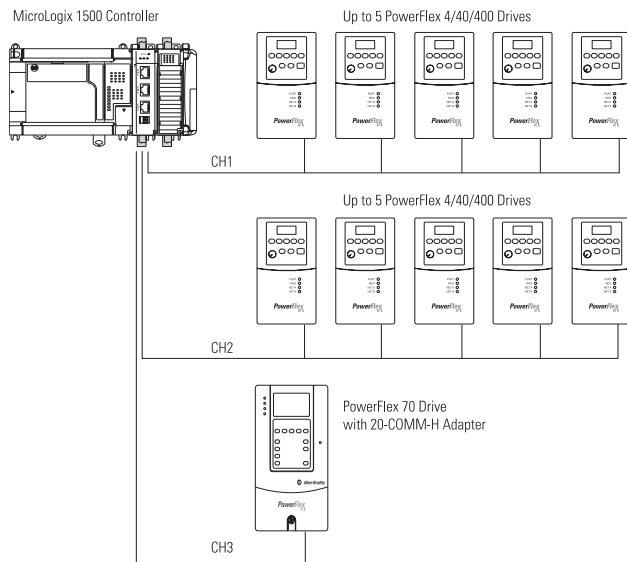


Example CompactLogix Multi-Drive Mode System Arrangement

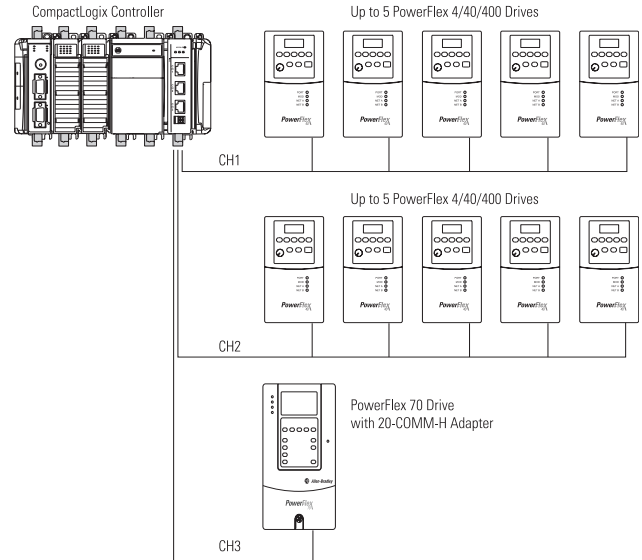

Example ControlLogix/1769-ADN DeviceNet Adapter Single Mode System Arrangement

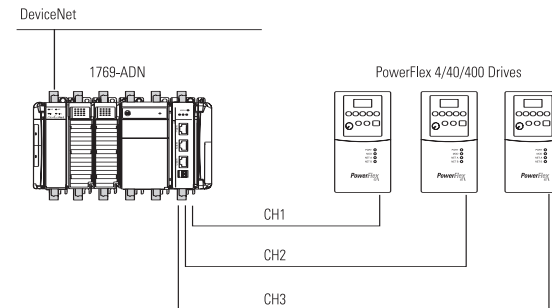

Example CompactLogix Single Mode System Arrangement

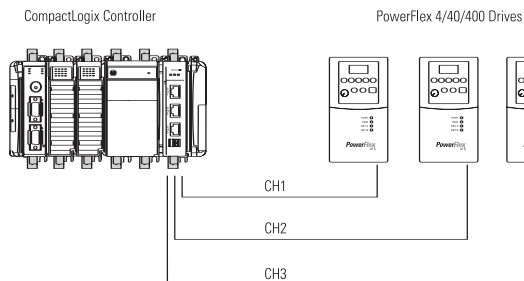

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

DSI EXTERNAL COMMUNICATIONS KIT

The DSI External Communications Kit (22-XCOMM-DC-BASE) provides a network connection for PowerFlex® 4, 40, and 400 AC drives. Each kit can serve up to 5 drives via their RS-485 ports.

PRODUCT HIGHLIGHTS


Multiple Network Connectivity – Provides a network connection for DSI-based PowerFlex 4, 40, and 400 AC drives. Each drive connected to a kit can be independently controlled, and have its parameters accessed either through explicit messaging, or by using software tools such as DriveExplorer™ or DriveExecutive™.

The kit is for use with only the following Allen-Bradley communication adapters (sold separately):

- 22-COMM-E EtherNet/IP™
- 22-COMM-D DeviceNet™
- 22-COMM-P PROFIBUS DP™

Universal Mounting – Direct panel, DIN rail, even Zero-Stacking™ (side-by-side) mounting is possible using the all-aluminum, EMI noise-immune enclosure.


Versatile Power Connections – Connect either a 24 VDC power supply to the kit's convenient removable terminal block, or use the Allen-Bradley AC power adapter (20-XCOMM-AC-PS1, sold separately) that comes with interchangeable region plugs (US, UK, Europe, and Australia). The kit can also be daisy-chained to provide power for additional kits.

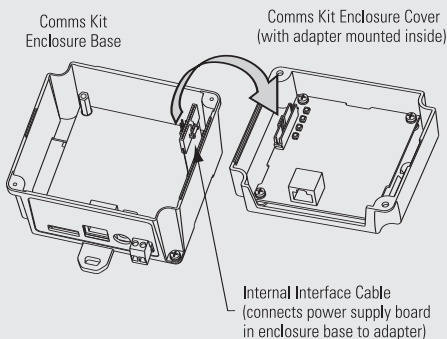


PowerFlex®
Communications



EXAMPLE SYSTEM OVERVIEW

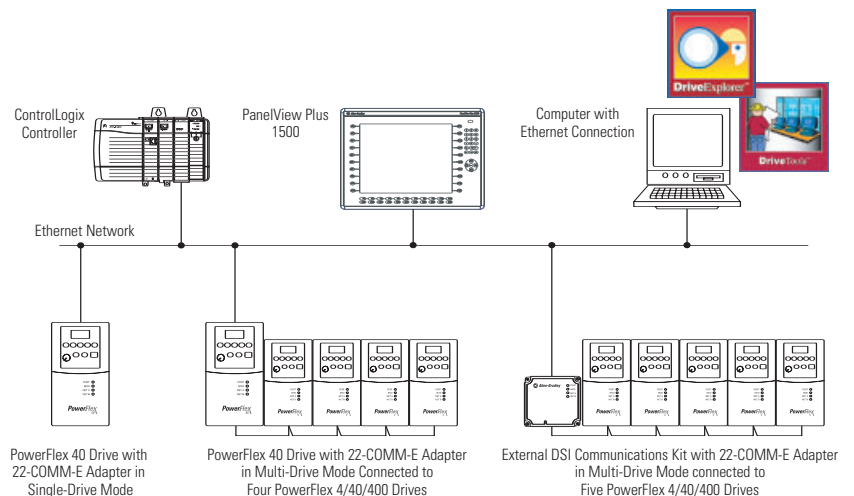

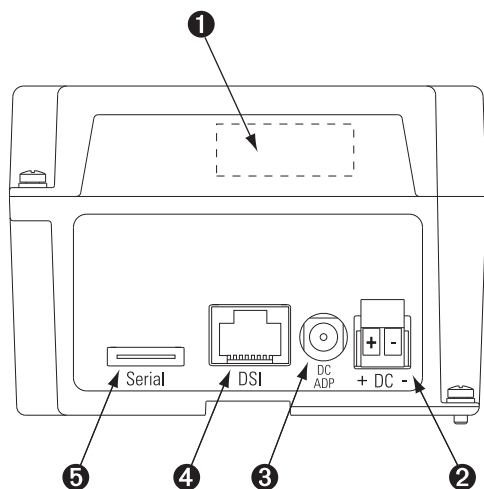


Item	Connector	Description
1	Network	Network connection for communication adapter
2	24 VDC	Connection for 24 VDC power source
3	AC-to-DC	Connection for 20-XCOMM-AC-PS1 power adapter
4	DSI	DSI connection for 22-RJ45CBL-C** cable or AK-UO-RJ45-TB2P terminal block adapter
5	Serial	Connection for 1203-SFC cable to use with PC software tools

SPECIFICATIONS

Communications	Network	Protocol	Dependent on installed adapter	
	Drive	Data Rate	Dependent on installed adapter	
Electrical	Consumption	Protocol	DSI	
		Data Rate	19.2 Kbps	
		Drive	None	
		Network	EtherNet/IP	None
	DC Power Supply Requirement		DeviceNet	60 mA at 24 VDC
			PROFIBUS DP	None
			22-COMM-E	140 mA at 24 VDC
			22-COMM-D	60 mA at 24 VDC
Compliance			22-COMM-P	60 mA at 24 VDC
		UL	UL508C	
		cUL	CAN/CSA C22.2 No. 14-M91	
		CE	EN50178 and EN61800-3	
		CTick	EN61800-3	


AC POWER ADAPTER OPTION

The AC power adapter (20-XCOMM-AC-PS1) is an accessory AC-to-DC converter for use with the external communications kit. The converter, which comes with interchangeable plugs, is shown below. The converter connects to any available 100-240 VAC receptacle. Use the appropriate plug for your region:

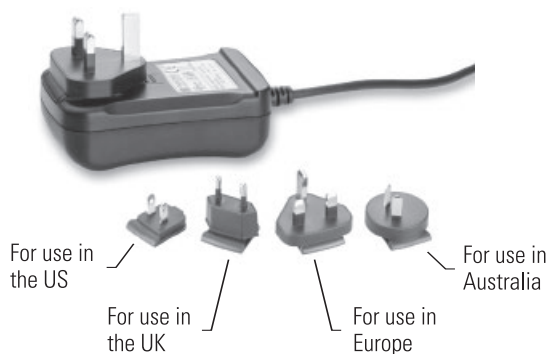

DAISY-CHAINING KITS

You can power additional external communication kits by daisy-chaining them together.

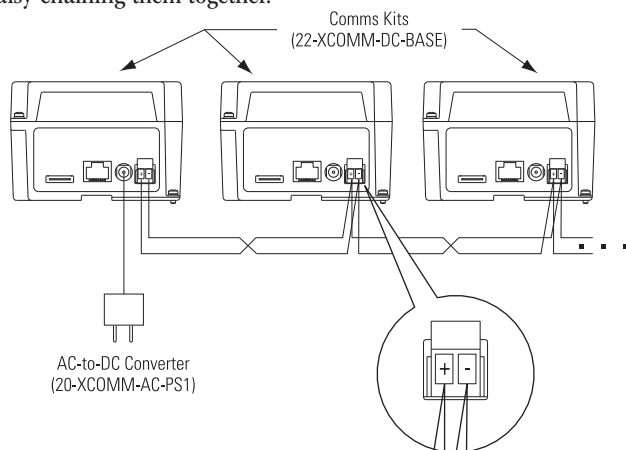

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

PRODUCT PROFILE

DSI WIRELESS INTERFACE MODULE

The DSI Wireless Interface Module (WIM) provides a wireless communication interface between a Pocket PC, laptop computer or desktop computer equipped with Bluetooth® wireless technology, and any Allen-Bradley® product supporting the DSI™ protocol. Connectivity includes the entire PowerFlex® 4-Class Family of drives and peripherals.

PRODUCT HIGHLIGHTS

Multiple Enclosure Styles – The DSI WIM is offered in two different form-factors to meet your environment needs:

- NEMA 1 (cat. no. 22-WIM-N1)
- NEMA 4 (cat. no. 22-WIM-N4S)

Versatile Mounting – The NEMA 1 DSI WIM can be installed in a NEMA 1 DSI HIM bezel (22-HIM-B1) mounted on the front of an enclosure door. However, if a DSI HIM is still required and already occupies DSI Port 2 on the drive, a DSI splitter cable (AK-U0-RJ45-SC1) can be used.

The NEMA 4 DSI WIM is designed for NEMA 4 and permanent-mount applications.

Multiple Tool Options – A number of tools can be used to configure and communicate with the DSI WIM and connected drive. These tools include the PowerFlex DSI HIM, or drive-configuration software such as Pocket DriveExplorer™ for Pocket PC, DriveExplorer™ or DriveExecutive™.

DSI Routing – Connect point-to-point to a PowerFlex 4-Class drive using the DSI WIM, and then route out over DSI through the built-in RS-485 ports to access other drives on the network (up to 31 drives!). This eliminates the need for a separate network connection and interface.

Security – Use the security mode parameter to enable or disable access and the security PIN parameter to set a unique 4-digit pass code number. Together, these parameters prevent “others” from gaining access to parameters in the WIM and connected drive for configuration.



User Configurable Fault Response – Selects the action that the DSI WIM and drive will take for the following condition:

- Comm Fault Action – network communications have become disrupted

Available actions include:

- Fault – the drive is faulted and stopped
- Stop – the drive is stopped using the current deceleration rate and is not faulted
- Zero Data – the WIM zeros the I/O data transmitted to the drive
- Hold Last – the WIM continues sending the I/O data prior to the fault and the drive continues in its present state

Diagnostics – Built-in diagnostics allow drive-side troubleshooting of the network connection using Pocket DriveExplorer for Pocket PC, DriveExplorer or DriveExecutive. View actual Logic Command / Speed Reference and Logic Status / Speed Feedback data being transmitted to and from the controller.

Flash Upgradeable – The DSI WIM can be used to flash update its own firmware, and the firmware of other connected DSI peripherals such as 22-COMM-* adapters through Pocket DriveExplorer for Pocket PC, DriveExplorer or DriveExecutive to take full advantage of new firmware features as they become available.


PARAMETERS

No.	Name	Description
01	Adapter Cfg	Sets the operating mode of the WIM.
02	Adapter Type	Displays the present operating mode of the WIM.
03	Drive Addr Cfg	Sets the node address of the WIM for use with the WIM operating mode set with Parameter 01 - [Adapter Cfg].
04	Drive Addr Act	Displays the node address of the drive that the WIM is communicating with when the WIM is in RTU Master mode using Parameter 01 - [Adapter Cfg].
05	Security Mode	Enables/disables the security mode for the WIM, which prevents accessing its parameters and the connected drive for configuration.
06	Security PIN	Sets the PIN number to access WIM parameters for configuration when Parameter 03 - [Security Mode] is set to 1 = PIN Required.
07	Comm Flt Action	Sets the action that the WIM and drive will take if the WIM detects that wireless communications are disrupted. This setting is effective only if I/O that controls the drive is transmitted through the WIM.
08	Reset Module	Resets the adapter or sets parameter defaults.
09	Clear DF1 Counts	Resets the DF1 statistical parameters 10 and 11 to 0 if set to "1 = Clear Counts." This parameter will be reset to "0 = Ready" after a "Clear Counts" command has been performed.
10	DF1 Packets Sent	Displays the number of DF1 packets sent by the WIM. This parameter is normally about equal to the value in parameter 11.
11	DF1 Packets Rcvd	Displays the number of DF1 packets received by the WIM. This parameter is normally about equal to the value in parameter 10.

SPECIFICATIONS

Radio		Transceiver Frequency Power Range	Bluetooth v1.1 Compliant 2.4 GHz Frequency Hopping 2.5 mW Maximum RF Output Class II - 10 m (32.8 ft)
Communications	Drive	Protocol Data Rate	Drive Serial Interface (DSI) 19.2 Kbps
Electrical	Consumption	Drive Network	170 mA @ 5 VDC None
Regulatory Compliance		UL cUL CE CTick FCC ID IC	UL508C CAN / CSA C22.2 No. 14-M91 EN50178 and EN61800-3 AS / NZS 2064, Group 1, Class A SNT-2XWIMNX 5450A-2XWIMNX

NETWORK EXAMPLE

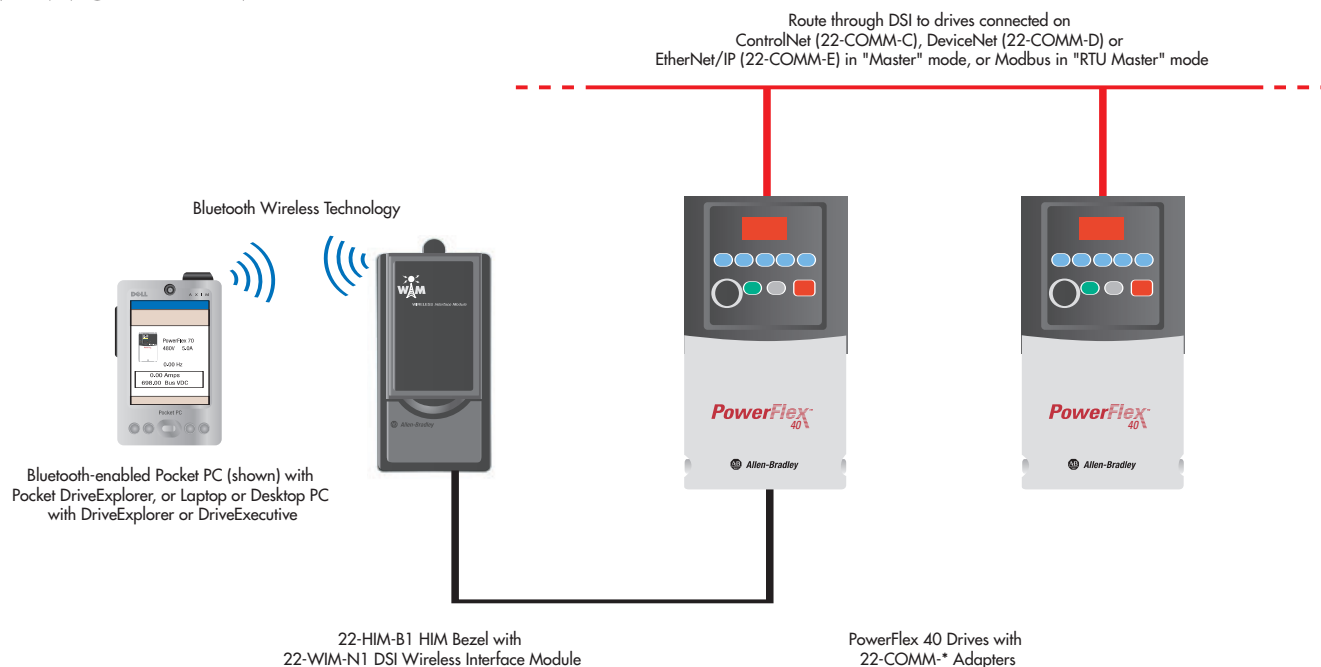

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

4-CLASS CONNECTIVITY

Communication Adapter / Module	Protocol	PowerFlex 4-Class		
		4	40	400
(internal)	Modbus RTU	std.	std.	std.
22-SCM-232	DF1	Y	Y	Y
22-COMM-C	ControlNet	Y ⁽¹⁾	Y	Y
22-COMM-D	DeviceNet	Y ⁽¹⁾	Y	Y
22-COMM-E	EtherNet/IP	Y ⁽¹⁾	Y	Y
22-COMM-L	LonWorks	Y ⁽¹⁾	Y	Y
22-COMM-P	PROFIBUS DP	Y ⁽¹⁾	Y	Y
1769-SM2	Modbus RTU	Y	Y	Y
22-WIM-Nx	Bluetooth	Y	Y	Y

Note: ⁽¹⁾ Requires use with either a PowerFlex 40 or 400 and installed communication adapter configured for Multi-Drive mode, or a DSI ExternalCommunications Kit.

PowerFlex is a registered trademark of Rockwell Automation. DriveExplorer, DPI, DriveExecutive, Remote I/O, and Compact I/O are trademarks of Rockwell Automation.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846