

MODEL VM2800 & VM3800
VIBRA-CHECK™ VM2800 (Standard Model)
and VIBRA-CHECK VM3800 (Advanced Model)
Vibration Meter
User Manual 100085



8824 Fallbrook Dr.
Houston, TX 77064, USA
Tel: 1-281-940-1802
After Hours Technical Assistance: 1-713-702-8805
Fax: 1-713-559-9421
E-mail: info@metrix1.com
www.metrix1.com

[Welcome.....](#) 3

[What is in the box?](#) 4

[Specifications for VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:](#) 5

[General Layout of the VIBRA-CHECK VM3800:.....](#) 6

[Inside the VIBRA-CHECK VM2800 & VIBRA-CHECK VM3800:.....](#) 7

[VIBRA-CHECK VM3800 Quick Guide:.....](#) 9

[Display of the VIBRA-CHECK VM3800:.....](#) 10

[Operation of the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:.....](#) 12

[Using your VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:](#) 16

[Vibration level definitions:.....](#) 17

[Setting the Units on your VIBRA-CHECK VM2800 & VIBRA-CHECK VM3800..](#) 18

[Sensitivity adjustment:.....](#) 19

Welcome

Congratulations on your purchase of the VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 Vibration Meter. This instrument is built with pride and has features that you will find useful in your measurements. This manual will provide you with all the information you require to get the greatest benefit from your measurement system.

Engineers, technicians and maintenance personnel will find that the VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 is intuitive, has an easy to use keypad and is invaluable for route collection, and for vibration measurements.

System Contents

Your system includes this manual, the VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 Meter, 9 Volt battery, accelerometer with coiled cable, and a hard carrying case.

Quality Control - Calibration

Your system has been calibrated to the highest standards.

The VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 has been designed to be rugged and durable for harsh environments. This instrument has rubber seals to protect it from splash and oil in harsh environments.

The VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 is calibrated at the factory to ensure that the measurement you are making is accurate and repeatable. It is recommended that your meter be verified at least once per year for accuracy.

Using This Manual

In this manual you will find information for using the various features of the VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800. Once you become familiar with the system, you will only need to refer occasionally to this manual for specifications or to certain aspects of operation.

Help

Metrix Instruments wants to help you get the most from your system. If there is anything else we can do, please feel free to call or Email us.

Telephone: 281-940-1802

For Purchase orders; email to orders@metrix1.com or fax to 713-559-9417

For Quotes or Technical Assistance quotes@metrix1.com or fax to 713-559-9421

For Issues or Comments - email to cs@metrix1.com (Customer Service)

Service Department- service@metrix1.com.

Or you can visit our website at: www.metrix1.com

The website is the first place to look for product updates, application notes, or technical tips.

What is in the box?

The VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800 measurement kit comes standard with the following items:

- Fig. A. 1 ea. VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800
- Fig. B. 1 ea. 9 Volt Battery
- Fig. C. 1 ea. G-Spike probe and magnetic base
- Fig. D. 1 ea. Coiled Accelerometer cable
- Fig. E. 1 ea. Accelerometer 100 mV/ g 50 g range.
- Fig. F. 1 ea. High strength magnetic base for Accelerometer
- Fig. H. 1 ea. Calibration certificate
- Fig. I. 1 ea. Molded plastic carrying case



VIBRA-CHECK
VM2800 or VIBRA-
CHECK VM3800
Fig. A



Coiled Accelerometer cable
Fig. D



Accelerometer with detachable
magnetic base
Fig. E, F



9 Volt Battery
Fig B



G-Spike
Fig C



Options:
Fig J
with cable

1 ea. Headset



Molded plastic carrying case
Fig. I

Specifications for VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:

Displacement	0- 1999 um, p-p (10 1 kHz BP) (0.00 - 78.7 mil)
Velocity	0.0 – 1999.9 mm/s, 0-p (10-1 kHz, ISO 2954) (0.00 – 7.87 in/ sec)
Acceleration	0.00 – 19.99 g, rms (10 Hz HP)
**Bearing Condition	0.0 – 199.9 mm/s (0-p), 500 Hz- 2 kHz) (0.00 – 7.87 in/sec.)
Accuracy	5% (10 – 10 kHz)
Battery Indicator	Low / 25%, 50%, 75%, Full, graphical indicator
Sensor bias indicator	Normal/ Open/Short, graphical indicator
Back light	LED back light, auto off
Sensor Sensitivity	100 mV/g +- 30% adjustable
Housing rating	IP 65, with EMI protection
AC output	2.8V
Power supply	9V alkaline battery (approx. 30 Hours operation)
Auto power off	5 minutes after pressing any key
Display	120 x 32 graphic mode LCD
Size	180 x 92 x 32 mm (7.1 x 3.6 x 1.2 in.)
Weight	300 grams (including battery)
**Hold function	Freezes the display
**Average function	Display the averaged value of the last 10 data points
**Peak hold function	Displays the maximum value
**Gain	X10, increases the reading precision by 1 decimal place.
**Displacement w/ Gain	0.00 – 199.9 um, p – p, (0.00 – 7.87 mil)
**Velocity w/ Gain	0.00 – 19.99 mm/s, 0-p (0.000 – 0.787 in/s)
**Acceleration w/ gain	0.00 – 1.999 g, rms
**Memory	Up to 1000 points can be stored
**Review function	Recall and display the saved data

**** VIBRA-CHECK VM3800 Only**

General Layout of the VIBRA-CHECK VM3800:



Inside the VIBRA-CHECK Limited & VIBRA-CHECK VM3800:

The VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 comes equipped with the highest quality components for accurate and repeatable vibration measurements. In the next sections, we will discuss how measurements are detected, filters and the reasons for having them.

How is the vibration values measured? Internally, a (RMS) Root Mean Square detector is used to process the vibration signals. Peak to peak values are computed directly from this RMS value. One of the nice features of the VIBRA-CHECK and VIBRA-CHECK VM3800 is the ability of the user to select the desired units for measurement, ie. RMS or Peak to Peak (p-p) for example. Because the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 has smart features, the user can make vibration measurements using their favorite unit of choice.

Filters: Each VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 has built in filters to condition a vibration signal. A vibration signal whose frequencies are not within the filter range will result in null reading or decreased values.


Acceleration: 10 Hz, High Pass filter

Velocity: 10 – 1KHz, Band Pass filter (conforming to the ISO2954 Standard)


Bearing Condition: 500 Hz to 2 kHz Band Pass Filter

Displacement: 10 – 1KHz, Band Pass filter (conforming to the ISO2954 Standard)

Note that the filters are forth order, -24dB/Octave roll-off.

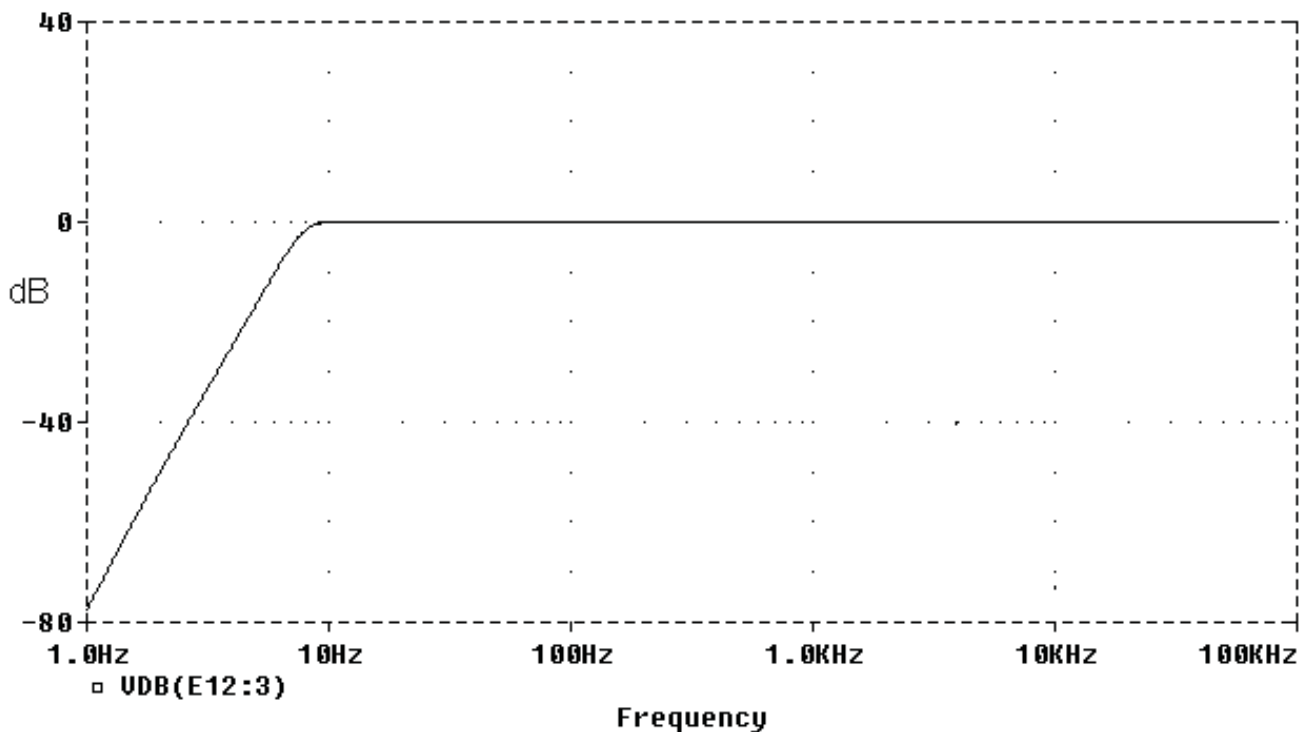

Typical high pass filter

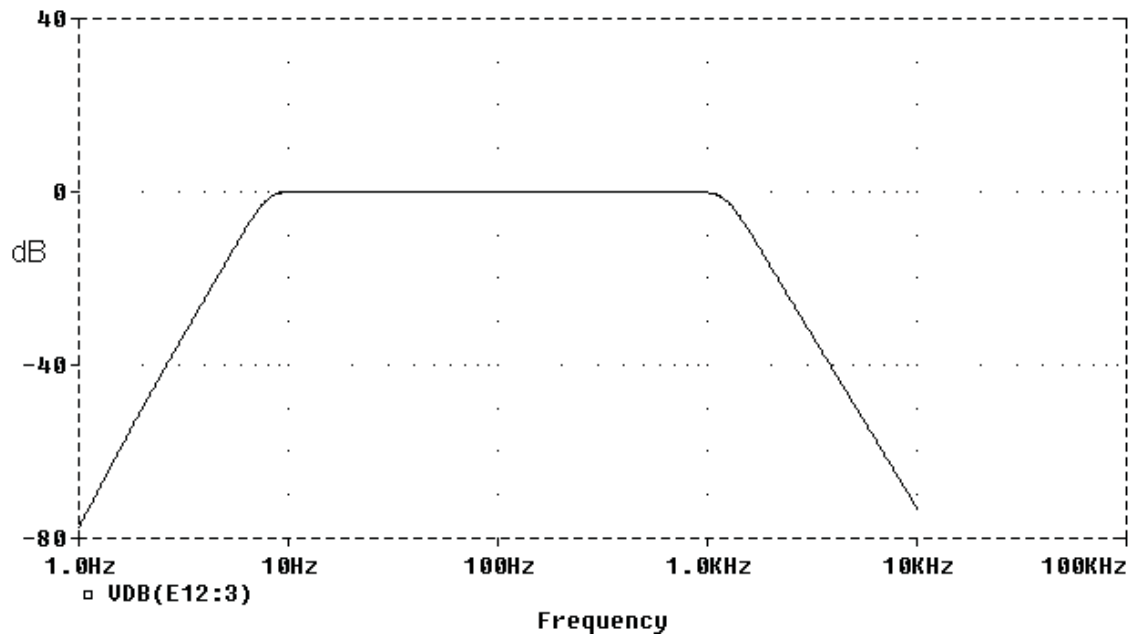

Typical band pass filter




To begin:


1. Press and hold the **on/ off** button for 4 seconds. Press the on/ off button again to illuminate the display.
2. Connect accelerometer and headphone.
3. Select desired test you wish to make; **Displacement**, **Velocity** or **Acceleration**.
4. On the VIBRA-CHECK VM3800, you may also choose in addition other functions such as **hold**. This “freezes” the display until the hold is pressed again. **Gain** will increase the resolution by one decimal place. **Avg./ PK (peak)** allows you to select either Average or Peak. Selecting Average will slow the display by only displaying average of the last 10 readings. Peak displays only the highest peak value. **BRG (bearing)** is a high pass filter that filters values below 500 Hz. This means that you will not see anything on the display below 500 Hz bandwidth.*

Note: Hold, Gain, Avg/ Pk, and BRG are used with the test mode selected: disp, vel, or accel.

Display of the VIBRA-CHECK VM3800:

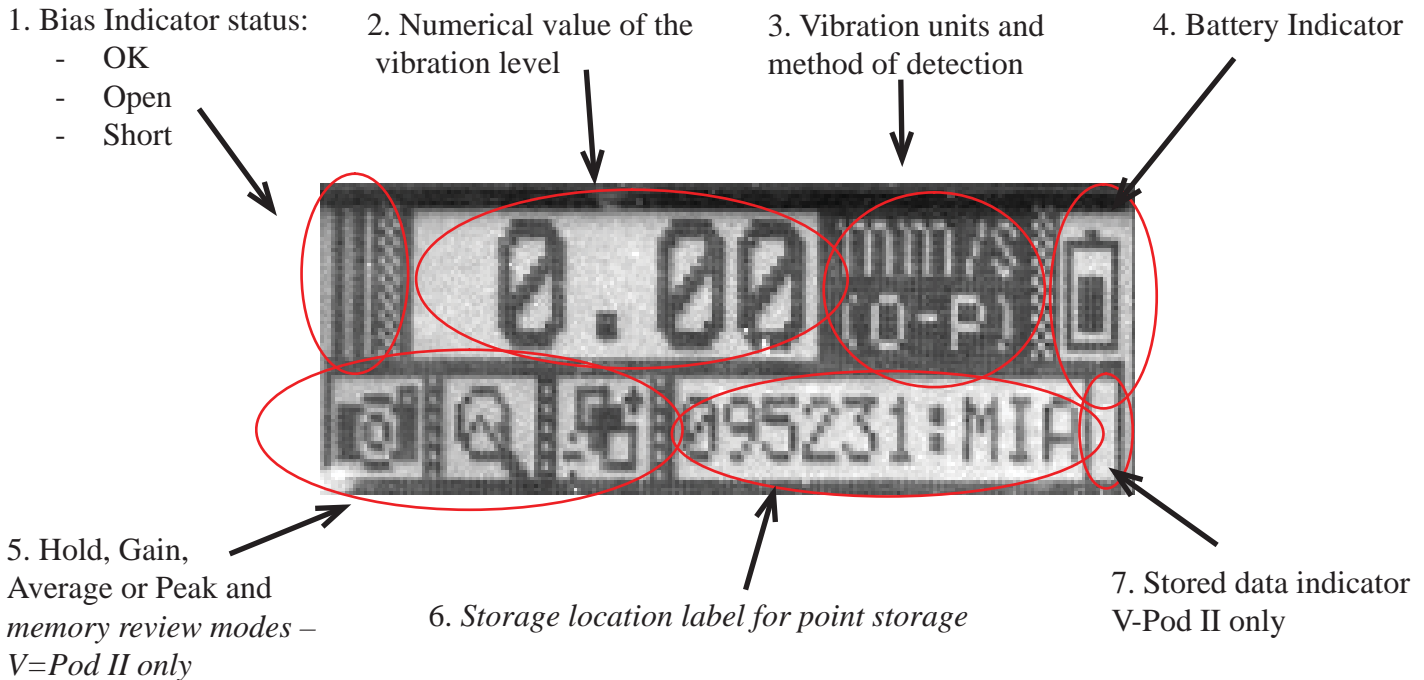


1. Bias Indicator: The Bias indicator is located on the left side of the display. The VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 continuously monitors the bias condition of the constant current accelerometer and indicates the status on the display. There are 3 conditions: OK, High and Low.

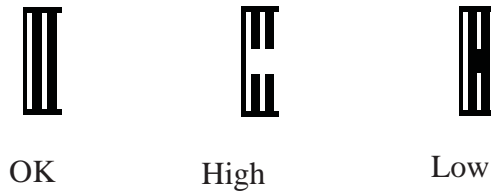

OK: ICP bias is in the normal range, everything is working correctly including the cable.

High: Usually the sensor or cabling is not connected to the meter.

Low: The accelerometer circuit is shorted. Check the cabling immediately.

 **Caution:** Do not operate the meter when you observe a high or low bias condition. Inspect and replace as required.

2. Numerical Value of the vibration level: This is where the vibration levels are displayed for the function you have selected. For example, you may have selected hold to “freeze” the numerical display.

3. Vibration units and method of detection: Available units for each selection:

Displacement: μm (P-P), Mil (P-P)

Velocity: mm/s (0-P), mm/s (RMS), in/s (0-P), in./s (RMS)

Acceleration: g (RMS), g (0-P), m/s^2 (RMS), m/s^2 (0-P)

4. Battery Indicator: The battery indicator is located on the right side of the display, illustrating the battery condition. Change the battery immediately if you observe a low condition.



Full



75%
Full



50%
Full




25%
Full



Low
battery

Battery Installation: The VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 are powered by a 9V alkaline battery. When installing the battery, use a screwdriver to remove the battery compartment cover. After installation, attach the cover by fastening the screws with correct torque, since the housing of the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 is IP 65 rated.

Note: The VIBRA-CHECK VM3800 has a built in non-volatile EEPROM that will keep your saved data in memory even if you change the battery.

 **Caution:** It is recommended to remove the battery from the vibration meter when it will not be in operation for long periods of time. Alkaline batteries will provide the best performance. Operating the meter in low battery conditions is not advised since the meter accuracy can be degraded.

5. Hold , Gain, Average or Peak and memory review modes: The VIBRA-CHECK VM3800 (only) offers very useful functions such as Hold, Gain, average and peak readings. These functions are used together with your selection of displacement, velocity, acceleration and bearing.

The memory review has 3 modes: Review : points saved, Review: points available. Review: All


6. Storage location label for point storage - VIBRA-CHECK VM3800 only: The VIBRA-CHECK VM3800 can store up to 1000 points. A number will appear, ie. 001, 002, 003 etc. for each storage location.

7. Stored data indicator- VIBRA-CHECK VM3800 only: In the lower right side of the display, when you see a black bar, indicates a value stored in this location. If this area is left blank, no value is stored at this memory location.


Operation of the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:

The VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 vibration meters are simple to use but yet very powerful. Each function has a distinct purpose and is shown on the display. We will review each function and it's use in the following paragraphs.


ON/ OFF: Press and hold the ON/Off button for 4 seconds to turn on the meter. Pressing the button again will illuminate the display.. The meter will automatically shut off after 5 minutes of idle. Pressing any key will cancel the auto shut off for an additional 5 minutes.

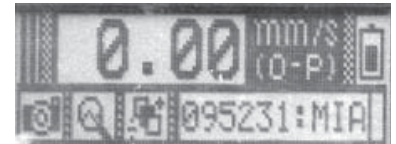

Disp: Press the displacement key if you want to measure vibration in displacement. The display will show the units in either um or mils.

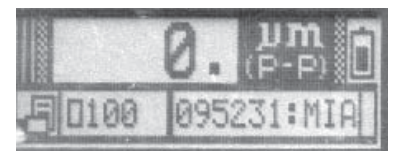

Vel: Press the Velocity key if you want to measure vibration in velocity. This display will show the units in either Velocity: mm/s (0-P), mm/s (RMS), in/s (0-P), in./s (RMS)

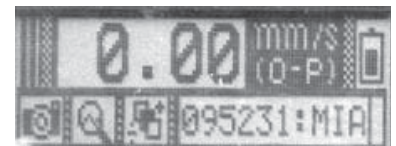


Accel: Press the Acceleration key if you want to measure vibration in acceleration. The display will show the units in either g (RMS), g (0-P), m/s² (RMS), m/s² (0-P).



VIBRA-CHECK VM3800:




Hold: Press the hold key to “freeze” or hold the value on the display. When the hold mold is turned on, a camera icon will appear in the bottom left of the display. To turn off, press the hold key again. The hold key can be used together with gain, or average functions. You may also save the reading to memory by pressing the save key.

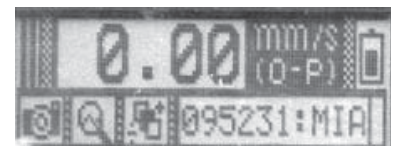

Application tip: This function is very useful when vibration levels vary. An example would be during startup of a rotating machine. By pressing hold every 1000 rpm, you can “freeze” the display at each predefined rpm position.

Gain: Press the gain key to increase the display

Resolution. In this mode, the vibration signal will be amplified by 10 times. When this mode is turned on, you will observe a gain icon in the lower left display. To turn off, press the gain key again.

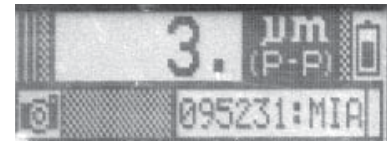


Application tip: This function is very useful for low level vibration measurement. For example, the displacement level of a precision machine tool is typically within 1 μm peak to peak.



Caution: When you turn off the gain mode, the reading will take about 5 seconds to stabilize, because the rms detector requires time to average out the previous signal with gain. When using the gain key, the vibration signal will be amplified by 10 times to increase the s/n (signal to noise ratio). Also amplified is the dynamic range of the internal A/D converter. The chart below shows the maximum range readings with and without gain.


Units	Range with gain	Range without gain
g (rms)	0.001~1.999	0.01~19.99
mm/s (0-p)	0.01~19.99	0.1~199.9
μm (p-p)	0.1~199.9	1~1999

Average/ Peak Hold: Pressing this key once selects the moving average mode. Pressing this key again, selects the peak hold mode. Pressing this key a 3rd time will disable this mode.

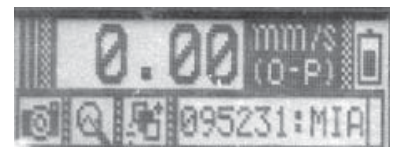

① Average: In the average mode, the meter calculates the average value of the last 10 measurements (moving average) and display the results. This is useful when vibration levels are not stable. The moving average mode will provide a more stable reading by averaging the collected data.

① Peak Hold: The meter will display the maximum value over time. This mode is used to measure the maximum vibration levels during a transient event. For example, you may use peak hold to measure the resonance vibration level during a start up process.

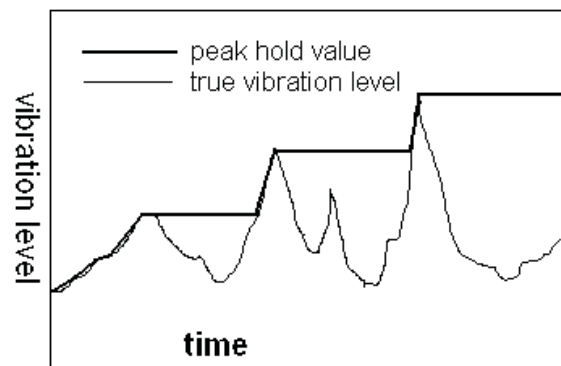

BRG: Press the bearing key to activate the high pass filter. This will eliminate most frequencies below 500 Hz bandwidth. Therefore you will NOT see any vibration readings below 500 Hz. **




The Bearing function uses velocity method of measurement. The available units are mm/s or in/ s. The method of detection available is B-P or B-R. B-P represents “Bearing – 0-Peak” and B-R represents “Bearing – RMS”.

**Occasionally you may view some readings below 500 Hz, due to the roll off of this internal filter, but in general, the filter cutoff is 500 Hz.


Application tip: Measuring the vibration of bearings can be difficult because of the excessive vibration levels at lower frequencies. Use this feature when measuring bearings to eliminate lower frequencies in your measurement.

PREV and NEXT: The Previous and next keys are used to change the active memory address. When the VIBRA-CHECK VM3800 is initially turned on, the number in the bottom right hand corner of the display is the active address of memory. Pressing the NEXT key will increase the number of the active address, while pressing the PREV key will decrease the value of the active address. The number of the address ranges from 000 to 999. You can use these keys to set the correct address when saving data or reviewing the data.

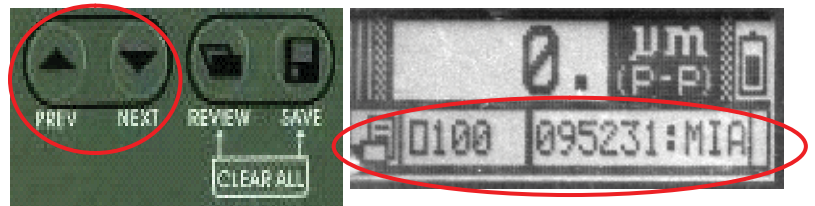


Pressing *once* the PREV or NEXT key will increment the stored value by one. When you *press and hold* the PREV or NEXT key, you will fast forward or backwards by increments of 10.

Review: There are 3 review modes. Pressing the review key once will show the review icon in the lower left corner of the display. Note: You cannot store data in the review modes.

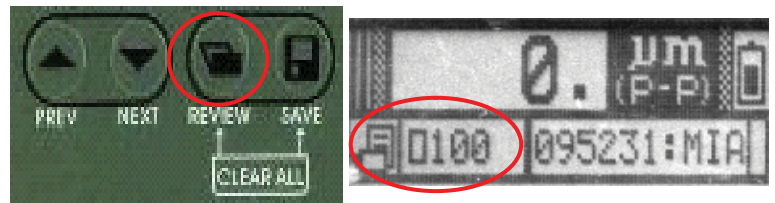

In Review Mode 1, you may review the points with no data stored. In Review mode 2, you may review points that has data stored, and in review mode 3: you may review all points.


☐ Review mode 1: The first review mode shows a empty square symbol. This indicates the available location points to save data. In this example, there are 100 available locations to save data.

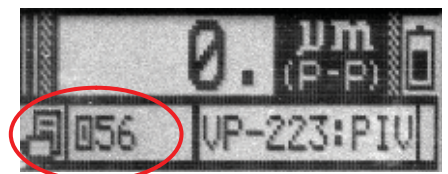

☒ Review Mode 2: By pressing the review key again, you will access the second review mode. This mode shows a filed in square symbol. This is an indication of how many points have been saved.



A Review Mode 3: By pressing the review key again, you will access the third review mode. This mode shows the letter A along with 1K. 1K is the default for 1000 available points.

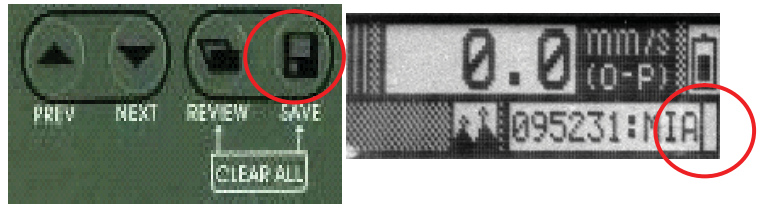

Save: Pressing the save key will overwrite any data stored in a memory location and automatically advance to the next memory location. Note: You cannot save data in the review mode. The save flag left blank indicates that this memory storage location is empty.

Press and hold the review and save keys at the same time will clear out the memory.

 Caution: When you press the save key, you can overwrite existing data.




Using your VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800:

Sensor Mounting: Each VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 is equipped with an accelerometer with a high-strength magnetic base and touch spike for sensor mounting. The accelerometer magnetic mount is capable of a wider frequency measurement than the spike. The spike is designed for measurement of vibration signals that range below 1 khz. It is always recommended to use the magnetic base where applicable. The touch spike is ideal for non-ferrous surfaces or limited areas.



G-Probe: Changing between the spike and magnetic base is easy during in-field measurement.

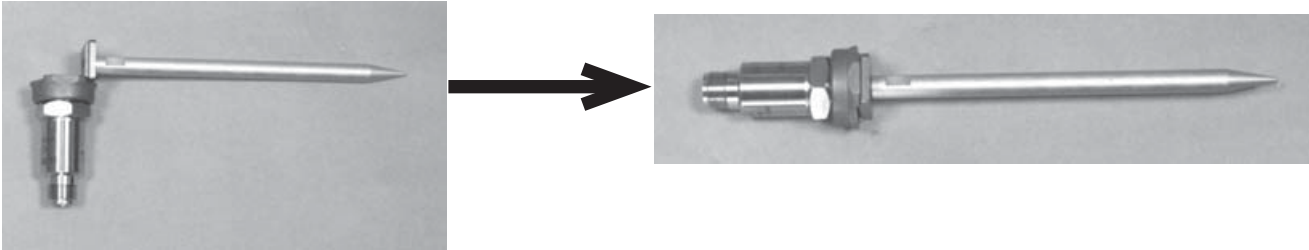

Step 1: Attach the G-Probe as shown to fit the magnetic base.


Step 2: Turn the G-Probe to the correct position.

Headphones: When collecting data with the VIBRA-CHECK VM3800, you may use the optional headphone to listen to the mechanical noise sensed by the accelerometer. For an experienced operator, this is a good way to find out the problems of a machine. For example, when a rolling bearing is damaged, it will generate certain pattern of noise that can be heard clearly with the headphones. Simply attach the headphone cable to the 6-pin connector on the VIBRA-CHECK VM3800 as illustrated.



Vibration level definitions:

The chart below describes vibration levels for various machine types.

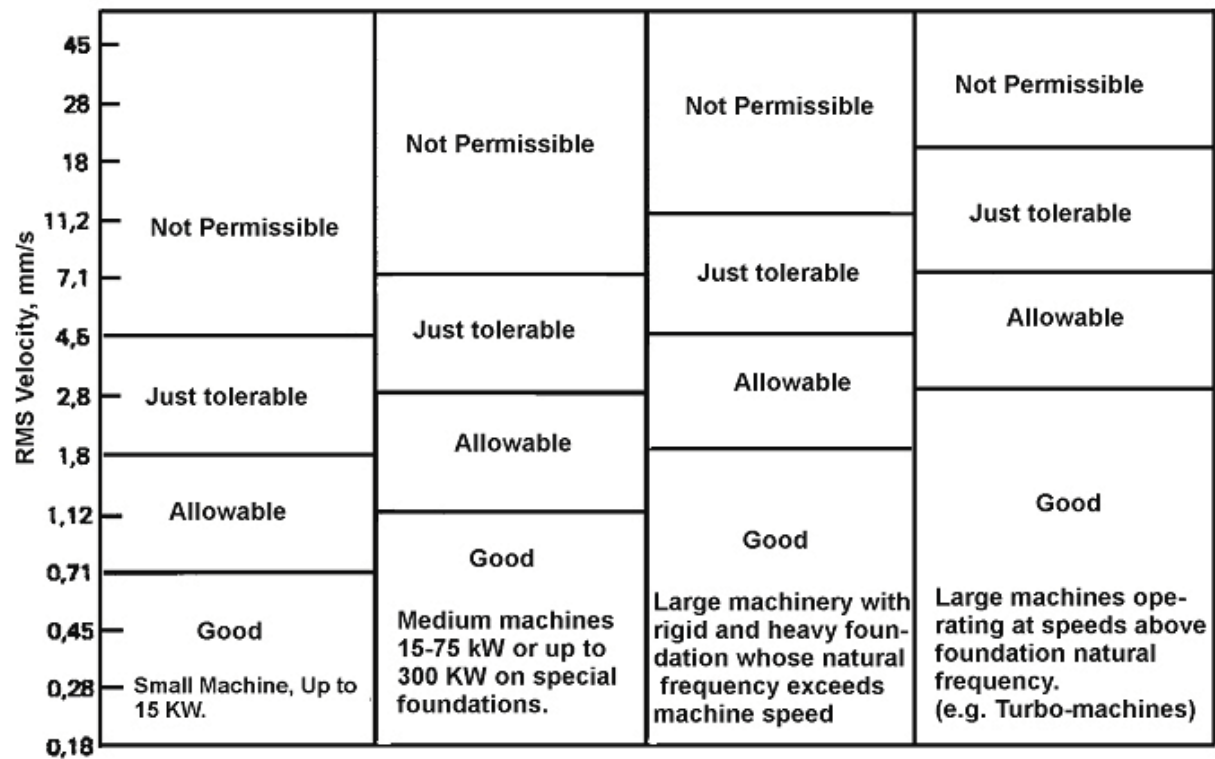

ISO 2372, Mechanical Vibration of Machines with Operating Speeds from 10 to 200 rev/s

Setting the Units on your VIBRA-CHECK VM2800 & VIBRA-CHECK VM3800:

The default unit system is set at the factory to be: acceleration= g (rms), velocity = mm/sec (0-peak) and displacement = um (peak-to-peak) respectively. However, you may select your own unit system by the following steps.

Acceleration:

1. Press acceleration key to select acceleration measurement.
2. Press and hold the acceleration key for 5 seconds, the units g(rms) and g(0-p), m/s² (RMS), m/s² (0-P), will appear cyclically. Release the acceleration key when the desired unit appears.



Velocity:

1. Press velocity key to select velocity measurement.
2. Press and hold the velocity key for 5 seconds, the units mm/s(0-p) mm/s(rms), in/s(0-p) and in/s(rms) will appear cyclically. Release the velocity key when the desired unit appears.



Displacement:

1. Press displacement key to select displacement measurement.
2. Press and hold the displacement key for 5 seconds, the units um(p-p) and mil(p-p) will appear cyclically. Release the displacement key when the desired unit appears.



❶ Once you have set the desired units, the VIBRA-CHECK VM2800 or VIBRA-CHECK VM3800

will keep these settings, unless you change them again.

Sensitivity Adjustment:


Each meter is calibrated at the factory prior to shipment, and it is recommended for best results to return the product to Metrix to perform calibration.

In the event that in-field adjustments are necessary, the following procedure describes sensitivity calibration.

❶ Sensitivity calibration

- (1) Turn the meter on while pressing the acceleration key. Continue to press the key until the data collector beeps 3 times. At this time, the calibration mode is selected and indicated on the LCD display. Release the acceleration key.
- (2) In the calibration mode, the definitions of keypad functions change as follows:
Displacement key: increase the sensitivity (mV/g)
Velocity key: decrease the sensitivity (mV/g)
Acceleration key: save the setting
- (3) Set the sensitivity value according to the attached accelerometer using the keys defined in (2). Remember to press the Acceleration key to save your final setting.
- (4) Turn the data collector off to complete the calibration process.



 Caution: The VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 accepts constant current type accelerometers only. The accelerometer must be 100mV/G +- 30% for proper functionality.

Calibration and factors:

Calibration should be completed by Metrix Instruments or by authorized dealers only.

Calibration of the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 is performed via a set of gain factors. Each gain factor is set at the factory prior to shipment.

Factor 1: acceleration = gain x 1

Factor 2: acceleration = gain x 10

Factor 3: Velocity = gain x 1

Factor 4: Velocity = gain x 10

Factor 5: Displacement = gain x 1

Factor 6: Displacement = gain x 10

Factor 7: Bearing = gain x 1

Factor 8: Bearing = gain x 10

Adjusting the Factors:

Turn the data collector on while pressing the acceleration key. Continue to press the key until the data collector beep 3 times. At this time the calibration mode of accelerometer sensitivity is selected. Continue to press (and hold) the acceleration key again and wait for 10 seconds. The data collector will beep 3 times again. At this time the calibration mode of the correcting factors is selected. Release the acceleration key.

Press the “backlit” (on/ off) key to select the correcting factors. The number of correcting factors will appear at the right hand bottom corner when pressing the backlit key.

Press displacement key to increase the selected correcting factor (%). Press velocity key to decrease the selected correcting factor (%). Press the acceleration to save the setting.

Turn the data collector off to complete the calibration process.

Calibration procedure

Set all the correcting factors to be 100.0 (%)

Install the accelerometer on a shaker, on which a standard accelerometer is installed. The standard accelerometer is connected to a standard rms data collector.

Drive the shaker with appropriate sine signal and record the readings of acceleration (x1, x10), velocity (x1, x10) and displacement (x1, x10) respectively.

Compare the reading with the standard values that derived from the standard accelerometer and data collectors. Adjust the correcting factors, such that the readings multiplied by the correcting factors will be equal to the standard values.

DC offset

The calibration for DC offset is not needed because the VIBRA-CHECK VM2800 and VIBRA-CHECK VM3800 vibration meter always calibrates the DC offset error automatically when power on.