


Overview: 6 Channel Remote Control

Remote Control Overview:

The infrared remote control can operate the blind/shade within a 50' range. Because it is infrared, the receiver eye must be in direct line-of-sight with the remote control for the blind/shade to operate. The remote control has six different channel modes (buttons 1-6) with channel function ◀ or ▶ and an "ALL" (▲ or ▼) channel. Using the remote control, you can...

- Operate up to six blinds/shades individually (program one window covering on each of the six channels).
- Operate an unlimited number of blinds/shades by programming multiple window coverings on the same channel (ie: east facing blinds/shades on Channel 1, west facing blinds/shades on Channel 2, etc...). Each channel will operate all of the blinds/shades programmed on that channel that are within direct-line-of-sight at the same time (note: motors are not synchronous). The six programmable channels allow you to operate up to six groups of one or more blinds/shades.
- Operate all blinds/shades within direct-line-of-sight using the "ALL" channel.
- Programming, reprogramming and operating the remote control is simple. By pressing two buttons, the blind/shade can be programmed. Simply press the channel mode (buttons 1-6) first, followed by the channel function button (◀ or ▶) to operate the channels 1-6.

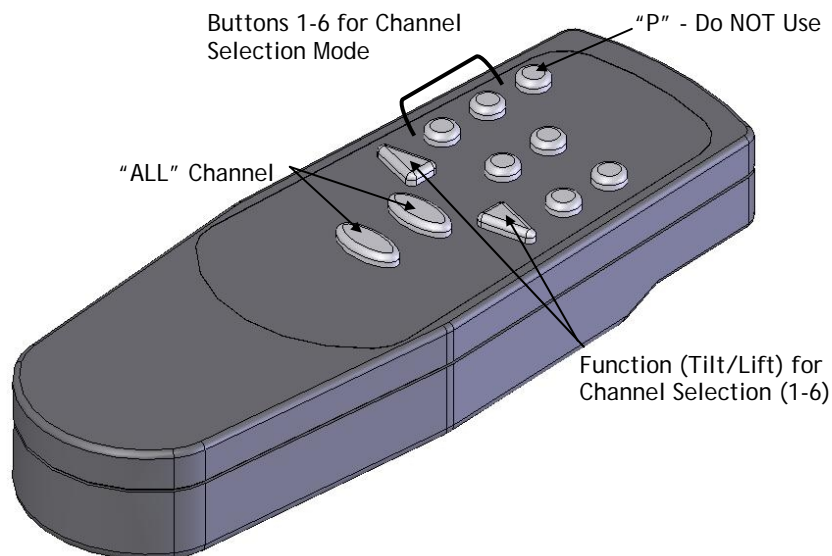

Programming: 6 Channel Remote Control

! IMPORTANT: Program each blind / shade immediately after connecting the power source (batteries or power supply) at the window covering.

Step 1: Insert 2 "AAA" batteries in the proper orientation as shown in the battery case of the remote control.



Step 2: Decide which channel (1-6) you wish to program the blind/shade.

Step 3: Point the remote control at the receiver and press the selected channel mode first (buttons 1-6) followed by the "Channel" ◀ or ▶ button. The blind/shade is now programmed to that channel. See below. **DO NOT PRESS THE "P" OR "ALL" CHANNEL FIRST! IF THE "P" OR "ALL" CHANNEL IS INADVERTANTLY PRESSED DURING PROGRAMMING, SEE "REPROGRAMMING THE REMOTE CONTROL"**



Operate Individual Channel: To operate the blind/shade on an individual channel (buttons 1-6), press the selected channel mode first (buttons 1-6) and the "Channel" (◀ or ▶) button. The blind/shade will operate from that channel only and will not respond to the other channels except "ALL."

Operate "ALL" Channels: To operate all of the blinds/shades within direct-line-of-sight, simply press the ▲ or ▼. The "ALL" channel does not need to be programmed separately.

Reprogramming the Remote Control Channel:

If a blind/shade is not programmed to the desired channel, reprogramming is simple.

1. Disconnect the power source from the blind/shade of the covering that needs to be re-programmed.
2. Leave the power source disconnected for approximately 15 minutes (up to 1 hour).
3. Reconnect the power source.
4. Program the blind/shade by pressing the button of the new desired channel (buttons 1-6) and the "Channel" (◀ or ▶) button. The blind/shade is now programmed to that channel!
5. The blind/shade can be reprogrammed as many times as necessary. The channel will also need to be reprogrammed after installing new batteries, or if using a power supply, when the standard house power goes out.