

 LAKELAND

My Kitchen

USER MANUAL CITRUS JUICER

Model: 14793

Helpline No: 015394 88100



The Lakeland Guarantee....

is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland

Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

INTRODUCTION

Thank you for choosing the Citrus Juicer. This handy machine is the quick and easy way to squeeze delicious fresh juice from lemons, limes, oranges and grapefruits. Please take a few moments to read these instructions before using the Citrus Juicer for the first time and keep them in a safe place for future reference.



FEATURES

1. Cover
2. Large cone
3. Small cone
4. Strainer
5. Juice bowl
6. Drip-stop spout
7. Power unit
8. Cord storage

Power: 40W

Operating voltage: 220-240V~50/60Hz

IMPORTANT SAFEGUARDS

When using your Citrus Juicer, please follow this basic safety advice.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This juicer is for household use only. It is not suitable for commercial use or for use outdoors. It must only be used for its intended purpose of juicing citrus fruits.
4. Place the juicer on a level, sturdy and dry surface, away from heat sources and water. Do not place it on or near a hot gas or electric burner, or in or near a heated oven.
5. Do not let the power cord hang over the edge of the worktop or table, where a child could grab it. Keep the power cord away from sharp edges and hot surfaces, such as stovetops.
6. To protect against electric shock, do not immerse the power unit, power cord or plug in water or any liquid. Never allow the cord or plug to get wet.
7. Always switch off and unplug the juicer before adding or removing parts, when not in use and before cleaning. Grasp the plug, not the power cord.
8. Do not run the juicer for more than 5 minutes at a time. Let it rest for 5 minutes between uses.
9. Using parts not supplied by the manufacturer may lead to electric shock, fire or injury, and should be avoided.
10. The juicer is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the juicer. It must not be left unattended during use.
11. Do not use the juicer if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair by an authorised repairer, or a replacement. Never try to repair the juicer yourself as this may cause electric shock.

USING YOUR CITRUS JUICER FOR THE FIRST TIME

Carefully unpack the juicer and remove any packaging. Wash the cones, strainer and juice bowl in warm soapy water, or place in the dishwasher. Wash the cover by hand in warm soapy water. Rinse, then dry. The power unit may be wiped with a damp cloth, then dried. Never immerse it in water or any liquid.

JUICING CITRUS FRUITS

The Citrus Juicer is tailor-made for squeezing deliciously fresh juice from citrus fruits. It comes with large and small cones to extract the maximum juice from lemons, limes, oranges and grapefruits. The juice bowl has a handy drip-stop spout to stop juice dripping onto your kitchen worktop.

PLEASE NOTE: this juicer should only be used for juicing citrus fruits. It should be used for no more than 5 minutes at a time. Let it rest for 5 minutes between uses.

1. Firstly, make sure the power unit is switched off and unplugged.
2. Set the cover aside. Place the juice bowl onto the power unit. Sit the strainer inside the juice bowl to catch the pips and pulp. Push up the spout of the juice bowl to prevent juice dripping onto your worktop.
3. Fit the small cone onto the central spindle. If you are juicing large oranges or grapefruits, fit the large cone over the small cone.
4. Slice your citrus fruit in half. Plug the juicer into a mains socket. Press the fruit down lightly onto the cone to begin juicing. The cone will spin to extract the juice from the fruit. For best results, adjust your hold on the fruit so that all parts are squeezed.

CAUTION: avoid pressing down too hard on the cone. If the motor gets louder or slows down, there is too much pressure on the cone.

5. Place a glass beneath the spout and then lower the spout to release the juice. Push the spout back up to stop pouring.
6. Once all the juice has been poured out, unplug the juicer before taking it apart for cleaning. See CARE AND CLEANING.

CARE AND CLEANING

Switch off and unplug the juicer before cleaning. Remove the cones and strainer and rinse them immediately under running water, using a soft-bristled brush to dislodge the fruit pulp.

Lift the juice bowl off the power unit. Wash the bowl, cones and strainer in warm soapy water, or place in the dishwasher. Rinse, then dry. Wipe the power unit with a damp cloth, then dry. Never immerse it in water or any other liquid. Wrap the power cord beneath the power unit.

Do not use abrasive cleaners or scourers as they will damage the product. Make sure all parts are completely clean and dry before reassembling the juicer and storing it away with the cover in place.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

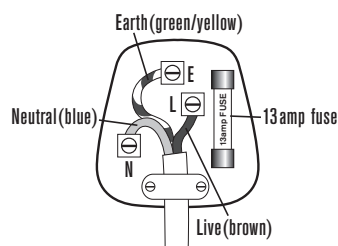

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).