



**IMPECCA DFM-842A**

**USER'S MANUAL**

## Table of Contents

<b><i>Introduction .....</i></b>	<b><i>3</i></b>
<b><i>Installing your Unit .....</i></b>	<b><i>3</i></b>
<b><i>Connecting to a computer .....</i></b>	<b><i>4</i></b>
<b><i>Using Your Remote Control .....</i></b>	<b><i>5</i></b>
<b><i>Using Your Digital Photo Frame .....</i></b>	<b><i>6</i></b>
<b><i>Browsing Images .....</i></b>	<b><i>6</i></b>
<b><i>Image Settings .....</i></b>	<b><i>7</i></b>
<b><i>Watching Video .....</i></b>	<b><i>8</i></b>
<b><i>Listening to Music .....</i></b>	<b><i>9</i></b>
<b><i>Copy/ Delete Files .....</i></b>	<b><i>10</i></b>
<b><i>Clock / Calendar / Alarm Settings.....</i></b>	<b><i>10</i></b>
<b><i>Frequently asked questions.....</i></b>	<b><i>12</i></b>
<b><i>Troubleshooting .....</i></b>	<b><i>13</i></b>
<b><i>Specifications.....</i></b>	<b><i>13</i></b>

## ***Introduction***

Congratulations on your purchase of the IMPECCA DFM-842A Digital Photo Frame.

Before using your Digital Photo Frame, please read through this manual. The manual will help you use many of the exciting and useful features of the IMPECCA DFM-842A Digital Photo Frame.

This Digital Photo Frame lets you view digital pictures directly from your camera's

This Digital Photo Frame lets you view digital pictures from your camera's memory card. No computer, digital camera, or internet connection is required.

The IMPECCA DFM-842A Digital Photo Frame is compatible with the following popular memory card formats. SD/SDHC™, and Memory Stick®. It also supports files stored on a USB Flash drive via the USB host port.

### ***Package Contents***

- IMPECCA DFM-842A Digital Photo Frame
- Power Adapter
- USB Cable
- User Manual
- Remote Control

### ***Installing your Unit***

Open the package and remove the protective sleeve from the unit.

Locate the built in stand on the back of the unit. Pull it out and down, then up to loc it into place.

Plug one end of the AC adapter into a power outlet. Plug the other end into the unit.

Insert your storage device (memory card or USB flash drive) into the correct slot

Note: Make sure that you have at least one photo/music/video file loaded onto the memory card.


Press power switch (located at the back of the unit) to turn ON frame.

**Connecting to a computer-** you may use your PC to load files onto your memory card or USB flash drive or your digital photo frame's internal memory.

Turn on your digital photo frame

Using the USB cable provided, plug the mini USB into the digital photo frame

Plug the other end of the cable into your computer

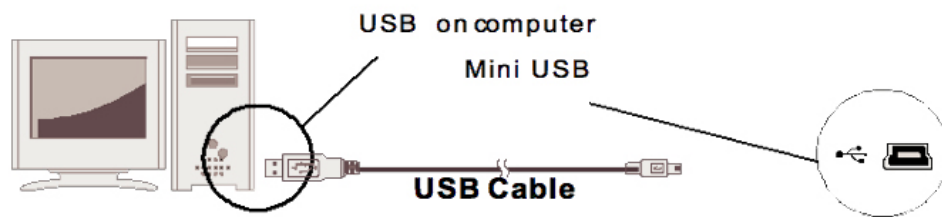

When the unit is connected to your computer, a window will open that will ask you to access the content on the digital picture frame.

In order to use the frames' built in compression technology to fit 10,000 pictures, copy the pictures from memory card to frame and use the copy option not the move option.

















**Note:** If a separate window does not open, navigate to "My Computer" and open the "Removable Disk".

Open the window displaying the frame's internal memory or removable disk. Drag and drop the images, music, and movie files that you want to load onto the frame into the open "Removable Disk" window.

**Warning:** Do not insert a USB device into the USB host while the frame is connected to a computer.

**Note:** When you are done close all open windows, then disconnect the USB cable, then power your frame off then back on, to enjoy your media.

## Using Your Remote Control

Button	Description and Function
	Switch frame on/off
	Switch between Image/Music/Video
	Start a slideshow
	Open Setup Menu
	Open Function Menu
	Back / Home
	Increase Volume
	Decrease volume
	Confirm or rotate picture
	Zoom in
	Zoom out
	Play / Pause
	Navigate Up on screen
	Navigate Down on screen
	Navigate Left on screen
	Navigate Right on screen



## ***Using Your Digital Photo Frame***

Make sure that you have at least one image, video, or music file on your memory card, USB flash drive, or the frame's internal memory.

Switch on the frame and insert your memory card. The frame will automatically begin a slideshow.

Press the "Back" button on the remote control to display the main menu.



By pressing the "Back" button again, the cursor will point to File – Image - Flash device, respectively.



To select a specific file, use the arrows (left, right, up, down) on the remote to highlight a FILE / PHOTO / MUSIC / VIDEO / CLOCK / flash device (USB, SD, SDHC, MS, or internal memory). Once it is highlighted, press the "Enter" button, or wait for 3 seconds. The frame will enter into the selected PHOTO / MUSIC / VIDEO / CLOCK interface.



NOTE: Icons of Media (Memory/USB/SD/SDHC/MS) will appear automatically on the MENU screen when a memory card is inserted. Icons will disappear when the card is removed from the card slot.





## ***Browsing Images***

Make sure you have at least one image file on your memory card, or USB flash drive, or the frames' internal memory.

Press the "Back" button until the cursor is on Flash device. (The cursor will move from File – Image – to flash device.)

Using the arrows   highlight a flash device (USB, SD, SDHC, MC or internal memory), press the “Enter” button or wait for 3 seconds, and the cursor will move to the your image thumbnails.

Using the arrows   highlight “Image,” press the “Enter” button or wait for 3 seconds, and the cursor will move to the image thumbnails.

Using the arrows     highlight an image, and press the “Enter” button to view the selected image.

## ***Image Settings***

While viewing an individual image, press the “Setup” button on the remote control to navigate to a list of features that you can change:

**OSD Language:** Select an on screen display language: English / French / German / Italian / Spanish.

**Slide Duration:** Select the duration (Fast/ Normal/Slow) that each image is shown in a slideshow.

**Slide Order:** Choose between Normal or Random for slideshow order.

**Slide Effect:** Adjust the transitions between each image in a slideshow. Optional effects include: Off / Random / Slide / Door / Shutter / Mosaic / Cross Comb / Corner Slide / Snail/ Dissolving.

**Display Mode:** Select image display size: Original or Full screen.

**Photo Play Mode:** Select a play mode from Single play mode / Slide show mode / Multi image mode / multi round thumb / Round thumb / Free thumb / Puzzle / Photo info.

**Photo Effect:** Select a display color for the current image: Black & White / Sepial1 / Sepial2 / Sepial3 / No Effect (original color).

**Contrast:** Adjust screen contrast.

**Brightness:** Adjust screen brightness.

**Color:** Adjust screen color.

**Reset:** Reset to the factory settings.

**Note:** After changing a setting, you must press the Enter button to save your selection, after which you may press the Setup key to exit.

## Watching Video

Make sure you have at least one video file on your memory card, USB flash drive or the frame's internal memory.

Press the "Back" button until the cursor is on Flash device. (The cursor will move from File – Image – to flash device.)

Using the arrows ◀ ▶ highlight "Video," and then press the "Enter" button or wait for 3 seconds. Your cursor will then move to your list of videos.

Using the arrows ▲ ▼ select a video file, and press the "Enter" button to watch video.

Press the "Back" button on the remote control to display the video with a small screen.

Press the "Function" button on the remote control to go to video setup.


1. Using the arrows ◀ ▶ and "Enter" button, you can use the following functions:



- ◀▶ Play previous video file
- ⏏ Play video in full screen
- ◀◀ Rewind
- ▶ Play / Pause video
- ▶▶ Fast-forward
- Stop playing video
- ▶▶ Play next video file

Note: Under full screen video play mode, press ▲ to play previous video file, press ▼ to play next video file, press ◀ to rewind, press ▶ to fast-forward, and press "Enter" to play/pause.



2. When viewing the video in small screen mode, use the  arrow to select a repeat mode:



Repeat all files

No repeat

Random repeat all files





Repeat single file



Repeat folder

## ***Listening to Music***



Make sure you have at least one music file on your memory card, USB flash drive, or the frame's internal memory.

Press the "Back" button until the cursor is on Flash device. (The cursor will move from File – Image – to flash device.)

Using the arrows   highlight "Music," press the "Enter" button or wait for 3 seconds, and the cursor will move to your list of music. Press the  arrow to go to the previous page of music, and  to go to the next page of music.

Use the arrows   to highlight a specific music file, and press "Enter" to listen to music.

Press the "Function" button on the remote control to go to music setup.

1. Using the arrows   you can use the following functions:



Play previous music file



Rewind



Play / Pause music



Fast-forward



Stop playing music



Play next music file

2. Using the arrow, you can select a repeat mode:



Repeat all files



No repeat



Random repeat all files



Repeat single file



Repeat folder

3. Using the arrow, you can choose between EQ settings: Ballad / Club / R&B / Dance / Normal / Rock / Classic / Jazz / Pop / Studio.

## ***Copy/ Delete Files***

How to Copy / Delete Images: In photo thumbnail format, use the arrows to select images. Press the “Function” and then the “Setup” button on the remote control. The selected images can then be deleted or copied/moved to a flash device (USB, SD, SDHC, MS cards or internal memory)

How to Copy / Delete Music: In Music list format, use the arrows to select music files. Press the “Function” and then the “Setup” button on the remote control. The selected music files can then be deleted or copied/moved to a flash device (USB, SD, SDHC, MS cards or internal memory).

How to Copy / Delete Video: In Video list format, use the arrows to select video files. Press the “Function” and then the “Setup” button on the remote control. The selected video files can then be deleted or copied/moved to a flash device (USB, SD, SDHC, MS cards or internal memory).


## ***Clock / Calendar / Alarm Settings***


Press the “Back” button on the remote control to display the main menu.

Use the arrows highlight the “Clock” icon . Then, press the “Enter” button or wait for 3 seconds to enter the clock/calendar interface.


Press the “Setup” button on the remote control. You will be given a list of possible settings:

**OSD Language:** Select the on screen display language: English / French / German / Italian / Spanish.

**Date & Time:** Press “Enter” and use the arrows  to set the Date (YY-MM-DD), Time, and Time mode (12 hours / 24 hours).

**Alarm:** Press “Enter” and use the arrows  to set the alarm:

- ◆ Repeat: Choose between Disable / One Day / Every Day / Weekday / Weekend.
- ◆ Time Settings: Set alarm time.
- ◆ Sound: Select a sound for your alarm.

**Auto Power:** Press “Enter” and use the arrows  to set auto power on/off:

- ◆ Repeat: Select auto power on/off from Disable / One Day / Weekday / Every Day / Weekend.
- ◆ Power on time: Set power on time.
- ◆ Power off time: Set power off time.

**Calendar Display:** Select a calendar display mode: With slide / With single / With clock.

**Contrast:** Adjust screen contrast.

**Brightness:** Adjust screen brightness.

**Color:** Adjust screen color.

**Note:** After changing a setting you must Enter button to save your selection, after which you may press the Setup button to save your selection.

## ***Frequently asked questions***

1) Q: Why do my images take so long to load?

A: Generally, the higher the resolution of the image, the longer it will take to load. Resizing your images to a lower resolution will make your images load more quickly.

2) Q: What is the best picture resolution displayed on the screen?

A: The frame's best resolution is 800 x 600.

3) Q: How can I get my videos to play on the frame?

A: This product plays MPEG -1/2/4, .AVI in the XVID format encoded, MOV files. To play your videos, make sure that your video files are in a compatible format.

4) Q: How do I get my music files to play on the frame?

A: You will need to use a computer and audio editing software to convert your music to MP3/WMA/OGG formats. The Digital Picture Frame will only play MP3/WMA/OGG files, so all Windows Media Player™ and/or iTunes™ files would have to be converted first.

5) Q: Does the Digital Picture Frame have built-in memory?

A: Yes. The Digital Picture Frame has 2 GB internal memory.

6) Q: How come the Digital Picture Frame does not show some of my images?

A: The Digital Picture Frame is designed to show images following the same camera industry standard format as digital cameras. This format is a JPEG, BMP/GIF/TIFF/PNG format. Images such as web images, scanned images, or images in RAW format, are not stored according to camera industry standards, and therefore cannot be displayed correctly on the Digital Picture Frame. You can use a computer application to convert such images into standard JPEG/BMP/GIF/ TIFF/PNG format so that you could view them on your Digital Picture Frame. If using Photoshop, make sure that the JPEG/BMP/GIF/TIFF/PNG is saved as baseline standard and NOT progressive.

7) Q: If I keep showing the same image for a long time, will it damage the LCD screen?

A: No. The Digital Picture Frame can display the same image continuously for a long time. However, it is recommended not to show the same image continuously for more than 1 month.

## Troubleshooting

Problem	Cause	How to fix it
Digital Picture Frame doesn't turn on	The power connector is not securely inserted.	Make sure that the AC adapter is securely attached to the frame. When you connect the AC adapter to the frame and power up the unit, even without a memory card, you should see a blank lit screen. If you do not see the lit screen, check if the power is connected to the Digital Picture Frame, and make sure that it is securely attached.
No Start-up screen	Memory card is not inserted correctly	Insert a supported memory card.
No photo, videos or music files on the memory card	Memory card is not inserted correctly	Make sure that you inserted the card correctly. Make sure the front label of the memory card is facing AWAY from the front of the unit. Do not force the memory card into the slot.
The File doesn't play	Incompatible File Format	Make sure there is at least one supported image/music/video file on the memory card. Compatible Photo formats: JPEG, BMP, GIF, TIFF, PNG Compatible Music formats: MP3, WMA, OGG Compatible Video formats: MPEG-1/2/4, .AVI in the XVID format, .MOV

## Specifications

Type	8 inch Digital Picture Frame
Resolution	800 x 600
Output	5 V 1.2A
Input	AC100-240V ~50/60Hz
Working Temperature	-20 to +5 degrees
Display Mode	4:3
Image Changing Interval	Fast, Normal, Slow
Supported File Formats	JPEG,BMP,GIF,TIFF,PNG / MP3,WMA,OGG / MPEG -1/2/4, .AVI in the XVID format, .MOV
Cards	SD/SDHC/MS
USB ports	USB Host, USB Slave
Start-up	Slideshow
Internal Memory	2GB