

USER MANUAL



 
flex™

voice controlled talking radio

VOICE RECOGNITION
POWERED BY:



NATURAL LANGUAGE PROCESSOR™



CONNECT WITH US



Follow us on twitter **@helloivee**



Like us on Facebook **facebook.com/helloivee**

INTRODUCTION

Thank you for purchasing **ivee** Flex and for becoming a part of the **ivee** family! Our Interactive Voice Response (IVR) voice control technology lets you control electronics with just your voice.

Please visit **www.helloivee.com** to learn more about our other voice-controlled products.

**For general questions please send all e-mails to:
For all questions please call:**

**hello@helloivee.com
1-800-746-3903**

Table of contents

Page

Caution	1
Danger	1
Warning	2
FCC Information	3
Battery precautions	4
Location of controls	5
Preliminary setup	6
Activating ivee	7
When is ivee listening for my command	8
Voice control tips	9
Initial setup	9
Time and date	9 - 11
Alarm	11 - 14
Snooze	14
Checking the temperature	14 - 15
Timer	15 - 16
Sleep sound	17
Radio	17 - 19
Changing the way ivee speaks	19
Alarm greeting & greeting music	20
Nightlight	21
Adjusting the LED brightness	21
Daylight savings time	21
Firmware update mode	22
Factory system reset	23
Help	23 - 24
Specifications	24
Frequently asked questions	24 - 25
One (1) year limited warranty	26
List of commands	27 - 28

CAUTION

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop, or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance / product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Remove batteries when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
8. Do not operate in the presence of explosive and/or flammable fumes.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the distance between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

BATTERY PRECAUTIONS


- Dispose of old batteries properly. Do not discard old batteries in a fire.
- Do not leave the batteries where a child or pet can play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

LOCATION OF CONTROLS

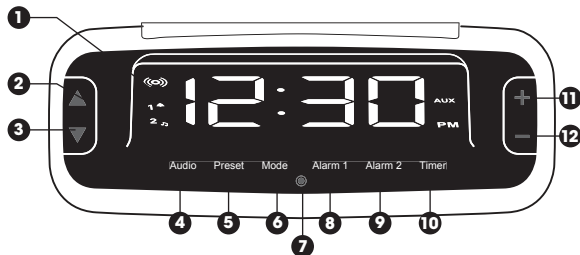


1. LED / Snooze / Voice Control
2. Volume Up
3. Volume Down
4. Audio
5. Preset
6. Mode
7. Microphone
8. Alarm 1
9. Alarm 2
10. Timer
11. Tune +
12. Tune -

- A. AUX
- B. USB
- C. Sync On/Off
- D. Voice Volume H/M/L (High/Medium/Low)
- E. IVR / Touch
- F. Auto Dim On/Off
- G. C / F (Celsius / Fahrenheit)
- H. Daylight Savings Time
- I. Alarm Volume H/M/L (High/Medium/Low)

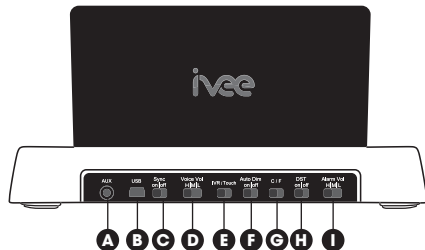

PRELIMINARY SETUP

1. Remove the plastic screen guard on **ivee**'s LED.
2. Remove the battery compartment cover by pushing the latch and lifting the cover off.
3. Insert 1 CR2032 battery into the bottom battery compartment matching the polarity as shown in the battery compartment.
4. Replace the battery compartment cover.
5. Use the correct side of the USB cable (1) to plug into **ivee**. Use the opposite side of the USB cable (2) to plug into the USB AC/DC adapter. Plug the adapter into a wall outlet and **ivee** will power up.
6. To activate **ivee**, say "**Hello ivee**" (pronounced "ivy") or tap the LED.
7. **ivee** will start the initial setup.

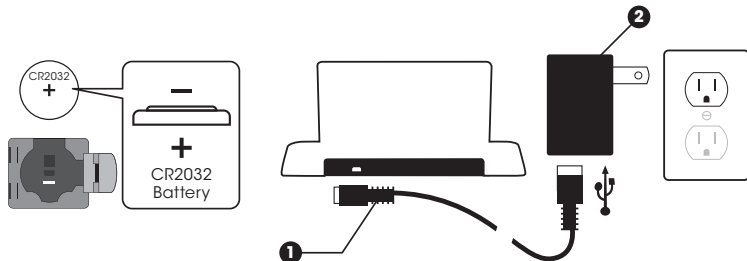


ACTIVATING IVEE

To operate **ivee**, you must first activate her either by touch or by voice.

ACTIVATION BY VOICE

To activate **ivee** by voice, first make sure the **IVR / Touch** switch on the back of the unit is set to **IVR**. When set to **IVR**, **ivee** will constantly listen for the trigger words "**Hello ivee**" (pronounced "ivy"). When **ivee** hears the trigger words, she will ask you for a command.

You can disable the hands free trigger operation by setting the **IVR / Touch** switch to **Touch**. **ivee** will no longer listen for the trigger words "**Hello ivee.**" Instead, you will need to activate **ivee** by touch.

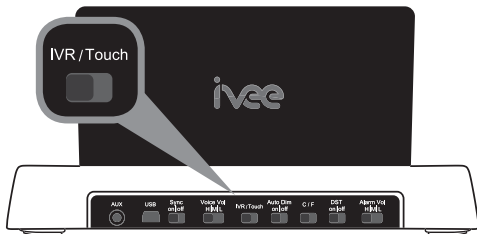


ACTIVATION BY TOUCH

To activate **ivee** by touch, tap the LED. **ivee** will then ask you for a command.

WHEN IS IVEE LISTENING FOR MY COMMAND?

LISTENING ICON

Indicates that ivee is listening for your command.

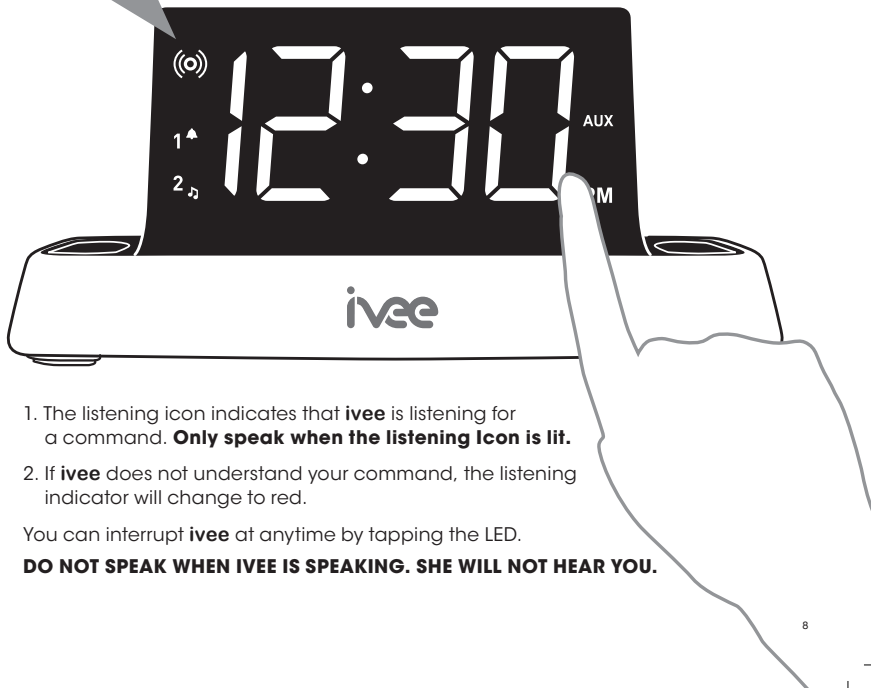

1. The listening icon indicates that **ivee** is listening for a command. **Only speak when the listening icon is lit.**
2. If **ivee** does not understand your command, the listening indicator will change to red.

You can interrupt **ivee** at anytime by tapping the LED.

DO NOT SPEAK WHEN IVEE IS SPEAKING. SHE WILL NOT HEAR YOU.

VOICE CONTROL TIPS

Speak naturally. Like you are talking to a person.

- Wait for **ivee** to stop speaking before giving her a command.
- Avoid speaking directly into **ivee**'s microphone.
- Keep **ivee** within a 10-foot radius of use.
- Use **ivee** in a quiet environment.
- Use a normal, relaxed tone of voice when speaking to **ivee**.

INITIAL SETUP

The first time you operate **ivee**, **ivee** will prompt you to set the current time.

1. To begin the initial setup, say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. **ivee** will ask you for the current time.
2. Say the current time. For example, you can say "**Seven Thirty AM.**"
3. **ivee** will then repeat the time back to you to confirm the correct time. Say "**Yes**" to confirm the time or "**No**" to change it.

TIME AND DATE

CHANGING THE TIME

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Time**" or "**Set Time.**"

3. **ivee** will ask you for the current time. Say the current time. For example, you can say "**Seven Thirty AM.**"

BY TOUCH

1. Tap **MODE** to cycle between Time, Date, and Temperature. Select Time.
2. Press and hold **MODE**. **ivee** will ask you for the current time.
3. You may say the current time or press the **+** / **-** buttons to enter the correct hour and minutes.
4. Tap **MODE** to set the time.

CHANGING THE DATE

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Date**" or "**Set Date.**"
3. Press the **▲** / **▼** buttons to cycle between month, day, and year and the **+** / **-** buttons to adjust.
4. Tap **MODE** to set the date.

BY TOUCH

1. Tap **MODE** to cycle between Time, Date, and Temperature. Select Date.
2. Press and hold **MODE**.
3. Press the **▲** / **▼** buttons to cycle between month, day, and year and the **+** / **-** buttons to adjust.
4. Tap **MODE** to set the date.

CHECKING THE TIME

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Time.**" **ivee** will tell you the current time.

CHECKING THE DATE

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Today's Date.**" **ivee** will tell you the current date.

BY TOUCH

Tap **MODE** to display the current date.

ALARM

ivee is equipped with 2 separate alarms that can be customized independently. Each alarm is able to play an alarm sound, the radio, or it can be disabled.

SETTING THE ALARM TIME

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Set Alarm [1 or 2].**" **ivee** will ask you for the alarm time.*
2. Say the alarm time you want. For example, you can say "**Seven Thirty AM.**" **ivee** will then repeat the alarm time back to you.

* If you just say "**Set Alarm,**" **ivee** will first ask you which alarm you want to set.

3. If you have not selected an alarm sound yet, **ivee** will prompt you choose an alarm sound. You can either choose to wake up to an alarm sound by saying "**Alarm Sound**" or choose to wake up to the radio by saying "**Radio**."
4. If you say "**Alarm Sound**," **ivee** will playback all the alarm sounds and then ask you to select one. Say the number of the alarm sound you want or say "**Help**" to replace the alarm sounds. You can also say "**Cancel**" to exit.

BY TOUCH

1. Press and hold **Alarm 1** / **Alarm 2** corresponding to the alarm you want to change. **ivee** will ask you for the alarm time.
2. You can say the alarm time or press the **+** / **-** to enter the correct hour and minutes.
3. Tap **Alarm 1** / **Alarm 2** to set the alarm time.

CHANGING THE ALARM SOUND

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Alarm [1 or 2] Sound**."
2. **ivee** will prompt you choose an alarm sound. You can either choose to wake up to an alarm sound by saying "**Alarm Sound**" or choose to wake up to the radio by saying "**Radio**." 🎵 = Radio / 📻 = Alarm sound
3. If you say "**Alarm Sound**," **ivee** will playback all the alarm sounds and then ask you to select one. Say the number of the alarm sound you want or say "**Help**" to replace the alarm sounds. You can also say "**Cancel**" to exit .

BY TOUCH

Tap **Alarm 1** or **Alarm 2** to switch between alarm sound, radio, and alarm off.

CHANGING THE ALARM VOLUME

You can modify the volume of **ivee**'s alarm by setting the **ALARM VOL** switch on the back of the unit to either high, medium, or low (H, M, L).

CHECKING THE ALARM TIME

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Alarm [1 or 2].**"**
2. If you have already set the alarm time, **ivee** will say the time the alarm is set for.**

BY TOUCH

Tap either **Alarm 1** or **Alarm 2** to check the alarm time.

TURNING OFF THE ALARM

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Turn Off Alarm [1 or 2].**" **ivee** will turn the alarm off.

BY TOUCH

Tap **Alarm 1** or **Alarm 2** to switch between alarm sound, radio, and alarm off.

Note: *If you turn off the alarm, the alarm will not sound at the alarm time.*

* If you have not set the alarm time yet, **ivee** will ask you if you want to set it now.

** You can check both alarms simultaneously by saying "**Alarms.**"

TURNING OFF THE ALARM WHEN IT SOUNDS

BY VOICE

You can say "**Alarm [1 or 2] Off**" or "**Turn Off Alarm [1 or 2]**" to turn the alarm off when it sounds.

Remember to speak in between the pauses when the alarm sounds.

BY TOUCH

When the alarm sounds, you can turn it off by pressing any button except for the LED. The alarm will reset and sound again the following day.

SNOOZE

BY VOICE

During the pauses in the alarm sound say "**Snooze.**"

Note: when radio is playing, you must tap the LED to snooze.

BY TOUCH

Tap the LED while the alarm sounds to snooze. The alarm will sound again in 9 minutes. When the alarm is snoozing you can reset the alarm and turn snooze off by pressing the **Alarm 1** or **Alarm 2** button.

CHECKING THE TEMPERATURE

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Temperature.**" **ivee** will tell you the current temperature.

BY TOUCH

Tap **MODE** until you see the current temperature.

Note: You can switch between Celsius and Fahrenheit by moving the **C / F** switch located on the back of the unit.

TIMER

SETTING THE TIMER

BY VOICE

1. Say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Set Timer."**
2. **ivee** will ask you how long you want to set the Timer for. Say how long you want to set the Timer for. For example, you can say **"One Hour and Twenty Minutes."** If you have not selected a Timer sound yet, **ivee** will ask you to set the Timer sound now.

BY TOUCH

1. Press and hold **TIMER**.
2. **ivee** will ask you how long you want to set the timer for or press **+** or **-** to increase or decrease the Timer's duration.
3. Tap **TIMER** to set the Timer and begin the countdown.

Note: You can only say minutes, minutes and hours, and hours. The maximum amount of time you can set the Timer for is 10 hours.

CHANGING THE TIMER SOUND

1. Say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Set Timer Sound."**

2. **ivee** will prompt you choose a Timer sound. You can either choose an alarm sound by saying "**Alarm Sound**" or choose the radio by saying "**Radio.**"
3. If you say "**Alarm Sound,**" **ivee** will playback all the alarm sounds and then ask you to select one. Say the number of the alarm sound you want or say "**Cancel**" to exit.

STARTING THE TIMER

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Start Timer.**" If you have previously set the Timer, the Timer will begin counting down now. If you have not previously set the Timer, **ivee** will ask you to set it now.

BY TOUCH

Tap **TIMER** to start the Timer.

STOPPING THE TIMER

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Stop Timer.**" The Timer is now off.

BY TOUCH

Tap **TIMER** to stop the Timer.

SLEEP SOUND

SETTING THE SLEEP SOUND

1. Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Set Sleep Sound.**"
2. **ivee** will prompt you choose a sleep sound. If you know the number of the sleep sound you want, you can say it now. Otherwise, say "**Help**" to replay all the sleep sounds. You can also say "**Cancel**" to exit.
3. **ivee** will then ask you how long you want the sleep sound to play. Say the amount of time you would like the sleep sound to play. For example, you can say "**Twenty Five Minutes.**"

PLAYING THE SLEEP SOUND

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Play Sleep Sound.**" The sleep sound will begin playing. If you have not selected the sleep sound and duration yet, **ivee** will ask you to select the sleep sound and duration now.

RADIO

TURNING THE FM RADIO ON

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Play Radio.**"

BY TOUCH

Tap **AUDIO** to turn the radio on. Use **MODE** to cycle between FM Radio and AUX.

CHANGING THE RADIO STATION

BY TOUCH

- Tap the **+** or **-** buttons to tune the radio up or down.
- Press and hold the **+** or **-** buttons for 2 seconds and then let go to seek up or down to the next available FM next station.
- Tap **MODE** to switch between FM and AUX.
- Tap **PRESET** to go to the next preset station.

SETTING THE RADIO PRESETS

BY VOICE

1. Say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Set Radio Preset."**
2. **ivee** will ask you for the number of the preset you would like to set. **ivee** allows you to set 6 presets. Say the number of the preset you would like to set, e.g., **"Three."**
3. **ivee's** LED will begin to blink allowing you to tune to the desired radio station using the **+** / **-** buttons.
4. Tap **PRESET** to confirm the station.

BY TOUCH

Turn on the radio by pressing **AUDIO**

1. Tap the **PRESET** button to select which preset number you would like to set.
2. Hold down the **PRESET** button until the station begins to flash.
3. Tap **+** or **-** buttons to select the desired station for that preset number.
4. Tap **PRESET** to assign the current station to the preset number.

TURNING THE RADIO OFF

BY VOICE

When the radio is playing tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Turn Off Radio**" or "**Radio Off.**"

BY TOUCH

Tap **AUDIO** to turn the radio off.

CHANGING THE WAY IVEE SPEAKS

CHANGING THE VOLUME OF IVEE'S VOICE

You can modify the volume of **ivee**'s voice by setting the **VOICE VOL** switch on the back of the unit to either high, medium, or low (H, M, L).

SOUND MODE

ivee can operate in either Voice Mode or Sound Mode. In Voice Mode, **ivee** will speak to you in full sentences. In Sound Mode, **ivee**'s speech will be replaced with short sounds and short sentences. You can still speak to **ivee** in Sound Mode, but you will not hear **ivee** talk back to you all the time.

1. To switch from Voice Mode to Sound Mode, say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Voice**" **ivee** will switch between Voice Mode and Sound Mode.
3. To switch back to Voice Mode, repeat steps 1 and 2.

ALARM GREETING & GREETING MUSIC

ALARM GREETING

When you turn off the alarm, you have the option of playing an alarm greeting. The alarm greeting tells you the time, date, and temperature.

1. To turn the alarm greeting off, say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Settings."**
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say **"Alarm Greeting."** **ivee** will switch between alarm greeting on and alarm greeting off.
3. To turn alarm greeting back on, repeat steps 1 and 2.

GREETING MUSIC

The greeting music is the music that plays when **ivee** is first turned on.

1. To turn the greeting music off, say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Settings."**
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say **"Greeting Music."** **ivee** will switch between greeting music on and greeting music off.
3. To turn greeting music back on, repeat steps 1 and 2.

NIGHTLIGHT


ivee has a nightlight located underneath the unit. To turn the nightlight on, say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Night Light.**"

To turn the nightlight off, say "**Hello ivee**" (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say "**Night Light.**"

To adjust the night light use the **+** / **-** button.

ADJUSTING THE LED BRIGHTNESS

You can adjust the LED's brightness by switching the **AUTO DIM** switch on the back of the unit. If set to **off**, **ivee** will display at maximum brightness. If set to **on**, **ivee** will adjust its brightness based on the lighting in the room.

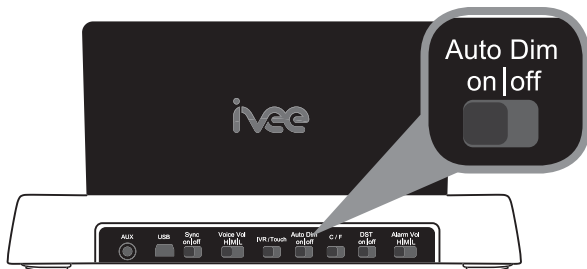

DAYLIGHT SAVINGS TIME


You can easily switch between standard time and daylight savings time by toggling the **DST** switch located on the back of the unit.

FIRMWARE UPDATE MODE

ivee is able to receive firmware updates. Please check www.helloivee.com/support for future firmware updates. Use the Hardware ID located on the back of this manual or on the bottom of **ivee** to register your product. Please follow these steps to enter Firmware Update Mode:

Note: *Apple / Macintosh based operating systems are not able to update iver's firmware.*

1. **ivee** should be **powered off** and unplugged.
2. Find the **Sync on|off** switch (on the back of **ivee**) and move the Sync switch into the **on** position.
3. Use the USB cable to **plug iver into a PC** (Windows only).
(note: you will now see "dl" appear on the LED. This means that she is now in download mode)
4. Run the firmware update software.
5. When the download is complete, turn **ivee** off by unplugging the USB cable.
6. Put the **Sync on|off** switch back in the **off** position for normal operation.
7. Plug the USB cable back into **iver** to turn **ivee** back **on**.

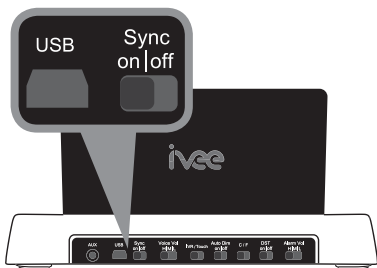

FACTORY SYSTEM RESET

If you wish to restore **ivee** to the factory default settings, please follow these steps:

WARNING: All of your personal settings will be erased.

1. Say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Settings."**
2. Say **"Goodbye ivee"**
3. You will hear a beep sound and **ivee's** LED will begin to blink.
4. Press and hold **ivee's** LED for 5 seconds. The LED will remain solid while you are pressing.
5. You will hear a 2nd beep sound and then **ivee** will then restart as if you were first using her.

Note: *You will hear the greeting music, indicating that your factory reset was complete.*

HELP

ivee is equipped to handle a large number of commands. You can access the entire catalogue of **ivee's** commands through the Help menu.

1. To access the Help feature, say **"Hello ivee"** (pronounced "ivy") or tap the LED to activate **ivee**. After **ivee** prompts you to say a command, say **"Help."**
2. **ivee** will list the categories of commands for you to choose from. You can say Alarms, Radio, Timer, Sleep Sounds, or General Information.
3. Say the name of the category you want. For example, say **"Sleep Sounds."**
4. **ivee** will then recite a sub-list of commands for you to choose from.

5. Say the name of the command you want. For example, say "**Set Sleep Sound.**"
6. You can go back to the previous menu by saying "**Help.**"

SPECIFICATIONS

Battery Power	1 CR2032 battery
Size (W x L x H)	3.23" x 8.35" x 3.94"
Weight (unit, packaging, and accessories)	1.44 lbs

FREQUENTLY ASKED QUESTIONS

1. **ivee does not hear my commands.**

It's important to remember that you can NOT give a command while **ivee** is speaking. Speak clearly within a 5 to 10 foot range for best results.

2. **When I say "Hello ivee" (pronounced "ivy"), ivee doesn't respond.**

Make sure the **IVR / Touch** switch on the back of the unit is set to **IVR** and try again, speaking clearly.

3. **How do I know if ivee is telling AM or PM time?**

When **ivee** is in AM time, an "AM" icon will appear on the LED. When **ivee** is in PM time, a "PM" icon will appear on the LED. In addition, when setting the time, if you do not specify AM or PM, **ivee** will default to AM.

4. **ivee confuses numbers when setting the time or alarm.**

Some words like "nine" and "five" sound similar. Try again, speaking loud and clear. Talk to **ivee** like you are talking to a person.

5. I cannot activate the alarm.

After saying "Hello ivee" (pronounced "ivy") say "Set Alarm" to set and turn the alarm on. To turn off or cancel the alarm, say "Turn Off Alarm." Manually, you can turn the alarm on by pressing **Alarm 1** or **Alarm 2** . A number (1 or 2) and an icon (🔔 or 🎵) will appear indicating which alarm is on.

6. How do I make the alarm stop ringing once it sounds, but still make sure it rings again tomorrow?

You can touch any button to make the alarm stop ringing except for the LED (Snooze) button. Tapping the LED will activate the snooze feature. You can also say "Turn Alarm [1 or 2] Off." in between the pauses during the alarm sound.

7. What happens if the power goes out?

ivee is equipped with a back-up battery that will ensure that the alarms sound. When the power is out the LED will not show and a buzzer will sound as the alarm sound. There is a 100 hour maximum length that the button cell will last.

8. How do I disable the alarm completely so it doesn't ring at all?

By voice, you can say "Turn Off Alarm [1 or 2]." Manually, you can also press **Alarm 1** or **Alarm 2** . Pressing these buttons will switch between Alarm Sound, Radio Alarm, and Alarm Off. Press the button until you get to the Alarm Off option. When the alarm is off, the alarm number (1 or 2) and icon (🔔 or 🎵) will no longer appear on the LED.

9. How do I interrupt ivee from speaking?

Touching any button.

10. How do I reset ivee?

Use the reset button located on the bottom.

ONE (1) YEAR LIMITED WARRANTY

Interactive Voice extends a limited one year warranty to the original purchaser, that this product will be free from defects in materials and workmanship under normal and proper use for one year from the date of purchase.

Interactive Voice's responsibility under this warranty is limited to replacing or repairing, at Interactive Voice's option, products or parts determined by Interactive Voice to be defective either in materials, or workmanship. To attain warranty service, the customer must deliver the product or the defective part(s), appropriately packed with proof of purchase date to:

Interactive Voice

P.O. Box 492513, Los Angeles, CA 90049

www.helloivee.com

All shipping expenses are the customer's responsibility. If the product has been updated or superseded, a replacement will be made with a current model of the same quality and function. Warranty of the replacement parts is limited to 90 days or the unexpired portion of the warranty period of the product on which the parts are being used, or whichever is longer.

This warranty does not cover any defects or costs caused by: (1) modification, alteration, repair or service of this product by any persons or company other than Interactive Voice; (2) physical abuse to, overload of, or misuse of, the product or operation thereof in a manner inconsistent with the use indicated in the instructions; (3) any use of the product other than that for which it was intended; or (4) shipment of the product to Interactive Voice for service. This warranty does not cover labor costs.

YOU SAY...

AND IVEE...


Hello ivee	Listens
Time	Tells you the time
Today's Date	Tells you today's date
Temperature	Tells you the indoor temperature
Alarm(s)	Tells you the alarm status
Alarm 1/2	Tells you the alarm status
Set Alarm	Allows you to set alarm 1/2
Set Alarm 1/2	Allows you to set alarm 1/2
Alarm Sound	Allows you to choose 1 of 6 alarm sounds
Alarm 1/2 Sound	Allows you to choose 1 of 6 alarm sounds
Alarm 1/2 On	Turns on alarm 1/2
Turn Off Alarm 1/2	Turns off alarm 1/2
Turn Off the Alarm	Turns off alarm 1/2
Alarm Off	Turns off alarm 1/2
Alarm 1/2 Off	Turns off alarm 1/2
Play Radio	Turns on the FM radio


YOU SAY...

Hello ivee
Radio On
Set Radio Preset
Play Sleep Sound
Sleep Sound On
Set Sleep Sound
Timer On
Start Timer
Turn Off Timer
Stop Timer
Set Timer
Set Timer Sound
Night Light
Settings
Help
Cancel

AND ivee...

  Listens
Turns on the FM radio
Allows you to set 1 of 6 FM presets
Will play your sleep sound of choice
Will play your sleep sound of choice
Allows you to choose 1 of 6 sleep sounds
Turns on the timer
Turns on the timer
Turns off the timer
Turns off the timer
Allows you to set the timer
Allows you to set the timer sound
Turns the night light on/off
Allows you to change her system settings
Offers a help menu
Cancels







www.helloivee.com

If you have any questions e-mail us at
hello@helloivee.com

