

# 2N® Helios IP Video Kit

## **IP Intercom Module**



**Installation Manual** 

Version 2.2 www.2n.cz

The 2N TELEKOMUNIKACE a.s. is a Czech manufacturer and supplier of telecommunications equipment.













The product family developed by 2N TELEKOMUNIKACE a.s. includes GSM gateways, private branch exchanges (PBX), and door and lift communicators. 2N TELEKOMUNIKACE a.s. has been ranked among the Czech top companies for years and represented a symbol of stability and prosperity on the telecommunications market for almost two decades. At present, we export our products into over 120 countries worldwide and have exclusive distributors on all continents.



2N<sup>®</sup> is a registered trademark of 2N TELEKOMUNIKACE a.s. Any product and/or other names mentioned herein are registered trademarks and/or trademarks or brands protected by law.



2N TELEKOMUNIKACE a.s. administers the FAQ database to help you quickly find information and to answer your questions about 2N products and services. On www.faq.2n.cz you can find information regarding products adjustment and instructions for optimum use and procedures "What to do if...".



2N TELEKOMUNIKACE a.s. hereby declares that the  $2N^{\circledR}$  Helios IP Video Kit product complies with all basic requirements and other relevant provisions of the 1999/5/EC directive. For the full wording of the Declaration of Conformity see the CD-ROM (if enclosed) or our website at www.2n.cz.



The 2N TELEKOMUNIKACE a.s. is the holder of the ISO 9001:2009 certificate. All development, production and distribution processes of the company are managed by this standard and guarantee a high quality, technical level and professional aspect of all our products.

# Content

1.	Product Overview	4
	1.1 Components and Associated Products	6 8
2.	Description and Installation	9
	2.1 Before You Start 2.2 Mechanical Installation 2.3 Electric Installation 2.5 Configuration 2.4 Extending Module Connection	11 14 21
3.	Technical Parameters	26
4.	Supplementary Information	29
	4.1 Troubleshooting	31



## 1. Product Overview

Here is what you can find in this section:

- 1.1 Components and Associated Products
- 1.2 Terms and Symbols

#### **Basic Features**

**2N**<sup>®</sup> **Helios IP Video Kit** is a universal and reliable IP intercom module designed for integration in the third parties' equipment. It is provided with a number of useful functions that are not quite common in the devices of this category. Featuring the SIP standard support and compatibility with renowned IP exchange and telephone manufacturers, **2N**<sup>®</sup> **Helios IP Video Kit** can make use of all VoIP services available on the market.

**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with two composite video inputs, and can support two analog cameras with PAL or NTSC standard. The intercom transcodes the analog signal to video stream in selected format, such as H.264, H.264, MJPEG etc.

**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with a 10W power amplifier for external loudspeaker connection. If the power output of the internal loudspeaker is insufficient for your specific application, you can connect an external loudspeaker to the line output. You can also connect an external electret microphone or another audio signal source to the IP intercom line output.

**2N**<sup>®</sup> **Helios IP Video Kit** allows up to 16 separate buttons or a 16-button matrix keypad to be connected. Set the button function flexibly according to your specific application needs. You can set up to three telephone numbers and call time profiles to each of the buttons to make the called subscriber accessible any time. Configure the buttons as a numerical keypad, which can be used as a switch activation code lock or for dialling a preset or any other telephone number.

**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with one relay output and two active 12 V outputs. Use the numerical keypad or, during the call, any telephone to control these outputs. A wide range of output mode settings help you make use of a high number of applications.



**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with two galvanically isolated digital inputs and three status signalling outputs.

**2N**<sup>®</sup> **Helios IP Video Kit** is very easy to install. All you have to do is connect it to your LAN using the LAN cable. An integrated two-port LAN switch simplifies installation on sites with a limited LAN infrastructure. Supply the intercom either from a 9–36 V source or directly from your POE supporting LAN.

Use a PC web browser to configure your **2N**<sup>®</sup> **Helios IP Video Kit** . Apply the **IP Manager** to administer extensive intercom installations easily and quickly.


## **Advantages of Use**

- Industrial design and variable mounting options
- Wide supply power range + PoE supply
- Two analog cameras connection
- Integrated 10 W power amplifier
- External amplifier connection
- External microphone/audio signal source connection
- Galvanically isolated relay output
- Two controlled active 12 V outputs
- Two galvanically isolated logic inputs
- Up to 3 signalling LED outputs
- Up to 16 external buttons/matrix keypad connection
- Integrated two-port LAN switch
- Bidirectional communication acoustic echo cancelling
- Configuration via web interface/special PC application
- SIP 2.0 support
- Video codecs (H.263, H.263+, H.264, MPEG-4, MJPEG)
- Audio codecs (G.711, G.729, G.722, L16/16kHz)
- HTTP(S) server for configuration
- SNTP client for server time synchronisation
- RTSP server for audio streaming
- TFTP client for automatic configuration and firmware update




## 1.1 Components and Associated Products

#### **Basic Units**

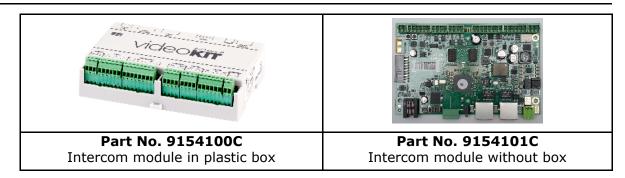

## **VoIP Telephones**

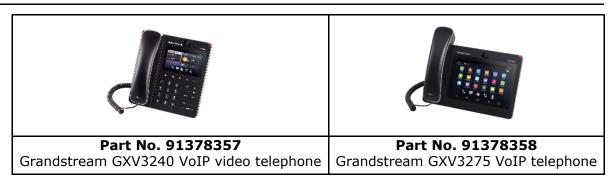

### **Electric Locks**







■ FAQ: Electric locks - Difference between locks in 2N<sup>®</sup> Helios IP accesories



## **Power Supply**

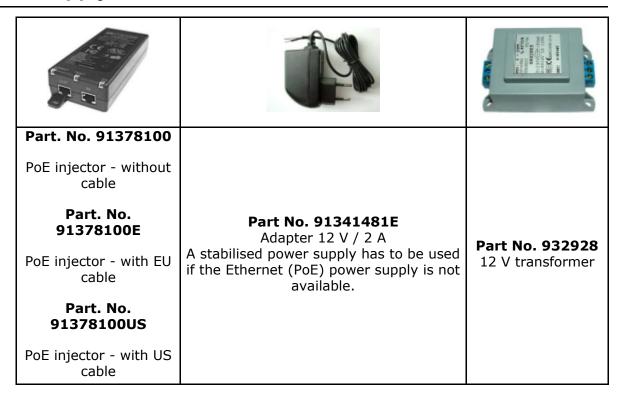

#### **Additional Modules**

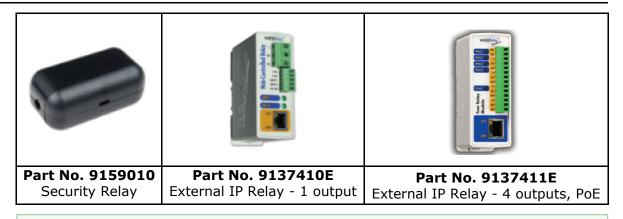



 For more accessories and particular advice please contact your local distributor of 2N products.



## 1.2 Terms and Symbols

The following symbols and pictograms are used in the manual:

- ① Safety
  - **Always** abide by this information to prevent persons from injury.
- (I) Warning
  - Always abide by this information to prevent damage to the device.
- ∧ Caution
  - **Important information** for system functionality.
- ▼ Tip
  - **Useful information** for quick and efficient functionality.
- (i) Note
  - Routines or advice for efficient use of the device.



# 2. Description and Installation

Here is what you can find in this section:

- 2.1 Before You Start
  2.2 Mechanical Installation
  2.3 Electric Installation
- 2.4 Extending Module Connection
- 2.5 Configuration



## 2.1 Before You Start

## **Product Completeness Check**

Before installing this product, please check whether the  $2N^{\circledR}$  Helios IP Video Kit delivery complies with the following packing list.

- 1× 2N<sup>®</sup> Helios IP Video Kit
   1× Short Installation Manual




## 2.2 Mechanical Installation

## **Mounting Types**

Refer to the table below for a list of mounting types and necessary components. Make sure that the installation site is not exposed to flowing or condensed water.

### **Wall mounting**


Use the proper wall mounting screws and dowels (not included in the delivery). Hang the device on the wall using the cover bottom holes.

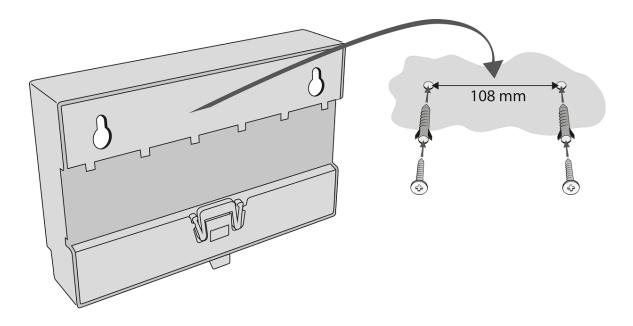




#### **DIN** rail mounting

Mount the device to a standard TS 35 DIN rail. The recommended minimum DIN rail length is  $14\ \mathrm{cm}$ .

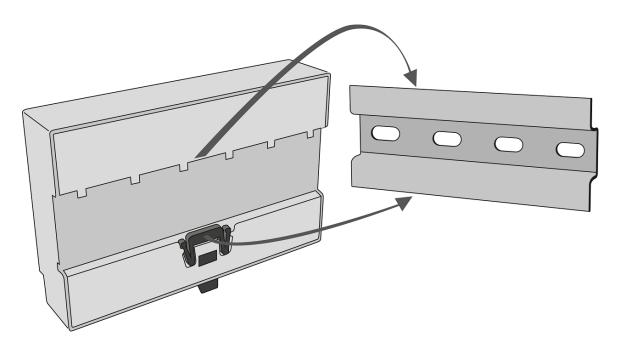

#### PCB mounting (for Part No. 9154101 only)

Use 4–6 distance columns and proper screws (not included in the delivery) to mount the PCB to the support. Fix the distance columns as shown in the figure.

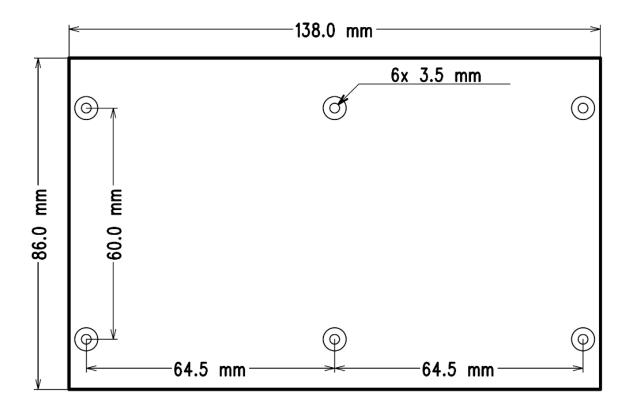



#### Caution

- The warranty does not apply to the product defects and failures arisen as a result of improper mounting (in contradiction herewith). The manufacturer is neither liable for damage caused by theft within an area that is accessible after the attached electric lock is switched. The product is not designed as a burglar protection device except when used in combination with a standard lock, which has the security function.
- When the proper mounting instructions are not met, water might get in and destroy the electronics. It is because the intercom circuits are under continuous voltage and water infiltration causes an electro-chemical reaction. The manufacturer's warranty shall be void for products damaged in this way!



## 2.3 Electric Installation

#### **Device and PCB Connectors**

Figures below show the layout of the  $\mathbf{2N}^{\mathbb{R}}$  Helios IP Video Kit connectors and terminals.

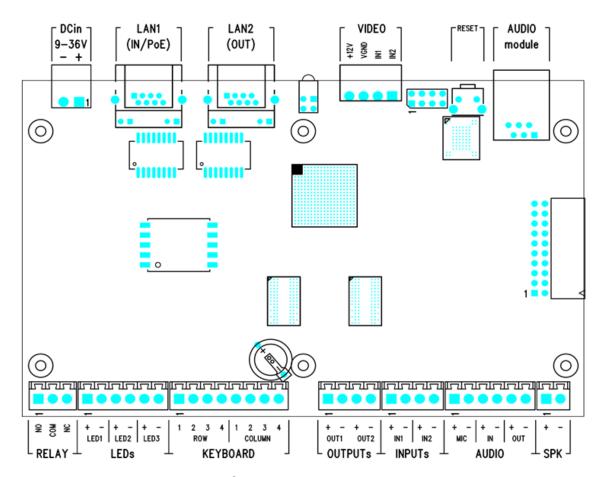


Figure: PCB Connectors





Figure: Connectors



Group	Terminals	Function
DC in		9-36 V / 1.5 A power input
LAN1		LAN connection with PoE function
LAN2		LAN connection
D1		Integrated red and green LED indicators
VIDEO	+12 V, VGND, IN1, IN2	Connection of up to two analog cameras connected via composite PAL or NTSC signal
RESET		RESET multifunction button
AUDIO MODULE		Connection of an audio module with microphone, loudspeaker, buttons and LEDs
RELAY	NO, COM, NC	Programmable relay switch with an accessible N/O and N/C contact
LEDs	LED1+, LED1 - LED2+, LED2-	3 current outputs for connection of programmable LED indicators; two terminals per LED
KEYBOARD	COL1-4 ROW1-4	Connection of matrix keypad (4×4) or 16 separate buttons
OUTPUTS	OUT1+, OUT1- OUT2+, OUT2-	2 programmable active 12 V DC/ 650 mA outputs
INPUTs	IN1+, IN1- IN2+, IN2-	2 programmable galvanically isolated inputs
AUDIO	MIC+, MIC- IN+, IN- OUT+, OUT-	Microphone input, line input, line output
SPEAKER	SPK+ SPK-	Power amplifier output for loudspeaker

### **Connection to LAN**

Connect **2N**<sup>®</sup> **Helios IP Video Kit** to the LAN using an RJ-45 terminated UTP/STP cable (of category Cat 5e or higher). As the device is equipped with the Auto-MDIX function, you can use either the straight or crossed cable version.

**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with two LAN interfaces (LAN1 and LAN2) and an integrated Ethernet switch. You can use only LAN1 interfaces for LAN connection. LAN1 is the only interface provided with PoE. LAN2 helps connect another LAN device on the installation site. This interface is not equipped with PoE.



■ 2N<sup>®</sup> Helios IP Video Kit does not allow you to feed another connected device via PoE. The integrated PoE function is intended for the 2N<sup>®</sup> Helios IP Video Kit supply only.



#### **Connection of External Power Supply**

2N® Helios IP Video Kit can be supplied either from an external 9-36 V / 2 A DC source or directly from the LAN provided with the PoE 802.3af supporting network elements.

#### **External Power Supply**

Connect the external 12V power supply to the DC in terminals. Use safety low-voltage voltage (SELV, 9-36 V) dimensioned for the minimum current consumption of 1.5 A (Part No. 91341481E, e.g.) to make your device work correctly.

#### **PoE Supply**

2N® Helios IP Video Kit is compatible with the PoE 802.3af technology (Class 0 -12.95 W) and can be supplied directly from the LAN via compatible network elements. If your LAN lacks such compatible elements, you can insert a PoE injector, Part No. 91758100E, between your **2N®** Helios IP Video Kit and the nearest network element. Connect your **2N**<sup>®</sup> **Helios IP Video Kit** to the LAN via the LAN1 interface to supply it successfully.



#### Caution

- In case you feed your **2N**® **Helios IP Video Kit** via PoE or from a limited-power external power supply, monitor the power consumption of the whole system. With regard to the PoE 802.3af capacities and efficiency of the switched-mode power supplies in the device, the maximum possible device input is approximately 12 W. An overload of the PoE source usually results in PoE disconnection and, subsequently, 2N® Helios IP Video Kit restart.
- The 2N® Helios IP Video Kit consumption at relax (power amplifier inactive, no load switched on LED1-3 and OUT1-2 outputs) is up to 2 W.
- The maximum power amplifier consumption is determined by the current loudspeaker volume level and impedance (up to 10 W for a 4  $\Omega$ loudspeaker). The real consumption is typically lower and depends on the characteristics of the signal to be amplified.
- If you intend to connect a considerable load to the OUT1 and OUT2 outputs, make sure that the total input does not exceed the above mentioned limit (12 W for PoE). If the PoE supply fails to provide sufficient power for the specific application, use a more powerful external source to make your device work perfectly.

#### **Connection of LED Indicators**


2N® Helios IP Video Kit is equipped with three independent current LED control outputs (LED1+, LED2+ and LED3± terminals). All of them are current outputs (20 mA, up to 12 V). You can connect the LEDs directly to the terminals of these outputs or use LEDs with serial resistors. Mind the polarity while connecting the LEDs to make your device work properly.



The functions of the LED1, LED2 and LED3 outputs are programmable.

### Connection of Keypad/Buttons

2N® Helios IP Video Kit is equipped with an interface for connection of an external matrix keypad or up to 16 separate buttons; see the figure below:

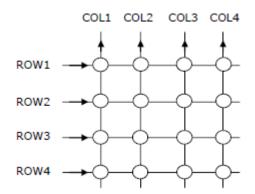

The buttons are connected in a 4×4 matrix to the ROW1-4 (output) and COL1-4 (inputs) terminals. If you do not make use of all of the 16 buttons, you can leave some of the ROW and COL signals unconnected. If you need one button only, connect it to the ROW1 and COL4 terminals.

The button function is programmable. You can set the numerical keypad buttons to any matrix position (0 to 9, \*, #) or configure one of the 16 buttons for dialling a telephone directory position.



#### Caution

■ Errors such as false keystroke detection may occur in installations with strong EMI. Therefore, make sure that the keypad or button cables are carried in a trunk separated from the power cables and are as short as possible (up to 1 m).

### **Connection of External Loudspeaker**

2N® Helios IP Video Kit is equipped with an integrated 10 W power amplifier of class D. The amplifier output is available on the SPEAKER+ and SPEAKER- terminals. The maximum power is achievable with a 4  $\Omega$  loudspeaker only. The higher the loudspeaker impedance, the lower the maximum power output; refer to the table below:

Loudspeaker impedance	Maximum power (at +20 dB)
4 Ω (min)	10 W
8 Ω	5 W
16 Ω	2.5 W
32 Ω	1.2 W
64 Ω	0.6 W



#### Caution

- $\blacksquare$  Never connect a loudspeaker with impedance lower than 4  $\Omega$  to avoid system damage.
- Never exceed the maximum power output designated for the loudspeaker to avoid loudspeaker destruction. Choose a loudspeaker with proper impedance and maximum power values, or limit the maximum volume level in the device configuration.

 
#### **Connection of External Microphone**

2N® Helios IP Video Kit is equipped with an input for connection of an external electret microphone on the MIC+ and MIC- terminals. Shielding of the shielded cable is connected to the IN- terminal.



#### Caution

Undesired noise may be heard in the earphone where EMI affects the microphone signal. To avoid this, connect the microphone using a shielded cable of the minimum possible length.



## **Connection of External Amplifier**

2N® Helios IP Video Kit is equipped with a line output for connection of an external power amplifier on the LINE OUT+ and LINE OUT- terminals.

#### **Connection of External Audio Source**

2N® Helios IP Video Kit is equipped with a line input for connection of an external audio signal source (FM tuner, MP3 player, e.g.) on the LINE IN+ and LINE INterminals.

## **Connection to Relay Output**

is equipped with one galvanically isolated relay switch with N/O and N/C contacts on the NC, NO and COM terminals. The relay function is programmable.



#### Warning

Do not exceed the voltage and current limits for the load connected to the relay contacts as specified in the technical parameters of the device to avoid device damage.

#### **Connection to Digital Outputs**


**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with two active 12 V / 650 mA outputs on the OUT1± and OUT2± terminals. The outputs are overload and short-circuit resistant.

### **Connection to Digital Inputs**

 $2N^{\textcircled{8}}$  Helios IP Video Kit is equipped with two digital inputs on the IN1± and IN2± ter minals. The digital inputs recognise the following two logic levels: log. 0 for voltage under 1.1 V a log. 1 for voltage over 3 V. Keep the voltage polarity to make the function work properly. The function is programmable for either input.

#### **Camera connection**

**2N**<sup>®</sup> **Helios IP Video Kit** is equipped with two video inputs for analog camera with composite PAL or NTSC signal. Output from camera connects to VIDEO VGND and VIDEO IN1/IN2 sockets. **2N**<sup>®</sup> **Helios IP Video Kit** automatically detects signal format. If the attached camera has no own power supply, it can be supplied from **2N**<sup>®</sup> **Helios IP Video Kit** from VIDEO +12 V and VIDEO VGND sockets.

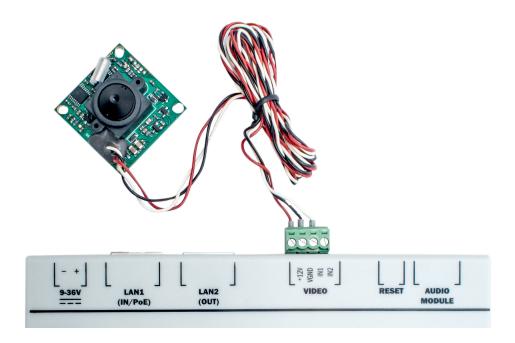



## 2.5 Configuration

#### **Device Configuration**

Configure 2N® Helios IP Video Kit using a PC equipped any web browser as follows:

- Launch your web browser (Internet Explorer, Firefox, etc.).
- Enter the IP address of your intercom (http://192.168.1.100/, e.g.).
- Log in with username Admin and password 2n.

You have to know the IP address of your device to log in to the integrated web server. Upon purchase,  $2N^{\otimes}$  Helios IP Video Kit is in the Dynamic IP address mode, i.e. it obtains the IP address automatically if there is an adequately set DHCP server in the LAN. If no such server is available, set the Static IP address mode to your  $2N^{\otimes}$  Helios IP Video Kit .

If the device remains inaccessible (you have forgotten the IP address or the LAN configuration has changed, e.g.), change the network settings using the RESET button on the device.

#### **LAN Setting Change and Default Reset**

 $2N^{\otimes}$  Helios IP Video Kit is equipped with a RESET button. Press the button shortly (< 1 s) to restart the system without changing configuration.

Follow the instructions below to **identify the current IP address**:

- Connect the loudspeaker to the SPEAKER terminals.
- Press and hold the REST button.
- Wait until the red and green LEDs on the device come on simultaneously (approx. 15 s).
- Release the RESET button.
- The device announces the current IP address via the loudspeaker connected automatically.



Follow the instructions below to switch on the Static IP address mode (DHCP OFF):

- Press and hold the REST button.
- Wait until the red and green LEDs on the device come on simultaneously (approx. 15 s).
- Wait until the red LED goes off (approx. 5 s).
- Release the RESET button.



 


The following network parameters will be set after restart:

IP address: 192.168.1.100Nework mask: 255.255.255.0Default gateway: 192.168.1.1


Follow the instructions below to switch on the **Dynamic IP address** mode (DCHP ON):

- Press and hold the REST button.
- Wait until the red and green LEDs on the device come on simultaneously (approx. 15 s).
- Wait until the red LED goes off (approx. 5 s).
- Wait until the green LED goes off and the red LED comes on again (another 5 s).
- Release the RESET button.



Follow the instructions below to **reset the factory default values**:

 - Press and hold the REST button.
- Wait until the red and green LEDs on the device come on simultaneously (approx. 15 s).
- Wait until the red LED goes off (approx. 5 s).
- Wait until the green LED goes off and the red LED comes on again (approx. 5 s).
- Wait until the red LED goes off (another 5 s).
- Release the RESET button.





## 2.4 Extending Module Connection

2N® Helios IP Video Kit allows to connect following extending modules:

Security Relay

#### **Security Relay**

The **Security Relay** (Part No. 9159010) is used for enhancing security between the intercom and the connected electric lock. The  $2N^{\otimes}$  Helios IP Security Relay is designed for any  $2N^{\otimes}$  Helios IP intercom model with firmware versions 1.15 and higher. It significantly enhances security of the connected electric lock as it prevents lock opening by forced intercom tampering.



#### **Function:**

The **2N**<sup>®</sup> **Helios IP Security Relay** is a device installed between an intercom (outside the secured area) and the electric lock (inside the secured area). The **2N**<sup>®</sup> **Helios IP Security Relay** includes a relay that can only be activated if the valid opening code is received from the intercom.

#### **Specifications:**

Passive switch: NO and NC contacts, up to 30 V / 1 A AC/DC

Active switch output: 12 V / 700 mA DC

Dimensions:  $(56 \times 31 \times 24)$  mm

Weight: 20 g

#### Installation:

Install the **2N**<sup>®</sup> **Helios IP Security Relay** onto a two-wire cable between the intercom and the electric lock inside the area to be secured (typically behind the door). The device is powered and controlled via this two-wire cable and so can be added to an existing installation. Thanks to its compact dimensions, the device can be installed into a standard mounting box.

#### **Connection:**

Connect the **2N**<sup>®</sup> **Helios IP Security Relay** to the intercom as follows:

- To the intercom active output (OUT1 or OUT2), or
- To the intercom relay output with a 12 V DC serial external power supply.



Connect the electric lock to the 2N® Helios IP Security Relay output as follows:

- To the active 12 V / 700 mA DC output, or
- To the relay output with a serial external power supply.

The device also supports a Departure button connected between the 'PB' and '-HeliosIP' terminals. Press the Departure button to activate the output for 5 seconds.

#### Status signalling:


Green LED	Red LED	Status	
blinking	off	Operational mode	
on	off	Activated output	
blinking	blinking	Programming mode – waiting for initialisation	
on	blinking	Error – wrong code received	

#### **Configuration:**

- Connect the **2N**<sup>®</sup> **Helios IP Security Relay** to the properly set intercom switch output; refer to the **2N**<sup>®</sup> **Helios IP Configuration Manual**. Make sure that one LED at least on the **2N**<sup>®</sup> **Helios IP Security Relay** is on or blinking.
- Press and hold the **2N**<sup>®</sup> **Helios IP Security Relay** Reset button for 5 seconds to put the device in the programming mode (both the red and green LEDs are blinking).
- Activate the intercom switch using the keypad, telephone, etc. The first code sent from the intercom will be stored in the memory and considered valid. After code initialisation, the 2N<sup>®</sup> Helios IP Security Relay will pass into the operational mode (the green LED is blinking).
- ▼ Tip
  - FAQ: 2N<sup>®</sup> Helios IP Security Relay what it is and how to use it with 2N<sup>®</sup> Helios IP intercom?
- ▼ Tip
  - Video Tutorial: <u>Door intercoms 2N<sup>®</sup> Helios IP Security Relay</u>



### **Connection:**

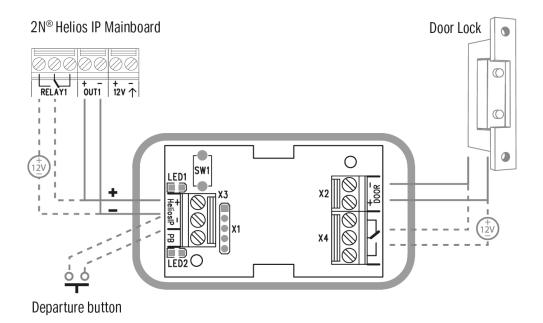



## 3. Technical Parameters

#### **Supported Protocols**

- LAN interface: IPv4, ARP, TCP, UDP, DHCP
- Device configuration: HTTP/HTTPS
- Call signalling: SIP 2.0 (UDP)
- Audio data transmission: RTP (G.711, G.729, G.722, L16/16kHz)
- Audio streaming: RTSP
- Time synchronisation: SNTP
- Auto provisioning: TFTP
- E-mail sending: SMTP

#### **Power Supply**

- External power supply: 9 to 36 V ±10 % / 2 A DC or PoE, typically 12 V DC
- **PoE:** 802.3af (Class 0 up to 12.95 W)
- Power consumption: 2 W at relax
- (i) Note
  - If you feed the device from a DC power source and the supply voltage is lower than 12 V, then the output voltage is limited to the supply voltage value.

#### **LAN Interface**

- LAN interface count: 2 (LAN1 and LAN2)
- **PoE:** 802.3af on LAN1 only
- Parameters: 10/100BASE-TX with Auto-MDIX, RJ-45
- **Recommended cabling:** Cat-5e or higher



#### Video Interface

■ Video input count: 2 (IN1, IN2)

Video input format: PAL or NTSC composite signal

■ Camera power supply: 12 V, max 500 mA (+12 V, VGND)

#### Video stream

Protocols: RTP / RTSP / HTTP

Codecs: H.263, H.263+, H.264, MPEG-4, M-JPEG

■ IP camera function: Yes

#### **Audio Interface**

■ **Microphone input:** Standard electret microphone, Max. Vpp = 100 mV, Rin =  $4.4 \text{ k}\Omega$ , Vbias = 1.5 V

• Line input: Max. 755 mV RMS, Rin = 47 k $\Omega$ 

■ **Amplifier output:** 10 W amplifier of class D, MONO output, THD < 1 %, minimum loudspeaker impedance:  $4 \Omega$ 

• Line output: Max. 755 mV RMS, Rout = 600  $\Omega$ 

Acoustic echo cancelling: AEC, full duplex

#### **Button/Keypad Interface**

- **Button count:** Up to 16 separate buttons in 4×4 matrix
- **Button function:** User programmable
- Matrix outputs
  - 4 (ROW1-4 terminals)
  - Uout < 0.1 V (L), Uout > 3.2 V (H), up to 8 mA
- Matrix inputs
  - 4 (COL1-4 terminals)
  - Uin < 1.15 (L), Uin > 2.15 V, max. Uin = 5 V

#### **LED Control Outputs**

Output count: 3 (LED1±, LED2± and LED3± terminals)

Output function: User programmable

Output current: Typ. 20 mAOutput voltage: Up to 12 V

### **Digital Outputs**

Output count: 2 (OUT1± and OUT2± terminals)

Output function: User programmable

Output type: Power output with short-circuit protection

Output voltage

PoE power supply: 10 V DC

External power supply: Power supply voltage minus 2 V, maximum 11 V DC

Output current: Up to 400 mA



#### **Digital Inputs**

- **Input count:** 2 (IN1± and IN2± terminals)
- **Input function:** User programmable
- **Input type:** Galvanically isolated inputs (opto-couplers)
- Characteristics: Uin < 1.1 V (L), Uin > 3 V (H), max. Uin = 32 V

### **Relay Output**

- Output count: 1 (NC, NO, COM terminals)
- Output function: User programmable
- Limits (DC): Up to 30 V DC / 1 A
- **Limits (AC):** Up to 125 V AC / 0.3 A

### **Mechanical Properties**

- Working temperature: -40°C 55°C
- Working relative humidity: 10% 95% (non-condensing)
- Storing temperature: -40°C 70°C
- Dimensions
  - 142 × 98 × 34 mm (Part No. 9154100)
  - 138 × 90 × 26 mm (Part No. 9154101)
- Weight
  - Up to 280 g (Part No. 9154100)
  - Up to 150 g (Part No. 9154101)
- Protection class
  - IP20 (Part No. 9154100)
  - IP00 (Part No. 9154101)



# 4. Supplementary Information

Here is what you can find in this section:

- 4.1 Troubleshooting
- 4.2 Directives, Laws and Regulations
- 4.3 General Instructions and Cautions



## 4.1 Troubleshooting



For the most frequently asked questions refer to <a href="faq.2n.cz">faq.2n.cz</a>.



## 4.2 Directives, Laws and Regulations

#### **Europe**

2N® Helios IP Video Kit conforms to the following directives and regulations:

Directive 1999/5/EC of the European Parliament and of the Council, of 9 March 1999 – on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity

Directive 2006/95/EC of the European Parliament and of the Council of 12 December 2006 on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits

Directive 2004/108/EC of the Council of 15 December 2004 on the harmonisation of the laws of Member States relating to electromagnetic compatibility

Commission Regulation (EC) No. 1275/2008, of 17 December 2008, implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment

Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

Regulation (EC) No. 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH), establishing a European Chemicals Agency, amending Directive 1999/45/EC and repealing Council Regulation (EEC) No. 793/93 and Commission Regulation (EC) No. 1488/94 as well as Council Directive 76/769/EEC and Commission Directives 91/155/EEC, 93/67/EEC, 93/105/EC and 2000/21/EC

Directive 2012/19/EC of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment.



## 4.3 General Instructions and Cautions

Please read this User Manual carefully before using the product. Follow all instructions and recommendations included herein.

Any use of the product that is in contradiction with the instructions provided herein may result in malfunction, damage or destruction of the product.

The manufacturer shall not be liable and responsible for any damage incurred as a result of a use of the product other than that included herein, namely undue application and disobedience of the recommendations and warnings in contradiction herewith.

Any use or connection of the product other than those included herein shall be considered undue and the manufacturer shall not be liable for any consequences arisen as a result of such misconduct.

Moreover, the manufacturer shall not be liable for any damage or destruction of the product incurred as a result of misplacement, incompetent installation and/or undue operation and use of the product in contradiction herewith.

The manufacturer assumes no responsibility for any malfunction, damage or destruction of the product caused by incompetent replacement of parts or due to the use of reproduction parts or components.

The manufacturer shall not be liable and responsible for any loss or damage incurred as a result of a natural disaster or any other unfavourable natural condition.

The manufacturer shall not be held liable for any damage of the product arising during the shipping thereof.

The manufacturer shall not make any warrant with regard to data loss or damage.

The manufacturer shall not be liable and responsible for any direct or indirect damage incurred as a result of a use of the product in contradiction herewith or a failure of the product due to a use in contradiction herewith.

All applicable legal regulations concerning the product installation and use as well as provisions of technical standards on electric installations have to be obeyed. The manufacturer shall not be liable and responsible for damage or destruction of the product or damage incurred by the consumer in case the product is used and handled contrary to the said regulations and provisions.

The consumer shall, at its own expense, obtain software protection of the product. The manufacturer shall not be held liable and responsible for any damage incurred as a result of the use of deficient or substandard security software.

The consumer shall, without delay, change the access password for the product after installation. The manufacturer shall not be held liable or responsible for any damage incurred by the consumer in connection with the use of the original password.

The manufacturer also assumes no responsibility for additional costs incurred by the consumer as a result of making calls using a line with an increased tariff.



#### **Electric Waste and Used Battery Pack Handling**



Do not place used electric devices and battery packs into municipal waste containers. An undue disposal thereof might impair the environment!

Deliver your expired electric appliances and battery packs removed from them to dedicated dumpsites or containers or give them back to the dealer or manufacturer for environmental-friendly disposal. The dealer or manufacturer shall take the product back free of charge and without requiring another purchase. Make sure that the devices to be disposed of are complete.

Do not throw battery packs into fire. Battery packs may not be taken into parts or short-circuited either.





#### 2N TELEKOMUNIKACE a.s.

Modřanská 621, 143 01 Prague 4, Czech Republic Phone: +420 261 301 500, Fax: +420 261 301 599

E-mail: <a href="mailto:sales@2n.cz">sales@2n.cz</a>
Web: <a href="mailto:www.2n.cz">www.2n.cz</a>

FN1941 v2.1