

# PH Link Dual Link




Instructions for installation and use English

EN

More documents on: www.zodiac-poolcare.com




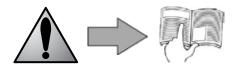

- Read this notice carefully before installing, maintaining or repairing this appliance!
- The symbol indicates important information that must be taken into consideration in order to avoid risk of harm to persons or damage to the appliance.
- The symbol indicates useful information.



- As part of a continuous improvement process our products may be modified without prior notice.
- Exclusive use: regulation system for pools (must not be used for any other purpose).
- System designed to work with water from the public network. The use of water from wells or rain water is prohibited.
- The installer is liable for the installation of the appliance and the compliance with local regulations in matters of installation. Under no circumstances can the manufacturer be held liable in the event of failure to comply with applicable local standards. Under no circumstances shall the manufacturer be held liable if current local installation regulations are not followed.

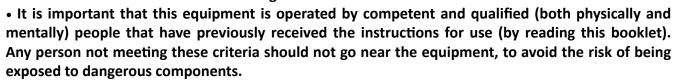

- If the equipment malfunctions: do not attempt to repair the equipment yourself contact your installer.
- Before working on the equipment, ensure that it and any other equipment connected to it are disconnected from the electricity supply.
- Before connecting it to the electricity supply, check that the voltage marked on the equipment matches the mains supply voltage.
- Removing or bypassing one of the safety devices automatically voids the guarantee, as does fitting replacement parts not manufactured by us.
- Incorrect installation can result in damaged equipment or serious physical injury (or even death).
- Keep the equipment out of the reach of children.
- The pH Link or Dual Link module is only designed to use pH minus (special liquid for use in swimming pools). Use of other products automatically voids the guarantee.

 $\triangle$ 

# ΕN

# **Contents**

1. Information before installing	3
1.1 General delivery terms and conditions	3
1.2 Contents	3
1.3 Technical specifications	3
2. Installation	4
2.1 Preparing the pool: water balance	4
2.2 Installing the pH Link or Dual Link module	5
2.3 Installing the POD Kit	5
3. Use	8
3.1 Activating the module	8
3.2 Display	8
3.3 Calibrating the sensor(s)	8
3.4 Adjusting the set point(s)	9
3.5 Setting the pool volume	9
3.6 Peristaltic pump	10
4. Maintenance	10
4.1 Cleaning the sensor(s)	10
4.2 Wintering	11
5. Troubleshooting	11
6. Registering the product	12
7. Product conformity	12


# 1. Information before installing

## 1.1 General delivery terms and conditions

All equipment, even postage and packing paid, travels at the risks and perils of the recipient. If damaged caused during transport is observed, the recipient should write appropriate comments on the delivery note provided by the carrier (and confirmed in writing to the carrier by registered letter).

#### 1.2 Contents

#### 1.2.1 pH Link module

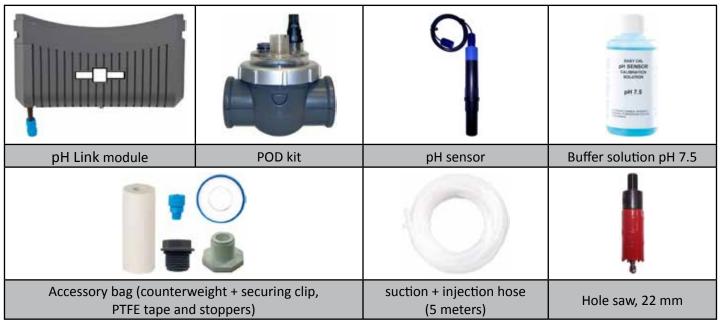

#### 1.2.2 Dual Link module



#### 1.3 Technical specifications

	pH Link module	Dual Link module	
Supply voltage	Low voltage (connecte	Low voltage (connected to the power pack)	
Peristaltic pump flow rate	1.8 L/h		
Maximum back pressure (injection)	1.5 bar		
pH and ACL sensor type	combined, ABS 1/2" NPT threaded body (pH = blue / ACL = red)		
pH and ACL sensor electrolyte	KCI polymer		
pH and ACL sensor cable(s)	1.5 meters shielded, BNC plug (pH = blue / ACL = red)		
pH correction	acid (pH minus only)		

	pH Link module	Dual Link module
pH minus dosage	Proportional cyclic	
pH sensor tolerances	Flow speed 2 metres/second - 5 bar / 60°C	
Measurement scale & pH sensor accuracy	pH 0.0 to pH 12.0, ± 0.1 pH	
pH sensor calibration	1 point, pH 7.5	
ACL sensor tolerances	/	Flow speed 2 metres/second - 5 bar / 60°C
Measurement scale & ACL sensor accuracy	/	100 mV to 1000 mV / ± 10 mV
ACL sensor calibration	/ 1 point, 700 mV	
pH and ACL sensor response time	< 15 seconds	
Dimensions (w x h x d)	28.5 x 15.5 x 7.5 cm	
Weight (module only)	1 kg	
Protection index	IP23	

# 2. Installation

# 2.1 Preparing the pool: water balance

The Zodiac® electrolyser or MagnaPool™ hydroxinator is designed to disinfect the water in the pool by means of its salt chlorination function.

With the pH Link module, it automatically maintains the pH value of your pool.

With the Dual Link module (electrolyser only), it automatically maintains the pH value and chlorine level (ACL or Redox potential) of your pool.


It is essential that the pool water balance is controlled and adjusted before installing the appliance. Making sure that the pool water balance is correct from the very start will reduce the likelihood of encountering problems on the first days of operation or during the season the pool is in use.



Even if it is an automatic control system, it is essential to analyse the water regularly to check the water balance parameters.

	Unit	Recommended values	To increase	To reduce	Test frequency (in the season)
рН	/	7.2 – 7.4	Deactivate dosage or add pH+	Automatic (pH minus Perfect pH- or pH-)	Weekly
Free chlorine	mg/L or ppm	0.5 – 2	Increase ACL set point or add chlorine	Decrease ACL set point or turn off the unit	Weekly
TAC (alkalinity or buffering power)	°f (ppm)	8 – 15 (80 – 150)	Add alkaline corrector (Alca+ or TAC+)	Add hydrochloric acid	Monthly
TH (calcium hardness)	°f (ppm)	10 – 30 (100 – 300)	Add calcium	Add a calcium carbonate sequestering agent (Calci-) or carry out carbonate removal	Monthly
Cyanuric acid (stabiliser)	mg/L or ppm	< 30	/	Partially empty the pool and refill it	Quarterly
Metals (Cu, Fe, Mn)	mg/L or ppm	± 0	/	Add a metal fixer (Metal Free)	Quarterly

#### 2.2 Installing the pH Link or Dual Link module

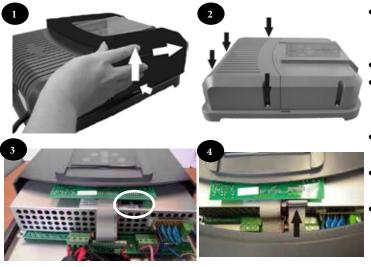

- Turn off your power pack then the filtration by cutting off the main electricity supply in order to isolate the installation.
- Close the isolating valves in the pipework.
- Remove the silver cover by pressing the sides and raising it (1), then unscrew the four screws attaching the original (empty) lower module to the power pack (2).
- Remove the empty module and present the pH Link or Dual Link module to be installed (3).
- Connect the ribbon cable from the pH Link or Dual Link to the connector on the power pack (4).
- Put the pH Link or Dual Link module in position, replace the four screws and replace the silver cover.



- Do not reconnect the electricity supply until the pH Link or Dual Link module, the sensor-holding POD Kit and the pH minus injection pipe have been installed (see § 2.3.3).
- Always wait 2 minutes, particularly when performing any technical work, between disconnecting the power packfrom the mains electricity supply and connecting the pH Link or Dual Link module.


#### 2.3 Installing the POD Kit


The sensor-holding POD Kit is a single assembly including the flow rate detector (used by your appliance, see § 2.3.2), the pH and ACL sensors and pH minus injection.


- The cell bypass valves must always be open.
- The sensor-holding POD Kit must always be positioned on a horizontal pipe so that the sensors are vertical (1) or 2).




- The POD Kit must be the first unit fitted after the pool filter.
- If the pool is fitted with a heating system (heat pump, heat exchanger, electric heater, etc.), the POD Kit must be installed before it (3) (to take readings on unheated water).
- We recommend positioning the POD Kit more than 20 cm from an elbow in the pipe.
- The sensor cables must not be positioned near high voltage mains electricity cables.

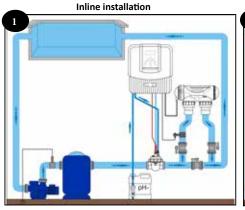

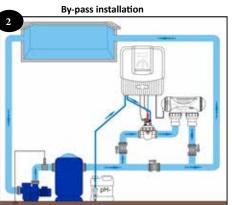

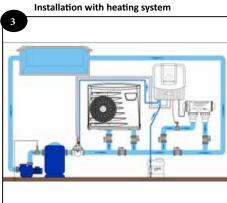

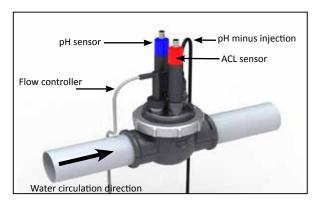



A badly-installed sensor may give false readings and cause inappropriate operation of the appliance. Neither the manufacturer nor the unit shall be liable in this event.




Identify a suitable length (minimum 30 cm, without elbow) of straight pipe.

- Dismantle the POD Kit and keep the lower part with 2 holes ( ).
- Turn the lower part of the collar upside down and place it in the position where you want to install it on the pipe.
- Use a center-punch or marker pen to mark the position of the holes to be made in the pipe (2).
- Using the holes saw supplied, cut the 2 feed holes for the POD Kit.




#### Ensure that the edges of the holes are smooth and deburred!

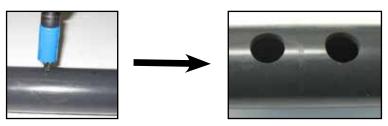

Place the upper part of the POD Kit on the pipe, sliding it into the previously-drilled holes.



The arrows on the upper part of the POD collar show the direction of water flow.

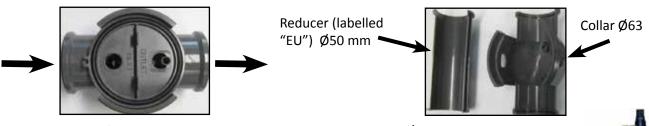

- Click the 2 parts of the POD Kit collar together around the pipe. For a Ø50 mm pipe, use the reducer labelled 'EU'. Do not use this reducer for a Ø63 mm pipe.
- Position the upper part of the POD Kit with its various components in the direction indicated by the foolproof locating notch and tighten the locking ring firmly (hand-tighten only).

#### 2.3.1 Installing the pH and ACL sensors

- Carefully unscrew the protection cap from the sensor (1).
- Rinse the end of the sensor with tap water and shake off excess water.



#### Never wipe the sensor using a cloth or paper tissue, as this may damage it!

- Screw the sensor into the threaded hole on the POD Kit until the O-ring seal on the sensor comes in contact with the POD kit (2). Do not use excess strength. If necessary, use the supplied Teflon band.
- Connect the supplied BNC cable to the top of the sensor.



Do NOT screw/unscrew the sensors while they are still connected to their BNC cables. Disconnect the cables beforehand to avoid damage.

• Once the sensors are installed they may be connected to the BNC sockets on the power pack named "pH" (blue) and "ACL" (red). They must now be calibrated (see § 3.3).







#### 2.3.2 Installing the flow switch

#### 2 positions possible:

- After the upstream valve if the cell is in by-pass (1)
- On the POD kit, if the cell is inline
   (2)

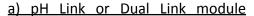

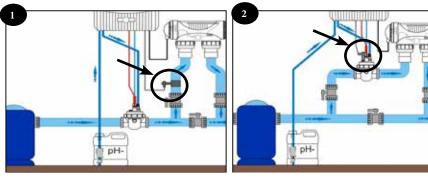

#### installed at the same time as the power pack.

- Locate the flow switch supplied with the power pack.
- Screw the flow switch into the seat provided on the POD Kit (hand-tighten).



The arrow that indicates the water flow rae on the top of the flow switch must be perfectly parallel with the pipes on which the POD kit is positioned.



## b) pH Link or Dual Link module added to an installation already equipped with a power packl

When the swimming pool already has a power pack, the flow switch is already installed. Leave the flow switch in place. Unscrew the threaded adaptor located on the POD Kit and replace it with the stopped supplied to seal the hole.

#### 2.3.3 Installing the pH minus injection line




When handling chemical products, always use appropriate safety equipment (safety glasses, gloves and jacket).

#### a) Installing the injection line (peristaltic pump > non-return valve)

- Remove the protective cover from the peristaltic pump,
- Cut a suitable length of pipe from the coil supplied to connect the peristaltic pump to the injection non-return valve located on the POD Kit
- Attach the pipe to the threaded connector on the peristaltic pump outlet.
- Attach the other end of the pipe to the injection non-return valve.

#### b) Installing the intake pipe (container > peristaltic pump)

- Cut a suitable length of pipe from the coil supplied to connect the container of pH minus to the peristaltic pump.
- Attach the pipe to the threaded connector on the peristaltic pump inlet.
- Make a hole to fit the diameter of the intake pipe in the cap of the pH minus container and another smaller hole to avoid the container distorting as the product is sucked up.
- Pass the free end of the pipe through the hole made in the cap and put the ceramic counterweight and threaded locking nozzle on the end.
- Ensure that ALL connections are correct and watertight before operating the pH Link or Dual Link module.
- Replace the protective cover on the peristaltic pump.

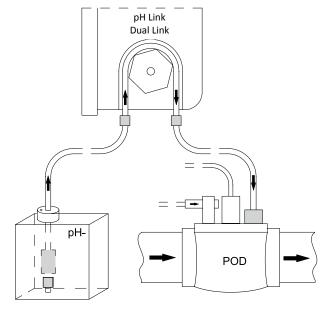

#### 3. Use


#### 3.1 Activating the module

The power pack automatically detects the presence of a pH Link or Dual Link module. It is now ready to be used with automatic pH control using the pH Link module or pH and ACL control using the Dual Link module.

#### 3.2 Display

The LCD screen will display 2 extra lines:

- pH Link module:

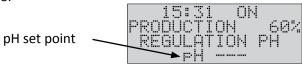

- Dual Link module:



A '^' symbol appears to the right of the set point if the value measured by the equipment needs to be corrected automatically (pH of water in the pool higher than the set point and/or insufficient chlorine level). Then pH minus is injected and/or chlorine produced automatically according to the defined cycles.



By default, pH regulation (peristaltic pump in the module) is disabled and the LCD screen will display 'pH ---'. It is enabled automatically about 8 hours after being turned on. To enable pH regulation immediately and so display the set point on the LCD screen, see § 3.6.2.


# 3.3 Calibrating the sensor(s)



- To operate accurately and reliably, the sensors must be calibrated before using the power pack with the module. To maintain maximum efficiency of the unit, we recommend calibrating at least once every 2 months during the period the swimming pool is being used.
- Ensure the sensors are cleaned before calibration (see § 4.1).
- Confirm that the power pack is plugged in,
- Stop the pool pump and isolate the sensors by closing any valves, so as to be able to remove the sensors safely.
- Disconnect the BNC cable from the top of each sensor then remove them (unscrew) from the POD. Then reconnect the BNC cable to the sensors.
- Rinse the end of the sensors with clean water and shake them to remove excess water. Do not touch or wipe the glass bulb at the end of the sensors.
- Put the pH sensor into a sample of the pH7.5 buffer solution supplied.
- Put the ACL sensor into a sample of the 700 mV buffer solution supplied.
- Leave the sensors immersed for about 1 minute to obtain a reliable measurement.




• then press (sect) or (\*)

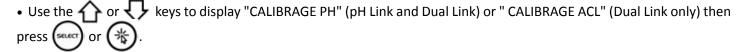


#### Note the measured value:

- pH = 'X.X'
  - If the value is greater than 8.2 or less than 6.4: the sensor is dirty or has been damaged during transport. Clean the pH sensor (see § 4.1) then repeat the above steps. If the problem persists, contact your reseller.
  - If the value is between 6.4 and 8.2, press or to begin calibration. The procedure takes about 15 seconds.

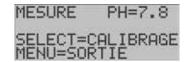




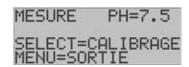


- When calibration is finished, check that the value displayed equals 7.5, otherwise repeat the calibration.

- ACL = 'XXX'
  - Start the calibration procedure by pressing or , the procedure lasts about 15 seconds,

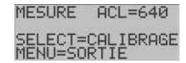

CALIBRAGE PATIENTEZ...

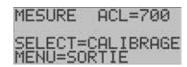

- If the value is 700: calibration is correct
- If the value is not 700: repeat the calibration steps. If the problem persists, contact your reseller.
- Press or or wait 30 seconds to exit.

#### 3.4 Adjusting the set point(s)

The set point is displayed continuously on the LCD home screen.

The default setting for the pH set point is pH7.2 (pH Link and Dual Link modules).

The default setting for the ACL set point is 4 (Dual Link module).

This value provides the ideal compromise to achieve optimum efficiency in terms of water disinfection.

- Calibrating the sensors (see § 3.3).
- Press or or the use the for the way to display "CALIB. PH" or "CALIB. PH\ACL", then press



- Use the or keys to change the set point value.
- Press or or wait 30 seconds to exit.
  - The ACL set point displayed does not match the free chlorine concentration in the pool. This is the desired level of 'disinfection potential' in the water.



- The ACL set point required to reach the optimum chlorine level is different in every swimming pool. A period manual measurement of free chlorine level in the pool is therefore necessary to adjust this ACL set point.
- To increase the chlorine production potential: increase the ACL set point.
- To decrease the chlorine production potential: decrease the ACL set point.

# $\Lambda$


## **Dual Link module only:**

We recommend that you check the free chlorine level in the pool a few days after the module is installed to determine if the rate is ideal (0.5 to 2 ppm, see §2.1). If, after this period, the free chlorine level is unsuitable, the ACL set point must be changed.

#### 3.5 Setting the pool volume

List of levels with corresponding volumes:

- Level 1: For small pools up to 40 m<sup>3</sup>
- Level 2: For mid-size pools from 40 to 60 m<sup>3</sup> (default level)
- Level 3: For large pools between 60 and 110 m³
- Level 4: For very large pools over 110 m³
  - These values are for guidance only; the choice may vary according to the conditions of use.
  - When the volume of the pool is at the limit between 2 levels, it is better to use the higher level.
  - However, we recommend not 'over-sizing' the choice of level, to avoid using too much pH minus.
  - A dose of pH minus is injected into the pool every 2 hours (when the filtration and water treatment systems are running).

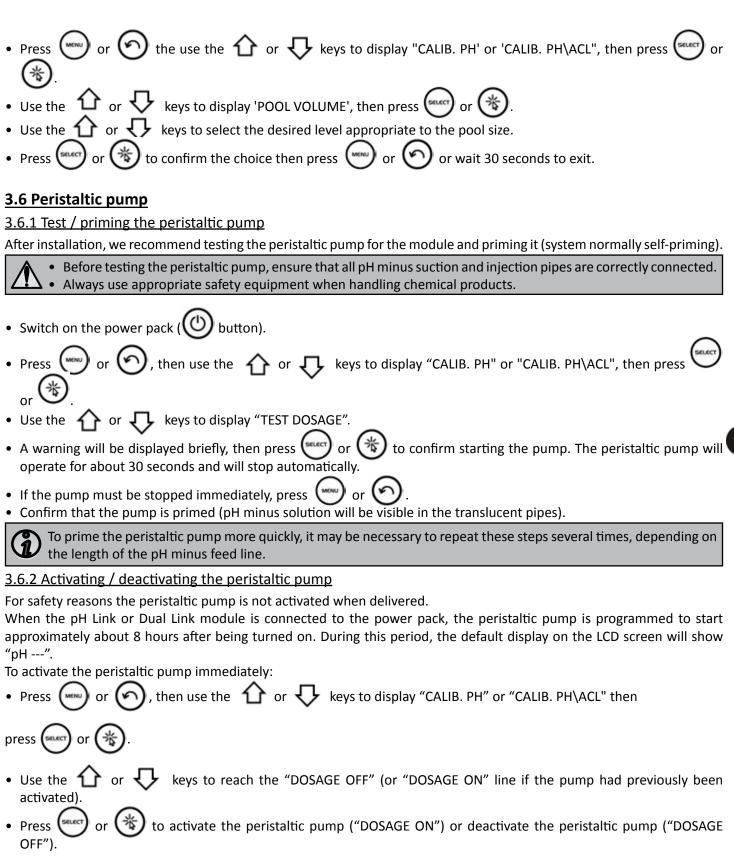

# 4. Maintenance

#### 4.1 Cleaning the sensor(s)

- If the end of the sensor is coated with a greasy film (deposits of cosmetics, suntan lotion, etc.), soak it for a few minutes in warm soapy water. Warning: do not use a detergent, dishwashing liquid is better.
- If the end of the sensor is coated with limescale or if the above procedure is not enough, soak the sensor in a 10% diluted solution of hydrochloric acid for a few minutes (wear the necessary safety equipment).
- · Rinse thoroughly with clean water.
- Calibrate the sensor again (see § 3.3).



This acidic cleaning solution can be bought from your reseller or you can make it up yourself by mixing 1 volume of acid with 9 volumes of clean water in a suitable container. ALWAYS ADD ACID TO WATER, NEVER THE OTHER WAY AROUND!



- Always clean the sensor before carrying out the calibration procedure.
- During cleaning, NEVER WIPE THE SENSOR WITH A CLOTH but shake it gently to remove excess rinse water.

## 4.2 Wintering

- Rinse the peristaltic pipe by pumping clean water instead of pH minus solution, using the "TEST DOSAGE" function (see § 3.6.1).
- Unscrew the POD sensors (disconnect their BNC cable beforehand). Place them in their original protective caps or in a container filled with tap water.
- If necessary close the POD holes using the threaded stops.



NEVER leave a sensor to dry and/or exposed to the risk of frost, which would permanently damage it.

# 5. Troubleshooting

Message	Causes	Solutions
PH LOW	The measured 0.8 PH units or more below the set	Check the pH in the pool
	point	Check the set point
		Calibrate or replace the pH sensor
	The pH sensor is dirty, out of calibration or not	Clean and calibrate the sensor
	working	Replace the pH7.5 buffer solution if necessary
	The pool size setting is too large	Check the selected pool size
PH ERROR	pH adjustment has performed 5 cycles without	Check the pH in the pool
	reaching its set point (> 10 hours)	Calibrate or replace the pH sensor
	The pH minus container is empty	Replace the container
	The peristaltic pump is not primed	Test the peristaltic pump
	The pH sensor is dirty, out of calibration or not	Clean and calibrate the sensor
	working	Replace the pH7.5 buffer solution if necessary
	The pool size setting is too small	Check the selected pool size
	The peristaltic pump has not been operated for a total of more than 72 hours	The pH in the pool does not need to be corrected
ACL HIGH	The measured Redox potential is more than 150	Clean and calibrate the sensors
	mV above the set point (the chlorine level may be excessive)	Wait until the error message disappears (no chlorine production)
	The pH is too low	Make sure that the stabiliser is lower than 30 ppm
		Reduce the ACL set point
		Make sure that the water's alkalinity level is OK (well and rain water prohibited)
ACL ERROR	The ACL regulation authorised chlorine production	Check the pH in the pool
	for a total of over 30 hours without waiting for the	Clean and calibrate the sensors
	ACL set point	Replace the buffer solutions if necessary
		Replace the sensors
		Use "Boost" mode if necessary
	The appliance has not produced any chlorine for a	Check the pH in the pool
	total of over 30 hours	Clean and calibrate the sensors
		Replace the buffer solutions if necessary
		Replace the sensors



To cancel the "PH ERROR" and "ACL ERROR" messages, press (select)



or (\*) for 3 or 4 seconds when the message

The other codes are only information messages that disappear automatically when the operating conditions return to optimal.

# 6. Registering the product

Register your product on our website:

- You will be the first to be informed of new Zodiac® products and special offers,
- You can help us to constantly improve our product quality.

Europe & Rest of the World	www.zodiac-poolcare.com	回
America	www.zodiacpoolsystems.com	
Australia – Pacific	www.zodiac.com.au	回族 E (2)

# 7. Product conformity



This appliance has been designed and built according to the following standards:

EN6000-6-1: 2006 EN6000-6-3: 2007

IEC 61558-2-6: 1997

AS/ NZ 3136-2001 (IEC 60065 + IEC 60335-2-60)

Relative to which it is compliant. The product has been tested under the normal conditions of use.





# www.zodiac-poolcare.com

Pour plus de renseignements, merci de contacter votre revendeur. For further information, please contact your retailer.

ZODIAC® is a registered trademark of Zodiac International, S.A.S.U., used under license.



Votre revendeur / your retailer