# iNet Configurator Security System User Manual

#### Introduction


- Welcome to the world of wireless communication. We are pleased that you have chosen the Anjels iNet.
- iNet Configurator is a software for you to personalize your iNet.
- iNet Configurator allows you to Create/Edit/Delete the data structure, icons, scene control, security system and extra to enhance your lifestyle.
- The user guide will go through the whole process with a sample project for better understanding.

# iNet Configurator Setup File

- Visit http://inet.anjels.com
- Mini-iNet cum iNet Configurator Setup Program (for Windows)
- Download and install the program.

Note: iNet Configurator applicable for Windows only.


iNet Security System

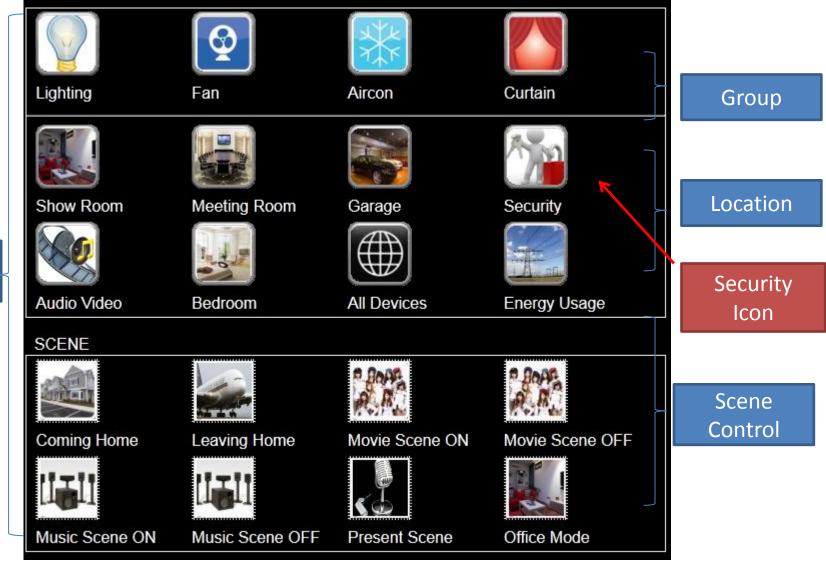

iNet Configurator will be used to configure your own security system.


Main Page

# Hardware Setup

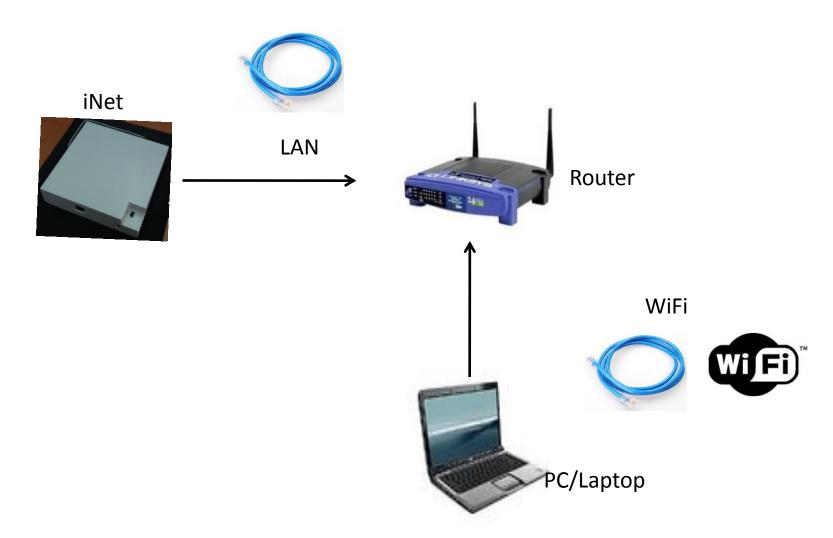


#### Notes


- This user manual covers only the Security System configuration.
- Please refer to iNet Configurator HomeAutomation user manual for Home Automation configuration.
- Both user manuals are available on <a href="http://inet.anjels.com">http://inet.anjels.com</a>
- ALL the Devices/Sensors that used in Security System have to be pre-configured location IDs & device IDs.

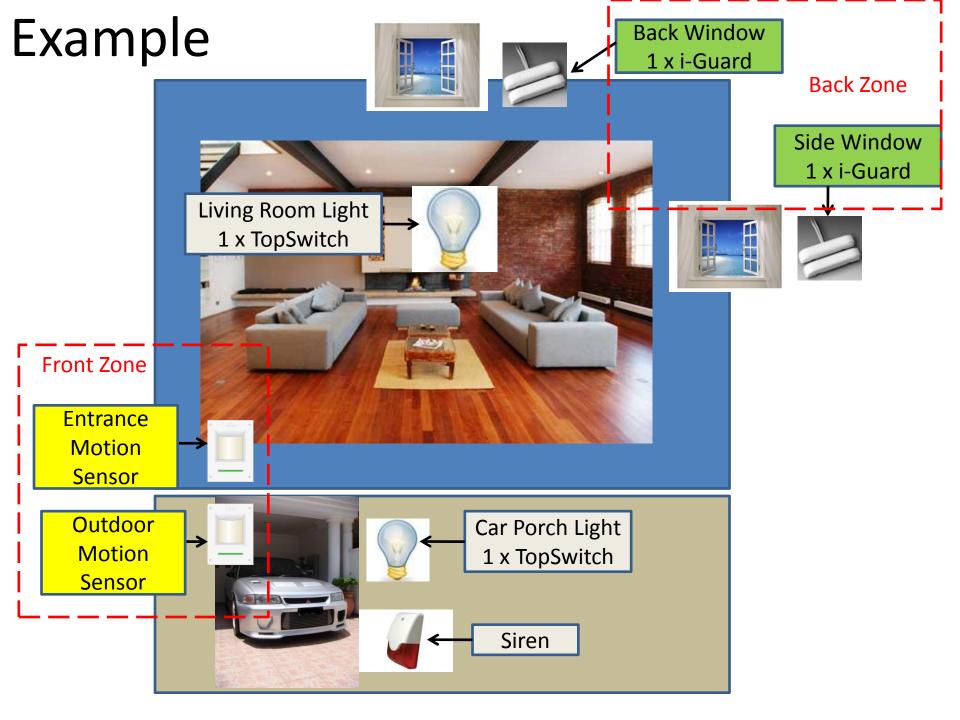

### Security System - Configuration Flow Chart

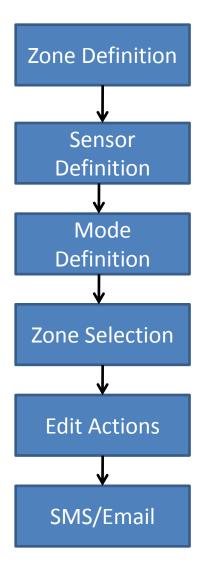

# iNet Configurator

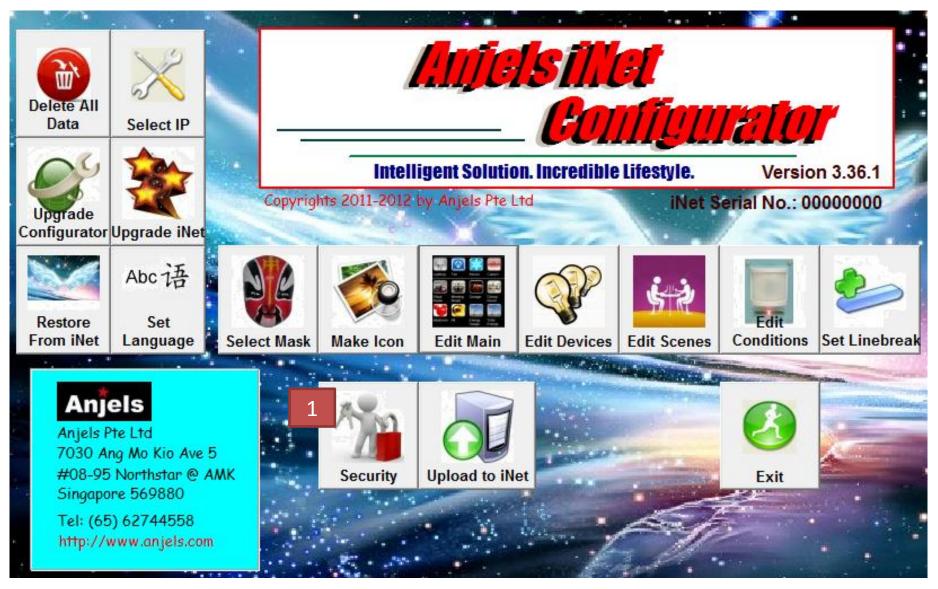

Note: [Number] above is for explanation purpose on the next pages.

NO Button Button Explanations

Security Security system configuration.

## Security



After click on "Security" button, window as above will appear.


NO	Button	Button Explanations
А	Zone Definition	Define the Zone/Delay/Any 2 settings. Based on the Example on the previous page, there are 2 zones:  1) Front Zone 2) Back Zone
В	Sensor Definition	Group the sensors to the corresponding zone and choose the trigger method.  1) Front Zone - Outdoor M.S & Entrance M.S  2) Back Zone - Side Window & Back Window
С	Mode Definition	Add/Edit/Delete the Mode description.
D	Zone Selection	Select one or more zones to be associated with a specific Mode. Example: If all the zones are associated Away Mode, devices in those zones will be monitored when Away Mode is activated
E	Edit Actions	Add/Edit/Delete the actions to be carry out when devices associated to a specific Mode is triggered. There are WARNING action and INTRUSION action.  Warning action will be triggered when the 1 <sup>st</sup> sensor of a ANY 2 sensors setting triggered, then if the 2 <sup>nd</sup> sensor triggered within the setting time, the INTRUSION action will be triggered.
F	SMS	There are 10 slots for phone numbers for SMS to be send upon WARNING/INTRUSION detection.
G	Email	There are 10 slots for emails addresses for emails to be sent upon WARNING/INTRUSION detection.
Н	Exit	Exit to previous page.

#### Zone Definition

ecurity Zone	e Definition						
Security	Zone Definition	Delay					
Num	Description	Delay	Any 2		Delay in seconds for		
-	Front Zone	0		2	Intrusion Action to allow time		
2	Back Zone	0		0	to disarm.		
3		0		0			
4		0		0	Any 2 set to 0		
5		0		0	•		
6		0		0	Any sensor activates result in Intrusion Action.		
7		0		0	in intrusion Action.		
8		0		0			
9		0		0	A 2 (Mi		
10		0		0	Any 2 (Minutes > 0)		
11		0		0	First detection activates		
12		0		0	Warning Action. Any 2 sensors activated within		
14		0		0	specified minutes result in		
15		0		0	Intrusion Action.		
16		0		0			
17		0		0			
18		0		0			
19		0		0			
20		0		0			
21		0		0	5.0		
22		0		0 -1	Exit		


- After click on "Zone Definition" button, window as above will appear.
- Key in the zone name under **Description**.
- Delay The delay for the actions to carry out after intrusion.
- Any 2 (mins) For motion sensor pair setting. 1<sup>st</sup> sensor trigger WARNING action,
   2<sup>nd</sup> sensor trigger INTRUSION action. To eliminate false alarm.
- Based on the example:
- Zone Front Zone & Back Zone.
- Delay No delay.
- Any 2 Front zone for Outdoor M.S and Entrance M.S

#### Sensor Definition

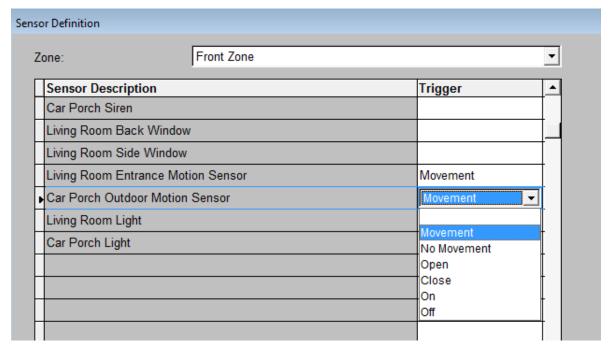

- After clicking on the "Sensor Definition" button, a display as above will appear.
- Choose a **Zone** by clicking on the drop down list.
- Then select a trigger method for each sensor. For both the Car Porch Outdoor Motion Sensor and the Living Room Entrance Motion Sensor, the trigger method selected is "Movement".
- Based on the example:
- Front Zone:
- Car Porch Outdoor Motion Sensor and Living Room Entrance Motion Sensor, both trigger method by Movement.

#### Mode Definition

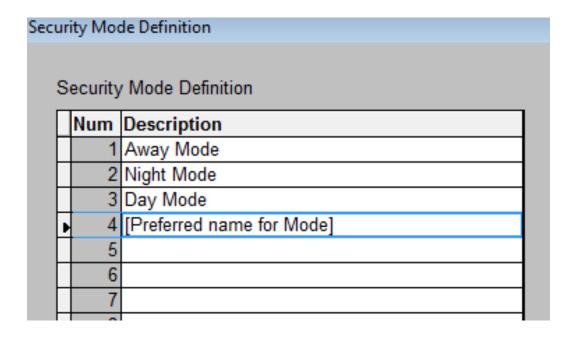


- After clicking on the 'Mode Definition" button, a display as above will appear.
- Then key in a descriptive name for each mode and Exit.

#### Zone Selection

Zone Selection																			
Zone	M.	1 M	2 M3	M4	M5	М6	Μ7	M8	М9	M10	M11	M12	M13	M14	M15	M16		M??	Mode Definition
Front Zone	V													П				M1	Away Mode
▶ Back Zone	V				П	П		П	Г		П	П	П	П			п	M2	Night Mode
																	п	M3	Day Mode
																	п	M4	[Preferred name for Mode]
																	П	M5	
																		M6	

- After clicking on the 'Zone Selection' button, a display as above will appear.
- Tick the zones to be associated with a corresponding mode.

## **Edit Actions**

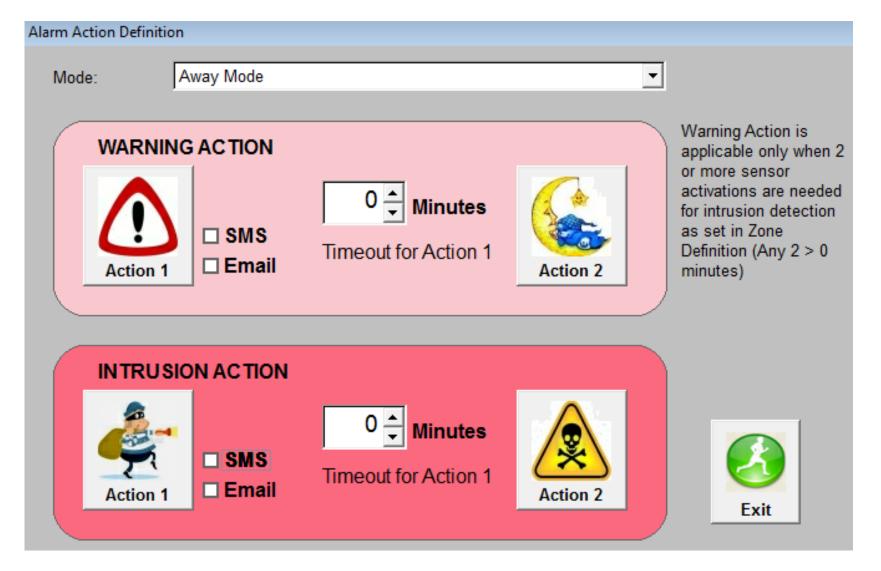

- Choose the Mode to be edit with actions by the drop down list.
- Warning Action: (Only work with Any 2 motion sensors setting)

**Action 1** - Normally to switch on a light. Action 1 is triggered when the first sensor is triggered, normally upon detection of movement. Just tick the SMS/Email if you want to be notified when warning action is activated.

**Timeout (Mins)** – Timeout for Action 1.

**Action 2** - Normally to switch off the light which are switched on earlier by Action 1. Action 2 occurs after Action 1 has timed out.


#### Intrusion Action:

**Action 1** - Normally to switch on all the lightings as well as to turn on the siren. Action 1 is triggered upon intrusion detection depending on the configuration as "Any 2" or any one sensor. Just tick the SMS/Email if you want to be notified when intrusion is activated

**Timeout (Mins)** – Timeout for Action 1.


**Action 2** - Normally to switch off the light which are switched on earlier by Action 1. Action 2 occurs after Action 1 has timed out.



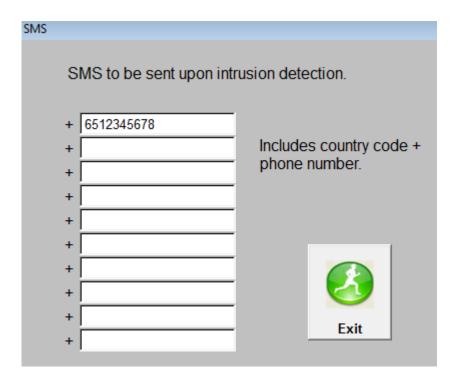

- After clicking on the "SMS" button, a display as above will appear.
- Just key in the phone numbers including the country code, for a maximum of 10 numbers.
- Example: 65 1234 5678 (65 is the country code for Singapore. Without spaces)



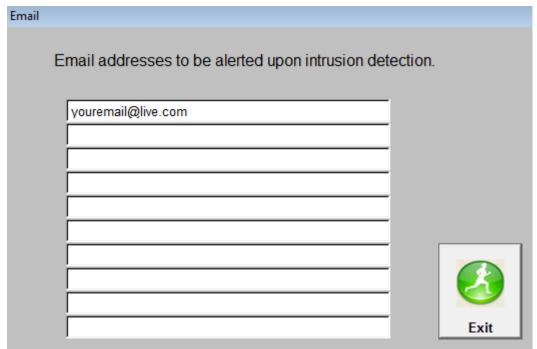

- After clicking on the "Email" button, a display as above will appear.
- Just key in a maximum of 10 email addresses.
- Example: youremail@<u>live.com</u>



Exit and back to previous page.