


SPEEDY BRACKET

CAMERA ROTATING FLASH BRACKET

Thank you for choosing the Vello Speedy Bracket.

The Speedy Bracket puts you in control of your lighting whether you're shooting horizontally or vertically, and allows you to switch between the two orientations with just a quick flip of the camera.

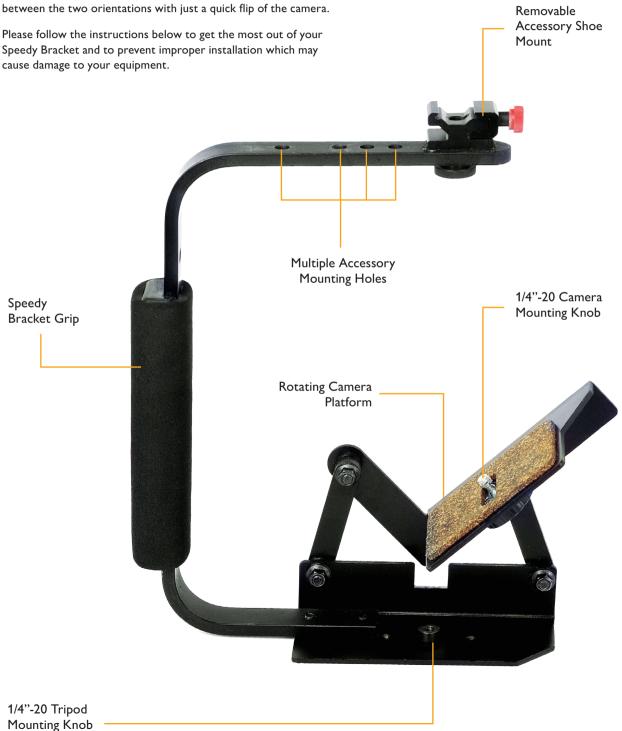

PREPARING YOUR SPEEDY BRACKET FOR MOUNTING

Before mounting your camera for the first time, you will need to attach the adhesive cork pad included.

To attach the cork pad, make sure the camera platform is fingerprint, oil and smudge-free. Peel the backing off the pad and press firmly into place, making sure the pad's slots and holes are aligned with those on the platform.

MOUNTING THE CAMERA

Place your camera on the platform and align your camera's mounting socket with the Speedy Bracket's camera mounting knob. Tighten the knob until firmly connected.

MOUNTING THE FLASH

The Speedy Bracket is equipped with an accessory-shoe mount which can be used to mount your flash unit or TTL cord. To mount your flash or TTL cord, loosen the red knob on the accessory-shoe, insert your flash or TTL cord's hot-shoe foot, and tighten the knob.


Tip: to mount the Nikon SC-28 or SC-29 off-camera shoe cords, remove the cold shoe mount from the flash arm and use the included mounting screw to mount the cord to the bracket.

ADJUSTING THE TENSION

The Speedy Bracket's rotation tension has been preset to accommodate most cameras. However, the use of heavier cameras may require additional tightening. If necessary, use a 3/8" socket wrench to adjust all four lock nuts (1-4) in successive 1/8" turns until the desired tension is achieved.

USING THE BRACKET FOR HORIZONTAL SHOOTING

Grasp the grip on the Speedy Bracket with your left hand, using your right hand to rotate the camera clockwise to the horizontal position.

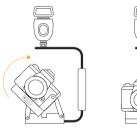

Once in place, you can use your camera's own grip to compose and shoot your photos.



USING THE BRACKET FOR VERTICAL SHOOTING

Grasp the grip on the Speedy Bracket with your left hand, using your right hand to rotate the camera counterclockwise to the vertical position.





Once in place, you can use your camera's own grip to compose and shoot your photos.

One-Year Limited Warranty

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group. @ 2014 Gradus Group LLC. All Rights Reserved.

