



SONOS

MODULE

USER

MANUAL

VERSION 1.0



TABLE OF CONTENTS

Sonos Module	2
Button Overview	2
Sonos Module Functions.....	3
Sonos Favorites	3
Adding Sonos Favorites	4
Music Library	5
Adding music songs to the queue	5
Adding albums/playlists to the queue.....	6
Radio	7
Adding radio stations via SONOS App	8
Adding radio stations via Desktop Controller.....	9
The Queue	10
Adding Music to the queue	10
Removing music from the queue	10
Clearing the queue	11
Moving songs in the queue	11
Saving the queue as a playlist	12
Grouping Zones	13
Volume control	14
Resetting the module	14



SONOS MODULE

BUTTON OVERVIEW



 
- | | | | |
|----|---|----|--|
| 1 | Mute - Mute volume on/off | 12 | Edit - Edit the queue |
| 2 | Volume - Slide left or right for volume control | 13 | Clear - Clear the queue |
| 3 | Cross fade - Cross fade track playback | 14 | Playback Slider - Slide left or right for track position |
| 4 | Skip back - Skip back a track in the playlist | 15 | Back - Go back in the menu |
| 5 | Play/Pause - Play or Pause the current track | 16 | Music - Access the Music menu |
| 6 | Skip forward - Skip forward a track in the playlist | 17 | Sonos Favorites - Browse Sonos Favorites (includes saved online music service's playlist) |
| 7 | Repeat - Repeat current track/playlist | 18 | Music Library - Access your local music library |
| 8 | Shuffle - Shuffle tracks in the playlist | 19 | Radio - Access internet Radio stations (My Stations) |
| 9 | Zone Group function - Group or un-group zones | 20 | Sonos Playlists - Access Sonos Playlists |
| 10 | Select Track - Press a track in the playlist to play | 21 | Line In - Activate Line input for selected zone |
| 11 | Save - Save the queue as a playlist | 22 | System - Reset the PUSH Sonos Module |

SONOS MODULE FUNCTIONS

SONOS FAVORITES


Press 'Sonos Favorites' in the right Music Menu column to access your favorites, including online playlists, radio stations, tracks and more. 'Sonos Favorites' can be configured via the Sonos Desktop controller or the Sonos App.

Note: See instructions on how to add to Sonos Favorites on Page 4

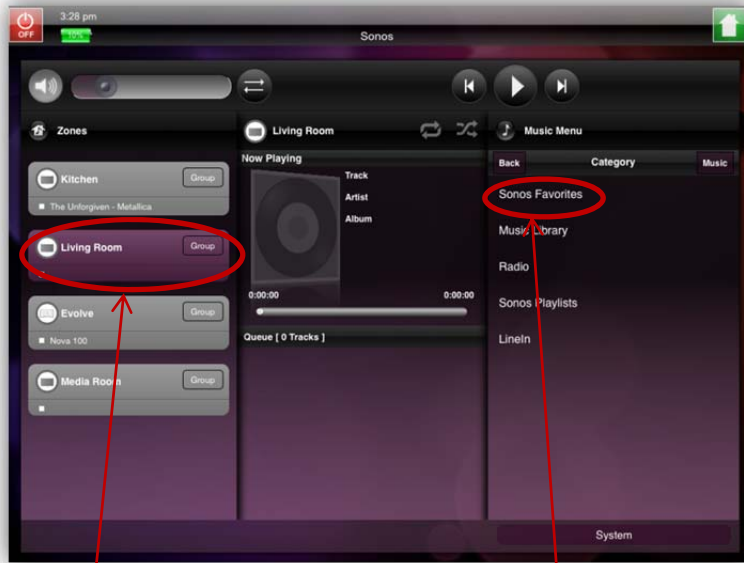


Step 1. Select desired zone

 Step 2. Select Sonos Favorites

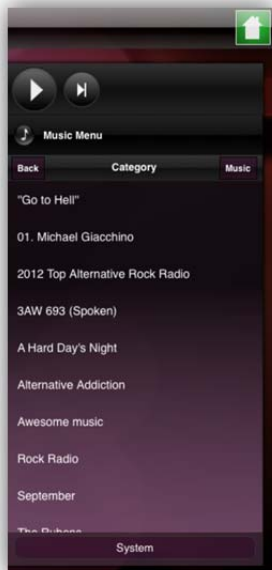

 Step 3. Select a 'Sonos Favorite'

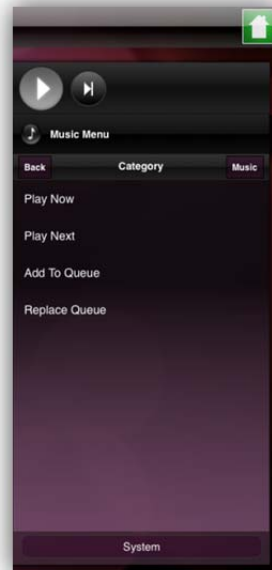

Step 4. Choose one of the options

 


ADDING SONOS FAVORITES

This section provides instructions on how to configure Sonos Favorites for the PUSH Sonos module.

SONOS APP:

Step 1. Press playlist/track/radio station for 3 seconds

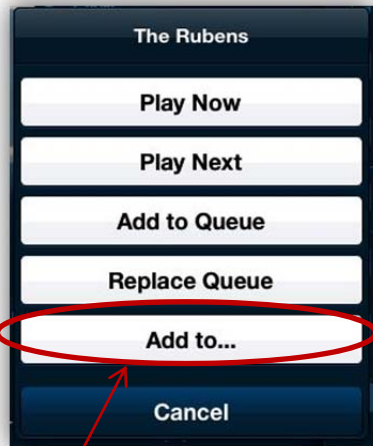

Step 2. Select 'Add to...'



 
Step 3. Select 'Add to Sonos Favorites'

DESKTOP CONTROLLER:

Step 1. Select a playlist/track/radio station

Step 2. Right click for options

Step 3. Select 'Add to Sonos Favorites'

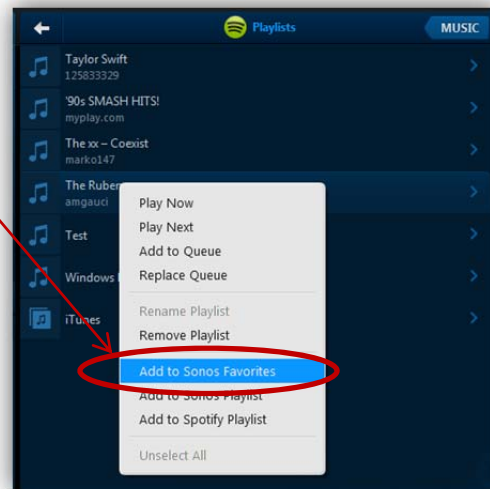




MUSIC LIBRARY

Press 'Music Library' to access your locally stored music library.


Note: The music library must be setup via the Sonos Desktop Controller or Sonos App.

 Browse music via:

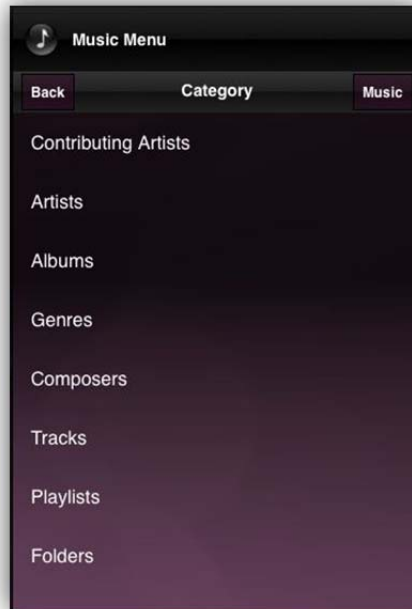

ADDING MUSIC SONGS TO THE QUEUE

 Once the desired music has been found it can be added to the queue by following steps:

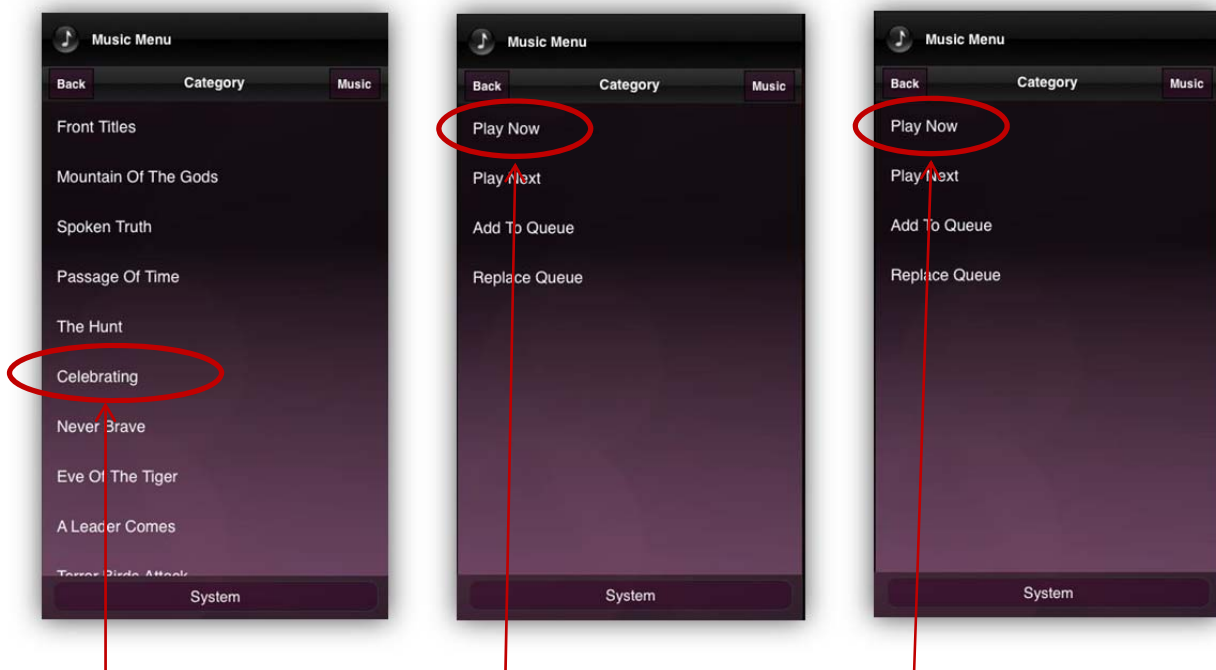


Step 1. Press the song you want to play

Step 2. Select a playback option

Step 3. The song will appear in the queue in a few moments

ADDING ALBUMS/PLAYLISTS TO THE QUEUE

 Play or add an entire album or playlist to the queue by press and holding on the album. See below for instructions:

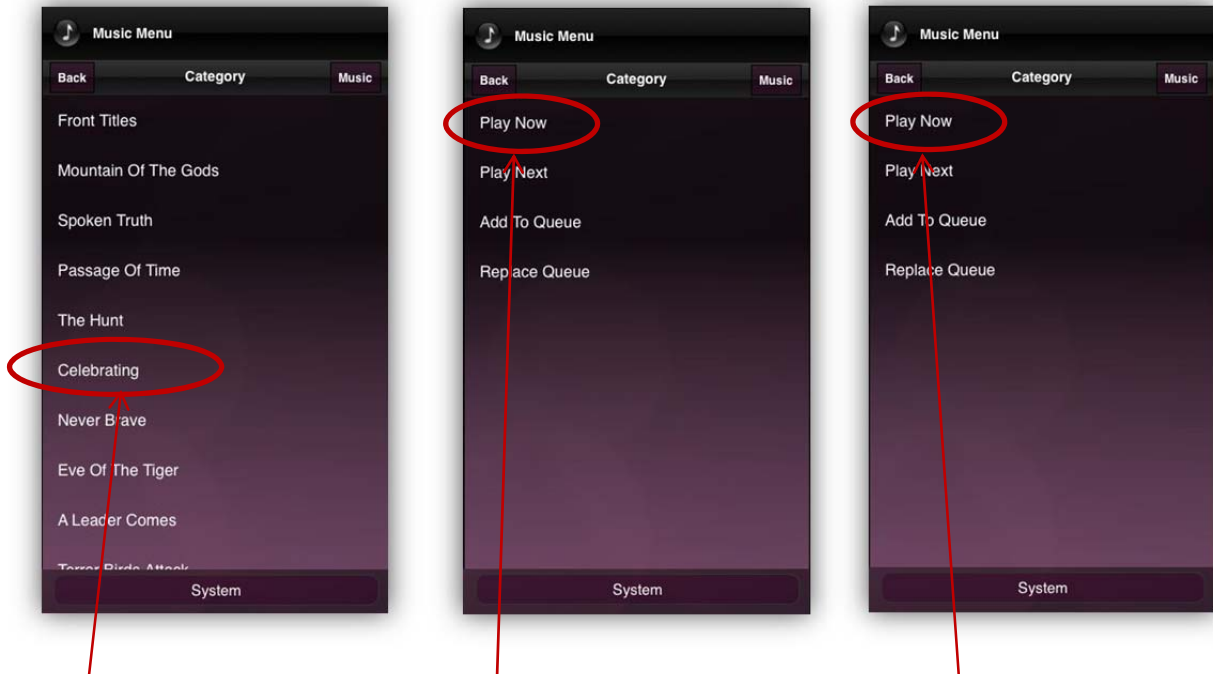

Step 1. Press and hold (for 3 seconds) on the album or playlist you wish to add to the queue

Step 2. Select a playback option

 
Step 3. The album or playlist will appear in the queue within a few moments



RADIO


Press 'Radio' in the Music Menu to access radio stations that are saved in Sonos under 'My Radio Stations'.

Note: Radio Stations must be added via the Sonos Desktop Controller or Sonos App to become available in the PUSH Sonos Module. See instructions on page 6 and 7

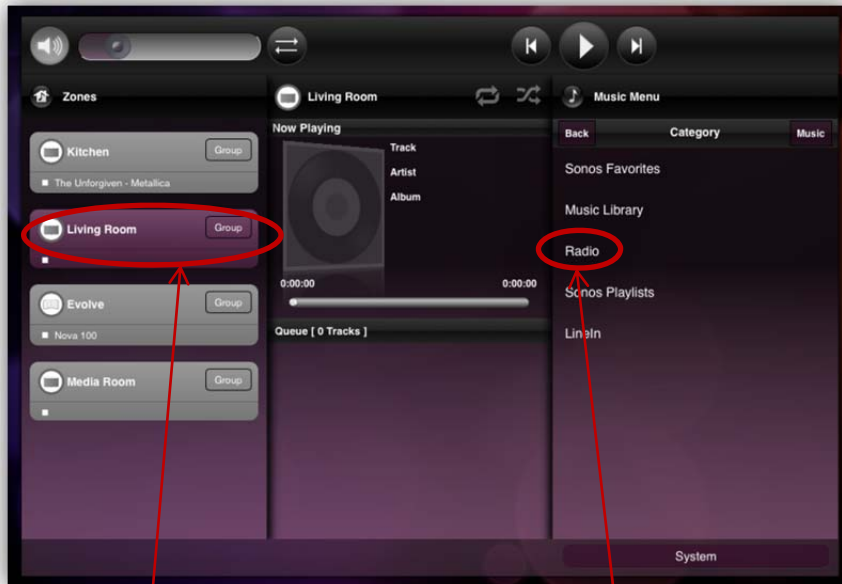

Step 1. Select desired zone

 Step 2. Select Radio

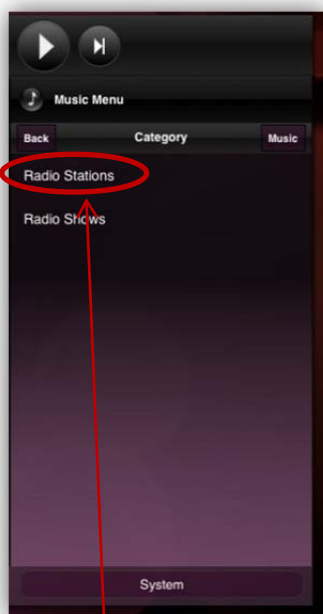

Step 3. Select 'Radio Stations'



 
Step 4. Select desired Radio Station. A quick press will start playing the Radio Station. A long press will bring up more options

Note: Follow the same instructions for Radio Shows




ADDING RADIO STATIONS VIA SONOS APP


This section explains how to create 'My Radio Stations' in the Sonos App.

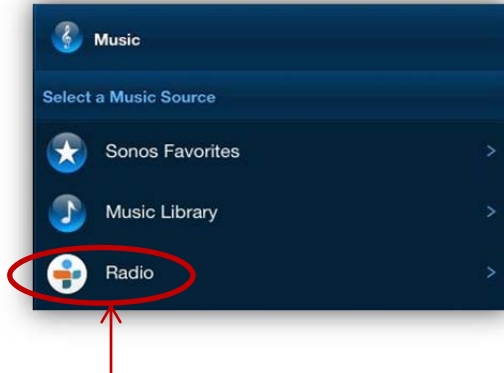

 Step 1. Press Radio

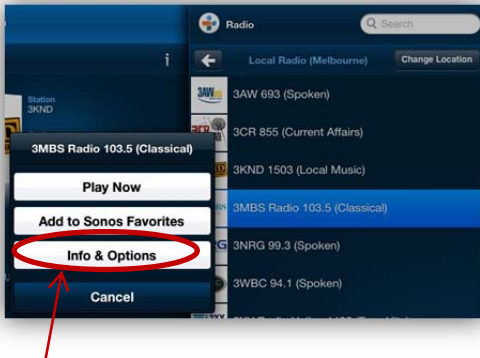

 Step 2. Press and hold on your chosen radio station, select 'Info & Options'

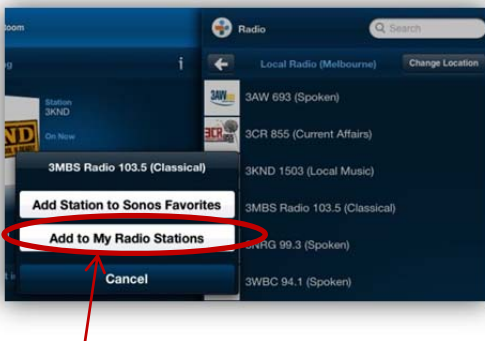


Step 3. Press 'Add to My Radio Stations'

Do this for all the radio stations you wish to have access to in the PUSH Sonos Module.


Once these 3 steps have been completed, the selected radio stations will be available in the PUSH Sonos module.

ADDING RADIO STATIONS VIA DESKTOP CONTROLLER

 
This section outlines how to create 'My Radio Stations' in the Sonos Desktop Controller.

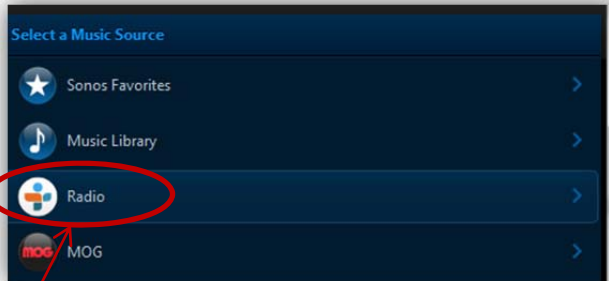

 Step1. In the Sonos Desktop Controller, select the Radio input in the music menu found within the right panel of the Sonos interface

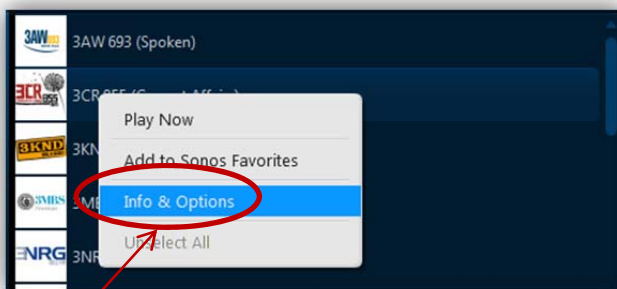

 Step2. Right click on the radio station you wish to add and select 'Info & Options'

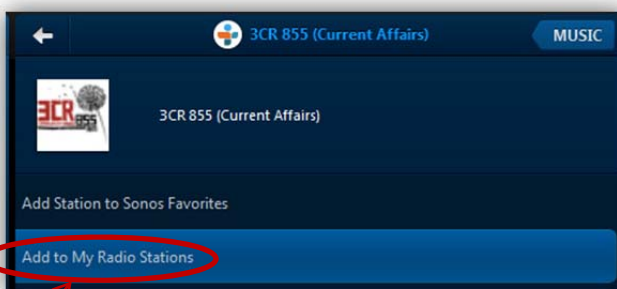

Step3. Select 'Add to My Radio Stations'

Do this for all the radio stations you wish to have access to in the PUSH Sonos Module.

Once these 3 steps have been completed, the selected radio stations will be available in the PUSH Sonos module.

 
THE QUEUE

The queue refers to the list of music that is currently being played. Music can be added the queue, removed, moved up or down in the queue and the queue can be saved. See instructions below.


ADDING MUSIC TO THE QUEUE

Note: refer to page 5 for instructions on how to add music, albums and playlists to the queue

REMOVING MUSIC FROM THE QUEUE

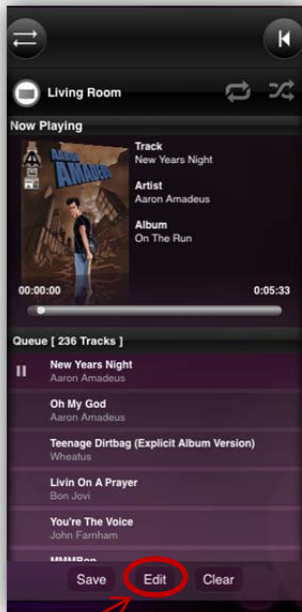

 Step 1. Press 'Edit'

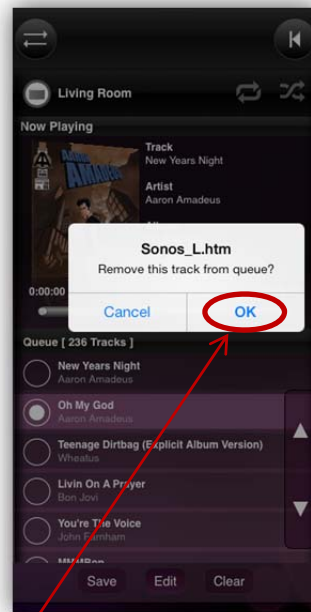


Step 2. Press and hold on the song you wish to remove from the queue. A menu will appear, press 'OK' to remove or 'Cancel' to go back

CLEARING THE QUEUE

The entire queue can be removed by following the instructions below.



 Step 1. Press the 'Clear' button

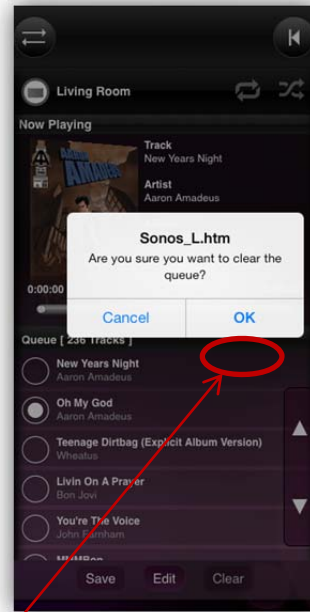


Step 2. A menu will appear, select 'OK' to clear the queue, or 'Cancel' to go back

MOVING SONGS IN THE QUEUE


Adjust your queue's song order by following the instructions below.



 Step 1. Press the 'Edit' button

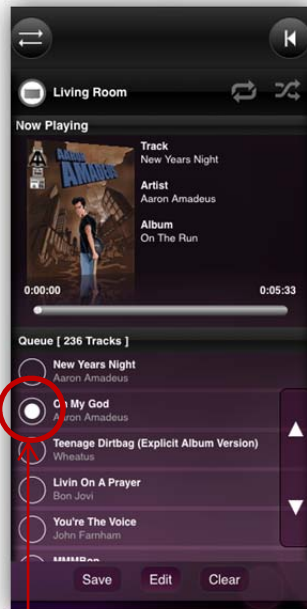

 Step 2. Select a song you wish to move. The selected song will be highlighted by with a solid circle

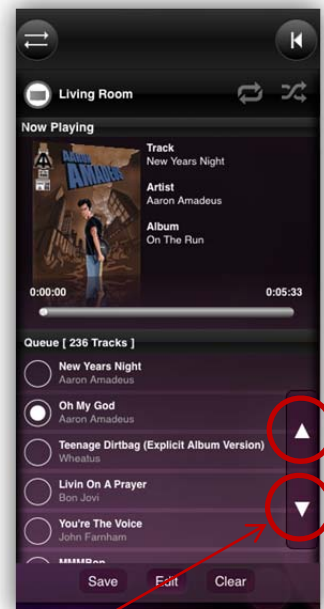


Step 3. Use the arrows to move the song up or down in the queue. Press Edit to go back

SAVING THE QUEUE AS A PLAYLIST

The queue can be saved as a playlist by following the instructions below.



 Step 1. Press the 'Save' button

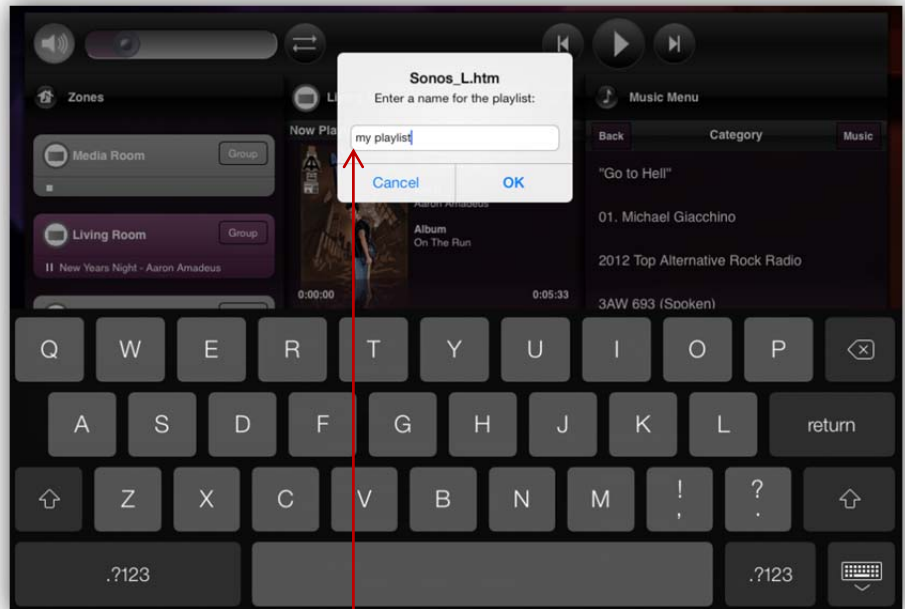


Step 2. Enter a name for your playlist and press 'OK' to save, or 'Cancel' to go back

GROUPING ZONES

Zones can be grouped for simultaneous playback in multiple areas.



 
Step 1. Select a zone you want to group

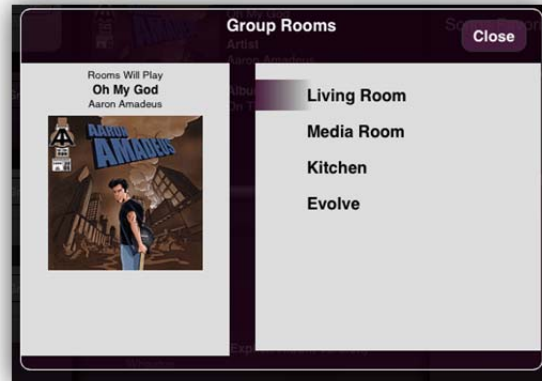

Step 2. The Grouping menu will appear listing the available zones for grouping and what song will be played



 Step 3. Select the zone you want to group, and then press 'Close'.

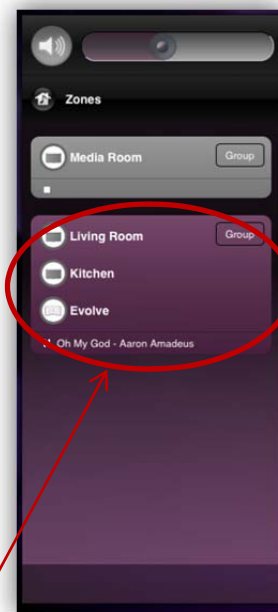

Step 4. Grouping the zones can take several moments, once complete the select zones will appear as one

Note: Un-group zones by following the same steps and unselect all zones

 
VOLUME CONTROL

The volume slider in the top left of the interface will set the volume from 0-100% when moved from left to right.

When control the volume for a set of grouped zones, a volume pop-up will appear for independent volume control. Using the top volume slider will act as a master control, moving all zones to the set level.




Normal Volume: slide from left or right to set the desired volume level

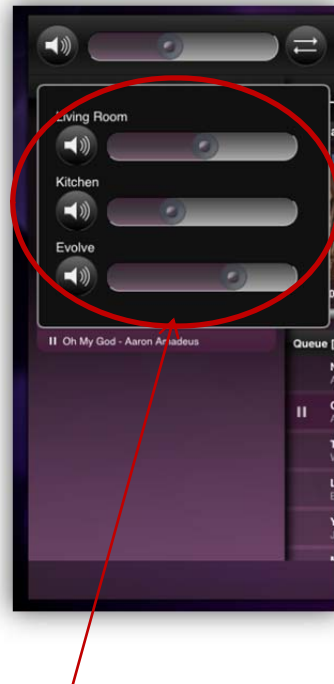


Grouped Volume: Slide independent zone volume or use the master volume to control all areas

RESETTING THE MODULE

 Should you need to reset the module, simply press the 'System' button located at the bottom right of the interface, this will cause the module to rediscover all Sonos components and redraw the interface.



 Step 1: Press the 'System' button

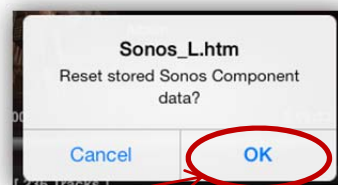

Step 2: The reset menu will appear, press 'OK' to reset the module or press 'Cancel' to go back

Note: Only press this if the interface appears non responsive, or if you are missing Sonos controllers that are connected to your network.