



UNO MEDIA SERIES

TWO LINE GUESTROOM PHONE USER MANUAL

FOR MODEL :HA9888(68)TSD-T10 (3)

Table of Contents

1. Introduction to Bittell UNO Media Guestroom Phone	2	3.6 Hold	3	3.19 Remote Time Setting	6
1.1 Classical Features	2	3.7 Mute	4	3.19.1	6
1.2 Specifications	2	3.8 Adjust Ringer Volume	4	3.19.2 Set time	6
2. Installation	2	3.9 Busy tone disconnect automatically	4	3.19.3 Set DST area	7
2.1 Install Telephone Cord	2	3.10 Using Service Buttons	4	3.19.4 Adjust Time	7
2.2. Install Power and Telephone cord	2	3.11 Store the memory number	4	4. Matters Need Attention	7
3. Operation	3	3.12 Message Waiting Light	4	5. Maintenance and Troubleshooting	7
3.1 Placing a Call	3	3.13 Play AUDIO	4	6. Approval	7
3.2 Receiving New Call	3	3.14 Play iPod/iPhone/MP3 input device	4	7. SERVICE	7
3.3 Adjusting Volume	3	3.15 Play FM radio	4	8. Attachment: UNO Media Diagram	8
3.4 Three-Way Conference	3	3.16 Set Time	5		
3.5 Redial	3	3.17 Set alarm	5		
		3.17.1 Set Alarm Time	5		
		3.17.2 Unlock the Alarm	5		
		3.18 Change clock's battery	5		

1. Introduction to the Bittel UNO Media Guestroom Phone

UNO Media 3 is new generation of hospitality phone with multimedia functionality which converges a guestroom phone, alarm clock, radio, iPhone/iPod dock and high fidelity speakers. Supporting the iPad and other leading mobile phone brands guests can transform a telephone into their own personal entertainment device.

1.1 Classical Features

- ▶ 10 speed dial memory keys
- ▶ Program memory keys with R.P master cloner and handheld cloner
- ▶ Push-draw style individuation faceplate ,easy printing the hotel logo and user guide
- ▶ Message waiting light compatible with main PBX, MWL indicator and withdraw feature
- ▶ Hearing aid compatible handset
- ▶ Busy tone disconnect automatically
- ▶ Redials the last number dialed and dialed
- ▶ Last dialed number disappearing after 5 minutes to protect the privacy for guests.
- ▶ Hold, Redia, Mute, Flash
- ▶ Speakerphone
- ▶ Alarm , Radio , audio , power charge in one device
- ▶ Power charge for portable type iPod and mobile device

1.2 Specifications

Dimensions:191*242*102(mm)

Handset cord:3.66m

Line cord:2.0m

Handset cord:3.66m

Line cord:2.0m

Weight:1700g

Color:Ivory, charcoal option

Flash time:100ms,300ms,600ms optional;
standard 600ms

MWL Voltage:Standard 90~150V DC,
Customizedvarious MWL card

PBX: AVAYA, Siemens, Philips, Alcatel, NEC,
Nortel, Mitel, Panasonic, etc.

Operating Voltage:24V~60V DC

Quality Control System ISO9001, ISO14001

Quality Approval:CCC, FCC, CE, RoHS

FCC rules:The unit complies with part 15 and
part 68 of the FCC rules and regulations

Box Dimension:460*445*275(mm)

Package (set/carton):8 Set/Carton

2. Installation


2.1 Install telephone cord

Insert the one end of the straight line cord into the jack labeled "TO TEL" (marked 14 in below figure), then insert the other end of the line cord into a telephone wall jack.

2.2. Install Power and Telephone cord

First please connect the T-Cable's power jack (Marked 1 in the below figure) with the power adaptor. Then please connect the T-Cable's RJ11 (4 pin. Marked 2 in the below figure) with the telephone line jack in the room. Finally please connect the T-Cable's RJ11 port (6 pin. Marked 3 in the below figure) to telephone set's "TO TEL" port, which is on the back of the phone.

Details see below picture

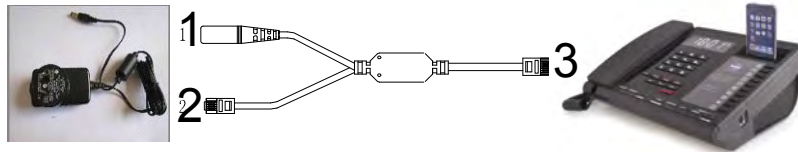

- 1** to connect the power adapter
- 2** to connect the RJ11 telephone line port
- 3** to connect the UNOMedia to Tel Port

3. Operation

3.1 Placing a Call

- 1) Lift the handset or press the SPEAKER key, then dials the desired number or certain service button.
- 2) To end the call by putting the handset back to the cradle or press SPEAKER button again.

3.2 Receiving New Call

- 1) When the phone rings, just please pick up the handset or press Speaker button
- 2) when one line has a call and another new call coming, just press the accordance line key to answer the new call and another line hang up automatically. Press the HOLD key if users like to hold the current call, then press the accordance line key to resume.

3.3 Adjusting Volume

During the call, press VOL+/- key to adjust the volume level of handset and Speaker. Handset volume resumes

to low level and speaker stored the current level after the telephone on-hook.

3.3 Handset call and Speaker Call Inter-Converting

- 1) From handset to speaker
Just press SPKR key and put the handset on the cradle
- 2) From speaker to handset --Just lift handset

3.4 Three-Way Conference

- 1) Press HOLD key to hold the current line then connect another line, after that please press CONF key enter into three-way conference mode.
- 2) In conference mode, press the accordance LINE key to relieve the conference mode and talk with one party. Or press HOLD key to hold the two lines and then press the desired line key to talk with the selected line, then press CONF key to resume the conference mode.

3.5 Redial

Lift the handset or press Speaker button, then press REDIAL key to dial the last number dialed but after five minutes the number will disappear automatically, which is in order well keep the guest's privacy.

3.6 Hold

Off-hook mode, press HOLD key (the accordance LED indicator light) and put the handset back, the current line in hold mode, off-hook again can relieve the hold mode. If paralleled telephone answer the call, the original phone will detect the current status and relieve the hold mode and realize on-hook.

3.7 Mute

During the call, press MUTE key once to stop the sending for handset and speaker, press it again to relieve the mute mode and resume the calling.

3.8 Adjust Ringer Volume

With the adjustment control which locate on the back of the telephone to adjust the ringer to Low or Hi.

3.9 Busy tone disconnect automatically

If the handset not on cradle after a phone call, this device can on-hook automatically after getting busy signal within a definite time. Then the line will connect accordingly.

3.10 Using Service Buttons

Off-hook mode, press each memory keys to dial the number directly.

3.11 Store the memory number

On-hook mode, press HOLD key+ desired number+ HOLD key+ memory key

3.12 Message Waiting Light

1) Off-hook mode, press this key can directly dial the stored number, withdraw the message and other service.

2) On-hook mode press this key can realize off-hook and dial the stored number directly, Press it again can realize on-hook mode.

3.13 Play AUDIO

Press AUDIO ON/OFF key to enter or exist audio play mode, then press RADIO/LINE IN key to realized cyclical selection of LINE IN and FM-RADIO mode.

3.14 Play iPod/iPhone/MP3 input device

- 1) Connect the iPod/iPhone/MP3 to LINE IN port through the audio line, or
 - 2) Connect the iPod/iPhone/MP3 with the fixed Audio Cable, or
 - 3) Connect the iPod/iPhone/MP3 with the fixed iPod cable;
 - 4) Connect the iPod/iPhone with the iPod dock.
- Then press the LINE IN key to select the LINE IN mode to realize the audio playing.

3.15 Play FM radio

Press RADIO/LINE IN key to select the FM-RADIO mode, then press TUNING+/-select the needed frequency. With each press the frequency changed 0.1MHz, press TUNING+/-for while to enter into searching frequency forward or backward, it will stop automatically after searching FM signal.

- 1) Press AUDIO ON/OFF to Pause or Play. Press VOUME+/- to adjust the volume, total level 0-30, factory default is 15.
- 2) AUDIO OFF mode, press TUNING+ for a while, LCD display ON or OFF (ON or OFF the hotel mode) ON: volume 0—20, OFF: volume 0-30.
- 3) AUDIO OFF mode, press RADIO/LINE IN not release, LCD display Time, Month, Day , Year , DST Zone and easy to view the setting parameters.
- 4) Detect the device mode intelligently
If telephone ringing or off-hook under FM-RADIO or LINE IN mode, the telephone can PAUSE audio playing , after the phone call finished or ringing stopped it can resume to playing mode again.

3.16 Set Time

Under AUDIO OFF mode (not LINE IN or FM-RADIO working mode) to set the time

- 1) Press VOLUME- key 1S, hour digit flashing on the LCD, press TUNING+/- to adjust hour.
- 2) Press VOLUME- key, minute digit flashing, press TUNING+/- to adjust minute.
- 3) Press VOLUME- key or no operation to finish the setting.
- 4) Press VOLUME+ key to adjust 12 hour format and 24 hour format.

3.17 Set alarm

3.17.1 Set Alarm Time

- 1) Press ALARM SET key, the hour digit display on the LCD, press the VOLUME+/- to adjust the hour.
- 2) Then press the ALARM SET key, the minute display on the LCD, press VOLUME+/- to adjust the minute.
- 3) Then press the ALARM SET key or no operation to finish the setting.

3.17.2 Unlock the Alarm

Press ALARM key to start and close alarm. In start mode the alarm and its mark on the top right corner, when in close mode, the alarm and its mark disappear.

3.17.3 Alarm snooze feature

When alarm ringing, press any key and the alarm stop ringing for 10 minutes. After 10 minutes it will ring again. Pressing any other key except for ALARM key or telephone off-hook can stop ringing. Alarm ringing during playing mode, it exist playing mode automatically. In AUDIO OFF mode, press ALARM VOLUME key to adjust the alarm indicator volume, each press increase 5, the top level is 20. The default is 10.

3.18 Change clock's battery


Take off the battery from the battery cabinet on the back of the phone. Then install new battery. The specification of the battery is 3V, 50Mah.

Note: The anode of the battery should be toward outside. The battery should be changed every two years

3.19 Remote Time Setting

3.19.1 First install two 7# 1.5V batteries into the before using it. Pay attention to the polarity of the battery. Don't mix the old and new batteries.

Remote Time Control

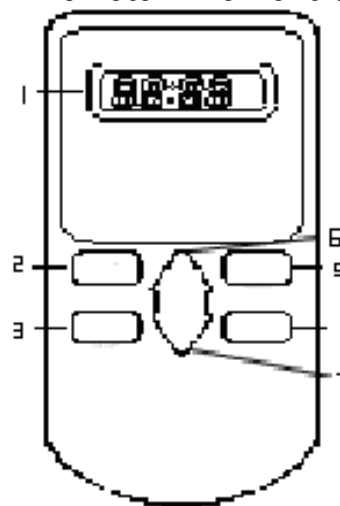

1. LCD Display
2. DST SET key—Set DST time.
3. TIME SET key—Set time and date.
4. TIME PROG key—Adjust time and date.
5. DST PROG key—Adjust DST time.
6. UP key—Upward key.
7. DOWN key—Downward key.

3.19.2 Set time with the Remote Time Control

- 1) Press TIME SET key, hour digits flashing, press UP/DOWN key to adjust,
- 2) Press TIME SET key, press UP/DOWN key to adjust minute,
- 3) Press TIME SET key, press UP/DOWN key to adjust month,

- 4) Press TIME SET key, press UP/DOWN key to adjust day,
- 5) Press TIME SET key, press UP/DOWN key to adjust year,
- 6) Press TIME SET key, LCD display the time, setting finished.

3.19.3 Set DST area code with the Remote Time Control

Press DST SET key, then press UP/DOWN key to set the area code:

00= DST OFF, 01=USA/Canada,
02=Europe/Russia/Swiss;
03= Mexico, 04=New Zealand

3.19.4 Adjust Time

- 1) After above setting, press TIME PROG or DST PROG at the right upper direction within 10cm near the base LCD to adjust the TIME or DST Time.
Conversion of 12- Hour Format and 24- Hour Format
- 2) When LCD displays time, press TIME SET over 2 seconds to realize the conversion.

Note: If the attached Remote Time Control is different than above image, please according to the attached object.

4 Matters Need Attention

- ▶ Adopt magnetic switch instead of traditional mechanical switch, please far away from magnetic field.
- ▶ Do not use it in extreme temperatures.

- ▶ Do not use aerosol polish, abrasive cleaners.
- ▶ Do not tamper with or attempt to modify the phone, it would make it unsafe to use.
- ▶ Handle with care, avoiding hard knocks and shocks.
- ▶ If there is any fault please contact your distributor for repair and other service.

5 . Maintenance and Troubleshooting

5.1. No dialing tone of handset

Check the telephone network,
Check the connection of handset cord and straight line cord

5.2. No ringing or no continually ring

Check the telephone line
Check the quantity of parallel phone set

5.3. Noise during talk

Check the telephone line
Check the handset cord

5.4. Acoustics no sound

Check the device connect to power or not
Check the 10pins ribbon cable and Audio Connection

5.5 No signal or with sizzled noise after radio selected the channel

Adjust the direction of the radio antenna
No the selected channel in local

6. Approval

6.1 CE APPROVAL

Complies with CE approval.

6.2 JACKS

Use RJ11C USOC standard modular jacks.

6.3 FCC APPROVAL

Complies with Part 68 of the FCC rules. On the bottom of this telephone is a label that contains, among other information, the FCC registration number and the ringer equivalence number (REN) for this telephone. If requested, you must provide this information to the Telephone Company.

7. SERVICE

7.1 WARRANTY

This product is warranted for a period of 12 months from the date of purchase against faulty materials or workmanship. If during this period a defect arises, we may repair or replace the product, at Bittel's discretion, provided that:

- 1) The product has not been used for any purpose other than normal use,
- 2) Unauthorized product repair or modifications have not been attempted.
- 3) The product has never been used in a harsh or corrosive environment.
- 4) No damage in transit

THIS LIMITED WARRANTY GIVES THE BUYER SPECIFIC LEGAL RIGHTS. THE BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

This warranty is only valid for merchandise purchased directly from Bittel or dealers or distributors Bittel Co. authorized.

7.2 FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7.3 CUSTOMER SERVICE CENTER

Telephone:

(86) 633-2212119/2212113/2212103/2212125

Internet: www.bittelcom.com

Email: sales@bittelcom.com

Address: No. 1 Rizhao North Road, Rizhao, Shandong, 276800, China

Copyright © 2012 Bittel Inc. All rights reserved.

ATTACHMENT:

BITTEL UNO MEDIA DIAGRAM

