

Mini Interview Recorder User Manual

Introduction

Thank you for purchasing our mini interview recorder. Ideal for both spy camera & hidden camera, small enough to conceal almost anywhere! Wherever you place your mini camera, you'll know for sure that you won't miss anything.



What your mini interview recorder includes:

- Mini Interview Recorder
- USB cable
- User manual

Features

- Dimension: 73mm*20mm*11mm
- Weight: 180g
- Tiny size makes it ideal for a variety of uses
- It's great for use as a hidden camera, spy camera etc.
- Real time recording in AVI video format.
- Color video with voice lets you clearly see who's there & hear what they say.
- Place it up high or conceal it down low. With built-in rechargeable battery so there's no long cord for you to use.
- Internal Memory for 2GB

- Playback video on the PC
- ### Camera Technical Parameter
- Video Compression: AVI video format, 352*288
 - Voice Recording: Yes
 - Internal Memory: No
 - Video File Size: >500KB per minute
 - Recording Mode: Continuous recording until memory is full or manually off
 - Adaptor Type: USB adaptor charging cable
 - Battery Type: Lithium-ion
 - Record Time: Up to 2 hours

Starting your Mini Interview Recorder

Step1:

Push the button (A/B) to A.

Step2:

Press the power button to ON. The power on indicator will light on "blue", which indicates the machine enters into the state of awaiting order.

Step3:

Press the Record/Stop button down. The yellow light will be on when the machine records video & audio. If you don't insert the T-Flash card, the green light will be on.

Step4:

Press the Record/Stop button down to stop recording when the machine is working.

Attention:

Do not press" Power on/off" button when the machine is recording, otherwise the data won't be saved.

Connect to PC with USB cable

- Connect the machine to the computer with USB cable and press the Power button to ON. The Blue lights will be shine at this time; the machine is in the state of charging while the red light is shine. Charging 3 hours is necessary.

- Function as removable disk when connect the camera to PC, playback the video files saved in memory via the computer.(Free download the STORM software from the <http://www.baofeng.com>

FAQ

- Q: Why are the video files just being recorded disappearing after turning off the camera?
- A: Please check whether stopped recording before turned off the camera, if not, the video files have not been stored in the T-Flash card.
- Q: Why is the REC/STOP button disabled?
- A: Please check whether the button (A/B) is pressed to A.
- Q: Why does the "pale yellow" led keep shining when the machine is in the state of working?