



ELECTRIC OVEN

USE AND INSTRUCTION MANUAL

MODD. KF 937 – KF 937 UD

KF 933 – KF 933 U – KF 933 AL – KF 933 AL U

KF 912 – KF 912 IX

KF 965 – KF 965 M – KF 965 AL UD – KF 966 UD

rev. 4

TECNOEKA S.r.l.

Via I. Nievo, n.12/B - 35012 Camposampiero (Padova) Italy
Tel. +39.049.9300344 – +39.049.5791479 Fax +39.049.5794387
www.tecnoeka.com E-mail: info@tecnoeka.com



*Prodotti mirati per Ristorazioni, Pasticcerie,
Panetterie e Gastronomie*

TECNOEKA Srl
Via I. Nievo, 12/B
35012 Camposampiero (PD)
Tel. +39 049 5791479 - +39 049 9300344
Fax + 39 049 5794387
www.tecnoeka.com – info@tecnoeka.com



CE DECLARATION OF CONFORMITY

Annexed document II A, of directive 2006/42/EC

Manufacturer	TECNOEKA Srl
Address	Via I. Nievo, 12/B - 35012 Camposampiero (Pd)
Type of product	Electric ovens
Models	KF 937 – KF 937 UD – KF 933 – KF 933 U – KF 933 AL – KF 933 AL U KF 912 – KF 912 IX – KF 965 – KF 965 M – KF 965 AL UD – KF 966 UD

TECNOEKA Srl declares that the above mentioned products conform to the safety regulations under:

- Low voltage directive 2006/95/EC

CEI EN 60335-1

CEI EN 60335-2-42

- Electromagnetic compatibility Directive 2004/108/EC


CEI EN 55014-1

CEI EN 61000-3-2

CEI EN 61000-3-3

- Machine Directive 2006/42/ EC;
- Directive on the general safety of products 2001/95/ EC;
- Directive on the restriction in the use of dangerous substances in electrical and electronic appliances 2002/95/ EC;
- Directive on waste from electrical and electronic appliances 2002/96/ EC.

Camposampiero, 17/02/2012.


Signature of a Representative of the Board of directors

X:\Sgq\PRODOTTI\Fam. 1 - FORNI\FORNO ELETTRICO\LEka\MANUALI D'USO - Forno Elettrico
40 60 90 - LEka\Lingua Inglese\Instruction manual KF 937-KF937UD-KF933-KF933U-
KF933AL-KF933AL_U-KF912-KF912IX-KF965-KF965M-KF965AL_UD-KF966UD - GB - rev.
4.doc

Index

1. Technical service

2. General warnings

3. Technical specifications

4. Instructions for the installer

5. Use instructions (for the user)

6. Residual risks (for the user)

7. How to use the control panel

8. Oven cooking

9. Cooking advice

10. Routine cleaning and maintenance

11. Technical assistance

12. Informations to the consumers

13. Wiring layouts

14. The Warranty

1. Technical service

A technical check-up once or twice a year helps prolong the life of the appliance and guarantees better operation.

Make sure that assistance is carried out solely and exclusively by qualified personnel.

For any spare parts orders or for any information about the appliance, always mention the serial number and model (data indicated on the "technical data" plate at the rear of the oven).

2. General warnings

Very important!: keep this instruction book together with the appliance for future consultation.

These warnings were drafted for your safety and for that of others. Please read them carefully before installing or using the appliance:

- If, on receipt of the goods, the **packaging** is damaged, write the following on the delivery note: **"I REVERSE THE RIGHT TO CONTROL THE GOODS"**, specify the damage and get the driver to sign in acceptance; send a claim in writing to the seller within 4 calendar days from the date of receipt. No claim shall be accepted after such period.
- The warehouse inside temperature must not be lower than -9°C; otherwise, the thermostat (regulation and safety thermostat) control devices of the machine will be damaged. Failure to observe this prohibition invalidates any responsibility of the manufacturer of the machine.
- The appliance is intended for professional use and must be utilised by qualified personnel trained to use it.
- Any modification which may be necessary on the electrical system to enable installation of the appliance, must be carried out solely by competent personnel.
- It is dangerous to modify or attempt to modify the characteristics of this appliance.
- Never clean the appliance with direct water jets, because, if any water enters, it could limit the machine's safety .
- Before doing any maintenance or cleaning jobs, disconnect the appliance from the electrical mains and allow it to cool.
- When the tilting door is wide open, do not put anything on the surface, because the door hinges could be irreparably damaged.
- Do not attempt to carry out the periodic controls or any repairs by yourself. Contact the nearest Service Centre and use only original spare parts.

N.B.: Improper or incorrect use and failure to observe the installation instructions shall release the manufacture from all responsibility. In this connection, the directives in the "POSITIONING" paragraph must be strictly observed.

3. Technical specifications

Appliance model	Cooking chamber Vol. (dm ³ =lt)	Convection heating element (kW)	Grill heating element (kW)	Top and bottom heatel (kW)	Motorised convection ventilator (W)
KF 937 KF 937 UD	60	3,5	/	/	120
KF 933 KF 933 U KF 933 AL KF 933 AL U	87	3,0	/	/	120
KF 912 KF 912 IX	93	1,6	/	/	50
KF 965 KF 965 AL UD KF 966 UD	91	3,0	/	/	120
KF 965 M	78	3,0	2,5	3,2	120

Appliance model	KF 937 KF 937 UD	KF 933 KF 933 U – KF 933 AL KF 933 AL U	KF 912 KF 912 IX	KF 965 KF 965 AL UD KF 965 M – KF 966 UD
Max. absorbed power (kW)	3,7	6,4	3,4	6,4
Power supply voltage (V~)	220/230 (50 Hz)	380/400 2N (50Hz)	220/230 (50 Hz)	380/400 2N (50Hz)
Class	I (contro la scossa elettrica)			
Power cable diameter	3 x 1,5 mm ²	4 x 2,5 mm ²	3 x 1,5 mm ²	4 x 2,5 mm ²
Type of cable	H07RN-F			
Connecting electric cable	Type Y			
Dimensions of appliance (mm) LxDxH	790x665x505	790x665x635	900x680x570	900x680x570 (KF 965 ..) 790x665x635 (KF 966 UD)
Weight of appliance (Kg)	45	61/62/58/59	53	58/56/60/56

The noise level of the appliance in operation is below 70 dB (A).

The "technical data" plate is positioned on the rear panel of the appliance.

4. Instructions for the installer

The following instructions are aimed at the qualified installer, to ensure that he carries out the installation, adjustment and maintenance operations as correctly as possible and according to current legal regulations. Any operation must be performed with electrical power cut to the appliance.

Before using the appliance, carefully remove the special adhesive film protecting the parts in stainless steel. Do not leave any glue residues on the surfaces. If necessary, remove them at once, with an appropriate solvent.

Fitting the feet - The feet are inside the appliance and must be secured on the four threaded holes on the base. If necessary, the height of the feet can be adjusted by screwing or unscrewing.

Positioning - Position the appliance perfectly horizontally on a table or similar support (the table or support must be at least 85 cm above the floor). Position it at a distance of not less than 10 cm from the side and rear walls, to enable natural ventilating air to circulate freely around it. The appliance is ventilated through specific openings on the metal walls of the outer housing , and ensures efficiency and long-life. For this reason it is strictly forbidden to obstruct these ventilation openings, even partially or for short periods. **Failure to observe this specific prohibition releases the manufacturer of the appliance from all responsibility and immediately voids any guarantee rights for the said appliance**, because its constructive conformity has been voluntarily compromised. Furthermore, the appliance is not suitable for embedding and for grouped positioning with other identical appliances.

Electrical connection - The appliance must be connected to the electrical mains according to current legal regulations. Before making the connection, make sure of the following:


- the voltage and frequency values of the power supply system match the values on the "technical data" plate affixed on the appliance;
- the limiting valve and the system are able to support the appliance's load (see the "technical data" plate);
- **the power supply system has an adequate earth connection according to current legal regulations;**
- a omnipolar switch with minimum between-contacts aperture of the overvoltage category III (4000 V), sized to the load and conforming to current legal regulations, is fitted between the appliance and the mains in the direct connection to the mains;
- the omnipolar switch used for connection is easy to reach when the appliance is installed;
- **the yellow/green earth wire is not interrupted by the switch;**
- the power supply, when the appliance is operating, must not deviate from the rated voltage value by $\pm 10\%$;

- make sure that after inserting the power supply cord into the terminal block it does not come into contact with any of the cooking range's hot parts.
- **if the supply cable is damaged then it must be replaced by the manufacturer or by your technical support or by a qualified person to avoid any risk.**

Connection to the water mains - The appliance must be fed with softened drinking water, with hardness from 0.5°F to 5°F (it is obligatory to use a softener to reduce the formation of lime inside the cooking chamber) and pressure in the range from 150 to 250 kPa (1.5 - 2.5 bar).

Connection to the water mains should be made through the threaded 3/4" solenoid-valve on the rear (on the bottom) of the appliance, fitting in between a mechanical filter and an on/off tap (before you connect the filter, allow a certain quantity of water to flow out in order to drain any waste from the pipe).

Connecting the power cable - To access the terminal board, just remove the appliance's rear side-panel. Loosen the cable gripper and allow the cable to pass through it. Arrange the conductors so that the earth conductor is the last to detach from its terminal if the cable goes into a state of faulty traction. Connect the **phase** conductors to the terminals marked "**L1**" and "**L2**", connecting the **neutral** conductor to the terminal marked "**N**" and the **earth** conductor to the terminal marked with the symbol \equiv according to the following lay-out:

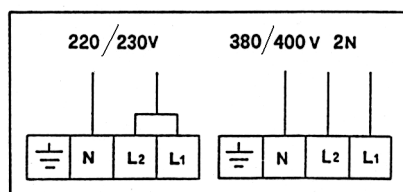

(this electrical connection lay-out is located near the power supply terminal board). Tighten the cable gripper and re-fit the rear side-panel of the appliance.

The appliance must be connected to an **equipotential system** whose efficiency must first be checked according to current legal regulations.

This connection must be made between different appliances by using the appropriate terminal marked with the symbol ∇ . The equipotential conductor must have a minimum diameter of 2,5 mm². The equipotential terminal is at the rear of the appliance.

Safety thermal breaker - The appliance has a manually reset safety thermal breaker. It protects against excessive dangerous over-temperatures which could be accidentally generated inside the appliance. This device is located on the back of the oven.

5. Use instructions (for the user)

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For first use, we advise you to let the appliance to run load-free at maximum temperature for about one hour. In this way, any unpleasant smells due to thermal insulation and residual work grease are eliminated.

This appliance must be used solely for the purpose for which it was expressly designed, i.e. cooking foods in the oven. Any other use is considered unsuitable.

The appliance can be used: for all oven cooking of deserts, pizzas, meat, fish, vegetables, as well as for gratinating, and for re-conditioning cooled and frozen foods.

When placing food in the cooking compartment, leave a space of at least 40 mm between pans in order not to over-obstruct air circulation.

Do not use pans with higher than necessary edges: edges are barriers which prevent the circulation of hot air.

Warm up the oven before every cooking operation to obtain maximum uniformity.

Do not salt foods in the cooking compartment.

6. Residual risks (for the user)

After a cooking operation, open the door cautiously, to avoid a violent outflow of heat which could cause burns.

While the oven is in operation, pay attention to the hot zones (marked on the appliance) of its external surfaces.

Place the machine on a bench or similar support, at a height of at least 85 cm from the floor.

The bench or support must be able to support the weight of the machine and house it correctly.

The appliance contains electrical parts and must never be washed with a jet of water or steam.

The appliance is electrically connected: before attempting any cleaning operation, cut power to the appliance.

To prevent incorrect connection of the appliance, the relevant electrical and water connections are marked by identification plates.

Do not use the door handle to move the appliance (the glass panel may break).

When the tilting door is wide open, do not use the internal surface to place objects to avoid damaging permanently the door hinges.


7. How to use the control panel

KF 965 M

KF 912 – KF 912 IX

KF 965

KF 965 AL UD

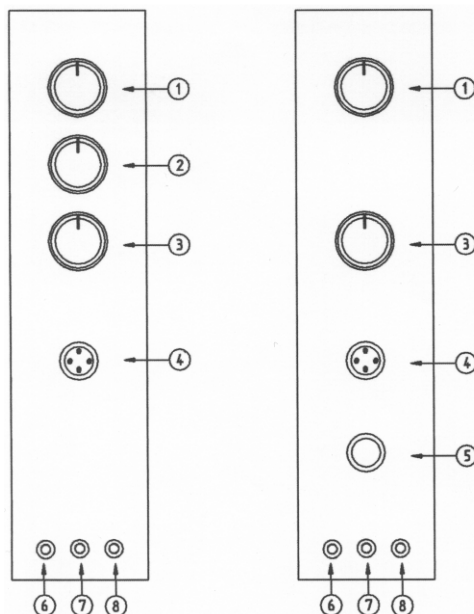

1. Control thermostat knob
2. Functions selector knob
3. "End of cooking" programming knob
4. Humidifier key
5. Line switch key (ON/OFF Key)
6. Control thermostat indicator light
7. "End of cooking" programmer indicator light
8. Power line indicator light

KF 937 - KF 937 UD - KF 933 - KF 933 U - KF 933 AL - KF 933 AL U - KF 966 UD

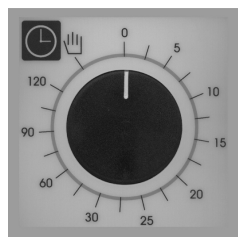
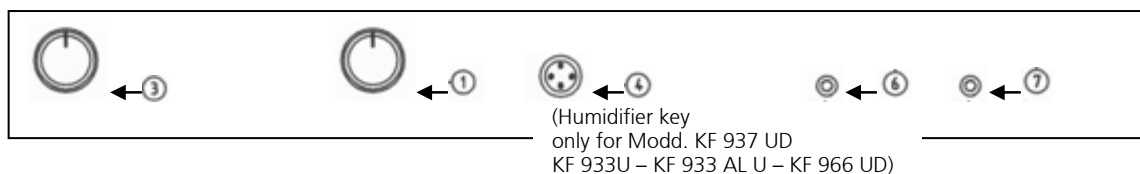


Fig. 1



Fig. 2

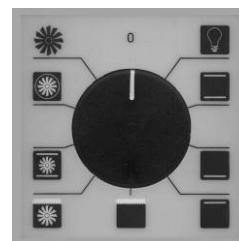


Fig. 3

Programming cooking time - To run the oven, turn the programmer knob (Fig. 1) in line with symbol (continuous operation) or in line with the selected cooking time (up to 120 minutes). In the second case, end of cooking is signalled by the oven switching OFF automatically.

Programming cooking temperature - Turn the knob of the adjustment thermostat (Fig. 2) in line with the temperature selected for cooking.

Line key (ON/OFF) - To electrically power up the appliance, press the key of the line switch to "ON". In this state, the oven is ready to operate.

Humidifier key - To produce vapour inside the oven while the oven is operating and the chamber is hot, press the key (commanding the humidifier) for a few seconds.

Control thermostat indicator light - The control thermostat orange indicator light goes OFF whenever the programmed temperature is reached inside the cooking compartment. It lights up again when the thermostat is tripped to re-establish this temperature.

"End of cooking" programmer indicator light - The programmer orange indicator light indicate that the oven is operating and that cooking time is active.

Line indicator light - The green line-indicator light indicates that the oven is electrically connected to the power supply line.

Oven internal light - The light is always on when the oven is operating.

To switch off the oven - Turn OFF the knobs of the "end of cooking" programmer and of the thermostat and press the line switch key to "OFF". When you have finished using the oven, shut off the water ON/OFF tap upstream of the appliance and cut out electric power.

8. Oven cooking

For cooking, before putting food in, warm up the oven to the required temperature. When the oven reaches the temperature, put the food in and check cooking time. Switch off the oven 5 minutes before the theoretical time in order to recover stored heat.

MODD. KF 937 – KF 933 – KF 933 AL

Convection cooking - Activate the oven and turn the thermostat knob in line with the required temperature.

Defreezing - Activate the oven and turn the thermostat knob to the OFF position.




MODD. KF 937 UD - KF 933 U - KF 933 AL U - KF 912 - KF 912 IX - KF 965 - KF 965 AL UD - KF 966 UD


Convection cooking - Activate the oven and turn the thermostat knob in line with the required temperature.


Defreezing - Activate the oven and turn the thermostat knob to the OFF position.


Humidification (no for this models. KF 937 – KF 933 – KF 933 AL) While the oven is functioning press the humidification button to generate steam in the already heated cooking chamber.


MOD. KF 965 M


Traditional cooking - Switch on the oven. Turn the knob of the functions selector (Fig. 3) to symbol  and the thermostat knob in line with the required temperature. If you want a different temperature at the top or bottom, turn the functions selector knob in line with the symbol  or .

Cooking with the grill - Switch on the oven. Turn the functions selector knob to  and the thermostat knob in line with the required temperature (***IMPORTANT: grill cooking must be done with the oven door closed***).

Cooking with the ventilated grill - Switch on the oven. Turn the functions selector knob to symbol  and the thermostat knob in line with the required temperature (***IMPORTANT: grill cooking must be done with the oven door closed***).

Ventilated traditional cooking - Switch on the oven. Turn the functions selector knob to symbol  and the thermostat knob in line with the required temperature.

Convection cooking - Switch on the oven. Turn the functions selector knob to symbol  and the thermostat knob in line with the required temperature.

Defreezing - Switch on the oven. Turn the functions selector knob to symbol  and the thermostat knob to its OFF position.

Humidification - While the oven is functioning press the humidification button to generate steam in the already heated cooking chamber.

9. Cooking advice

Traditional cooking - Heat is supplied from above and below and, therefore, it is preferable to use the central guides. If cooking requires extra heat from above and below, use the top or bottom guides.

Convection cooking - Heat is transferred to the foods by pre-heated air, forced to circulate by in the cooking chamber. The heat quickly and uniformly reaches all parts of the chamber, enabling simultaneous cooking of different types of food (providing they have the same cooking temperature), placed on the shelves without mixing tastes and smells. Convection cooking is particularly convenient for rapid defreezing, and for sterilising preserves and drying mushrooms and fruit.

Cooking with the grill - Grilling is effected by the thermal radiation of an incandescent electrical heating-element. The temperature produced by the infra-red rays is very high and one-way (downward from above), and, therefore, food surfaces are immediately browned.

Cooking with the ventilated grill - Forced circulation of air is combined with thermal radiation produced by the grill, and this allows heat to gradually penetrate the inside of the food without burning the surface.

Cooking desserts - Desserts require a very high temperature (usually from 150 to 200°C) and a pre-heated oven (about ten minutes). The oven door must not be opened until at least 3/4 of the cooking time has elapsed. Whipped dough must be difficult to detach from a spoon because excessive fluidity would prolong cooking time to no avail.

Cooking meat - Meat to be cooked should weight at least 1 Kg to prevent it drying too much. Very tender red meats to be cooked rare, which must be cooked on the outside to keep all their gravy, require short cooking time at high temperature (200-250°C). The gravy ingredients must be placed immediately in the pan only if the cooking temperature is brief, otherwise they should be added during the last half-hour. You can check the degree of cooking by squashing the meat with a spoon: if the meat does not yield, it is correctly cooked. For roast beef and fillet, which must remain pink inside, cooking time must be very brief. Meats may be placed on a plate

suitable for oven cooking or directly on the grill, under which you should place a tray to collect the gravy. When cooking has finished, we advise you to wait for 15 minutes before cutting the meat so that the gravy does not come out. Before being served, the dishes may be kept hot in the oven at minimum temperature.

Grilling - Almost all meats may be grilled, with the exception of some lean game meats and meat loaves. Apply a little oil on the meat or fish to be cooked and always place them on the grill - put the grill in the guides nearest or furthest from the grill heating element in proportion to the meat, in order to avoid burning the surface and cooking the inside insufficiently. It is useful to place a tray under the grill to collect drops of gravy and fat.

10. Routine cleaning and maintenance

(WARNING: Cut power to the appliance before every operation)

General cleaning - Clean the oven when it is cold. Wash enamelled parts with lukewarm water and soap, do not use abrasive products, steel wool, or acids, which could ruin them. To clean the steel parts, do not use products containing chlorine (sodium hypochlorite, hydrochloric acid, etc) even if diluted. Use specific off-the-shelf products or a little hot vinegar. Rinse thoroughly with water and dry with a soft cloth. Clean the glass door of the oven with hot water only, and do not use rough cloths. Do not allow foods (especially acid foods such as salt, vinegar, lemon, etc) to stagnate on the stainless steel parts, because they could deteriorate. Do not wash the appliance with direct jets of water, because if water enters, this could limit the appliance's safety. Do not use corrosive substances (e.g. hydrochloric acid) to clean the oven's support bench.

Cleaning the oven - It is good practice to clean the oven interior at the end of every day of duty. In this way it will be easier to remove cooking residues, preventing them from burning when the oven is next used. Clean it accurately with hot water and soap or with the appropriate off-the-shelf products.

Cleaning the oven door (except MODD. KF 933 AL - KF 933 AL U - KF 937 UD - KF 965 AL UD - KF 966 UD) - To clean the oven door thoroughly, proceed as follows:

- fully open the door;
- attach the rings "A" onto the hinge seats (Fig. 4);
- lift the door gently and withdraw it (Fig. 5).

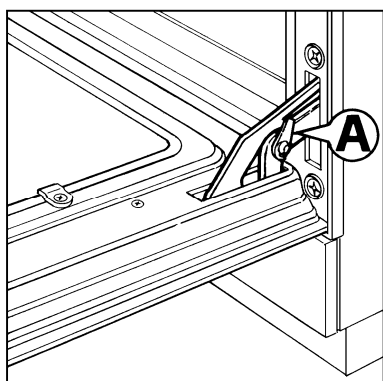


Fig. 4

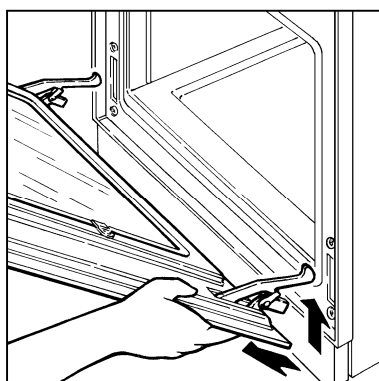


Fig. 5

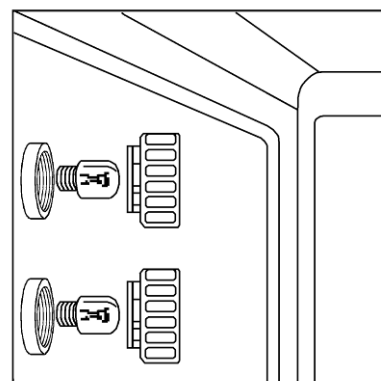


Fig. 6

(MODD. KF 937 UD – KF 966 UD)

- To clean the oven door thoroughly, proceed as follows:
 - fully open the door;
 - insert the equipped plugs in the "A" holes on the hinges (Fig. 7);
 - lift the door gently and withdraw it (Fig. 8);
 - put back the door in the initial position by operating inversely.

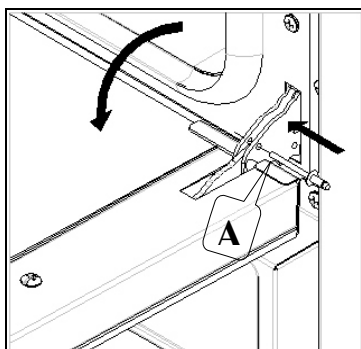


Fig. 7

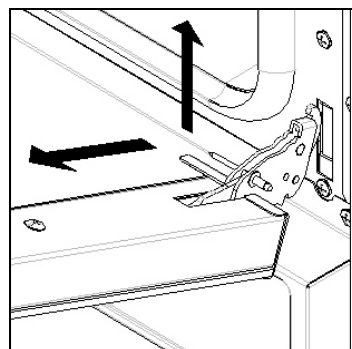


Fig. 8

Replacing oven lamp - Electrically switch off the appliance; unscrew the protective glass cap (Fig. 6);

(except MODD. KF 937 UD – KF 965 AL UD – KF 966 UD) unscrew the lamp and replace it with another lamp suitable for high temperatures (300°C), with the following characteristics:

- Voltage 230/240 V
- Power 15 W
- Fitting E 14

Refit the glass cap and power up the appliance.

(Only for the models KF 937 UD – KF 965 AL UD – KF 966 UD) remove the faulty halogen lamp and insert the new one by using paper or cloth to not touch the lamp with bare hands.

Please note that the new halogen lamp must have the same characteristics as the one removed.

Put back the lamp cover with the gaskets and turn on the electricity.

11. Technical assistance

Before leaving the factory, the appliance was completely regulated and tested by expert specialised personnel to guarantee the best operating results.

All repairs and settings must be performed with utmost care and attention, respecting national safety regulations in force. Always contact your retailer or our nearest Service Centre, giving details of the problem, the appliance model and the serial number (on the rating plate on the rear panel).


For any maintenance the user can contact Tecnoeka by calling the telephone numbers on the cover or going to www.tecnoeka.com.

12. Informations to the consumers

Further to Directive 2002/96/EC, the symbol of the crossed rubbish skip on the appliance means that at the end of its life, the product must be disposed of separately from the other rubbish. The user must hand the appliance to a specialised waste collection centre for electric and electronic equipment.


The separate collection of the rubbish and subsequent treatment, recovery and disposal help to produce other equipment using recycled materials, reducing the negative effects on the environment and public health, which would be caused by incorrect management of the rubbish.

Should the user dispose of the product abusively, administrative sanctions would be applied.

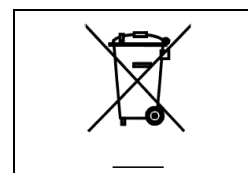

13. Wiring layouts


MOD. KF 937

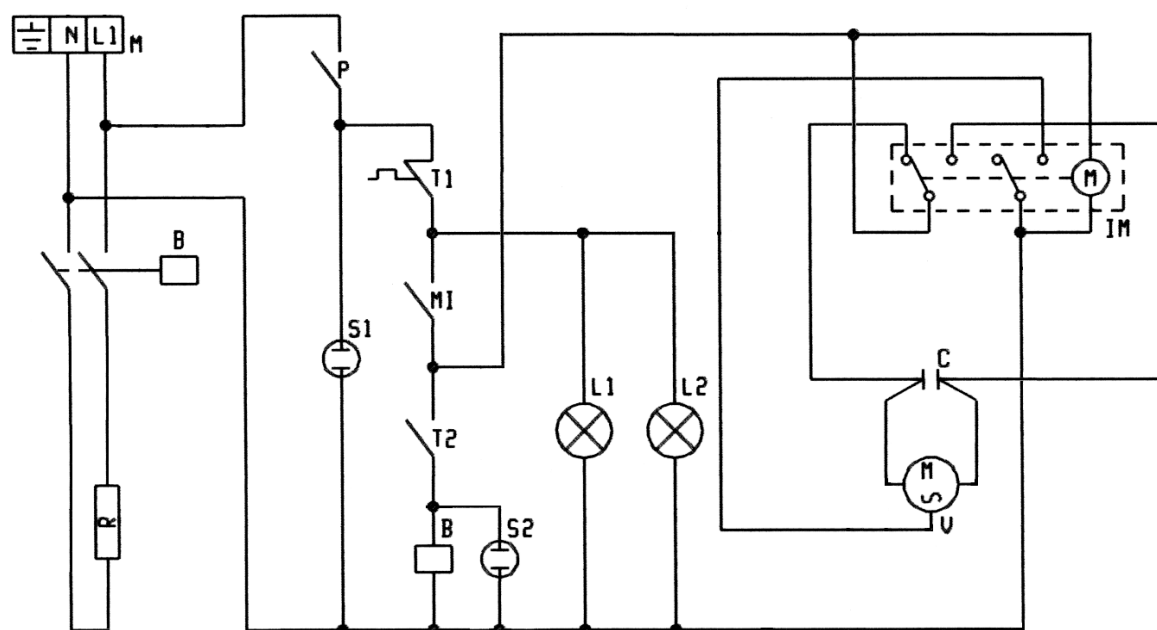

Key

M	Power terminal board	V	Radial motoventilator
P	"End of cooking" programmer	C	Capacitor
MI	Door microswitch	IM	Operating direction reversing element
T1	Safety thermostat	B	Contactator coil
T2	Control thermostat	S1	Power line indicator light
R	Circular heating-element	S2	Thermostat indicator light
L1-L2	Lighting lamps		


MOD. KF 937 UD

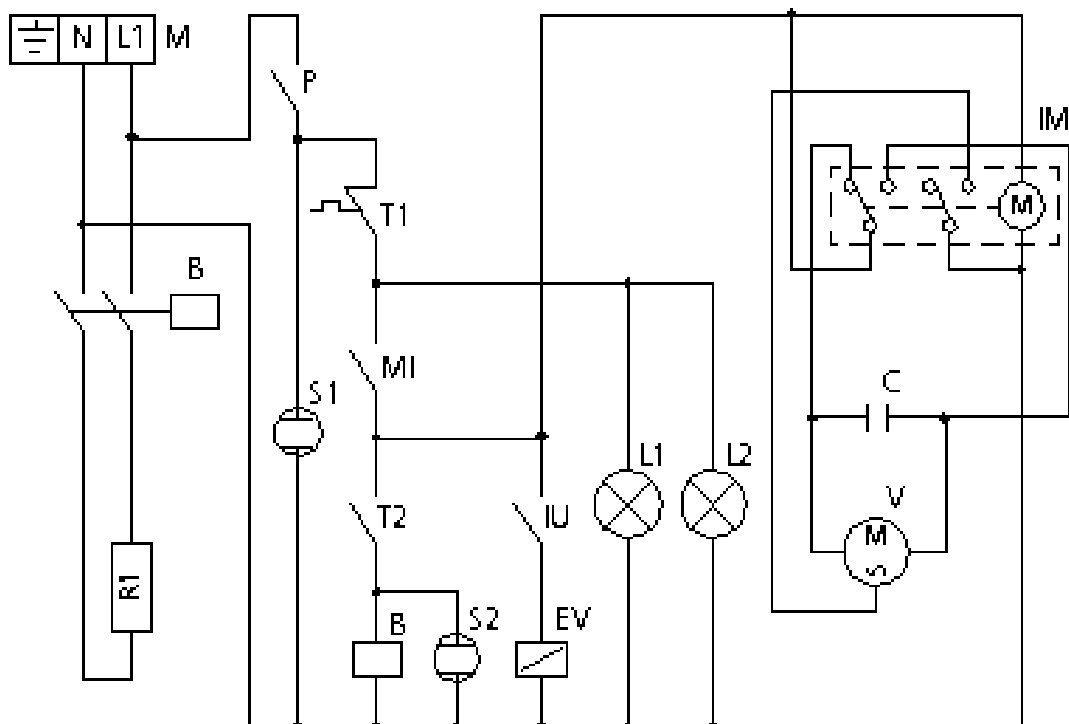

Key

M	Power terminal board	R1	Circular heating-element
P	"End of cooking" programmer	V	Radial motoventilator
MI	Door microswitch	C	Capacitor
T1	Safety thermostat	IM	Operating direction reversing element
T2	Control thermostat	B	Contactor coil
IU	Humidifier switch	S1	Power line indicator light
EV	Humidifier solenoid-valve	S2	Thermostat indicator light
L1-L2	Lighting lamps		


MODD. KF 933 – KF 933 AL

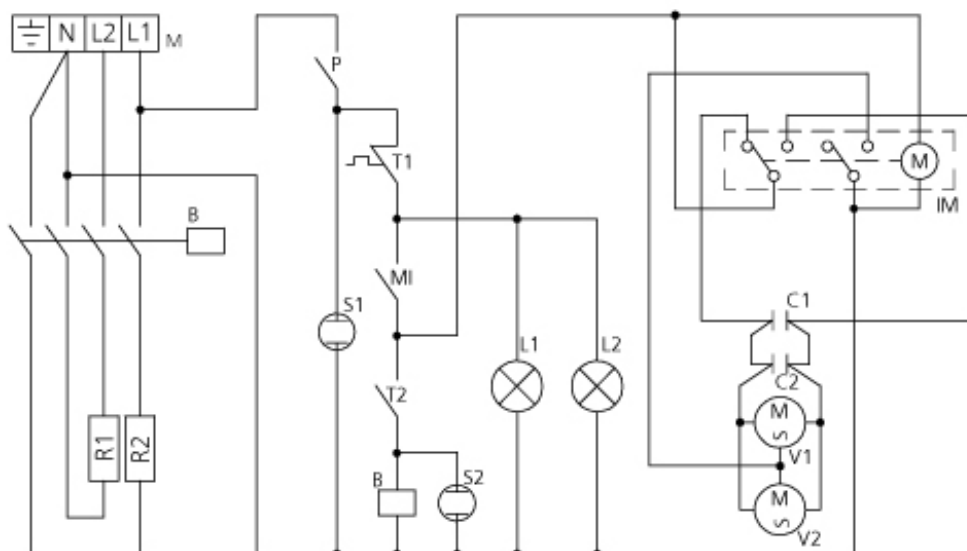

Key

M	Power terminal board	V1-V2	Radial motoventilators
P	"End of cooking" programmer	C1-C2	Capacitors
MI	Door microswitch	IM	Operating direction reversing element
T1	Safety thermostat	B	Contactor coil
T2	Control thermostat	S1	Programmer indicator light
R1-R2	Circular heating-elements	S2	Thermostat indicator light
L1-L2	Lighting lamps		


MODD. KF 933 U – KF 933 AL U

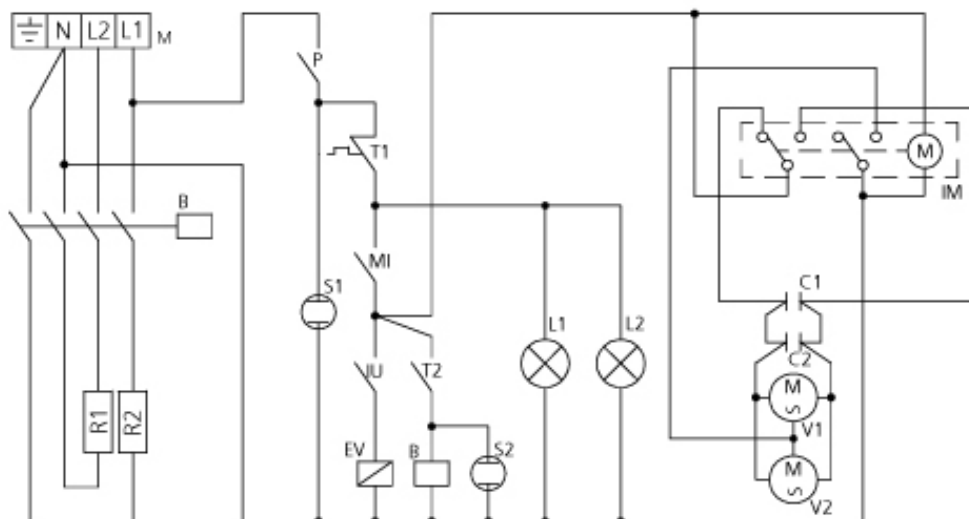

Key

M	Power terminal board	R1-R2	Circular heating-elements
P	"End of cooking" programmer	V1-V2	Radial motoventilators
MI	Door microswitch	C1-C2	Capacitors
T1	Safety thermostat	IM	Operating direction reversing element
T2	Control thermostat	B	Contactor coil
EV	Humidifier solenoid-valve	S1	Programmer indicator light
IU	Humidifier switch	S2	Thermostat indicator light
L1-L2	Lighting lamps		


MODD. KF 912 – KF 912 IX

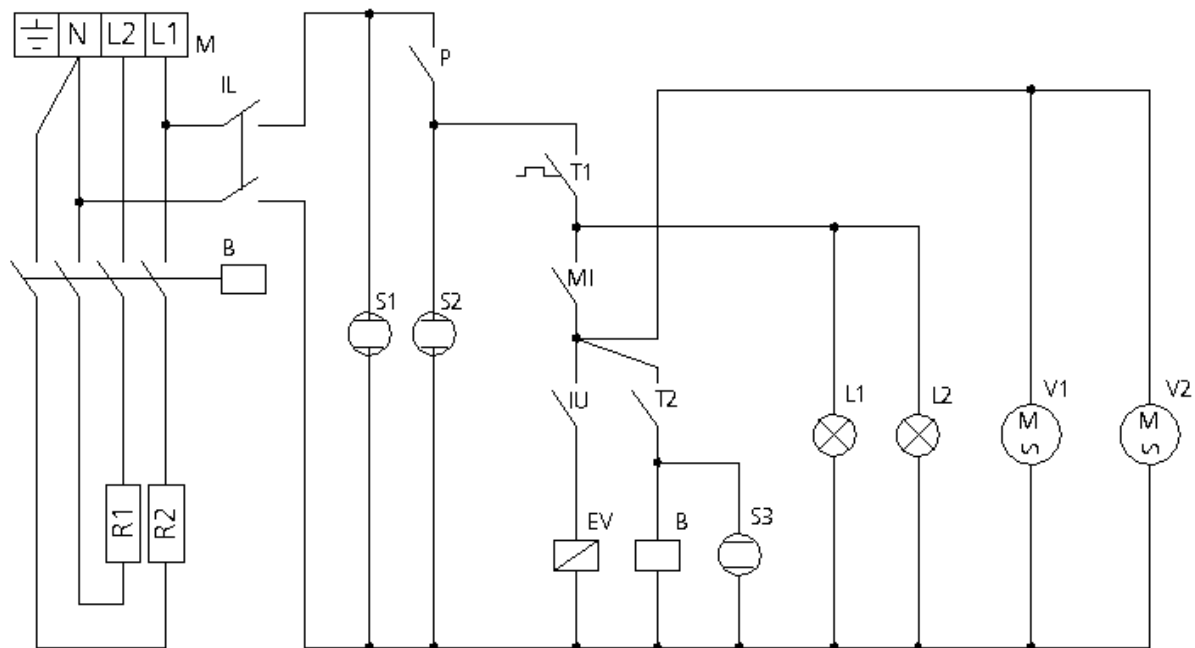

Key

M	Power terminal board	R1-R2	Circular heating elements
P	"End of cooking" programmer	V1-V2	Radial motoventilators
MI	Door microswitch	EV	Water solenoid-valve
T1	Safety thermostat	B	Contactor coil
T2	Control thermostat	S1	Power line indicator light
IU	Humidifier switch	S2	Programmer indicator light
IL	Power line switch	S3	Thermostat indicator light
L1-L2	Lighting lamps		


MOD. KF 965

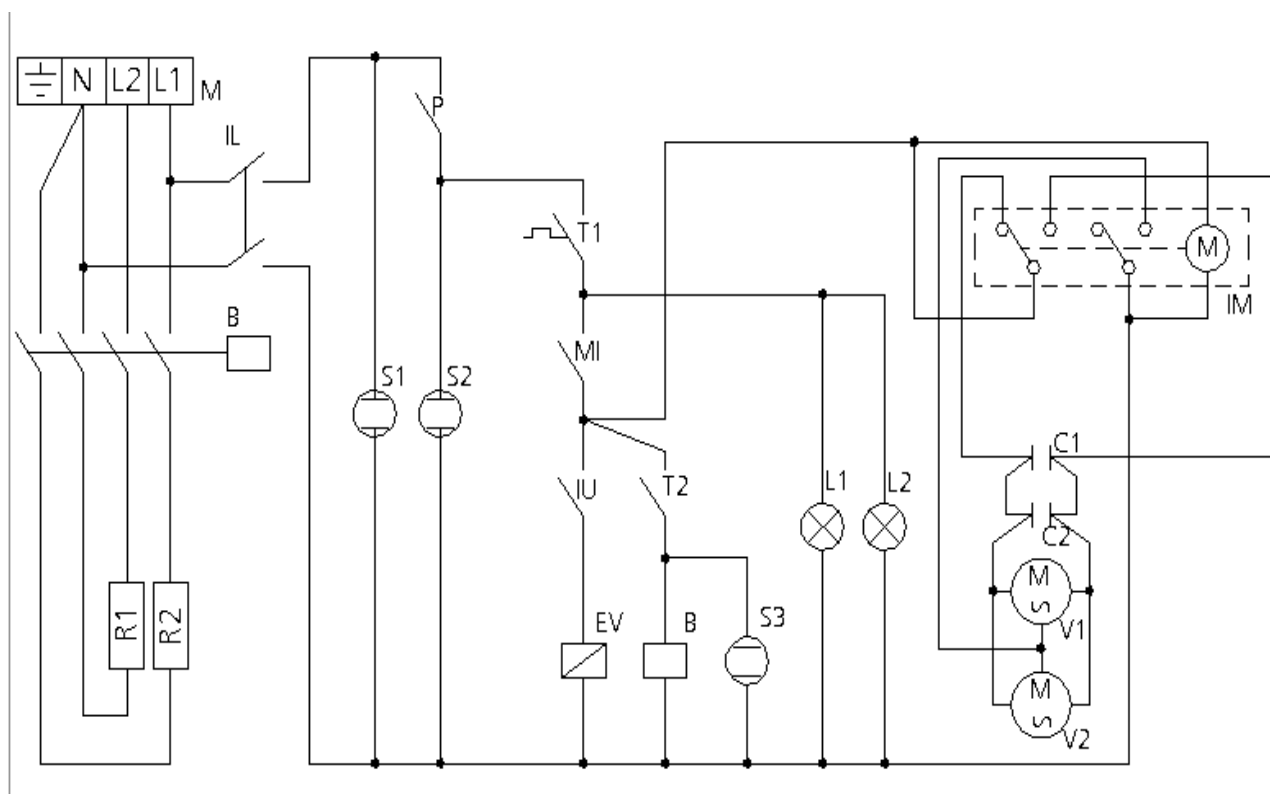

Key

M	Power terminal board	V1-V2	Radial motoventilators
P	"End of cooking" programmer	EV	Water solenoid-valve
MI	Door microswitch	B	Contactor coil
T1	Safety thermostat	S1	Power line indicator light
T2	Control thermostat	S2	Programmer indicator light
IU	Humidifier switch	S3	Thermostat indicator light
R1-R2	Circular heating elements	C1-C2	Capacitors
IL	Power line switch	IM	Operating direction reversing element
L1-L2	Lighting lamps		


MOD. KF 965 AL UD

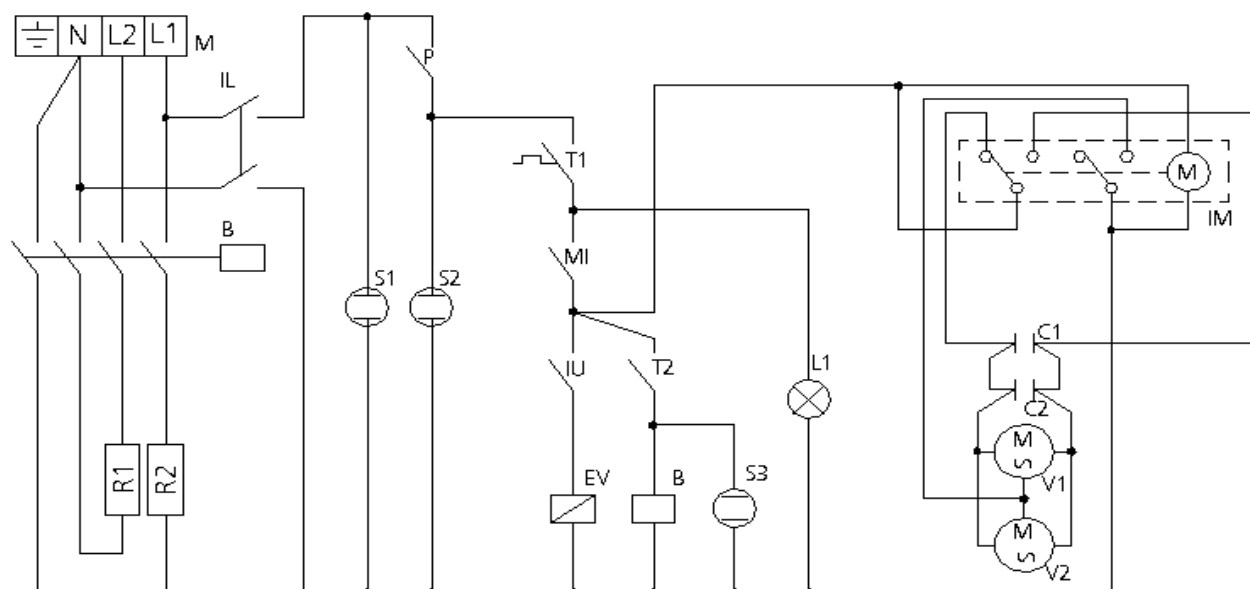

Key

M	Power terminal board	V1-V2	Radial motoventilators
P	"End of cooking" programmer	EV	Water solenoid-valve
MI	Door microswitch	B	Contactor coil
T1	Safety thermostat	S1	Power line indicator light
T2	Control thermostat	S2	Programmer indicator light
IU	Humidifier switch	S3	Thermostat indicator light
R1-R2	Circular heating elements	C1-C2	Capacitors
IL	Power line switch	IM	Operating direction reversing element
L1	Lighting lamps		


MOD. KF 965 M

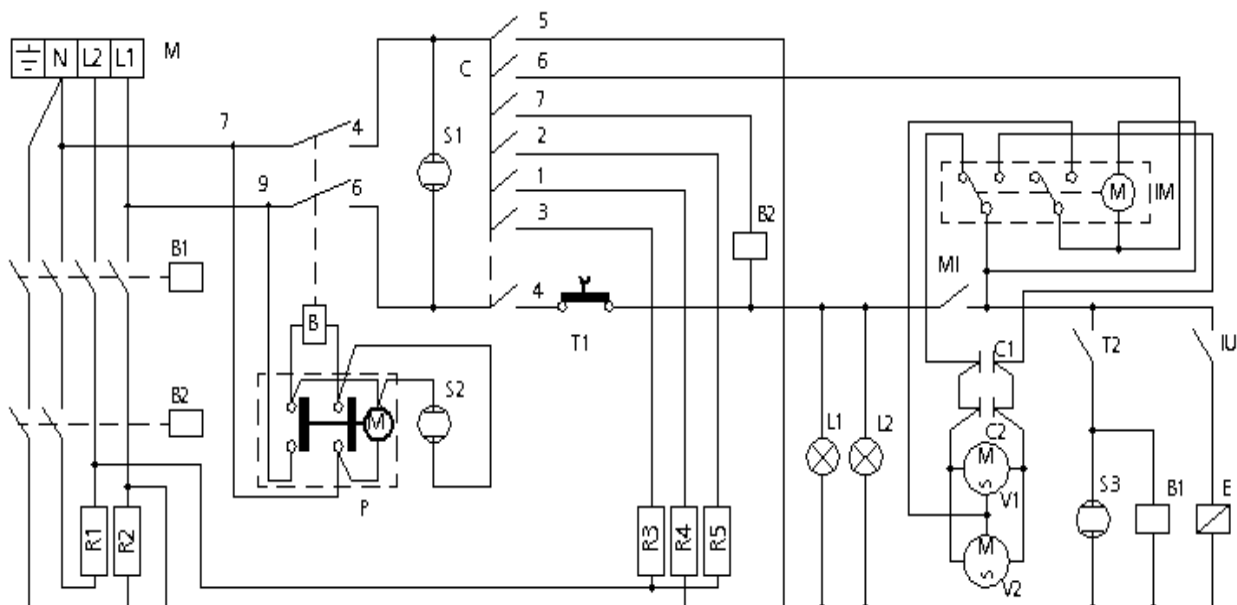

Key

M	Power terminal board	L1-L2	Lighting lamps
P	"End of cooking" programmer	V1-V2	Radial motoventilators
MI	Door microswitch	E	Humidifier solenoid-valve
T1	Safety thermostat	B1	Contacteur coil
T2	Control thermostat	B-B2	Relay coil
IU	Humidifier switch	S1	Power line indicator light
C	Switch	S2	Programmer indicator light
R1-R2	Circular heating elements	S3	Thermostat indicator light
R3	Grill heating element	C1-C2	Capacitors
R4	Lower heating element	IM	Operating direction reversing element
R5	Upper heating element		

MOD. KF 966 UD

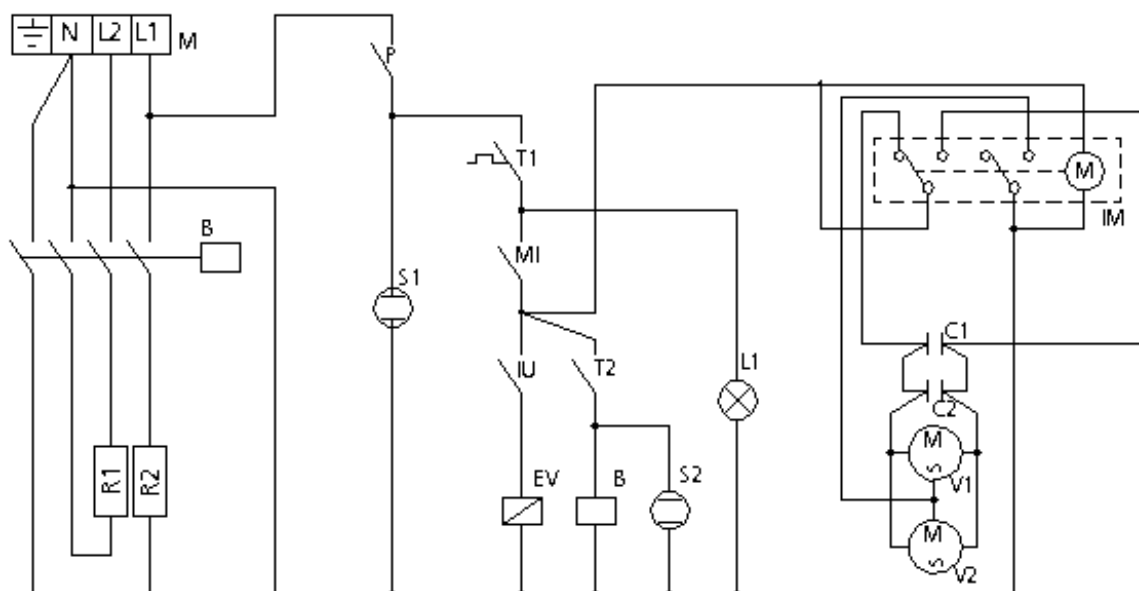

Key

M	Power terminal board	V1-V2	Radial motoventilators
P	"End of cooking" programmer	C1-C2	Capacitors
MI	Door microswitch	IM	Operating direction reversing element
T1	Safety thermostat	B	Contactor coil
T2	Control thermostat	S1	Programmer indicator light
R1-R2	Circular heating elements	S2	Thermostat indicator light
EV	Humidifier solenoid-valve	L	Lighting lamp
IU	Humidifier switch		

14. The Warranty

Your appliance is covered by warranty. The seller will replace or repair (and his decision will be final), free of charge for the customer, only those parts that are defective due to a manufacturing fault on condition that, under penalty of forfeiture:

- for domestic equipment, the customer notifies the fault within two months from the date when he/she discovered it and anyway within 2 years from the date of purchase;
- for professional equipment, the customer notifies the fault within 8 days from the date when he/she discovered it and anyway within 12 months from the date of purchase,

by registered letter with acknowledgement of receipt and enclosing the invoice or receipt proving the purchase.

Apart from the case when the customer cannot produce the invoice or receipt proving the purchase or when the above-mentioned terms are not complied with, the **warranty is expressly excluded** in the following cases:

- 1) faults or breakage caused by the transport;
- 2) wrong or incorrect installation of the product (for instance because of insufficient draught of the flue or exhausts) in light of the instructions given in the user's handbook supplied with the product;
- 3) inadequate or abnormal electrical, hydraulic and/or gas supplies;
- 4) carelessness, negligence or incompetence in using the product in light of the instructions given in the user's handbook supplied with the product;
- 5) use of the product for uses different from the one for which it was built or anyway in a manner not compliant with the instructions given in the user's handbook supplied with the product;
- 6) tampering with the product;
- 7) adjustments and/or maintenance and/or repairs carried out by unauthorised personnel and/or with non original spare parts;
- 8) inadequate or careless maintenance of the product in contrast with the user's handbook supplied with the product;
- 9) damages caused by fire, natural disasters and accident as well as by any cause not attributable to TECNOEKA SRL.

The warranty explicitly excludes: varnished or enamelled parts, knobs, handles, movable or removable plastic parts, bulbs, glass parts, refractories and any accessories.

TECNOEKA SRL cannot be held responsible for any damages, either direct or indirect, caused by the product breaking down or following its non-use.

Any repairs carried out during the warranty do not cause said warranty to be extended or renewed.

Nobody is authorised to modify the terms and conditions of the warranty or to issue new verbal or written warranties.

The warranty is valid only for appliances installed in the European Union.

Any dispute shall be settled by the competent Court in Padua.

Warning for the Buyer:

1. the cooking appliance is designed only for cooking purposes while the heating appliance is designed only for heating domestic environments;
2. TECNOEKA S.r.l. does not install the appliances; the seller shall be responsible for any installation carried out;
3. TECNOEKA S.r.l. cannot be held responsible for any damages, either direct or indirect, to people, pets or property caused by the appliance breaking down or following its non-use.

The Manufacturer cannot be held responsible for any inaccuracies due to misprints or mistakes in copying in this handbook. The Manufacturer reserves the right to modify the products as he deems fit, also in the interest of the user, without affecting the vital characteristics of functionality and safety.