

naxa[®]

 
User Manual

**Portable DVD Player with AM/FM Radio
and USB/SD/MMC Inputs**



Model: NDL-252

Before attempting to connect, operate or adjust this player, please read these instructions completely.
And then put this manual in a safe place for future reference.

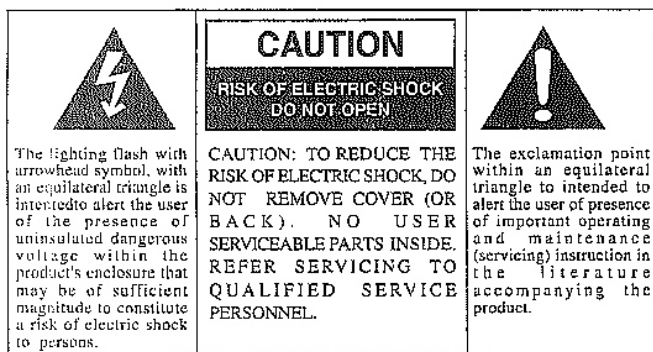

WARNING:

TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.

- ⚠ Read and follow all instructions. Keep these instructions for future reference.
- ⚠ Heed all warnings.
- ⚠ Do not use this product near water.
- ⚠ Do not ceiling- or wall-mount the product.
- ⚠ Do not block any ventilation openings. Install the product in accordance with the operating instructions.
- ⚠ Do not install the product near heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⚠ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit the product.
- ⚠ Do not use attachments not recommended or sold by the product manufacturer, as a risk of fire, electrical shock, or serious personal injury may result.
- ⚠ Unplug the product during lightning storms or when unused for long periods of time.
- ⚠ Do not expose the product to dripping or splashing water.
- ⚠ Do not place objects filled with liquid (i.e., vases) on the product.
- ⚠ Do not place in or expose the product to direct sunlight, extreme heat, humid or dusty locations.
- ⚠ Never operate this product if it has a damaged Power Cord or plug, is not working properly, has been dropped, damaged, or exposed to moisture, water or other liquids.
Do not attempt to examine or repair this product yourself. Return the product to a service center for examination and repair.

 
SAFETY INSTRUCTIONS

THESE IMPORTANT SAFETY INSTRUCTIONS ARE INCLUDED, AS APPLICABLE TO THE APPLIANCE, CONVEYING TO THE USER THE INFORMATION ITEMIZED BELOW

1. **Read instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain instructions** - The safety and operating instructions should be retained for future reference.
3. **Head Warnings** - All warnings and cautions on the appliance and in the operating instructions should be adhered to.
4. **Follow instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool or the like.
6. **Wall or Ceiling Mounting** - The appliance should not be mounted to a wall or ceiling.
7. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
8. **Heat** - The appliance should be situated away from neat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. **Power Sources** - The product should be operated only with the type of power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operation instructions.
10. **Grounding Polarization** - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way this is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
11. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
12. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
13. **Nonuse periods** - The power cord of the appliance should be unplugged from the outlet when left when left unused for a long period of time.
14. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the product case through product openings.
15. **Damage Requiring Service** - Unplug this product from the wall outlet and take it to qualified service personnel under the following conditions.
 - a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled into, or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate when used according to the operating instructions.
Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may interfere with the product's normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance- this indicates a need for service.

16. **Servicing** - The user should not attempt to service the product beyond that described in the operating instruction. All servicing should be referred to qualified service personnel.
17. **Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines, or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching power lines or circuits as contact with them might be fatal.
18. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static. Section 810 of the National Electrical Code ANSI/NEFA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding conductress, location of antenna-discharge unit, size of grounding electrodes, and requirements for the grounding electrode (see figure).
19. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
20. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
21. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.
22. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

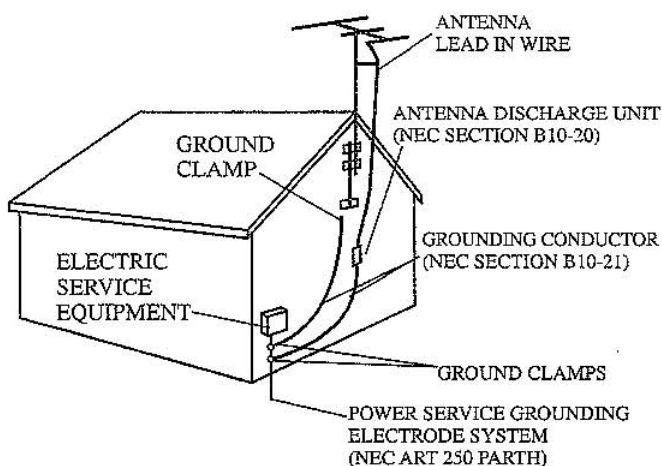

NEC NATIONAL ELECTRICAL CODE

Do not apply oil or petroleum products to this product.

CAUTION

Invisible laser radiation will be emitted when the product is open and interlocks are defeated. Do not defeat the safety interlocks.

GRAPHIC SYMBOLS WITH SUPPLEMENTARY MARKINGS ARE LOCATED ON THE BOTTOM OF THE UNIT.

USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

WARNING:

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash your hands after handling.*

CAUTION:

This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

IMPORTANT INFORMATION REQUIRED BY THE FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesirable operation.





NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Illustration of the Controls/Jacks On the Main Unit

    Main unit

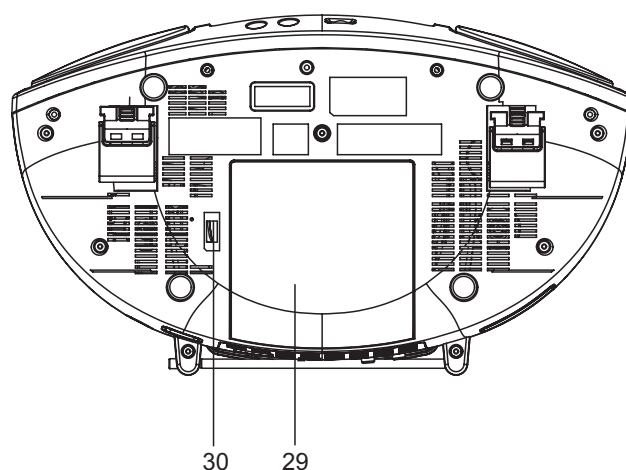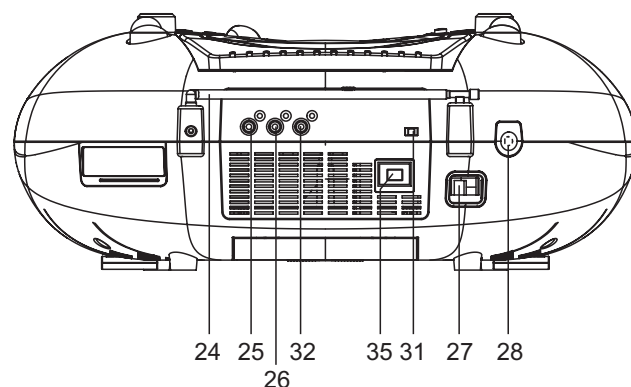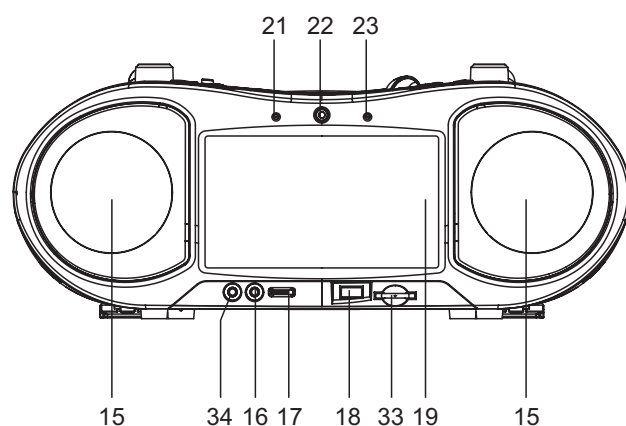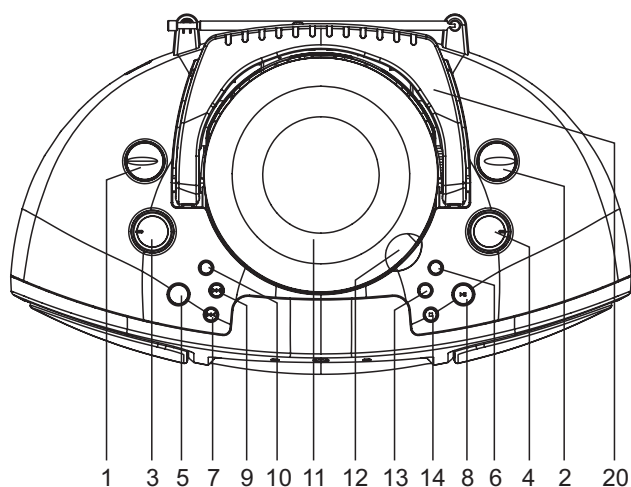


1. FUNCTION CONTROL
2. BAND CONTROL
3. VOLUME CONTROL
4. TUNING CONTROL
5. MODE BUTTON
6. FAST FORWARD BUTTON
7. PREVIOUS BUTTON
8. PLAY/PAUSE BUTTON
9. NEXT BUTTON
10. BASS BOOST BUTTON
11. CD DOOR
12. CD DOOR OPEN AREA
13. FAST BACKWARD BUTTON
14. STOP BUTTON
15. SPEAKERS
16. MIC SOCKET
17. MIC LEVEL
18. USB PORT

19. LCD DISPLAY
20. HANDLE
21. POWER INDICATOR
22. REMOTE SENSOR
23. FM ST. INDICATOR
24. FM TELESCOPIC ANTENNA
25. VIDEO OUTPUT JACK
26. AUDIO RIGHT JACK
27. AC SOCKET
28. PHONES JACK
29. BATTERY COMPARTMENT
30. AC VOLTAGE SELECTOR (FOR DUAL VOLTAGE VERSION AND AT BOTTOM OF UNIT)(OPTIONAL)
31. DISPLAY ON/OFF SWITCH
32. AUDIO LEFT JACK
33. SD/MMC CARD SLOT
34. AUX-IN JACK
35. DC 12V IN JACK

* Rating label is located at the bottom of the unit.

 Remote control unit

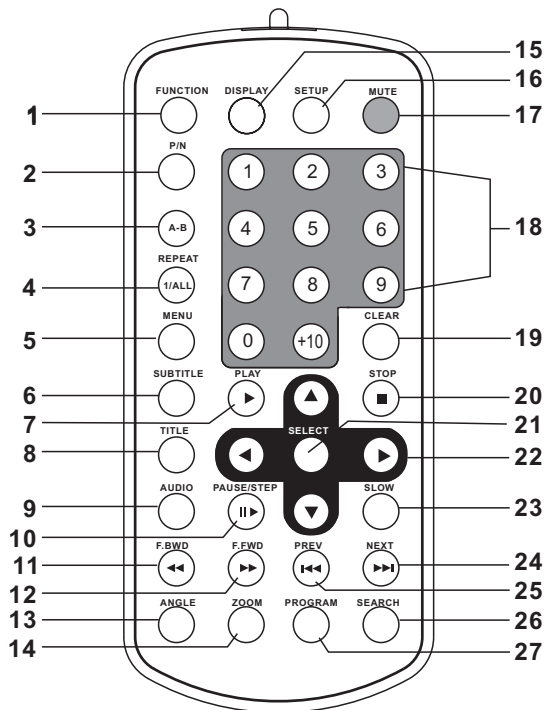

- | | |
|------------------------|------------------------|
| 1. FUNCTION button | 15. DISPLAY button |
| 2. P/N button | 16. SETUP button |
| 3. REPEAT A-B button | 17. MUTE button |
| 4. REPEAT 1/ALL button | 18. NUMERIC buttons |
| 5. MENU button | 19. CLEAR button |
| 6. SUBTITLE button | 20. STOP button |
| 7. PLAY button | 21. SELECT button |
| 8. TITLE button | 22. NAVIGATION buttons |
| 9. AUDIO button | 23. SLOW button |
| 10. PAUSE/STEP button | 24. NEXT button |
| 11. F.BWD button | 25. PREV button |
| 12. F.FWD button | 26. SEARCH button |
| 13. ANGLE button | 27. PROGRAM button |
| 14. ZOOM button | |

 
Basic connection

- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- It is recommended to be connected to a multi-system TV.
- Ensure that this player and other equipment to be connected to the unit are in the standby or off mode and disconnect the AC power cords before commencing connection.
- Do not block ventilation holes of any piece of the equipment and arrange them so that air can circulate freely.
- Read through the instructions before connecting other equipment.
- Ensure that you observe the color coding when connecting audio, video cables.

Note:

- During DVD play, the TV volume may be at a lower level than during TV broadcasts, etc. If this is the case, adjust the volume to the desired level.
- If the DVD/CD player is connected to the TV through a video cassette recorder, the picture may not be played back normally with some DVDs. If this is the case, do not connect the player via the VCR.

Connecting to a stereo TV set

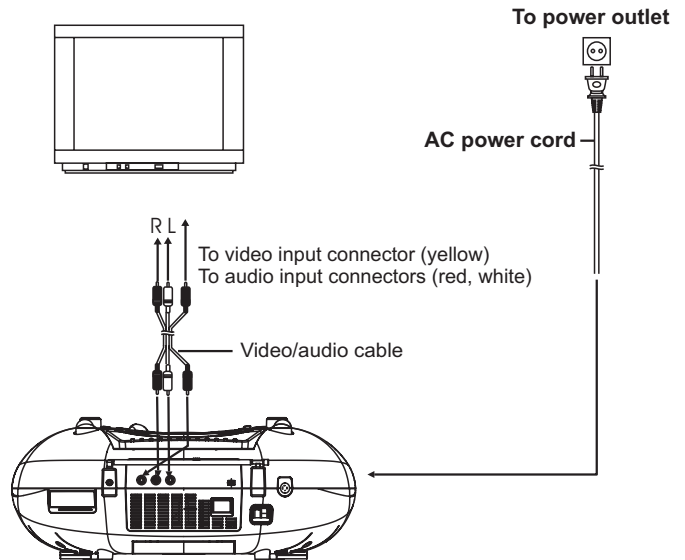


CONNECTING MICROPHONE AND HEADPHONE

1 Connect the Microphone.

- Connect one Microphone to MIC jack.

2 Adjust the MIC Volume to proper level that you want.

 3 Connect one headphone to phone jack.

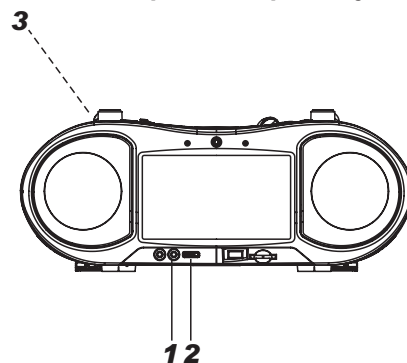

OPERATIONS

PREPARATION

Power on the TV set and select video input mode.
Power on the audio system which is connected to the player.

GET STARTED

1. Turn on the player and switch the FUNCTION CONTROL to DVD position.
2. Lift CD cover Open area to open the disc tray.
3. Place a disc onto the disc tray.
4. Close CD door by hand and the playback starts automatically.
5. When a menu screen appears on the TV, move the navigation buttons or press the numeric buttons to select a preferred track number, then press SELECT button to start playback.

ADJUST THE VOLUME

Rotate the VOLUME CONTROL key on the main unit to increase or reduce the volume.

SKIP AHEAD OR BACK

Press NEXT SKIP or PREV SKIP button once during play to skip a chapter(DVD) or a track (CD) ahead or backwards.

RAPID ADVANCE/ REVERSE

During playback, press F.FWD button or F. BWD button several times to scan the disc forward or backward at X2, X4, X8, X20 normal speed.

Press PLAY button to resume normal play.

PAUSE OR STEP PLAY

During playback, press PAUSE/STEP button on the remote control or PLAY/ PAUSE on the main unit to pause; in pause mode, each time the PAUSE/STEP button is pressed, the player will only play one frame; to resume normal play, press PLAY button again.

STOP PLAYBACK

Press STOP button during playback to stop playback; the player activates its resume function when STOP is pressed in STOP mode; press PLAY button again, playback resumes at the point it stopped previously; open the disc tray or press the STOP button one more time to clear the resume function.

SLOW-MOTION PLAY (DVD)

Press SLOW button on the remote control during playback, the disc will be played at 1/ 2 normal speed at first, each time this button is pressed, the play speed becomes slower (down to 1/7 normal speed.)

Press PLAY button, normal play will resume.

REPEAT 1/ALL

Press REPEAT 1/ALL button during play, it will repeat play one chapter/title or repeat all(for DVD disc), or repeat play a track or all tracks (CD).

REPEAT A-B

1. Press REPEAT A-B button to set the start point (A) for repeat;
2. Press this button again to set the end point (B) and then the player automatically starts to repeat the contents between point A and B.
3. Press this button once again to resume normal play.

PROGRAM PLAY(UP TO 16 MEMORIES)

1. Press PROGRAM during playback to display the program menu.
2. Select location(s) to be memorized via navigation buttons and then enter desired Titles/Chapters numbers via numeric buttons.

Note: Inputting leading zero is not necessary. Press +10 key to be on the tenth chapter/title/track. If the chapter/title/track number is behind the cardinal 10, press +10 key first and then the unit digit. Some figure inputs may be useless, because it's greater figure than total title/chapter/track number on the disc.

Example: Track 3, press "3"

Track 12, press "+10" and then "2"

Track 21, press "+10" twice and then "1"

3. To start programmed playback, select PLAY on the menu; pressing PROGRAM button again to exit programming.
4. To clear programmed items, select the items and then press CLEAR button on the remote control. To clear all items, select the <CLEAR> on the menu, and then press SELECT button on remote control.
5. You can also cancel program mode by clearing all the items in the program menu.

SEARCH FOR PREFERRED SCENE

1. Press SEARCH during play and highlight the item to be played (Title, Chapter, or Chapter time)by navigation buttons
2. Input the desired number or time via the numeric buttons.
3. Press SELECT button to confirm and the playback from the located scene starts.
4. To exit search menu, press SEARCH button directly.

ZOOM PLAY

Press the ZOOM key continuously to zoom in the picture by 2, 3, and 4 times, zoom out by 1/2, 1/3, 1/4 normal size.

Press this key once more when the picture is at 1/4 size to return to the normal size display.

Scroll to view the enlarged picture using Navigation buttons.

ON SCREEN DISPLAY INFORMATION

When the player is in operation, press DISPLAY button continuously on the remote control, the screen will display parts of information(current disc type, title number, chapter number, playtime, audio language, audio type, subtitle language and multi angle, etc) in a sequence.

CHANGING AUDIO SOUNDTRACK LANGUAGE(DVD ONLY)

It is possible to change the audio soundtrack language to a different language from the one selected at the initial settings (This operation works only with discs on which multiple audio soundtrack languages are recorded).

Press AUDIO button during DVD disc play, the sound track language changes with the current sound track number shown on the TV screen.

NOTE: When no soundtrack languages are recorded, pressing this button will not work.

MULTI-ANGLE VIEWING (DVD ONLY)

Press ANGLE button during playback to display the number of angles being played and then select a desired angle to view the scene.

Note: only the DVDs shot with multi-angle scenes have this function.

CHANGING SUBTITLE LANGUAGE (DVD ONLY)

Press SUBTITLE button during playback, the subtitle language shown on the screen will change as a response to each press; When the desired language appears, release the button to view the subtitle in that language.

Note: this function only works on the DVDs recorded with multi-language subtitles.

RETURN TO MAIN MENU AND PLAY THE TITLE (DVD)

During playback, press MENU button to return to main menu and press TITLE button to play the title.

MP3/MPEG4 PLAYBACK

1. Load the MP3/MPEG4 disc onto the disc tray and the TV screen will show all its folders after a few seconds.
2. Select the folder you want by the navigation buttons and then SELECT Button to confirm.
3. The files in this folder are displayed and select your favourable song via navigation buttons and press SELECT button to start playback.
4. Press NEXT and PREV button to select track directly.
5. Press REPEAT 1/ALL button change play mode.
 - REPEAT 1- repeat one file.
 - REPEAT DIR- repeat all tracks in the current album
 - REPEAT ALL- repeat all tracks in current disc.
 - REPEAT OFF-cancel repeat modes.

KODAK PICTURE CD / JPEG CD PLAYBACK

Slide show of Kodak Picture CD after being loaded begins automatically;

Folders of JPEG picture CD after being loaded are displayed on the TV screen; use the navigation buttons to select the desired folder and then press SELECT button to confirm.

The files in this folder are displayed and you can select your favourite pictures using the up/down navigation buttons and press SELECT button to start playback.

Preview of the picture will be displayed while you scroll across the filenames.

KODAK PICTURE CD / JPEG CD OPERATIONS

1. PLAY MODES

Press 1/ALL button during play to change the play modes.

REPEAT 1- repeat one file

REPEAT DIR- repeat all picture in the current album

REPEAT ALL- repeat all pictures in current disc.

REPEAT OFF- cancel repeat modes.

During playback, press STOP to enter preview mode.

2. SKIP TO NEXT/PREVIOUS PICTURE

Press NEXT button to skip to the next picture or PREV button to the previous picture.

If no key is pressed for a few seconds, it will skip to next picture automatically.

3. PICTURE ROTATIONS

Press RIGHT and LEFT navigation buttons to rotate the picture Clockwise and anti-clockwise respectively.

4. PICTURE FLIPS

Press UP navigation button to flip the picture vertically.

Press DOWN navigation button to flip the picture horizontally

5. PICTURE ZOOM IN/OUT

Press ZOOM button continuously ,the picture zooms in by 2, 3, 4 times or zooms out by 1/2, 1/3, 1/4 the original size.

Press this button once more when the picture getting 1/4 size to return to the normal play.

If the picture is enlarged, you may use the navigation buttons to view blocked parts of the picture.

6. SLIDE SHOW TRANSITION MODES

During slide show playback, press the PROGRAM button cyclically to select one of the following modes to play.

WIPE TOP

WIPE BOTTOM

WIPE LEFT

WIPE RIGHT

DIAGONAL WIPE LEFT TOP

DIAGONAL WIPE RIGHT TOP

DIAGONAL WIPE LEFT BOTTOM

DIAGONAL WIPE RIGHT BOTTOM

EXTEND FROM CENTER H

EXTEND FROM CENTER V

COMPRESS TO CENTER H

COMPRESS TO CENTER V

WINDOW H

WINDOW V

WIPE FROM EDGE TO CENTER

RANDOM

NONE

EXTERNAL MEMORY MEDIA OPERATION (USB & SD/MMC CARD)

Prepare the player for External Memory media operation

Insert a USB data traveller into the USB port or insert an SD/MMC card into card slot and slide the FUNCTION to the DVD position;

Press MODE button on the main unit first, press NEXT/PREVIOUS button on the unit or use NAVIGATION buttons on the remote to scroll among DISC, USB and CARD, finally press PLAY/PAUSE button on the unit or SELECT button on the remote to confirm.

An icon of READING shows in the LCD and after the USB/card is successfully detected and read, the track number as a total shows in the LCD;

NOTE: The player can successfully play the music files with USB 1.0 and USB 2.0 storage device.

 
INITIAL SETTINGS

Initial settings page is for you to make your preferred settings up for your player. Once the initial settings are done they are retained in the CPU of the player until otherwise modified.

COMMON PROCEDURES FOR INITIAL SETTINGS

1. Press SETUP button.
2. Use the navigation buttons to select the item you want to modify, press SELECT button to confirm, setting page with further setting items displayed shows on the TV screen. Again use navigation buttons to make changes. Press again SELECT button to confirm modifications.
3. Use navigation buttons to switch to another setting on the main setting page.
4. Press SETUP button to exit main setting page.

1. SYSTEM SETUP

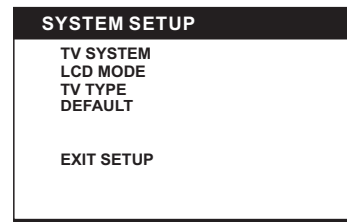

1.1 TV SYSTEM - It is used to select the TV mode.

Please select this option as per your TV set.

1.2 LCD MODE - It is used to select the LCD MODE.

Options: 4:3 16:9

1.3 TV TYPE - It is used to select the TV scan mode, please set as per your TV set.

Options: **4:3PS** : Normal Pan & scan mode

 
4:3LB : normal Letter box mode

16:9 : 16:9 wide screen mode

1.4 DEFAULT - Reset to factory settings.

Options: RESTORE

2. LANGUAGE SETUP

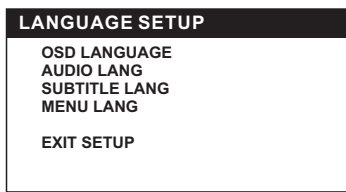


2.1 OSD LANGUAGE - It is used to select different On Screen Display language for different user.

2.2 AUDIO LANG - select preferred audio language.(DVD only, need disc software support)

2.3 SUBTITLE LANG - Select preferred subtitle language. (DVD only, need disc software support)

2.4 MENU LANG - Select preferred disc menu language. (DVD only, need disc software support)

 3. VIDEO SETUP

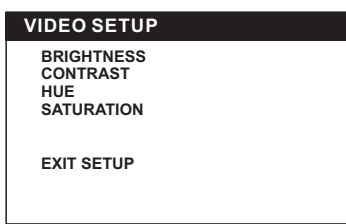


3.1 BRIGHTNESS - to set the brightness for the display.
Options: 0/2/4/6/8/10/12

3.2 CONTRAST - to set the contrast effect for display.
Options: 0/2/4/6/8/10/12

3.3 HUE - to set the colour impression for display.
Options: -6/-4/-2/0/+2/+4/+6

3.4 SATURATION - to set the saturation level for display.
Options: 0/2/4/6/8/10/12

 4. SPEAKER SETUP

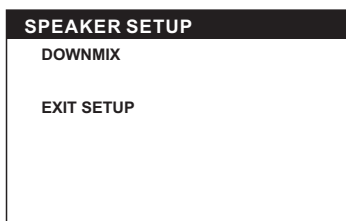

4.1 DOWNMIX

Options: **LT/RT** - Left/Right mix mode

STEREO - Select this option if you don't have a 5.1 channels amplifier.

RADIO OPERATION

TO PLAY THE RADIO

1. Slide the FUNCTION CONTROL to the RADIO position, the POWER Indicator will light up.
2. Select the desired band with the BAND switch.
3. Tune to the desired station by rotating the TUNING control (Move the control back and forth until you get the strongest clearest sound).
4. The built-in AM antenna and external FM TELESCOPIC ANTENNA are directional.
 - When receiving an FM broadcast, fully extend the TELESCOPIC ANTENNA and position for the best reception.
 - For AM broadcasts, rotate the whole set until the best reception is heard.
5. Adjust the volume level to a comfortable listening level.
6. To turn off the radio, slide the FUNCTION switch to OFF position.

NOTES:

- If a particular FM (STEREO) station is weak, or you hear too much background noise, try moving the position of the band selector switch to the FM (MONO) position. This can often result in a much clearer reception.
- When the band selector switch is set to FM STEREO and a stereo broadcast is being received, the FM STEREO indicator on the top of the unit will be lit.

STEREO HEADPHONE JACK

A stereo headphone jack has been provided on the back of the unit so that you can listen to the unit without disturbing others. To use this jack, plug in the headphones/earphones (not included) and adjust the VOLUME control to a comfortable listening level.

NOTE: When external headphones/earphones are connected, the sound to the unit's main speakers will be muted.

AUXILIARY IN

 
Your player can be used as a power amplifier to playback the programs from portable radio, TV set or MP3 player or whatever provided this appliance is so designed that audio signal may be produced through a LINE-OUT jack or the like.

Observe the following steps to connect the player to another appliance:

1. Power the player on using the supplied AC Power Cord.
2. Slide Function Switch to AUX-IN position.
3. Connect the appliance into the player's AUX-IN socket with the supplied LINE OUT cable of the appliance.
4. Power on the appliance and begin play.

Easy job, right? At this time you will be able to hear the sound produced from the programs the connected appliance is broadcasting.

DISC HANDLING PRECAUTIONS



- Hold the disc by the edge so the surface will not be soiled with finger prints. Finger prints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not apply benzine, thinner, and liquid that prevents against static electricity.
- Be careful not to drop or bend the disc.
- Install only one disc on the disc tray.
- Do not try to close the disc tray when the disc is not installed properly.
- Be sure to store the disc in its case when not in use.

TROUBLESHOOTING

If your DVD player does not seem to be functioning properly, check the items below before you contact an authorized service center

Symptom	Check
Power does not turn on or suddenly turns off.	• Make sure the AC cord is securely plugged into an AC outlet. • Turn the power off and then back on.
Remote control won't work	• Check that the battery is inserted in the "+" and "-" direction properly. • The battery may be flat. Replace it with a new one. • Check that the signal transmission is directed at the remote control sensor on the DVD player. • Remove the obstacle between the remote controller and remote control sensor.
No picture or sound	• Check that the A/V cables are securely connected. • Check that the disc is a DVD (region number 1 or all), DVD-RW or AUDIO CD. • Do not use a disc that has scratches or dirt. • Check that the label-side of the disc is facing up. • The pick-up lens of the DVD player may be dirty. Contact the service center for lens cleaning. • Check that the TV channel is set to VIDEO or AV if viewing with a TV.
No picture	• Check that the LCD display is turned on.
No sound	• Check that the display panel is open. If it is closed, audio will not be output to the speakers. • Check the volume setting. If set to zero, turn up volume level. • Check that the headphones are plugged into the PHONES socket. Speakers cannot be used with the headphones.
No picture and sound	• Check that the battery is properly installed and AC cord is properly connected.
Distorted video or sound	• Use a disc without scratches or dents.