



Selador CE Series by ETC

Lustr – Paletta – Vivid – Vivid-R –
Vivid Fire – Vivid Ice– Pearl
User Manual

2010-09

The Selador series of fixtures are intended for professional use only.
Read entire User Manual before using equipment.

Copyright © 2010. Electronic Theatre Controls, Inc.
All rights reserved.
Product information and specifications subject to change.
Part Number: 7401M1210 Rev C
Released: 2010-09

ETC and Selador are registered trademarks of Electronic Theatre Controls, Inc. in the United States and other countries.

Other product and company names mentioned herein may be trademarks and/or service marks of their respective owners.

ETC permits the reproduction of materials in this manual only for non-commercial purposes. All other rights are reserved by ETC.

This product is protected by one or more of the following U.S. Patents: 6,016,038, 6,150,774, 6,788,011, 6,806,659, 6,683,423 and 7,023,543

**transtechnik****avab**

DECLARATION OF CONFORMITY

Unit 26-28
Victoria Industrial Estate
Victoria Road
London W3 6UU
Tel +44 (0)20 8896 1000
Fax +44 (0)20 8896 2000
www.etcconnect.com

We, Electronic Theatre Controls Limited
declare under sole responsibility that the product:

Product name: Selador LED luminaire
Product type/model: Vivid, Vivid-R, Lustr, Pearl, Paletta, Vivid Fire & Vivid Ice
Item numbers: All sizes

to which this declaration relates is in conformity with the following Standards:

EN 60598-1:2004 Luminaires. General requirements and tests
EN 60598-2-17:1989 Luminaires. Particular requirements. Specification for luminaires for stage lighting, television, film and photographic studios (outside and indoor)

following the provisions of EU LV Directive(s) 2006/95/EC

EN 55015:2006 Limits and methods of measurement of radio disturbance characteristics of electrical lighting and similar equipment
EN61000-6-2:2005 Electromagnetic compatibility (EMC). Generic standards. Immunity for industrial environments
Including:
EN61000-4-2:1995 ESD requirements
EN61000-4-3:2006+A1:2008 Radiated susceptibility
EN61000-4-4:2004 Electrical fast transients
EN61000-4-5:2006 Surges
EN61000-4-6:2007 Conducted susceptibility
EN61000-4-11:2004 Voltage dips and interruptions
EN61000-3-2:2006 Electromagnetic compatibility (EMC). Limits. Limits for harmonic current emissions (equipment input current up to and including 16 A per phase) Class A
EN61000-3-3:1995 Electromagnetic compatibility (EMC). Limits. Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤ 16 A

following the provisions of EU EMC Directive(s) 2004/108/EC

London, United Kingdom
(Place of issue)

18th August 2010
(Date of Issue)

Mr Adam Bennette
(Name of authorised person)

Adam Bennette
(signature of authorised person)

Printed 18 Aug. 10
Decl # 93

\\lon-file2\Shares\RND\DoFC\Master declaration.doc

Page 1
Version # C

Table of Contents

Specifications	1
Maximum Power Consumption at Full Intensity	2
Dimensions and LEDs	3
Note About LED Fixtures.	3
Overview	4
Applications	5
Document Conventions	6
Safety	6
Installation	7
Power and Data Cabling Requirements	7
Power	7
Data	7
Installation Procedures	8
Installing Mounting Hardware	8
Installation Notes	8
Safety Cable	10
Fixture Weight.	10
Installing Secondary Lenses.	11
Connections and Addressing	12
Control	13
Routine Maintenance	16
General Fixture Cleaning	16
Cooling Fan Filter Cleaning	17
Fuse Capacities.	17

Specifications



Note: *Vivid-R replaces the original Vivid fixture as of February 2010. The manufacturer of the K2 LED emitter is phasing out these emitters over the next year. Vivid-R maintains photometrics equivalent to the original Vivid with higher intensity and uses less power.*

Physical

- Rugged extruded anodised aluminum construction
- Advanced thermal management systems for long LED life
- 0 to 40°C ambient operating temperature
- Available in 279, 546, 1080 and 1613mm lengths
- On-board fan speed control for no-noise operation unless in high ambient temperature situations. (Fixtures built January 2010 and after)
- Yoke, trunnion (floor stand), or pipe-hanger mounting options
- Available in black
- See [Dimensions and LEDs, page 3](#)
- See [Fixture Weight, page 10](#)

Electrical

- 100V to 240V 50/60 Hz internal power supply
- Neutrik® PowerCon® input connector
- 1.5m power lead supplied
- Requires power from non-dim source

LEDs

- Luxeon® Rebel™ 2.5W LED emitters (Lustr, Paletta, Vivid-R, Vivid Fire, Vivid Ice, and Pearl)
- Luxeon K2 3.5W LED emitters (original Vivid fixtures manufactured before February 2010.)
- 50,000 hr. LED life
- See [Note About LED Fixtures, page 3](#)

Optical

- Integral 16° field angle optic (Pearl)
- Integral 18° field angle optic (original Vivid)
- Integral 19° field angle optic (Vivid-R)
- Integral 26° field angle optic (Lustr, Paletta, Vivid Fire and Vivid Ice)
- Slots for secondary lenses
- Combine secondary lenses for desired beam spread

Colour

- Selador Seven-color x7 LED products for superior broad spectrum colour mixing
 - Lustr – Optimized for highest output in white and light tints in a 7-color fixture
 - Paletta – Optimized for strong, saturated colours
 - Vivid, Vivid-R – Optimized for strong, saturated colours at maximum brightness
- Selador special purpose LED fixtures
 - Vivid Fire – Optimized for high-intensity saturated colours on the red end of the spectrum
 - Vivid Ice – Optimized for high-intensity saturated colours on the blue end of the spectrum
 - Pearl – High output warm and cool white LEDs for variable colour temperature white (only) light output
- Interacts seamlessly with conventional sources
- Achieves excellent 3200° or any other Correlated Colour Temperature white light from 800 to 20,000°K (except Vivid Fire, Vivid Ice, and Pearl)
- Beautifully illuminates skin tones and other objects
- Deeply saturated colours across an exceptionally wide gamut
- Colour rendering as high as 90 CRI (except Vivid Fire, Vivid Ice, and Pearl)

Control

- DMX512-A compliant
- DMX in and thru via 5-pin XLR connectors
- 8-channel (7 colour plus intensity)
- Intensity channel minimises colour shift during dimming
- Digital LED display for address assignment
- Internal control electronics for smooth low-end dimming at 15-bit resolution
- 21 fixture provides 2 independently controllable cells
- 42 fixture provides 4 independently controllable cells
- 63 fixture provides 6 independently controllable cells

Optional Secondary Lenses

- Beam-spreading lenses available from 20 to 80° in horizontal and vertical axis
- Easily interchangeable
- Combine up to 2 secondary lenses at a time

Maximum Power Consumption at Full Intensity

Lustr, Vivid-R, Vivid Fire, Vivid Ice, and Pearl

Model ^a	Current (A)	Watts
11	0.6	144
21	1.2	288
42	2.4	576
63	3.6	864

a) Vivid Fire and Vivid Ice are available in 11 and 21 versions only.

Paletta

Model	Current (A)	Watts
11	0.5	120
21	1.0	240
42	2.0	480
63	3.0	720

Vivid (Manufactured January 2010 or before)

Model	Current (A)	Watts
11	0.74	178
21	1.48	356
42	2.96	715
63	4.44	1068

Dimensions and LEDs

Lustr, Vivid, Vivid-R, Vivid Fire, Vivid Ice, and Pearl

Model ^a	Size in millimeters	Number of LEDs
11	279 x 180 x 180	40
21	546 x 180 x 180	80
42	1080 x 180 x 180	160
63	1613 x 180x 180	240

a) Vivid Fire and Vivid Ice are available in 11 and 21 versions only.

Paletta

Model	Size in millimeters	Number of LEDs
11	279 x 180 x 160	40
21	546 x 180 x 160	80
42	1080 x 180 x 160	160
63	1613 x 180 x 160	240

Note About LED Fixtures

All LED sources experience some lessening of light output and some colour shift over time. Selador Series fixtures have complex thermal management systems to minimise these changes. With typical usage, a Selador fixture will still achieve 70% of its initial output after 50,000 hours of use. In individual situations, LEDs will be used for different durations and different levels. This can eventually lead to minor alterations in colour performance, necessitating slight adjustment to presets, cues, or programs.

All LEDs exhibit a slight colour shift as their temperature rises from ambient to operating temperature. This may or may not be visible to the eye. If this is a concern, a five to ten minute warm up cue (all colour channels at 100%, intensity channels at 50%) prior to production can minimise this effect.

Overview

Congratulations on your purchase of a *Selador Series by ETC* product.

Selador's x7 Color System™ seven-hue technology produces a light and colour quality that conventional LED systems cannot duplicate. This unique colour system produces bright, broad-spectrum whites and intense colours equally well, rendering pigments, objects, and skin tones in a natural way. Vivid Fire and Vivid Ice fixtures use elements of the x7 Color System for superior performance in deep saturated colours.

Each member of the Selador Series product line is unique and optimized for a specific lighting task:

Lustr

- Luxeon Rebel 2.5W LED emitters
- Optimized for the best white light across the entire CCT range
- Beautifully illuminates skin tones and other objects

Paletta

- Luxeon Rebel 2.5W LED emitters
- Optimized for deep, pure pastels and saturated colours
- Interacts seamlessly with conventional sources

Vivid-R

- Luxeon Rebel 2.5W LED emitters
- Optimized for high-output deep pastels and strong saturated colours
- Narrow optics for the longest throws

Vivid Fire

- Luxeon Rebel 2.5W LED emitters
- Optimized for saturated colours at the red end of the spectrum
- Strong output for high-intensity theatrical environments

Vivid Ice

- Luxeon Rebel 2.5W LED emitters
- Specialized LED array
- Optimized for saturated colours at the blue end of the spectrum
- Strong output for high-intensity theatrical environments

Pearl

- Luxeon Rebel 2.5W LED emitters
- Specialized LED array
- High output warm and cool white LEDs for variable colour temperature white (only) light output from 3200 to 5700K.

Information in this manual is applicable to all *Selador Series by ETC* products unless stated otherwise.

Applications

- Theatres
- Studios
- Churches
- Hotels
- Convention Centers
- Schools

Application	11	21	42	63
Truss warmer	•			
Front light	•	•		
Side light	•	•		
Key light	•	•		
Fill light	•	•	•	
Specials	•	•		
Downlight	•	•	•	•
Backlight	•	•	•	•
Stagewash	•	•	•	•
Cyc light	•	•	•	•

If you have questions about your Selador series fixture that are not answered in this manual, please contact the supplier of your ETC equipment or ETC Technical Services.

Americas

Electronic Theatre Controls Inc.
Technical Services Department
3031 Pleasant View Road
Middleton, WI 53562
800-775-4382 (USA, toll-free)
+1-608 831-4116
service@etcconnect.com

United Kingdom

Electronic Theatre Controls Ltd.
Technical Services Department
26-28 Victoria Industrial Estate
Victoria Road,
London W3 6UU England
+44 (0)20 8896 1000
service@etc europe.com

Asia

Electronic Theatre Controls Asia, Ltd.
Technical Services Department
Room 1801, 18/F
Tower 1, Phase 1 Enterprise Square
9 Sheung Yuet Road
Kowloon Bay, Kowloon, Hong Kong
+852 2799 1220
service@etcasia.com

Germany

Electronic Theatre Controls GmbH
Technical Services Department
Ohmstrasse 3
83607 Holzkirchen, Germany
+49 (80 24) 47 00-0
techserv-hoki@etcconnect.com

Please email comments about this manual to: TechComm@etcconnect.com

Document Conventions

Throughout this manual, the following are used to alert you to notes and safety notices.



Note: *Notes are helpful hints and information that is supplemental to the main text.*



CAUTION: *A Caution statement indicates situations where there may be undefined or unwanted consequences of an action, potential for data loss or an equipment problem.*



WARNING: *A Warning statement indicates situations where damage may occur, people may be harmed, or there are serious or dangerous consequences of an action.*



WARNING: ***RISK OF ELECTRIC SHOCK!** This warning statement indicates situations where there is a risk of electric shock.*

Safety

The Selador series fixtures are intended for professional use only. **Read entire User Manual before using equipment.**

Please note the following safety notices before use:



WARNING: ***Note the following safety warnings before use:***

- Do not mount the Selador series fixture on or near a flammable surface.
 - Use the fixture in dry locations only, where humidity does not exceed 90 percent (non-condensing). Fixture is not intended for outdoor use.
 - Mount and support the fixture only by the primary suspension holes in the enclosure.
 - Suspend the fixture from a suitable structure using only the hardware rated for the weight of the fixture.
 - In addition to primary suspension, attach a safety cable to the fixture housing. Appropriate attachment points (holes) are provided in the protruding tabs on either end of the fixture housing.
 - Disconnect the unit from power and from DMX before all cleaning and maintenance.
 - Maximum ambient temperature: $T_a=40^{\circ}\text{C}$
 - Maximum exterior surface temperature: $T_{\text{max}}=80^{\circ}\text{C}$
 - External Temperature after 5 minutes of full-brightness operation and 23°C ambient: 38°C
 - External Temperature (steady state achieved) at 23°C : 70°C
-

Installation

Power and Data Cabling Requirements


Power

The Selador series fixture operates on AC power, 100 to 240VAC/50-60Hz. You may use a circuit powered through an SCR dimmer, as long as the dimmer is set to unregulated non-dim (switched) operation.

Power is supplied through a standard 1.5m power-input cable with Neutrik PowerCon locking pigtail with bare ends for attachment of your desired connector.

Data

The Selador series fixtures operate on a DMX control signal. The unit is supplied with a 5-pin XLR DMX input connector and a 5-pin DMX Thru connector. DMX cables should be acceptable for DMX data transmission (not microphone cable) and should follow the standard pinout. The optional secondary data pair is not used by the Selador series fixtures. The maximum DMX data run from any DMX source to the last fixture in a chain is 300m. Termination is required in the data thru port of the last fixture in each data chain.

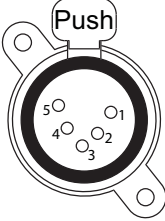DMX512 pinout for five-pin XLR female		
	1	Common (Shield)
	2	Data –
	3	Data +
	4	not connected
	5	not connected

See [Control, page 13](#) for additional information on DMX addressing of Selador Series fixtures.

Installation Procedures

Installing Mounting Hardware

Four different options are provided for mounting Selador fixtures.

- Yoke for 11 and 21 fixtures
- Double yoke for two 11 or two 21 fixtures (over/under configuration)
- Floor trunnions for all fixtures
- Pipe hanging brackets for all fixtures



Note: *Trunnions should be installed with the feet inward so that fixtures can be lined up end to end if needed.*

Installation Notes

Cooling and Duty Cycle

Selador Series fixtures are equipped with ultra-quiet cooling fans. These fans are automatically controlled. They permit fan-free operation when possible and turn on only when needed to provide low-noise, predictable service for extended periods of time in ambient temperatures up to 40°C. When the fan turns on, its speed ramps up slowly in order to minimise the noise differential.




CAUTION: *Duty Cycle*


Operating the fixtures in higher ambient temperatures or low airflow situations may cause the power supply to shut down. Following a cool down period, the power supply will automatically reset and the fixture will return to operation.

It is good practise to power down any device with on-board electronics to limit unnecessary wear on the devices and eliminate residual use of electricity. When not in use, Selador fixtures should be powered down by disconnecting from power either at the breaker or by unplugging.


LED life is adversely affected by high temperature operation. Whenever possible, avoid turning all channels to 100% for extended periods, such as channel checks or focusing.

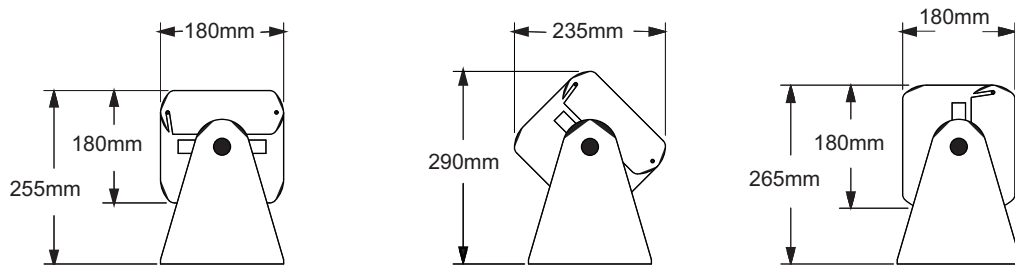


Floor trunion dimensions

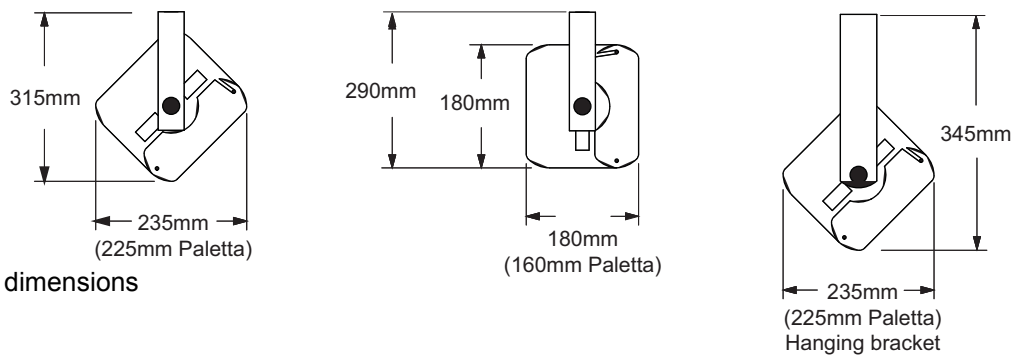

Hanging dimensions

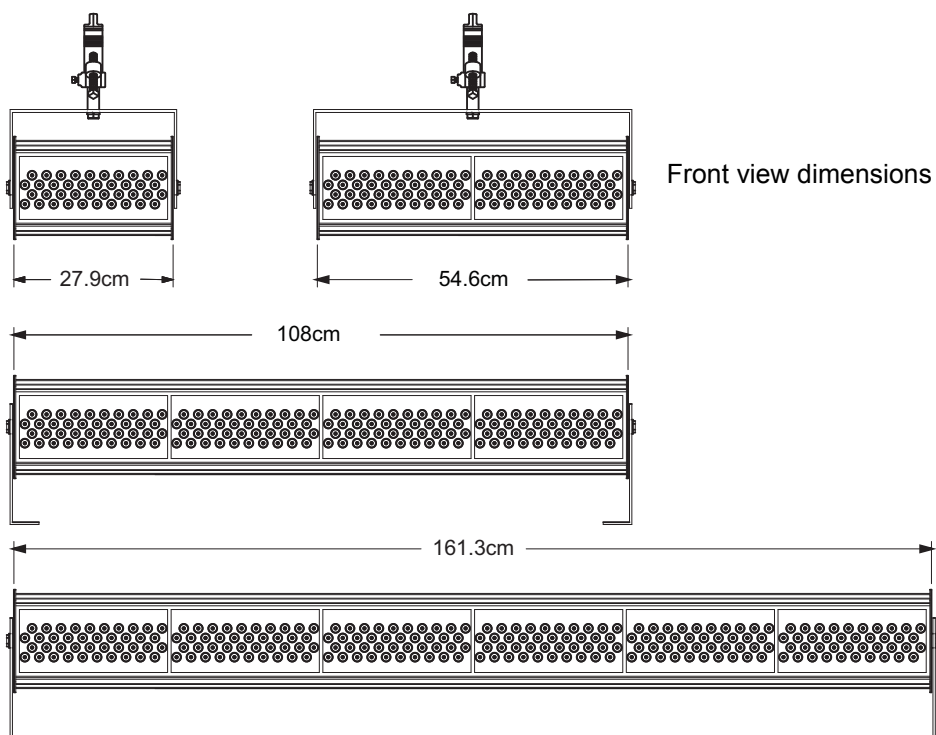


Front view dimensions

 

Rear view to show power, data connections, and repeating addressing and fan locations

Safety Cable

The safety cable (or other approved safety device) should be attached to the fixture housing and wrapped around the hanging structure (pipe). Appropriate attachment points (holes) are provided in the protruding tabs on either end of the fixture housing. Take care to leave as little slack as possible in the safety cable to avoid the cable catching the yoke of the fixture.

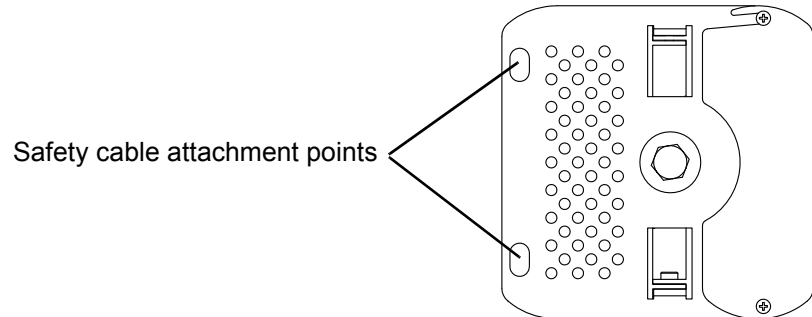

Fixture Weight

Total weight depends on how the individual fixture is configured. Weights shown do not include secondary lenses.

Lustr, Vivid -R, Vivid Fire, Vivid Ice, and Pearl

Model	Weight ^a	Shipping Weight
	Kg.	Kg.
11	5.2	6.9
21	9.1	11.4
42	15.9	19.1
63	24.1	28.2

a) Does not include mounting hardware.

Paletta

Model	Weight ^a	Shipping Weight
	Kg.	Kg.
11	4.7	6.4
21	8.2	10.5
42	14.6	17.7
63	22.1	26.4


a) Does not include mounting hardware.

Installing Secondary Lenses

Up to two secondary lenses can be installed in the slots towards the front of the fixture. The stacking order and distance from the LED array are not important to the function of the lenses. To avoid lenses being too loose and potentially overlapping each other, use the narrower slots for thinner lenses.

To install secondary lenses:

Step 1: Loosen the screw on the end of the access panel that has the slot in it.

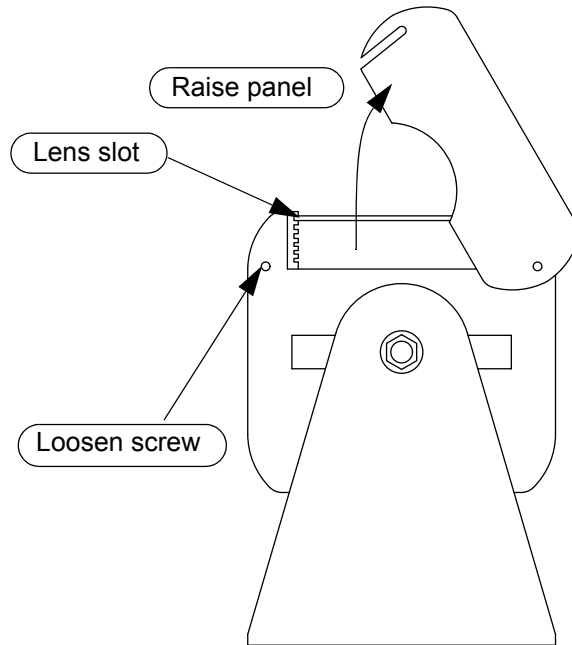


Step 2: Raise the panel out of the way, but leave it attached to the fixture.

Step 3: Slide the secondary lenses into the slots above the LEDs.

Step 4: Lower the panel and tighten the screw.

Connections and Addressing

Connect AC input power and DMX data cables to the appropriate ports as shown below.

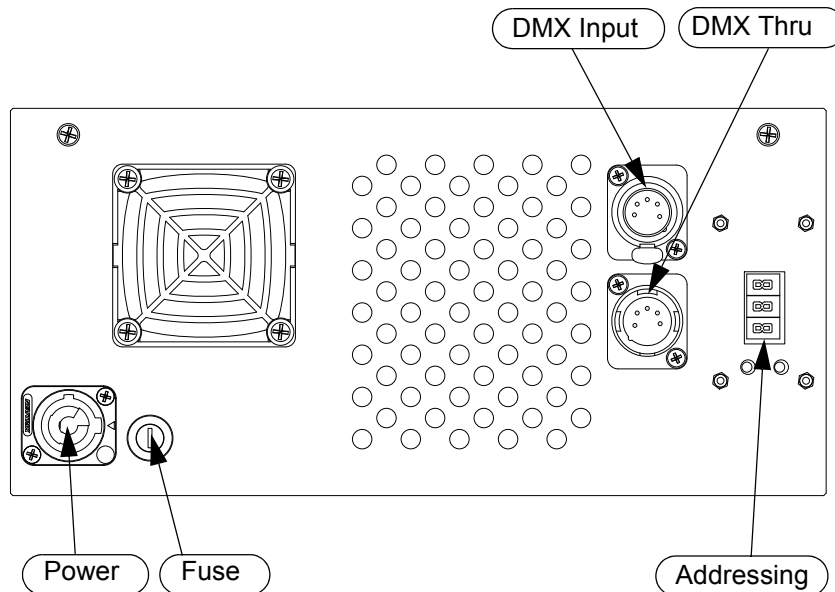


Connect the incoming DMX data cable to the DMX Input connector. If you are daisy-chaining the data to other fixtures or DMX-controlled devices, connect the next DMX cable to the DMX Thru connector. The Selador Series fixtures require that the last fixture on a DMX line be terminated with a 120Ω resistor between pins 2 and 3.

Connect the AC Input cable:

Align and insert the power connector. Twist the connector clockwise until it locks into place.

Disconnect the AC Input cable:

Slide back the locking tab, twist the connector counterclockwise and pull to unlock and disconnect the power connector.

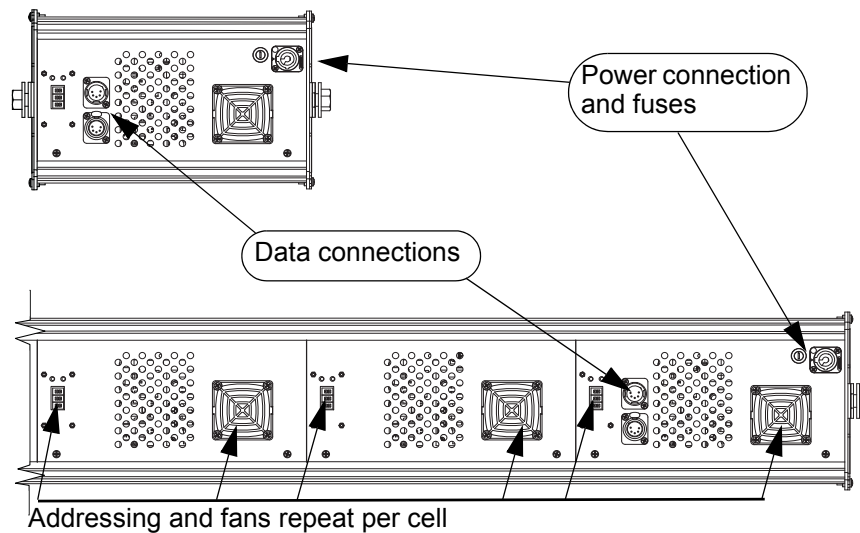

Fuse

The quarter-turn fuse-holder requires a straight blade screwdriver to remove and reinstall a fuse. Refer to [Fuse Capacities, page 17](#) for information about fuse types.


Control

Use the two push buttons on the bottom of the fixture to set the starting address for the fixture. View the LED display with the push buttons on the left. The top push button increases the number and the bottom push button decreases the number. Pressing and holding the push button increases the rate of change. **When fixtures are powered up, they may temporarily respond to DMX address 001 for the first few seconds of operation.** New address settings take effect after the LED display turns off.



CAUTION: *Do not push the up and down address buttons simultaneously, or internal fixture software settings can be inadvertently compromised and performance affected.*

Up and down address buttons are recessed to avoid inadvertent address changes. Use a Phillips screwdriver or other blunt device to lightly push the switches. To avoid damaging the switches, do not use sharp objects or excessive force when changing fixture address.

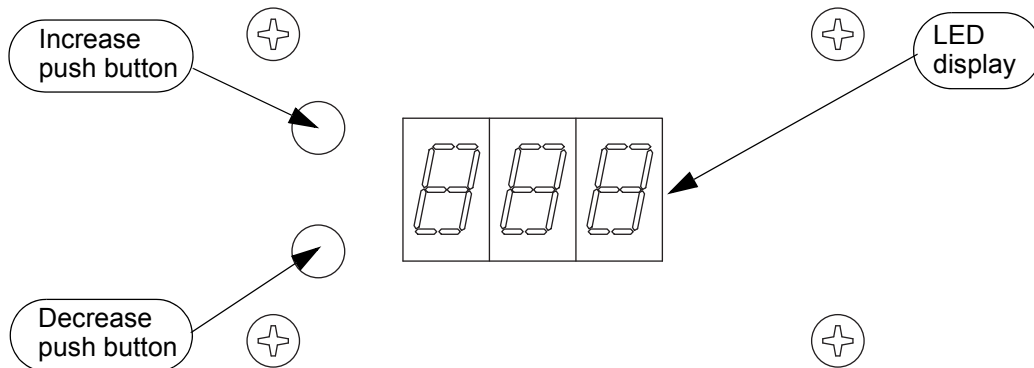

Addresses must be set between 1 and 505. Selador fixtures are manufactured based on an 11" LED array, or cell. Each cell can be addressed individually. Eleven inch fixtures have one cell, 21 fixtures have two cells, 42 fixtures have four cells, and 63 fixtures have six cells. A 42 fixture can be addressed as four individual cells, one cell, or any combination.

Each Selador fixture must be considered a separate DMX device for the purpose of DMX line-loading calculations, with the exception of 63 fixtures. These 63 fixtures must each be considered 1.5 DMX devices for line loading.

Fixture	Number of Cells	Number of DMX Devices
11	1	1
21	2	1
42	4	1
63	6	1.5

DMX line-loading practice dictates that no more than 31 devices can be daisy-chained together. Consequently, no combination of Selador fixtures totaling more than 31 DMX devices should be configured in one DMX line. For example, twenty 6-cell units (30 DMX devices) are okay. Twenty-one 6-cell units (31.5 DMX devices) are not acceptable. For runs of fixtures totaling more than 31 DMX devices, split the DMX runs by using a DMX splitter.



Note: *A fixture with a starting address higher than 505 will not have control of all parameters. Therefore, 505 is the highest address shown on the address display.*

Each cell of a Selador Series fixture occupies eight DMX channels. Seven are individual colours and the eighth is the master intensity. The table below describes the order and function of each address.

Lustr, Paletta, and Vivid-R

Data Channel	Colour	Value	Function
1	Fixture address	Red	Intensity 0-100%
2	Fixture address + 1	Red-orange	Intensity 0-100%
3	Fixture address + 2	Amber	Intensity 0-100%
4	Fixture address + 3	Green	Intensity 0-100%
5	Fixture address + 4	Cyan	Intensity 0-100%
6	Fixture address + 5	Blue	Intensity 0-100%
7	Fixture address + 6	Indigo	Intensity 0-100%
8	Fixture address + 7	Master intensity control	Overall intensity 0-100%

Vivid Fire

Data Channel	Colour	Value	Function
1	Fixture address	Red	Intensity 0-100%
2	Fixture address + 1	Red-orange	Intensity 0-100%
3	Fixture address + 2	Amber	Intensity 0-100%
4	Fixture address + 3	Green	Intensity 0-100%
5	Fixture address + 4	Not used	—
6	Fixture address + 5	Not used	—
7	Fixture address + 6	Indigo	Intensity 0-100%
8	Fixture address + 7	Master intensity control	Overall intensity 0-100%

Vivid Ice

Data Channel	Colour	Value	Function
1	Fixture address	Red	Intensity 0-100%
2	Fixture address + 1	Not used	—
3	Fixture address + 2	Not used	—
4	Fixture address + 3	Green	Intensity 0-100%
5	Fixture address + 4	Cyan	Intensity 0-100%
6	Fixture address + 5	Blue	Intensity 0-100%
7	Fixture address + 6	Indigo	Intensity 0-100%
8	Fixture address + 7	Master intensity control	Overall intensity 0-100%

Pearl

Data Channel	Colour	Value	Function
1	Fixture address	Warm white (3200K)	Intensity 0-100%
2	Fixture address + 1	Cool white (5700K)	Intensity 0-100%
3	Fixture address + 2	Master intensity control	Intensity 0-100%



Note: Use individual colour channels to create colour mix. Use Master Intensity Control to set fixture intensity. Master Intensity Control (Channel 8) must be above 0% for the fixture to output.

Colour Matching

This information will be provided in a future release of this manual.

Routine Maintenance

General Fixture Cleaning

To ensure optimum performance of your Selador series fixture, you should perform the following inspections and cleanings at least once a year. You may need to inspect or clean the fixture more often, depending on the type and amount of use your fixture experiences during the year.



CAUTION: *Allow fixture to cool down completely prior to cleaning.*

Disconnect all power and DMX cables prior to cleaning.

Check for excessive dust or debris in the heat-dissipating fins around the entire fixture enclosure. Clean using compressed air or a soft cloth. Keeping the heat sink components of the enclosure clean facilitates efficient cooling and extends LED longevity.

NEVER spray liquids into the fixture.

NEVER spray compressed air into a fixture that is powered-up.

- ☐ A can of compressed air or oil-free air from an air compressor set at a low setting can be used to blow through the vent holes and remove dust or other debris from the interior of the fixture. Dust build-up can cause overheating and premature shutdown.
- ☐ Remove the secondary lenses (if used) and clean out any dust and debris. All components, including the secondary lenses, can be cleaned using compressed, oil-free air as described above or a clean micro-fiber cloth. The use of any liquid cleaning solution is not recommended for Selador fixtures.
- ☐ Inspect all mounting hardware for wear and, if necessary, clean using compressed, oil-free air or a soft, lint-free cloth.

Cooling Fan Filter Cleaning

- ☐ Cooling fan filters should be inspected at a minimum every six months; more frequently if fixtures are powered on for more than four hours per day
- ☐ Use a vacuum cleaner to remove dust from each fan filter
- ☐ In dusty environments or conditions involving the use of smoke machines, clean the filters as follows:
 - Using fingernail or small flat-blade screwdriver, remove fan filter cover by prying under one of the two locking tabs
 - Carefully remove foam fan filter from fan assembly
 - Gently wash foam fan filter in a solution of mild dishwashing solution and water
 - Thoroughly rinse each foam fan filter in clear water
 - Pat dry or air-dry filters
 - After filters are completely dry, reinstall by inserting them into fan assembly
 - Reattach the filters to the fixture



Note: *No user-serviceable parts are inside.*

Fuse Capacities

All Selador Fixtures use 3AG 250V 32mm x 6mm fuses. Use the following capacity fuses for all Selador fixtures.

Fixture Size	Fuse Value
11	2 A
21	4 A
42	8 A
63	10 A



Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736
London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000
Rome, IT ■ Via Pieve Torina, 48, 00156 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +44 (0) 20 8752 8486
Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00
Hong Kong ■ Rm 1801, 18/F, Tower 1 Phase 1, Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325
Service: (Americas) service@etconnect.com ■ (UK) service@etceurope.com ■ (DE) techserv-hoki@etconnect.com ■ (Asia) service@etcasia.com
Web: www.etconnect.com ■ Copyright © 2010 ETC. All Rights Reserved. ■ Product information and specifications subject to change.
7401M1210 ■ Rev C ■ Released 2010-09