 


Gigaset C36H handset

- 1 Charge status of the battery pack
- 2 Internal number of the handset
- 3 Display keys
- 4 Message key
- 5 Handsfree key
- 6 Control key
- 7 Directory key
- 8 Talk key
- 9 End call and On/Off key
- 10 Ringtone on/off (press and hold in idle status)
- 11 Key lock on/off (press and hold)
- 12 Recall key
 - Confer (flash)
 - Dialling pause (press and hold)
- 13 Microphone
- 14 Alarm clock key

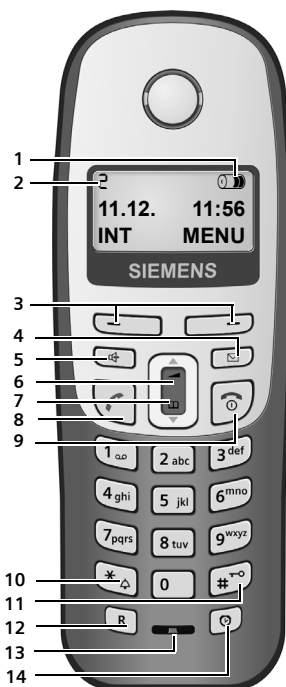

Display keys:

Pressing the keys launches whichever function that appears above them in the display.

Display icon	Function when pressed
INT	Call all registered handsets.
MENU	Open main/submenu (see Menu tree, page 6).
	Go back one menu level.
	Scroll up/down or adjust volume with
	Move cursor to left/right with
	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

Safety precautions



Read this User Guide and the safety precautions carefully before use. Explain their contents to your children, and the potential hazards associated with using the telephone.



Do not use the telephone in environments subject to explosion hazard (e.g. auto paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Only use **the mains unit supplied**.



Fit only the **approved rechargeable battery pack!** Never use a conventional (non-rechargeable) battery pack as this could damage your health and cause injury. Use the battery pack as directed in this user guide (page 2).



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.



Do not install the phone in a bathroom or shower room. The handset is not splashproof.

Emergency numbers cannot be dialled if the key lock (page 1) is activated!

Not all of the functions described in this User Guide are available in all countries.

Setting up the telephone for use

Setting up the handset for use

Note:

 
The display is protected by a plastic film. Please remove the protective film!

Fitting the battery pack

- ◆ Place the battery leads in the cable guides so that the battery cover cannot catch on the leads and damage them when it is closed.
- ◆ Use only the rechargeable **battery pack** recommended by Gigaset Communications GmbH * (page 5), i.e. never use a conventional (non-rechargeable) battery pack as this may cause significant damage to health and property. For example, the outer casing of the battery pack could be destroyed or the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.
- ◆ Only use the battery charger supplied.
- ◆ Only place the handset in the charging cradle that is intended for it.


* Gigaset Communications GmbH is a licensee of the Siemens trademark.

- ◆ Insert the plug into the socket as shown in the enlarged view.
- ◆ Insert the battery pack.
- ◆ Place the cords in the cord routing.

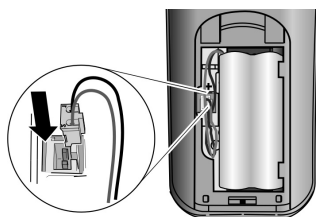

Closing the battery cover

 Insert the cover into the top end of the battery compartment and press down until it clicks into place.

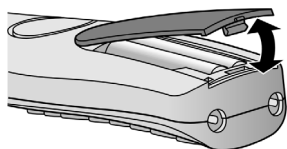

Opening the battery cover

Place your fingernail between the cover and the housing and pull the cover upwards.

Registering the handset

A Gigaset C36H handset can be registered on up to four base stations.

You must initiate handset registration on the handset and on the base station.

After it has registered, the handset returns to idle status. If several handsets are registered on the base station, the internal number is shown in the top left of the display after registration, e.g. **2**. If the internal numbers 1 to 4 have already been assigned (four handsets have already been registered), handset number four is de-registered and overwritten.

On the base station

To find out how to register the handset on the base station, see the user guide for the base station.

On the handset

MENU → Settings → OK → Handset → OK → Register HS → Enter the base station PIN (default setting: 0000) **→ OK.**

Registering flashes in the display.

Registration can take up to 5 minutes.

Note:

You can register the Gigaset C36H handset on the Gigaset C36H0/C36H5 base station **automatically** too. **Precondition:** The handset is not registered on a base station. Place the handset in the charging cradle of the base station with its **display facing forward**. You will hear a confirmation tone. Leave the handset in the base station until it is registered.

Charging the battery pack

Plug the mains unit for the charging cradle into the socket and place the handset in the charging cradle with the **display facing forward**.

To charge the battery pack, leave the handset in the charging cradle for approx. 5 hours. The battery pack is now fully charged. The charge status of the battery pack is only correctly displayed after uninterrupted charging/discharging. Therefore you should not interrupt the charging process.

Charging is electronically controlled to prevent overcharging. The battery pack heats up during charging. This is normal and not dangerous. After a time its charge capacity will decrease for technical reasons.

You must set the date and time to ensure that the times of calls are logged correctly (see Menu tree page 6).

Once the phone is registered and the time set, the idle display looks as shown on page 1.

Activating/deactivating the handset

Press and **hold** the End call key .

If you place a deactivated handset into the charging cradle, it will automatically activate.

Making calls

Making external calls and ending a call

External calls are calls using the public telephone network.

 (Enter the phone number) → .

The number is dialled. (Or you can **first** press and **hold**  [dial tone] and then enter the number.) During the call you can adjust the earpiece volume using .

End the call/cancel dialling:

Press the End call key .

Answering a call

An incoming call is indicated by ringing, by a flashing handsfree key  (Gigaset A 26) and a display on the screen.

You can answer the call by:

- ◆ Pressing the Talk key .
- ◆ Pressing the handsfree key .

When **Auto Answer** is activated (see Menu tree, page 6) simply remove the handset from the charging cradle.

Handsfree talking

Once you have entered the phone number you can immediately call in handsfree mode by pressing  (the  key lights up continuously). During a call, you can switch between the earpiece and handsfree mode by pressing . Set the handsfree volume with .

Using the directory and lists

Directory

To open the directory: press .

You can save up to 40 phone numbers (max. 32 digits) with corresponding names (max. 14 characters).

Note:

You can assign a number from the directory to a key for speed dialling (page 3).

Saving the first number in the directory

 → **New Entry?** → **OK**

	Enter number and press OK .
	Enter name and press OK .

Saving a number in the directory

 → **MENU** → **New Entry** → **OK**

	Enter number and press OK .
	Enter name and press OK .

Selecting a directory entry

Open the directory with . You have the following options:

- ◆ Use  to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name or scroll to the entry with , if required.

Dialling with the directory

 →  (Select entry) → 

Using other functions

 →  (Select entry) → **MENU**

The following functions can be selected with :

New Entry	Add a new entry.
Show Number	Display the phone number.
Use Number	Edit or add to a saved number. Then dial or use other functions with MENU .
Edit Entry	Edit selected entry.
Delete Entry	Delete selected entry.
Send Entry	Send a single entry to another handset (page 4).
Delete List	Delete all directory entries.
Send List	Send the complete list to another handset (page 4).
Shortcut	For speed dial, assign the current entry to a key.

IP Dialling and VIP storage

You can store IP or VIP numbers on 0,2-9. Dial the number by pressing and holding down the relevant number key.

Storing the IP number

Press the control key  → **MENU** → **OK** → **New Entry** → **OK**

Please follow this sequence:

- 1 Enter the IP access number.
 - 2 Insert "P" by pressing and holding the **R** key if necessary.
 - 3 Enter IP number and password, end with #.
- End with **OK**, then enter name, such as "IP"

Note:

The entry method may differ when using different IP Cards. VIP numbers can be entered directly.

Setting the shortcut key

MENU → Scroll to  **Shortcut** → Scroll  to select a number (0,2-9), for example: **Shortcut: 2** → **OK**

Using the shortcut key

By pressing and holding the shortcut key, the relevant IP or VIP number will be dialled. (For example: press and hold key 2, the IP number will be dialled, then dial the long distance number)

Sending the directory to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 →  (Select entry) → **MENU** → **Send Entry / Send List** → **OK** →  (Enter the internal number of the receiving handset) → **OK**

Last number redial list

This list contains the ten last dialled numbers.

Dialling from the last number redial list

	Press the key briefly .
	Select entry.
	Press the Talk key again. The number is dialled.

Managing entries in the last number redial list

	Press the key briefly .
	Select entry.
MENU	Press the display key.

You can select the following settings:

Use Number	(as in the directory, page 3)
Copy to Dir.	Copy an entry to the directory
Delete Entry	(as in the directory, page 3)
Delete List	(as in the directory, page 3)

Opening lists with the message key

When a **new entry** is made in the list, a signal sounds and the display blinks. The display also shows a message.

When you press the  key, all the lists are displayed. If only one list contains new messages, this will be opened automatically.

Setting handset

Change display language

MENU → **Settings** → **OK** → **Handset** → **OK** → **Language** → **OK** → Select the language → **OK**

The current language is indicated by .

If you accidentally choose a language you do not understand:

MENU → **3 2 1** (Press the keys one after the other)
Select the correct language with  and press **OK**.

Setting the alarm clock

Activating/deactivating the alarm clock

MENU → **Alarm Clock** → **OK** → **Activation** → **OK** ( = in)

Or: Press the alarm clock key .

When the alarm clock rings, press any key to switch it off for 24 hours.

Setting the wake up time

MENU → **Alarm Clock** → **OK** → **Wake-up time** → **OK**

Enter the wake up time in hours and minutes, then press **OK**.

Resetting the handset

You can reset any individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration on the base station will be retained.

MENU → **Settings** → **OK** → **Handset** → **OK** → **Reset Handset** → **OK**

Cancel the reset with .

Appendix

Entering special characters

Standard characters

	1x	2x	3x	4x	5x	6x
1	Space	1	£	\$	¥	□
0	.	,	?	!	0	+
*△	*	/	(	)	<	=
#↵	Abc-> 123	123-> abc	#	@		&

Specifications

Recommended battery pack

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

C36H handset: V30145-K1310-X359, -X402

The handset is supplied with the recommended battery pack.

General specifications

WDCT standard	is supported
Range	up to 300 m outdoors, up to 50 m indoors
Power supply to charging cradle	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C; 20% to 75% humidity

Care

Wipe the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

- ◆ **Switch off the handset and remove the battery pack immediately.**
- ◆ Allow the liquid to drain from the handset.
- ◆ Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
- ◆ **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your phone, you can contact us any time at

www.gigaset.com/cn. Or

Call hotline: 4006 706 007

The table below contains a list of common problems and possible solutions.

Problem	Cause	Solution
Nothing appears in the display.	The handset is not switched on. Battery pack is flat.	Press the End call key  for approx. 5 seconds or place the handset into the charging cradle. Charge/replace the battery pack (page 2).
No reaction to keystroke.	The key lock is activated.	Press the hash key # for approx. 2 seconds (page 1).
No wireless connection to the base station, Base flashes in the display.	The handset is outside the range of the base station. The handset is not registered. The base station is not switched on.	Move the handset closer to the base station. Register the handset (page 2). Check the mains plug on the base station.

Menu tree

Your phone has an extensive range of features. These are offered in the form of menus.

With the phone in **idle status**, press **MENU** (open menu), scroll to the required function and then press **OK** to confirm your choice.

To return to idle status: press and hold key . There are two ways in which you can access a function:

- ◆ Scroll with keys  and ,
- ◆ Key in the appropriate digit combination, e.g. **MENU 3 1** to set the date and time.

1 Alarm Clock

1-1	Activation	Activating/deactivating the alarm clock
1-2	Wake-up time	Input format: HHMM

2 Audio Settings

2-1	Ringer Volume	5 levels + "Crescendo" available			
2-2	Ringer Melody	2-2-1	External Calls	10 ringtones available for external calls	
		2-2-2	Internal Calls	10 ringtones available for internal calls	
		2-2-3	Alarm Clock	10 ringtones available for alarm clock	
2-3	Advis. Tones	activating/deactivating			
2-4	Battery Low	2-4-1	Off	Tone when battery pack is almost flat:	never
		2-4-2	On		always
		2-4-3	During Call		only during a call

3 Settings

3-1	Date/Time	Enter date (YY MMDDformat), then time (HHMM format)		
3-2	Handset	3-2-1	Language	Set the display language
		3-2-2	Auto Answer	Activate/deactivate auto-answer
		3-2-3	Register HS	Manually register the handset
		3-2-4	Reset Handset	Reset the handset

Issued by
Gigaset Communications GmbH
Schlavenhorst 66
D-46395 Bocholt
Gigaset Communications GmbH is a licensee of the Siemens trademark.

© Gigaset Communications GmbH 2009
All rights reserved. Subject to availability.
Rights of modification reserved.

www.gigaset.com

A31008-M1851-Y101-1-5D19

This user guide is made from 100% recycled paper.

GigasetC36H Product type:
HWDCD8218(100)P/TSD