


FlexTest™ SE

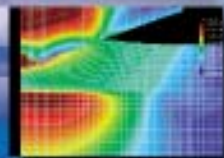

Service Information



Copyright information

© 2002 MTS Systems Corporation. All rights reserved.

Trademark information

MTS, Temposonics, and TestWare are registered trademarks of MTS Systems Corporation.

FlexTest, MPT, MultiPurpose TestWare, Station Builder, Station Manager, and TestStar are trademarks of MTS Systems Corporation.

Adobe is a registered trademark of Adobe Systems Inc.

Acrobat is a trademark of Adobe Systems Inc.

PowerPC is a registered trademark of International Business Machines Corporation

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Software verification and validation

MTS software is developed using established quality practices in accordance with the requirements detailed in the ISO 9001 standards. Because MTS authored software is delivered in binary format, it is not user accessible. This software will not change over time. Many releases are written to be backwards compatible, creating another form of verification.

The status and validity of MTS' operating software is also checked during system verification and routine calibration of MTS hardware. These controlled calibration processes compare the final test results after statistical analysis against the predicted response of the calibration standards. With these established methods, MTS assures its customers that MTS products meet MTS' exacting quality standards when initially installed and will continue to perform as intended over time.

Publication information

Manual Part Number	Publication Date
100-077-222 C	October 2002

Contents

Preface 9

- About Your Manuals 10
- Conventions 12
- Technical Support 14

Chapter 1 Introduction 19

- Stand-Alone Configuration 20
 - Basic Functions 22
- Automated Configuration 23

Chapter 2 Installation 25

- Installing the Plug-in Modules 26
 - VMEbus Modules 27
- Chassis Installation Options 30
 - Connecting Electrical Power 32
- Handle Kit Installation 36

Chapter 3 Cabling 39

CE EMC Compliant Cabling	40
Stand-Alone Cabling Overview	41
Automated Cabling Overview	42
Multiple Controller Connections	43
Cable Part Numbers	45
Model 493.40 I/O Carrier Connections	47
Valve Connections	48
Analog I/O Connections	52
Encoder Connections	54
Accelerometer Connections	55
Workstation Connection	56
Service Connection	57
Model 493.42 System I/O Connections	58
J25 Hydraulic Power Unit Connection	59
J28 Hydraulic Service Manifold Connector	61
J29 Emergency Stop Connections	62
J43 Interlock	64
J49 Auxiliary Power	65
J51 Box In	66
J52 Box Out	67
J54 Digital Inputs	68
J55 Digital Outputs	69

Chapter 4 Servovalve Controls 71

Setting the Servovalve Polarity	73
Getting Things Ready	74
Adjusting Valve Balance	75
Dither	76
Tuning the Inner loop	77
Zero the Spool Position Signal	78
Inner Loop Signals	79

Chapter 5 Sensors 81

Sensor Signals	82
Transducer Connections	83
Sensor Cables	86
Specifications	86
Sensor Cable Part Numbers	87
Shunt Calibration	89
Shunt Calibration/Bridge Completion	92
I/O Carrier Module	92

Chapter 6 Calibration 95

Before You Begin	97
Calibrating an LVDT	99
Abbreviated Procedure	105
Calibrating a Force Sensor	128
Abbreviated Procedure	129
Calibrating Encoders	161
Abbreviated Procedure	162
Calibrating Temposonics Sensors	167
Abbreviated Procedure	168
Calibrating an Extensometer	174
How To Calibrate an Extensometer	174

Chapter 7 Tuning 191

About Tuning	192
If You've Never Tuned Before	193
When to Tune	194
Control Mode Characteristics	196
How the Tuning Controls Work	199
Creating a Tuning Program	207
Other Considerations	210
Monitoring Waveforms	211
Tuning Displacement	215
Tuning Force	216
Auto tuning	217
How to Auto-Tune Control Modes	218
Tuning a CLC Control Mode	219

Appendix A Hydraulic Configurations 221

Multiple Controller Interconnections	224
Independent HSM (no HPU)	224
Independent HSM (shared HPU)	225
Shared HSM (with HPU)	226
Shared HSM (no HPU)	227
Independent HSM with HPU (FO-LO)	228

Appendix B Model 493.07 HPU Converter 229

Appendix C Service Tools 231

FlexTest SE Service Tool Application 232

Initializing a FlexTest SE Controller 235

Updating System Options 237

 System Options Tab 237

 Unit Assignment Set Tab 238

 Chassis Attributes Tab 239

 Passwords Tab 240

 User Files Tab 241

Index 243

Preface

Safety first!

Before you attempt to use your MTS equipment in your test system, read and understand the *Safety* manual. Like an automobile, your test system is very useful—but if misused, it is capable of deadly force. You should not be afraid of your test system, but you should always maintain a healthy respect for it.

Improper installation, operation, or maintenance of MTS equipment in your test system can result in hazardous conditions that can cause severe personal injury or death, and damage to your equipment and specimen. Again, read and understand the *Safety* manual before you continue. It is very important that you remain aware of hazards that apply to your test system.

Contents

About Your Manuals 10

Conventions 12

Technical Support 14

About Your Manuals

This manual provides detailed information about the installation, cabling, and set-up of the MTS FlexTest SE Controller, including all controller, computer (optional), sensor, I/O, and hydraulic connections. This manual also provides basic information about calibrating sensor/conditioner pairs, initial system tuning, and adjusting servovalves.

Summary

This manual includes the following chapters.

[Chapter 1, “Introduction”](#)—This chapter introduces a MTS FlexTest SE Controller, and includes a table of the basic specifications of the controller and the associated electronic components.

[Chapter 2, “Installation”](#)—This chapter covers the installation of the MTS FlexTest SE Controller, including connections and mounting.

[Chapter 3, “Cabling”](#)—This chapter contains detailed cabling information, including pin-out assignments of all the connectors.

[Chapter 4, “Servovalve Controls”](#)—This chapter describes servovalve adjustments to optimize the interface between the controller and the servovalve.

[Chapter 5, “Sensors”](#)—This chapter describes sensor signals, connections, and cabling. Shunt calibration for DC sensors is also described.

[Chapter 6, “Calibration”](#)—This chapter describes how to calibrate the sensors connected to your system.

[Chapter 7, “Tuning”](#)—This chapter describes system tuning basics.

[Appendix A, “Hydraulic Configurations”](#)—This appendix describes how to connect the Model 493.02 Chassis to a variety of MTS hydraulic configurations.

[Appendix B, “Model 493.07 HPU Converter”](#)—This appendix describes the Model 493.07 HPU Converter including connectors and jumper configurations.

[Appendix C, “Service Tools”](#)—This appendix describes the FlexTest SE Service Tools application.

Access the electronic manual

If you have a PC-supervised Controller, you can access an electronic version of this manual (after you install your MTS software) from the PC desktop, as follows:



Programs > FlexTest SE > Online Documentation

If you have a stand-alone Controller, an electronic version of this manual is available on the 793 System Software CD that accompanies your Controller.

Other MTS manuals

If your purchase includes other MTS equipment, you will receive additional MTS manuals in paper or electronic form.

If you have purchased a test system, it may include an *MTS System Documentation CD*. This CD contains an electronic copy of all of the MTS manuals that pertain to your test system, including controller manuals, hydraulic and mechanical component manuals, assembly drawings and parts lists, and operation and preventive maintenance manuals.

Conventions

The following paragraphs describe some of the conventions that are used in your MTS manuals.

Hazard conventions

Hazard notices are embedded in this manual and contain safety information that is specific to the task to be performed. Hazard notices immediately precede the step or procedure that may lead to an associated hazard. Read all hazard notices carefully and follow the directions that are given. Three different levels of hazard notices may appear in your manuals. Following are examples of all three levels.

Note *For general safety information, see the Safety manual included with your system.*

Danger notices

Danger notices indicate the presence of a hazard which *will* cause severe personal injury, death, or substantial property damage if the danger is ignored. For example:



High intensity light and dangerous radiation are emitted by class 3B lasers.

Viewing a class 3b laser directly or viewing it using optical instruments will cause immediate and severe injury.

Avoid eye or skin exposure to the laser beam. Ensure that all power to the laser is off before attempting any maintenance, service, or adjustment procedure.

Warning notices

Warning notices indicate the presence of a hazard which *can* cause severe personal injury, death, or substantial property damage if the warning is ignored. For example:



Hazardous fumes can accumulate in the test chamber as a result of testing.

Breathing hazardous fumes can cause nausea, fainting, or death.

Ensure the chamber is properly ventilated before you open the chamber door or put your head or hands into the chamber. To do this, ensure the temperature controller is off and allow sufficient time for the ventilation system to completely exchange the atmosphere within the chamber.

Caution notices

Caution notices indicate the presence of a hazard which *will* or *can* cause minor personal injury, cause minor equipment damage, or endanger test integrity if the caution is ignored. For example:



This specimen can develop sharp edges as a result of testing.

Handling the specimen with unprotected hands can result in cuts and slivers.

Always wear protective gloves when you handle the specimen.

Other conventions

Other conventions used in your manuals are described below:

Notes

Notes provide additional information about operating your system or highlight easily overlooked items. For example:

Note *Resources that are put back on the hardware lists show up at the end of the list.*

Special terms

The first occurrence of special terms is shown in *italics*.

Illustrations

Illustrations appear in this manual to clarify text. It is important for you to be aware that these illustrations are examples only and do not necessarily represent your actual system configuration, test application, or software.

Electronic manual conventions

This manual is available as an electronic document in the Portable Document File (PDF) format. It can be viewed on any computer that has Adobe Acrobat Reader installed.

Hypertext links

The electronic document has many hypertext links displayed in a blue font. All blue words in the body text, along with all contents entries and index page numbers are hypertext links. When you click a hypertext link, the application jumps to the corresponding topic.

Technical Support

Start with your manuals

The manuals supplied by MTS provide most of the information you will need to use and maintain your equipment. If your equipment includes MTS software, you should look for README files for additional product information.

If you cannot find answers to your technical questions from these sources, you can use the internet, telephone, or fax to contact MTS for assistance. You can also fill out the Problem Submittal Form that is available on the MTS web site and in the back of many MTS manuals that are distributed in paper form.

Technical support numbers

MTS provides a full range of support services after your system is installed. If you have any questions about a system or product, contact MTS in one of the following ways.

MTS web site www.mts.com

The MTS web site gives you access to our technical support staff by means of a Problem Submittal Form and a Technical Support link.

- Problem Submittal Form:
www.mts.com > Contact MTS > Problem Submittal Form
- Technical Support:
www.mts.com > Contact MTS > Technical Support

E-mail: info@mts.com

Telephone HELPLine 800-328-2255
Weekdays 7:00 A.M. to 6:00 P.M.,
Central Time

Fax 952-937-4515
Please include an MTS contact name if possible.

Before you contact MTS

MTS can help you more efficiently if you have the following information available when you contact us for support.

Know your site number and system number

The site number contains your company number and identifies your equipment type (material testing, simulation, and so forth). The number is usually written on a label on your MTS equipment before the system leaves MTS. If you do not have or do not know your MTS site number, contact your MTS sales engineer.

Example site number: 571167

When you have more than one MTS system, the system number identifies which system you are calling about. You can find your job number in the papers sent to you when you ordered your system.

Example system number: US1.42460

Know information from prior technical assistance

If you have contacted MTS about this problem before, we can recall your file. You will need to tell us the:

- MTS notification number
- Name of the person who helped you

Identify the problem

Describe the problem you are experiencing and know the answers to the following questions.

- How long has the problem been occurring?
- Can you reproduce the problem?
- Were any hardware or software changes made to the system before the problem started?
- What are the model and serial numbers of the suspect equipment?

Know relevant computer information

If you are experiencing a computer problem, have the following information available.

- Manufacturer's name and model number
- Operating software type and service patch information. Examples:
 - Windows XP Service Pack 1 (SP1)
 - Windows 2000 Service Pack 3 (SP3)
 - Windows NT 4.0 Service Pack 7 (SP7)
- Amount of system memory. Example: 640 MB of RAM.
- Amount of free space on the hard drive in which the application resides. Example: 11.2 GB free space, or 72% free space.
- Current status of hard-drive fragmentation. Example: 3% total fragmentation.

Know relevant software information

For MTS software application problems, have the following information available.

- The software application's name, version number, build number, and if available, software patch number. This information is displayed briefly when you launch the application, and can typically be found in the "About" selection in the "Help" menu.

Example: Station Manager, Version 3.3A, Build 1190, Patch 4

- The same information for other MTS software included with your system
- Names of other non-MTS applications that are running on your computer, such as screen savers, keyboard enhancers, print spoolers, and so forth

If you contact MTS by phone

Your call will be registered by a HELPLine agent if you are calling within the United States or Canada. Before connecting you with a technical support specialist, your agent will ask you for your site number, name, company, company address, and the phone number where you can normally be reached.

Identify system type

To assist your HELPLine agent with connecting you to the most qualified technical support specialist available, identify your system as one of the following types:

- Electromechanical materials test system
- Hydromechanical materials test system
- Vehicles test system
- Vehicles component test system
- Aero test system

Be prepared to troubleshoot

Prepare yourself for troubleshooting while on the phone.

- Call from a telephone close to the system so that you can try implementing suggestions made over the phone.
- Have the original operating and application software media available.
- If you are not familiar with all aspects of the equipment operation, have an experienced user nearby to assist you.

**Write down relevant
information**

Prepare yourself in case we need to call you back.

- Remember to ask for the notification number.
- Record the name of the person who helped you.
- Write down any specific instructions to be followed, such as data recording or performance monitoring.

After you call

MTS logs and tracks all calls to ensure that you receive assistance and that action is taken regarding your problem or request. If you have questions about the status of your problem or have additional information to report, please contact MTS again.

**Problem Submittal
Form in MTS manuals**

In addition to the Problem Submittal Form on the MTS web site, there is also a paper version of this form (postage paid) in the back of many MTS manuals. Use this form to forward problems you are experiencing with your MTS equipment, whether it be software, hardware, manuals, or service. This form includes check boxes that allow you to select when you expect us to respond to your input. We guarantee a timely response—your feedback is important to us.

Overview This chapter provides an overview of the MTS Model 493.02 FlexTest SE Controller. It describes the basic functions and components included in the Controller's standard and automated configurations, and includes a table of specifications.

Contents [Stand-Alone Configuration](#) 20
 [Basic Functions](#) 22
 [Automated Configuration](#) 23


Stand-Alone Configuration

The Controller is a fully digital, single-channel, Proportional, Integral, Derivative, Feedforward (PIDF) servocontroller. It provides complete control of one servohydraulic channel or station in an MTS test system.

Front Panel

Operations are controlled through the Controller's front panel. An easy-to-read color display shows the status of the parameter currently being adjusted or monitored. A simple scroll-through menu provides quick access to any parameter or function. All parameters are entered through a keypad or adjusted by a single multi-turn knob. The current settings are saved in a flash disk and are automatically recalled at start up.


In addition to providing the means to adjust and monitor the test parameters, the front panel also provides program control, system hydraulic pressure control, and an Emergency Stop button that shuts down the system hydraulics in an emergency situation. BNC monitor connectors are also provided to allow you to connect easily to external readout devices.

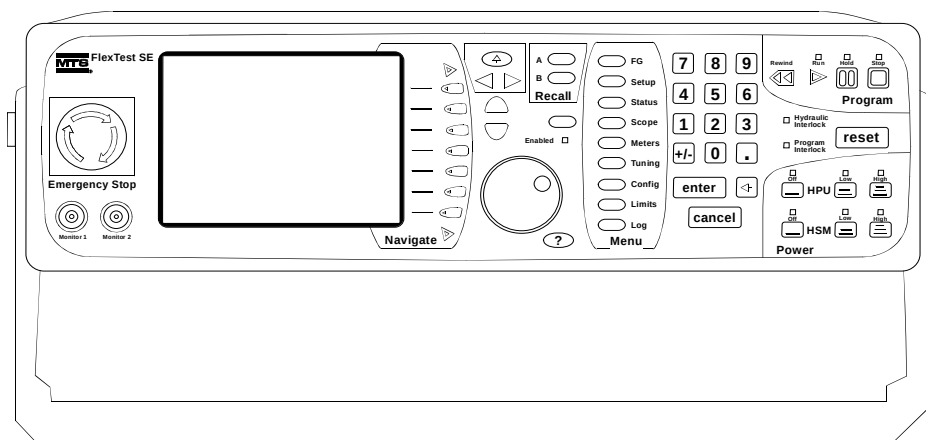

FlexTest SE Front Panel

Back Panel

Except for two front panel BNC connectors, all cabling is accessed through the Controller's back panel. It is not necessary to remove the chassis cover to access jumpers or switches.

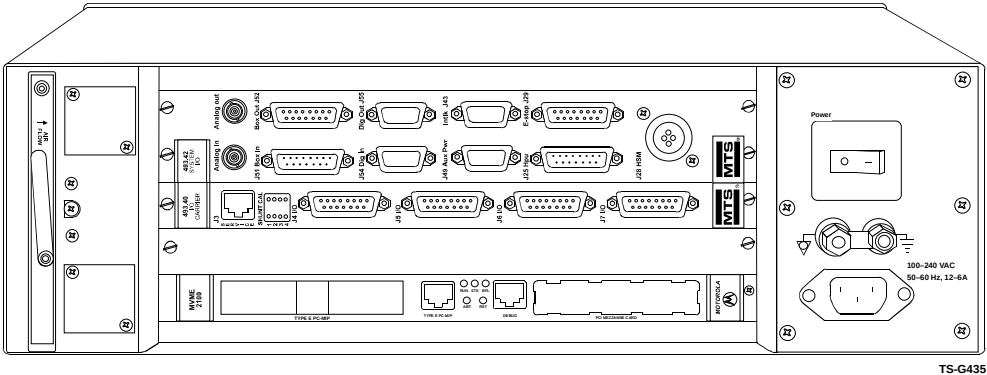

FlexTest SE Back Panel

Plug-In Modules

In the standard configuration, the Controller's VME chassis contains three plug-in modules:

- A Model 498.96-4 Processor
- A Model 493.40 I/O Carrier module
- A Model 493.42 System I/O Module

Basic Functions

Interlocks

The Controller provides interlocks for adjustable upper/lower limit, underpeak, error detection for each sensor conditioner installed, and others. These interlocks can be daisy-chained for multiple controller configurations.

Function Generation

A function generator (with a built-in cycle counter) in the Controller provides basic sine, square, triangle, and ramp command waveforms.

For tests requiring complex waveforms, the Controller provides an external command input to receive externally generated commands.

The function generator waveform can be output to another MTS FlexTest SE Controller (or any external device) for synchronization.

Hydraulic Pressure Control

The Controller provides complete control of the test system hydraulics. It can be used to control a hydraulic power supply and a hydraulic service manifold to apply low and high hydraulic pressure to the test system. In multiple Controller configurations, the Controller provides first-on/last-off control of the hydraulic power supply in addition to control of a local hydraulic service manifold.

Automated Configuration

In the automated configuration, the Controller has added capabilities—it can acquire data, perform automated testing, apply complex control compensation techniques to the servoloop, and execute sophisticated test procedures that include complex triggering mechanisms.

The automated configuration includes the Controller, a personal computer, and the Model 793.00 System Software bundle. It may also include optional MTS software for additional capability.

Automated procedures

The “Automated” paths and procedures described in this manual assume the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Model 793.00 System software

The Model 793.00 System Software bundle consists of the following standard applications:

- **Station Builder™**—This application allows you to allocate controller resources, such as valve drivers and conditioners, to create station configuration files.
- **Station Manager™**—This application works with the Controller to maintain station servo control, and allows you to perform typical test operations, such as:
 - Monitor station interlocks and control hydraulic or electromechanical station power.
 - Optimize and monitor the various analog and digital signals sent to and from your controller.
 - Run, hold, and stop tests.
 - Create parameter sets that define the operational characteristics, such as sensor ranges and conditioner gains, of the station resources in your station configuration files.
- **Basic TestWare®**—This application allows you to create simple monotonic and cyclic tests and to acquire data.
- **Station Desktop Organizer**— This utility allows you to manage the windows and displays associated with Series 793 software applications.

Series 793 software options

The following products are available as options with the Model 793.00 System Software bundle:

- **Model 793.10 MultiPurpose TestWare® (MPT)**—A sophisticated test design application. This application allows you to build test procedures by defining and linking modular test activities together and assigning triggering relationships between each activity.
- **Model 793.11 Profile Editor™**—A sophisticated arbitrary waveform design application. This application allows you to create arbitrary waveforms that can be played-out with the MultiPurpose TestWare application.

Rack mounting requirements

The Controller can be mounted in an equipment rack. When doing so allow a minimum of 2 in. (5.1 cm) on either side of the Controller for air flow. There are no spacing requirements for the top or bottom of the Controller. If the equipment rack is equipped with doors, allow adequate clearance for the front and rear of the Controller. The rear of the Controller requires a minimum clearance of 6 in. (15.24 cm) to accommodate cables.

This section describes how to install the MTS FlexTest SE Chassis and connect it to your system components.

Contents	Installing the Plug-in Modules	26
	VMEbus Modules	27
	Chassis Installation Options	30
	Connecting Electrical Power	32
	Handle Kit Installation	36

Installing the Plug-in Modules

This section describes how to install the plug-in modules into the chassis. The modules plug into a backplane connector and are secured to the chassis with a screw at the top and at the bottom of the module faceplate.

CAUTION

The plug-in modules contain static-sensitive components.

Improper handling of the module can cause component damage.

Be sure to follow these precautions when handling modules:


- Turn off electrical power before installing or removing a module.
 - Use a static ground strap to ground yourself to the chassis ground before touching the chassis or a module.
 - Keep unused modules in conductive bags. Also be sure you are grounded when removing a module from a conductive bag.
 - Handle modules with their front panel or circuit card edges. Do not touch any circuit card components, pins, or circuit connection points.
-

VMEbus Modules

The VMEbus compatible modules should be installed in chassis slots according to the following guidelines.

- The processor module is installed in slot 1
- The I/O carrier module is installed in slot 2.
- The System I/O module is installed in slots 4 and 5.

Slot
Position

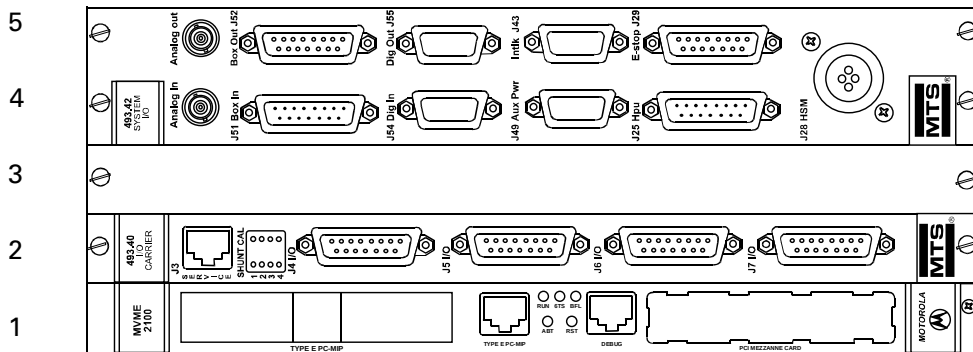

VMEbus Modules

SLOT	MODULE NAME	FUNCTION
Slot 1	PowerPC®	Provides PIDF processing for the Controller and management of the other plug-in modules in the stand-alone configuration. Provides an interface between the Controller and an external computer in the automated configuration.
Slot 2	Model 493. 40 I/O Carrier	Supports up to four daughter boards that can be used for sensor conditioning, driving a servovalve, and in the automated configuration, providing A/D and/or D/A channels.
Slot 3	Blank in standard configurations. May be used for additional Model 493.40 I/O Carrier (factory installed option for PC-supervised systems)	Addition carrier chassis that can house up to four daughter boards for expanded sensor conditioning and A/D and D/A channels Note <i>This is not a standard option. It is available only for PC-supervised systems and must be configured at the factory. For more information, contact MTS.</i>
Slots 4, 5	Model 493.42 System I/O	Provides box-in and box-out connections for daisy chaining multiple Controllers, analog and digital I/O, E-Stop, and HSM and HPU control.

Model 493.40 I/O Carrier Daughter Boards (part 1 of 2)


MODEL	MODULE NAME	FUNCTION
493.14	Valve Driver	Produces the control signal for a Series 252 Servovalve.
493.15	3-Stage Valve Driver	Produces the control signal for a Series 256 or 257 Servovalve.
493.25	Universal Conditioner	Processes the signals from either an AC or DC-type sensors.
493.45	A/D	Converts up to six external analog signals to digital signals for use by the controller.
493.46	D/A	Converts up to six internal digital signals to analog signals for use by external devices.

Model 493.40 I/O Carrier Daughter Boards (part 2 of 2)

MODEL	MODULE NAME	FUNCTION
493.47	Encoder	Processes the signals from an encoder or a Temposonics III transducer with an SSI interface.
493.48	Acceleration Conditioner	Processes the signals from an accelerometer. Each Acceleration Conditioner daughter board can support up to three accelerometers. Before installing this board, specific jumpers must be set on the I/O Carrier module. See “Accelerometer Connections” on page 55 for more information on jumper settings.

Chassis Installation Options


The chassis can be fitted with the optional handle kit for table-top use in the stand-alone configuration (shown below) and the automated configuration, and it can be installed without the handle-kit in a standard MTS equipment rack.

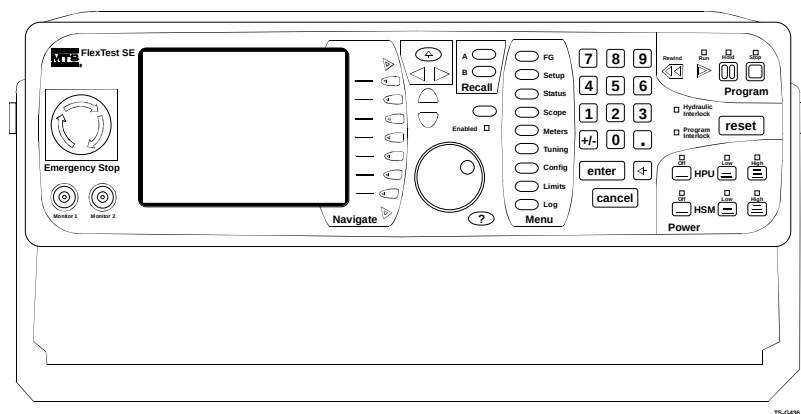

Console installation

The rack-mounted chassis can be installed in any Model 490.8x console. Install the console with the FlexTest SE Rack Mounting kit (part number 100-063-209).

The Rack Mounting kit provides the hardware (L-shaped brackets) to support the chassis and mounting screws to secure the chassis to the console rack.

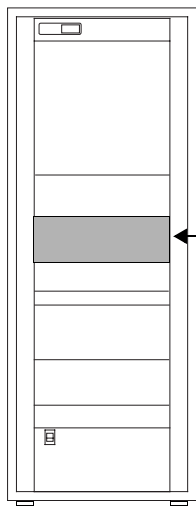**Rack Mount Option**

The Controller chassis is designed to fit into a standard electronics rack.


Connecting Electrical Power

Electrical connections must be made by qualified personnel and conform to local codes and regulations. An electrical service panel to provide the electrical power feed (line voltage) to the chassis is not necessary, but may be required by local electrical codes.

Note Local electrical codes supersede any information found here.


Grounding

The chassis will not function correctly if it is not grounded as shown. Be sure your power source is also properly grounded. The chassis includes two grounds: a chassis ground and a signal ground. The two grounding lugs are connected together with an external shorting bar when the chassis is manufactured.

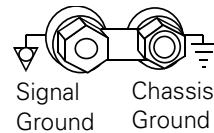

- For the console configuration, remove the shorting bar from the ground lugs and connect the chassis ground to the console rail.
- For a stand-alone configuration, always connect the shorting bar to both ground lugs.


Grounding the Chassis

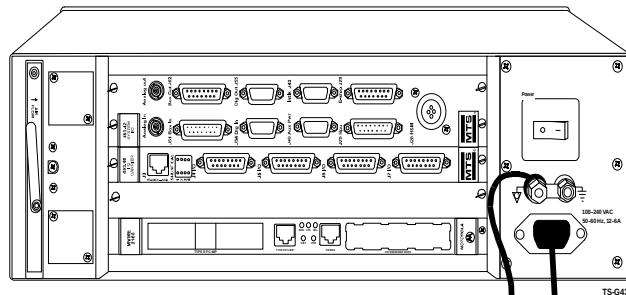

System ground cable
(P/N377661-02)
connected to other
components.

Chassis ground is
connected through the
power cord connector.

Rack Mount Configuration

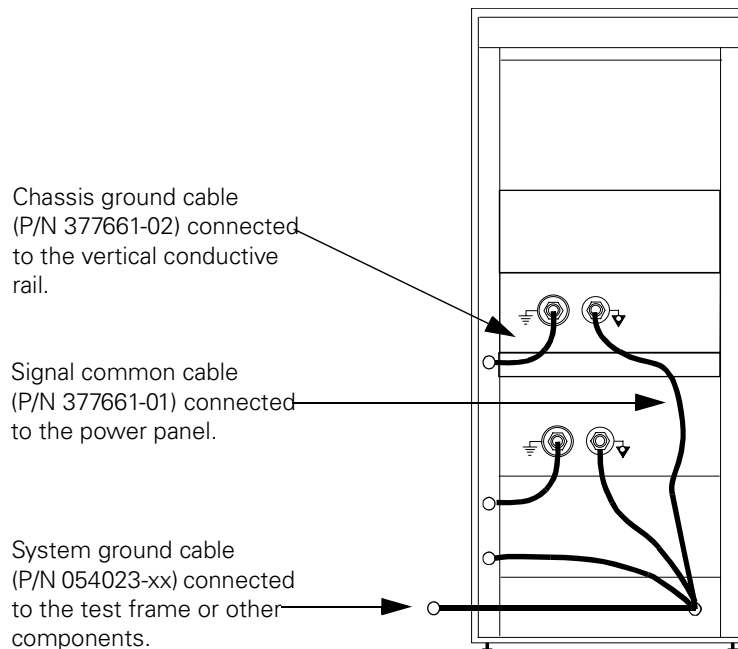

The AC power ground is through the power cord. The power cord must be plugged into both the chassis and the power source for proper grounding.

CAUTION

Proper grounding is required for safe operation.

It is also required to meet EMC emission and susceptibility requirements.

Power

All equipment related to the chassis should be connected on the same fused power circuit.

- The power supply can accept single-phase voltages within 90–264 V AC at frequencies between 47–63 Hz.
- The maximum continuous power usage is approximately 300 W. The current draw depends on the local voltage supply. A 15 amp line will be adequate for the chassis and the computer.


- The power supply automatically selects the proper voltage range and line frequency.
- The power supply is protected with an external circuit breaker in the On/Off switch that trips at a 5 ampere overload. An internal fuse in the power supply is not user accessible or repairable.

AC power disconnect


Turn off the AC power switch. Remove the AC power cord from the unit. This will remove all AC power from the 493.02 chassis.

Note Be sure to locate the chassis so you have adequate access to disconnect the power cord from the chassis.


Stand-Alone Configuration

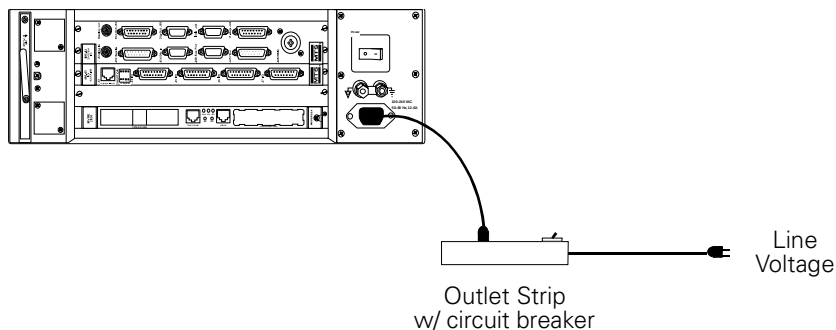

Automated Configuration

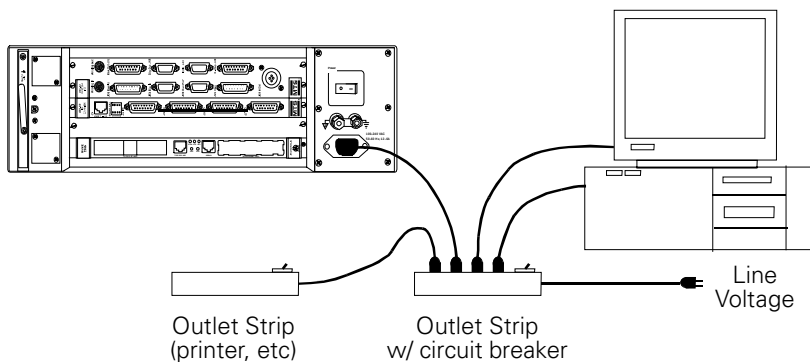

Rack Mounted Configuration

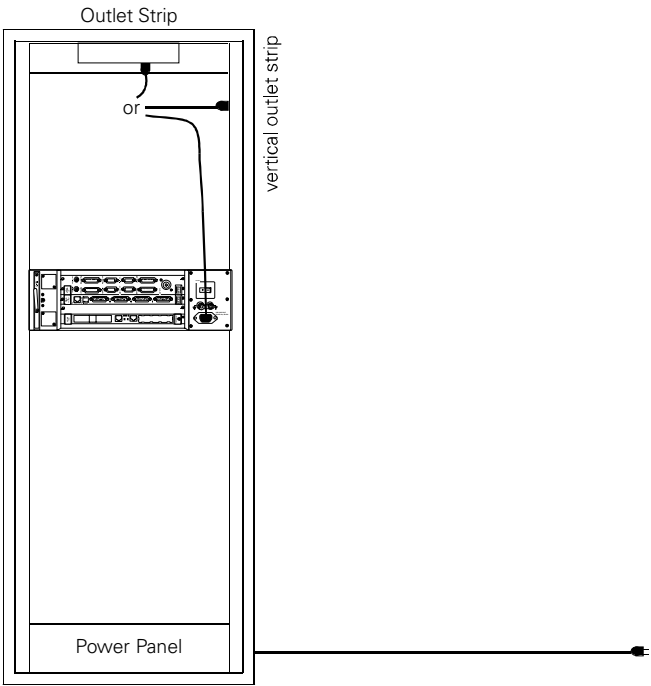


Handle Kit Installation

The Controller may be equipped with an optional handle kit.

The following procedure provides assembly and installation instructions for the handle kit (MTS part number 100-061-494). The following table and figure show the handle kit assembly components described in the procedure.

Handle Kit Parts		
ITEM	DESCRIPTION	QUANTITY
1	Support arm	2
2	Handle side leg	2
3	Clip	2
4	Washer	4
5	Screw	2
6	Spring	2
7	Button	2
8	Ratchet	2
9	Ratchet housing	2
10	Lock washer	2
11	Handle screw	2
12	Handle	1
13	Cover	2

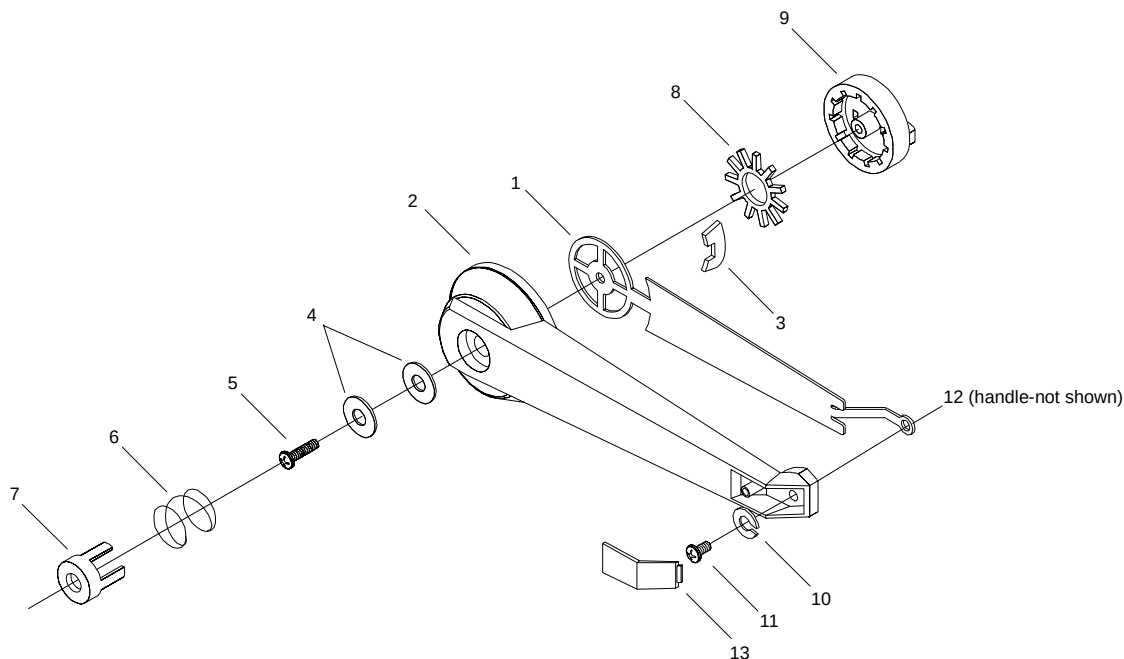

Handle Kit

1. Place one support arm (1) into one handle side leg (2), as shown in the handle kit assembly figure.
2. Set one of the clips (3) in place over the slender, straight portion of the support arm (1), just behind the circular end of the support arm.
3. Insert two washers (4) and a screw (5) through the mounting hole in the handle side leg (2).
4. Insert a spring (6) and a button (7) into the handle side leg mounting hole, over the screw (5) and washers (4).
5. Press the button (7) into the handle side leg, as far as you can and push a ratchet (8) over the button (7) leg detentes, until it snaps into place over the first set of detentes. Make certain the burred or sharper edges of the ratchet are pointing toward the handle side leg.

6. Hold a ratchet housing (9) in place over the ratchet (8) and press the posts on the back side of the ratchet housing (9) into the mounting holes on the side panel of the Controller.
7. Insert a Phillips screwdriver through the hole in the button (7) and lightly tighten the screw (5).
8. Assemble the remaining handle kit components to the other handle side leg (2) according to steps 1 through 7 and mount the side leg to the mounting holes on the opposite side of the Controller.
9. Insert a lock washer (10) and handle screw (11) through the mounting hole at the end of one handle side leg (2) and lightly tighten to handle (12). Repeat this step for the other handle side leg, then secure both screws (11). (The mounting screw for the first handle side leg may have to be loosened slightly to allow the second handle side leg to be mounted.)
10. Snap cover (13) in place over the handle screw (11) and lock washer (10).
11. Secure mounting screws (5) on each side of the Controller.
12. Press in both buttons (7) and rotate the handle assembly. The assembly should rotate up and down easily. When the buttons (7) are released, the handle should lock into a detente position and remain there. If the handle does not move easily, or if it does not lock into a detente position, an error may have been made during the assembly. Take a small straight blade screw driver and carefully remove the covers (13), loosen all screws and remove the handle assembly from the Controller. Reassemble the handle side leg assemblies according to steps 1 through 7.

Chapter 3

Cabling

This section describes the cable connections to the MTS FlexTest SE Chassis.

Note For information on connecting power cables, see [“Connecting Electrical Power”](#) on page 32.

Contents	CE EMC Compliant Cabling	40
	Stand-Alone Cabling Overview	41
	Automated Cabling Overview	42
	Multiple Controller Connections	43
	Cable Part Numbers	45
	Model 493.40 I/O Carrier Connections	47
	Valve Connections	48
	Analog I/O Connections	52
	Encoder Connections	54
	Accelerometer Connections	55
	Workstation Connection	56
	Service Connection	57
	Model 493.42 System I/O Connections	58
	J25 Hydraulic Power Unit Connection	59
	J28 Hydraulic Service Manifold Connector	61
	J29 Emergency Stop Connections	62
	J43 Interlock	64
	J49 Auxiliary Power	65
	J51 Box In	66
	J52 Box Out	67
	J54 Digital Inputs	68
	J55 Digital Outputs	69

CE EMC Compliant Cabling

CE EMC compliant cabling is required for all systems shipped to Europe. All cabling specifications in this chapter conform to the European CE EMC requirements.

Cable fabrication

All of the cables listed on the Cable Selector drawing are CE EMC compliant when used in an MTS system. Where possible, use standard cables listed on the System Cable/Jumper Plug 493 Package Selection drawing (PN 700-000-656). If it is not possible to use standard cables or you are constructing custom cables, select cables, backshells, and connection shields as described in the cable specification for each connector. See the appropriate rear panel connector for fabrication information.

Low-frequency ground loops

It is possible that grounding both ends of the overall shield can produce a low frequency ground loop current. If you experience an unacceptable low-frequency noise level, try the following in the order given:

- Connect the system (chassis) ground of the external device directly to the controller chassis.
- Disconnect the overall shield from the metallized back shell at the external device and add a capacitor (approximately 0.01 μ f) to that end of the cable between the shield and the metallized backshell.*
- Disconnect the overall shield from the metallized back shell at the external device.*

* This action may compromise EC EMC compliance.


Model 493.02 Controller Service



Model 493.02 Controller Service

Multiple Controller Connections

Connect two or more FlexTest SE controllers in a master-slave configuration as shown below. The indicated cables on each controller must be connected before the controllers are turned on.

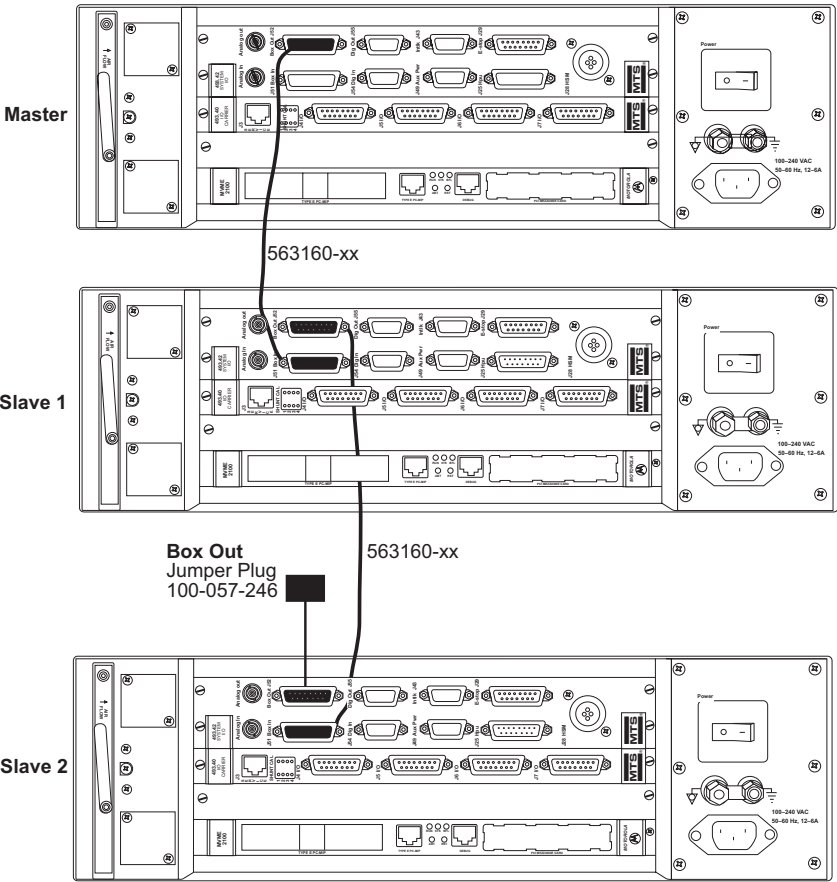

Power up sequence

Turn on the master controller first and allow its software to fully boot before turning on the slave controllers. The slaves must be turned on in their chain-designated order; Slave 1 before Slave 2. Failure to observe this power up order will result in interlocks and will require you to restart all controllers.

Remove power from the controller chain in reverse order; powering down the end-of-run slave controller first.

Interlock function

Power must be applied to all Controllers in the chain for proper interlock operation. If power is not applied to any one of the Controllers, you will not be able to clear an interlock condition in any of the Controllers.

Also, if one of the **Box In** cables becomes disconnected from a slave controller or a cable is connected to **Box In** on the master controller, an interlock is set which cannot be reset until all controllers are restarted.

Cable Part Numbers

System cables The following is a list of the most common cables, see the System Cable/Jumper Plug 493 Package Selection drawing (MTS part number 700-000-656) for the most current and additional cable part numbers.

FlexTest SE Cables (part 1 of 2)

CABLE DESCRIPTION	PART NUMBER*	MODULE CONNECTOR	JUMPER PLUG†
Servo valve 252.xx single	397083-XX	493.40 J4-J7	N/A
Servo valve 252.xx dual	397084-XX	493.40 J4-J7	N/A
Servo valve 256.xx 3-stage			N/A
Valve	554396-XX	493.40 J4-J7	
Valve LVDT	397086-XX	493.40 J4-J7	
Calibration Cable Package	100-026-213	493.40 J3	
Y Adapter—Servo valve/Valve LVDT (required for 256.xx or 257.xx servo valves)	397105-01	493.40 J4-J7	N/A
Workstation Link (Ethernet cable)	519968-XX	10/100‡	N/A
System ground (table top)	054023-XX		N/A
System ground (rack mount)	397092-XX	gnd lug	
Hydraulic Power Supply (HPU) (see “Hydraulic Configurations” on page 221 for more information)	397137-XX	493.42 J25	039-713-301
Hydraulic Service Manifold (HSM)	397015-XX	493.42 J28	N/A
Emergency Stop (E-STOP)		493.42 J29	100-007-947
Interlock (Intlk)	Per System	493.42 J43	100-057-245
Auxiliary Power (Aux Pwr)	Per System	493.42 J48	N/A

FlexTest SE Cables (part 2 of 2)

CABLE DESCRIPTION	PART NUMBER *	MODULE CONNECTOR	JUMPER PLUG†
Box In	563160-xx	493.42 J51	N/A
Box Out	563160-xx	493.42 J52	100-057-246
Digital Input (Dig In)	Per System	493.42 J54	N/A
Digital Output (Dig Out)	Per System	493.42 J55	N/A
Analog In (Anlg In)	Per System	493.42	N/A
Analog Out (Anlg Out)	Per System	493.42	N/A

- * -XX specifies cable length. -01 through -09 represent 10–50 ft. in 5 ft. increments. Higher numbers represent custom cable lengths.
- † Jumper plugs are required if a cable is not installed.
- ‡ The connector is the 10/100 BaseT connector on the power PC module.

Sensor cables See “[Sensor Cable Part Numbers](#)” on page 87 for a detailed list of sensor cables.

For the most current part numbers, see the System Cable/Jumper Plug 493 Package Selection drawing (PN 700-000-656).

Model 493.40 I/O Carrier Connections

The Model 493.40 I/O Carrier module can include up to four daughter boards. Each installed daughter board is assigned a specific I/O Carrier module front panel connector (**J4–J7 I/O**).

Transducer connections require that a conditioner daughter board is installed in the I/O Carrier module. The following conditioners can be installed:

- Model 493.25 Digital Universal Conditioner
- Model 493.47 Encoder
- Model 493.48 Acceleration Conditioner

See “[Transducer Connections](#)” on page 83 for more details.

- Valve connections require a valve driver daughter board be installed in the I/O Carrier module. The following valve drivers can be installed:
 - Model 493.14 Valve Driver
 - Model 493.15 3-Stage Valve Driver
- Analog I/O connections require an A/D or D/A daughter board be installed in the I/O Carrier module. The following analog daughter boards can be installed:
 - Model 493.45 A/D Converter
 - Model 493.46 D/A Converter

Automated Option

If the MTS FlexTest SE Controller is equipped with the automated option, it includes a PC, MTS Series 793 software and various types of files, including a hardware interface file (.hwi) file. The .hwi file defines each type of electronic module in the chassis (and associated daughter boards), and maps each module location for the Series 793 software. The .hwi file and the physical locations for each type of module and associated daughter boards must match. Also, the I/O Carrier module address setting (on the module) must match the .hwi file address.

Valve Connections

The following types of valve connections are supported:

- Single or dual Series 252 Servovalve(s) can be controlled with a Model 493.14 Valve Driver daughter board.
- A Series 256 Servovalve can be controlled with a Model 493.15 3 Stage Valve Driver daughter board.
- A Series 257 Servovalve can be controlled with a Model 493.15 3 Stage Valve Driver daughter board and a Model 448.16C Power Driver chassis.


Cable specification

- 15 contact type D male EMI connector
- Backshell—EMI metallized plastic
- Cable type—4 conductor w/foil shield and drain (100935-48 or equivalent) with the drain wire connected to metallized plastic backshell at the chassis.
- For 256 and 257 servovalves, the valve LVDT uses the same type of connectors as the actuator LVDT.
- Servovalve/valve LVDT Y cable required for 256.xx servovalves (397105-XX)

252 servovalve connections

The Series 252 Servovalve is a 2-stage servovalve. The Model 493.14 Valve Driver supports single or dual valve configurations. The following figure shows the connections at the valve driver and the connections between the valve and the valve driver. See “[Cable Part Numbers](#)” on page 45 to connect the valve to the I/O Carrier module. See also the servovalve manual for single and dual valve configuration wiring information.



Model 493.14 Valve Driver

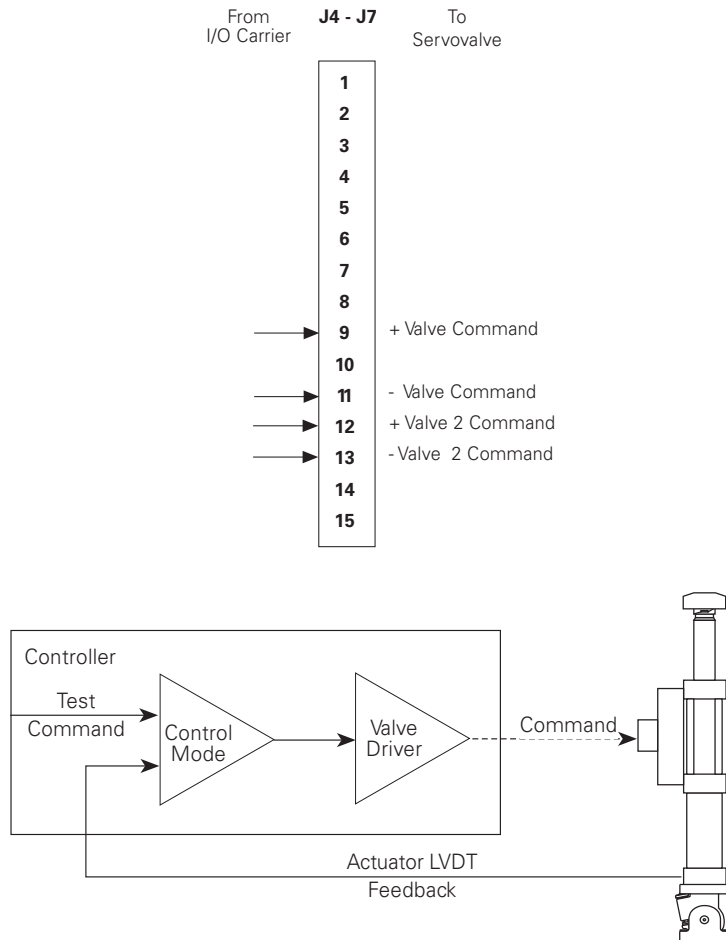

256 servovalve connections



The Series 256 Servovalve is a 3-stage servovalve. The Model 493.15 Valve Driver supports the inner loop signals. The following figure shows the connections between the valve driver and the valve. See “Cable Part Numbers” on page 45 to connect the valve to the I/O Carrier module. See also the servovalve manual for single and dual valve configuration wiring information.

Model 493.15 Valve Driver

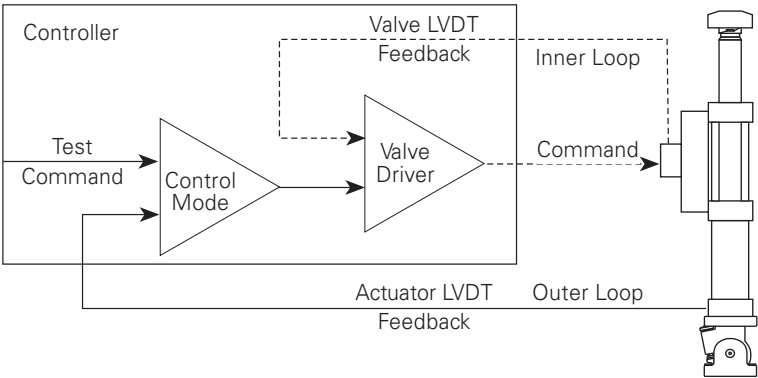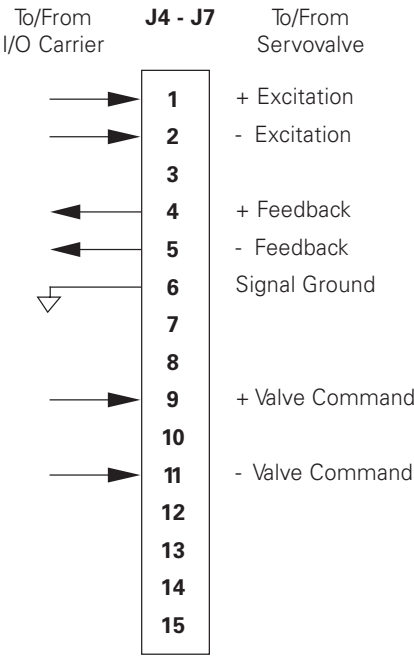

257 valve connections

The Series 257 Servovalve is a 3-stage servovalve that requires a power driver. The Model 493.15 Valve Driver supports the inner loop signals. The following figure shows the connections between the valve driver and the valve. See “[Cable Part Numbers](#)” on page 45 to connect the valve to the I/O Carrier module. See also the servovalve manual for single and dual valve configuration wiring information

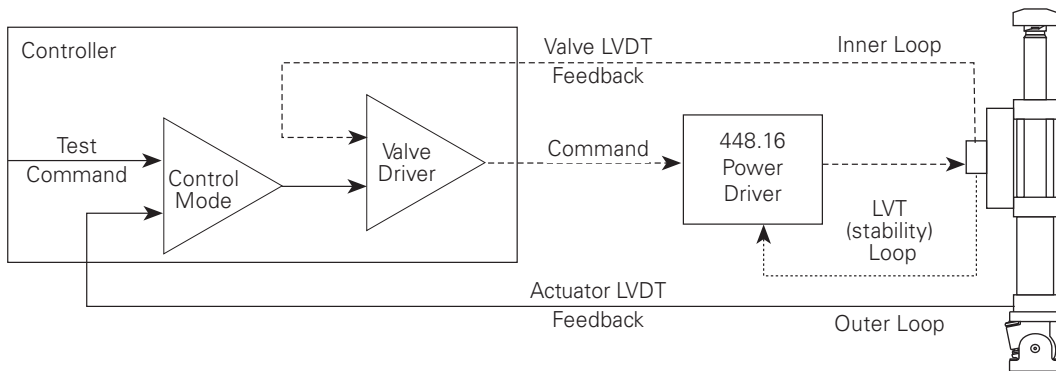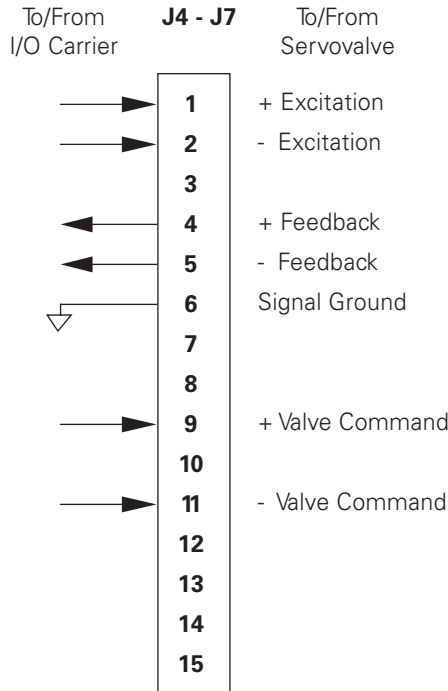Model 493.15 Valve Driver

Analog I/O Connections


The Model 493.45 A/D and Model 493.46 D/A daughter boards are installed in the Model 493.40 I/O Carrier front panel module.

Note *The external analog source can be a stand-alone function generator, another controller, or a computer controlled analog output.*

Analog inputs

The analog-to-digital daughter cards accommodate up to six analog input signals.


- Each A/D input signal must be within ± 10 volts.
- Use pin 3 or 6 to prevent problems with floating grounds between devices.

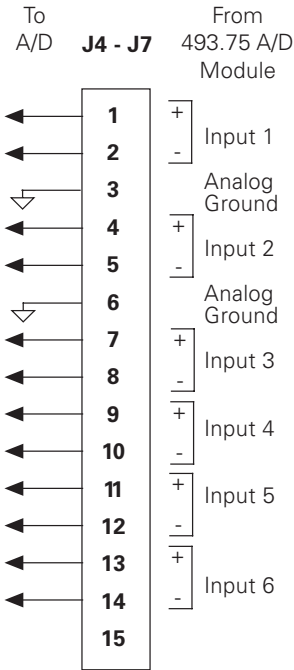

D/A Connections

Digital-to-analog daughter cards support up to six program or readout signals to external devices.

- Each D/A signal is an analog output within ± 10 volts.
- Each readout signal is from a 16 bit digital to analog converter.
- Each output is a ± 10 V analog output.

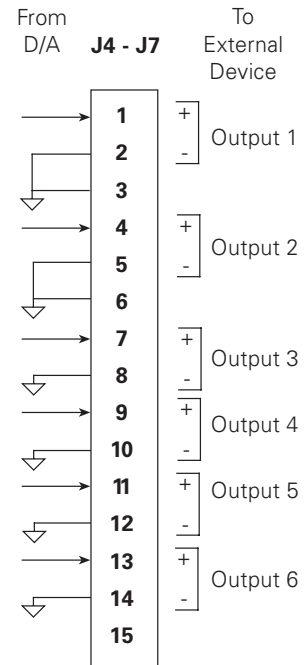

Cable specification


The cable specifications apply to both the analog inputs and analog outputs.

The cable from the front panel of the I/O Carrier module has the following specification:

- 15 contact type D male EMI connector.
- Backshell—EMI metallized plastic.
- Cable type—up to 6 shielded twisted pairs, each with the drain wire connected to the signal source.

Encoder Connections

Each encoder requires installation of a Model 493.47 Encoder Interface daughter board on the Model 493.40 I/O Carrier board. The I/O Carrier connector is based on the location of the daughter board installed on the board of the I/O Carrier module. See [“Determine installed location”](#) on page 186

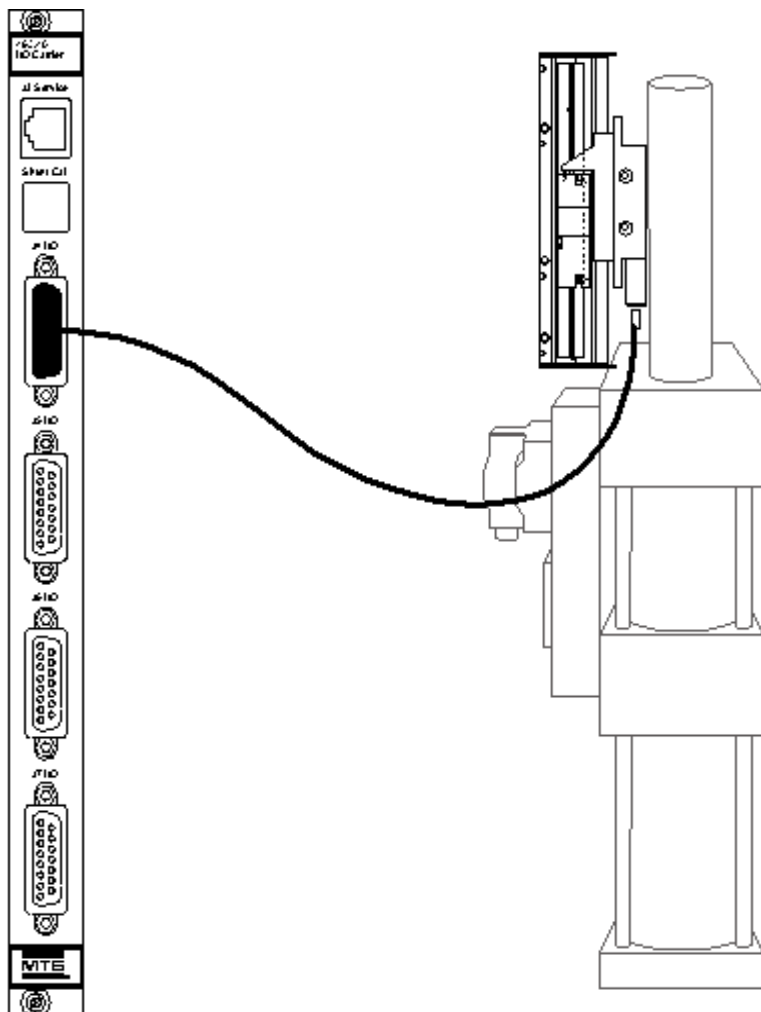

Accelerometer Connections


An accelerometer requires the Model 493.48 Acceleration daughter board installed in a Model 493.40 I/O Carrier module.

- Each Model 493.48 Acceleration daughter board supports up to three accelerometers.

I/O Carrier jumper settings


Before installing a Model 493.48 Acceleration Conditioner daughter board in a Model 493.40 I/O Carrier module, specific jumpers must be set. Jumper settings depend on the number and configuration of your system accelerometers.

In the example shown below, the Acceleration Conditioner supports three accelerometers. The indicated three jumpers must be set on the I/O Carrier module.

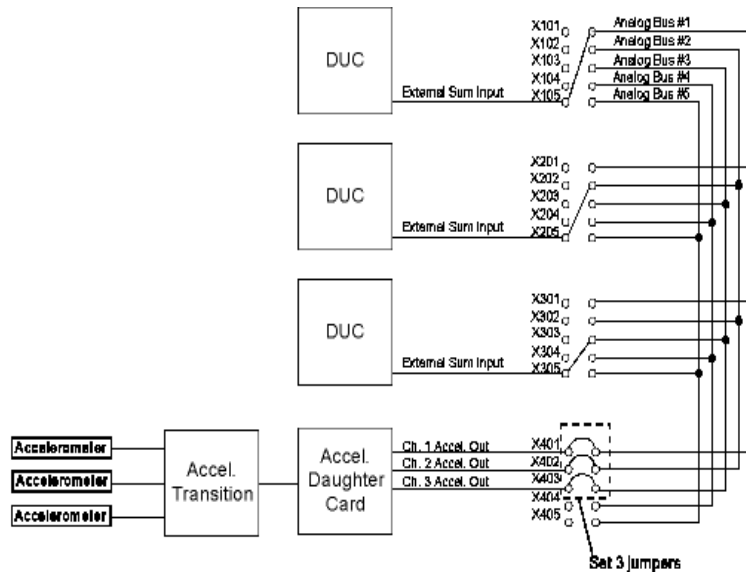

Workstation Connection

The workstation computer is connected to the MVME PowerPC® module installed in the VMEbus of the chassis. It is an Ethernet 10/100 Base-T connection. The workstation computer must have an Ethernet compatible connector.

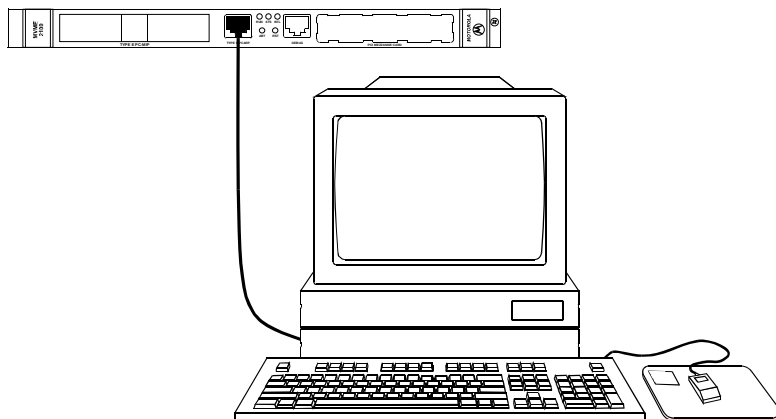

CAUTION


The symbol shown here indicates that you must not connect telecommunications equipment to the equipment showing this symbol.



Several modules have connectors that look similar to a phone connector. Special cables are required. Installing telecommunications equipment cables can cause equipment damage to the electrical components of the chassis or to your telecommunications system.

Service Connection

I/O Carrier service The **J3 Service** connector on the Model 493.40 I/O Carrier module provides the monitor output from each of the four I/O option cards installed. It is an 8-pin RJ-45 connector.

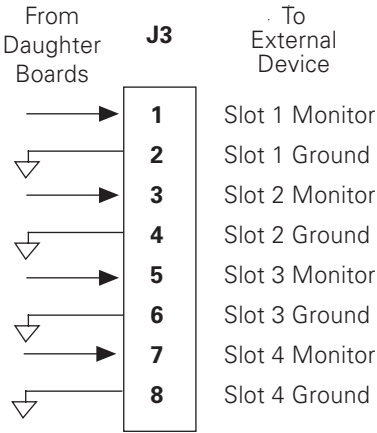

Important *The signals at the **J3 Service** connector are provided for service and troubleshooting only. These signals are defined by the I/O option daughter boards that are installed on a respective Model 493.40 I/O Carrier module. Some of these signals may be uncalibrated. Before use, take appropriate steps to determine the characteristics of these signals.*

Model 493.42 System I/O Connections

The Model 493.42 System I/O module is a dual-wide VME-based slave board used in the MTS FlexTest SE Controller.

- Provides box-in and box-out, analog and digital I/O, E-Stop, and HSM and HPU control.
- Contains three general purpose digital input channels and three general purpose digital output channels.
- Interfaces the controller with a hydraulic power unit.
- Interfaces the controller with a hydraulic service manifold and other devices.
- Provides one BNC channel for analog output signals. The output signals are within ± 10 V DC.
- Provides one BNC channel of analog input. The input signals must be within ± 10 V DC.

J25 Hydraulic Power Unit Connection

Connector **J25 HPU** controls the hydraulic power unit (HPU).

- The connector provides 24 V logic signals to control the HPU.
- The connector may be connected directly to a Model 505 or 24 PLC HPU or to a Model 493.07 HPU Converter Box, which allows any MTS HPU to be connected to the chassis with the following exceptions:
 - 506.52 - .92 HPUs (24 volt, PLC compatible)
 - All Series 505 HPUs

The converter box is used with other configurations, see [“Hydraulic Configurations”](#) on page 221 for more information.

CAUTION

Control voltages for hydraulic power units vary between models.

The HPU interface between the Model 493.42 System I/O board and an HPU is 24 volt logic signals. Connecting J25 to a non-compliant HPU can damage the module.

DO NOT connect 24 V DC relay circuitry or 115 V AC circuitry to connector J25 on the Model 493.42 System I/O board.


Cable specification

The **J25 HPU** and **J51 Box In** connectors are 15 pin type D male connectors.

- 15 contact type D female EMI connector.
- Cable—24 AWG, 10 conductor with braided shield with drain wire connected to metallized plastic backshell to the chassis.


Jumper plug required

If connector **J25 HPU** is not used, you must install a jumper plug to maintain the integrity of the interlocks. Use jumper plug 39-713-301E or jumper pins: 1-7, 2-3-5, 6-9, 8-10-11-12, 6-9.

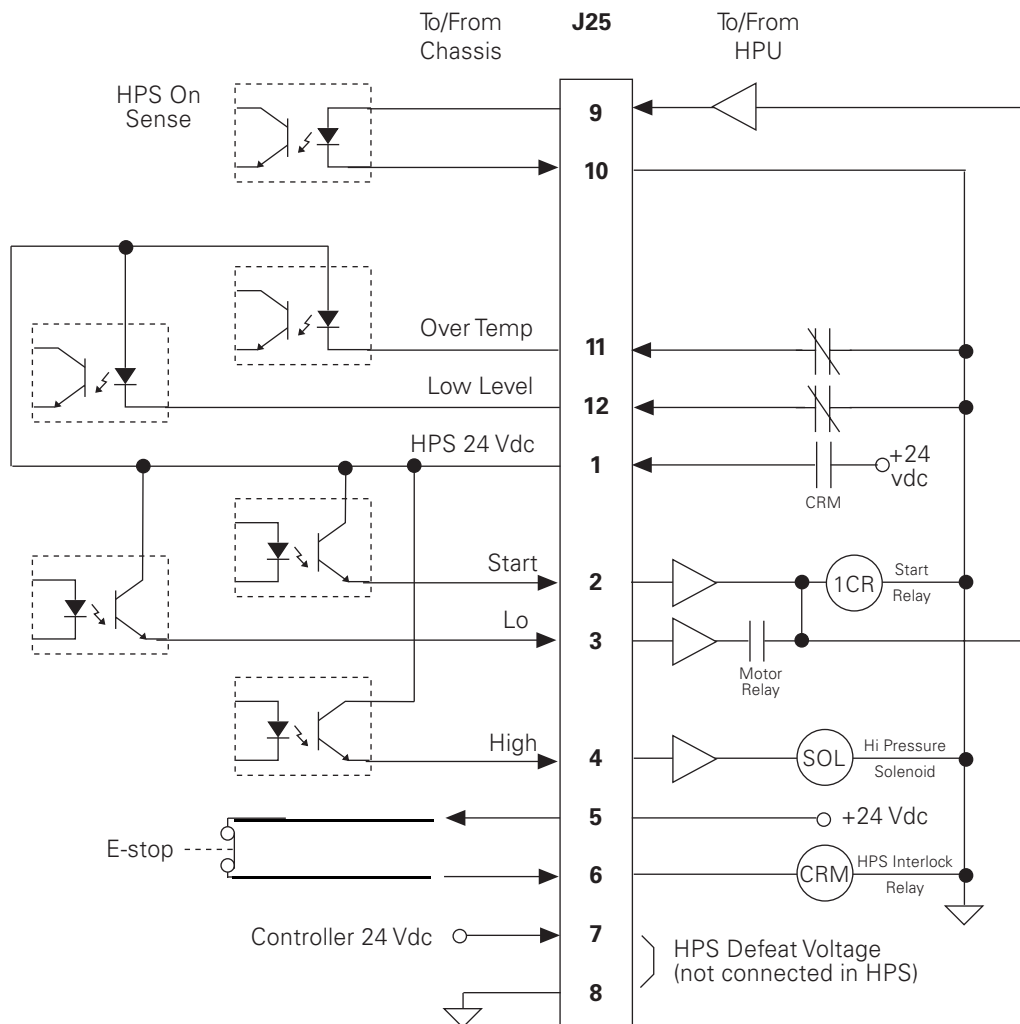

J28 Hydraulic Service Manifold Connector

Connector **J28 HSM** controls the pressure of a hydraulic service manifold. The controller software can configure the connector for solenoid or proportional control of a 24 volt hydraulic service manifold.

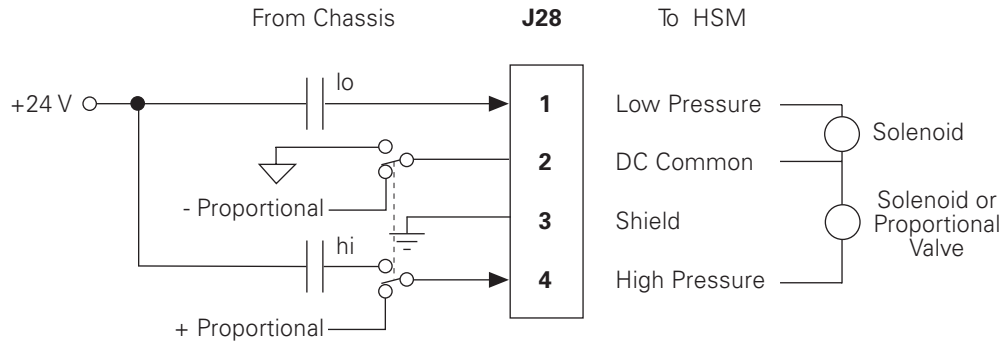

Cable specification

- P28 is a 4-contact CPC male connector (AMP Incorporated).
- Cable for on/off HSMs—18 AWG/2 conductor.
- Cable for high/low HSMs—18 AWG/4 conductor.

Proportional output

The proportional output is configured with the controller software.

- The output signal can be ramped from 20 mA (minimum) to 700 mA (maximum) which corresponds with 50 psi (0.4 MPa) and 3000 psi (21 MPa). By default, low pressure is factory set at 750 psi and high pressure is set at 3000 psi.
- The ramp rate from zero to high pressure can be set to two or four seconds. The ramp rate from high pressure to zero can be set to zero, two or four seconds.
- The ramp rate is constant (set to the two or four second rate). The amount of time to reach low pressure depends on the low pressure setting.

J29 Emergency Stop Connections

Connector **J29 E-STOP** provides an output to external devices when an emergency stop signal is generated. This connector may also be used with an external E-stop.

J29 Connector Pin Assignments

PIN	NAME	FUNCTION
1	Xhead 24V	Fused +24V
2	Xhead intlk com	24V common
3	Program interlock low (xhead interlock low)	Low side of opto-isolator, jumpered to common
4	Program interlock high (xhead interlock high)	High side of opto-coupler, pulled up to 24V (opto on = intlk)
5	Local E stop	Local E stop loop (connected to pin 7)
6	N/C	No connection
7	Local E stop	Local E stop loop (connected to pin 5)
8	HPU E stop	E stop loop from HPU (connect to pin 13)
9	N/C	No connection
10	N/C	No connection
11	N/C	No connection
12	Xhead power	+24V crosshead unlock power output (from HSM high relay contact)
13	HPU E stop	E stop loop from HPU (connect to pin 8)
14	xhead power return	24V common for crosshead unlock power output
15	N/C	

Cable specification

- 15 contact type D male EMI connector.
- Backshell–EMI metallized plastic.
- Cable–24 AWG 4 connector with braided shield, with the braid connected to a metallized plastic backshell at the chassis and to ground at the emergency stop station.

Jumper plug required

If connector **J29** is not used, you must install a jumper plug to maintain the integrity of the interlocks. Use jumper plug 100-007-947B or jumper pins: 3-4, 5-7, 8-13.

J43 Interlock

Connector **J43 Interlock** contains one optically isolated interlock input and one relay contact interlock output.

Note *The intlk out relay (Pin 6) is normally energized when no interlocks are active. So even though Pin 6 is a NO (normally open) relay contact, it is actually normally closed when no interlocks are active. Similarly, the intlk out relay (Pin 8) is normally closed when no interlocks are active, so even though Pin 8 is a NC (normally closed) relay, it is actually normally open when no interlocks are active.*

J43 Connector Pin Assignments

PIN	NAME	FUNCTION
1	intlk in 24V	24 V through 6.6K resistor
2	intlk in high	High side of opto-isolator (opto off=intlk)
3	intlk in low	Low side of opto-isolator
4	intlk in comm	24V common
5	N/C	No connection
6	intlk out NO	Normally open relay contact
7	intlk out COM	Common relay contact
8	intlk out NC	Normally closed relay contact
9	N/C	No connection

Cable specification

- 9 contact type D male EMI connector.
- Backshell–EMI metallized plastic.
- Cable–shielded twisted pairs (24 AWG minimum) with drain wire(s) connected to the metallized backshell at the chassis.

Power characteristics

Channel inputs can be 3 volts (minimum) and 26 volts (maximum) from an external voltage source.


Jumper plug required

If connector **J43** is not used, you must install a jumper plug to maintain the integrity of the interlocks. Use jumper plug 100-057-245, or jumper pins: 1-2, 3-4.

J49 Auxiliary Power

Connector **J49 Aux Pwr** provides +5 V DC, ± 15 V DC, and 24 V DC from the chassis internal power supply to drive external high level conditioners, proximity switches, solenoids, and so forth.

- The outputs are fused at 0.75 A to protect the power supply from an external short.
- The fuses can be reset by shutting off power and waiting a few minutes (the fuses automatically reset when cooled) then reapplying power.

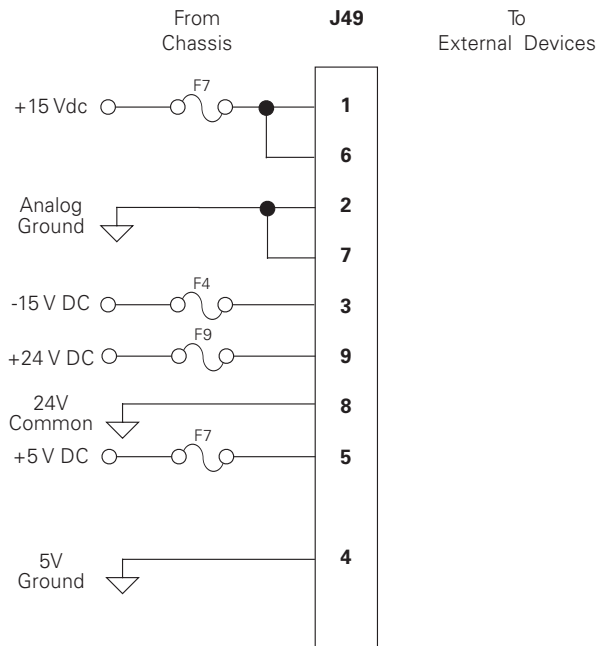

Cable specification

- 9 contact type D male EMI connector
- Backshell—EMI metallized plastic
- Cable—shielded twisted pairs (22 AWG minimum) with drain wire(s) connected to the metallized backshell at the chassis.

J51 Box In

Connector **J51 Box In** allows the MTS FlexTest SE controller to receive clock, hydraulic, and interlock signals from another MTS FlexTest SE controller.

J51 Connector Pin Assignments

PIN	NAME	FUNCTION
1	+clk in	+External clock input
2	hyd high in	Hydraulic high input
3	reset in	Interlock reset request input
4	signal return	Signal return for optically isolated inputs
5	/intlk in	Hydraulic interlock input
6	hyd low in	Hydraulic low input
7	signal return	Signal return for optically isolated inputs
8	master/slave in	Master -/Slave select input
9	- clk in	- External clock input
10	hyd hi return out	Hydraulic high return output
11	reset return out	Interlock reset return output
12	ground	Signal ground
13	/intlk return out	Hydraulic interlock return output
14	hyd low return out	Hydraulic low return output
15	ground	Signal ground

J52 Box Out

Connector **J52 Box Out** allows the MTS FlexTest SE controller to send clock, hydraulic, and interlock signals to another MTS FlexTest SE controller.

J52 Connector Pin Assignments

PIN	NAME	FUNCTION
1	+clk in	+External clock output
2	hyd high out	Hydraulic high output
3	reset out	Interlock reset request output
4	ground	Signal ground
5	/intlk out	Hydraulic interlock output
6	hyd low out	Hydraulic low output
7	ground	Signal ground
8	N/C	No connection
9	- clk out	- External clock output
10	hyd hi return in	Hydraulic high return input
11	reset return in	Interlock reset return input
12	signal return	Signal return for optically isolated inputs
13	/intlk return in	Hydraulic interlock return input
14	hyd low return in	Hydraulic low return input
15	signal return	Signal return for optically isolated inputs

Jumper plug required

If connector **J52 Box Out** is not used, you must install a jumper plug to maintain the integrity of the interlocks. Use jumper plug 100-057-246 or jumper pins: 2-10, 3-11, 4-12, 5-13, 6-14, 7-15.

J54 Digital Inputs

Connector **J54 Dig In** accommodates up to three digital signals from external devices. You can use digital input signals to trigger test events with your controller applications.

- All of the inputs are optically isolated.
- Channel inputs can be 3 volts (minimum) and 26 volts (maximum) from an external voltage source.

J54 Connector Pin Assignments

PIN	NAME	FUNCTION
1	dig in 24V	24 V through 6.6K resistor
2	dig in 1 high	High side of opto-isolator (opto on = logic 1)
3	dig in 1 low	Low side of opto-isolator
4	dig in 2 high	High side of opto-isolator (opto on = logic 1)
5	dig in 2 low	Low side of opto-isolator
6	dig in 3 high	High side of opto-isolator (opto on = logic 1)
7	dig in 3 low	Low side of opto-isolator
8	dig in com	24V common
9	dig in com	24V common

Cable specification

The cabling information shown assumes a single cable destination (with an overall shield). In other applications, the cable may have more than one destination. For these applications an overall shield is not practical and non-EMI connectors and back shells are permissible.

- 9 pin contact type D male EMI connector
- Back shell—EMI metallized plastic
- Cable—shielded twisted pairs as required (24 AWG minimum) with drain wire(s) connected to the metallized backshell at the chassis.

J55 Digital Outputs

Connector **J55 Dig Out** provides three general purpose digital outputs that can send digital logic signals to external switches or logic devices.

- The digital output relays are rated for a maximum of 1 Amp max, 30 V DC/AC max.
- The outputs are optically isolated.

J55 Connector Pin Assignments

PIN	NAME	FUNCTION
1	dig out 1	digital out 1 relay contact
2	dig out 1	digital out 1 relay contact
3	dig out 2	digital out 2 relay contact
4	dig out 2	digital out 2 relay contact
5	N/C	No connection
6	dig out 3	Digital out 3 relay contact
7	dig out 3	Digital out 3 relay contact
8	+24V out	fused +24V
9	24V common	24V common

Cable specification

The cabling information shown assumes a single cable destination (with an overall shield). In other applications, the cable may have more than one destination. For these applications an overall shield is not practical and non-EMI connectors and back shells are permissible.

- 9 pin contact type D male EMI connector
- Back shell–EMI metallized plastic
- Cable–shielded twisted pairs as required (24 AWG minimum) with drain wire(s) connected to the metallized backshell at the chassis.

Servo Valve Controls

Servo valve adjustments optimize the interface between the controller and the servo valve.

Contents

Setting the Servo Valve Polarity 73

Getting Things Ready 74

Adjusting Valve Balance 75

Dither 76

Tuning the Inner loop 77

Inner Loop Signals 79

Hydraulic systems

Hydraulic systems use servo valves to control the actuator. The following complement of valves have different **Drive** panels:

- **252 Valve**—represents the MTS Series 252 Servo valve.
- **Dual 252 Valve**—represents two MTS Series 252 Servo valves mounted to the actuator manifold.
- **256/257 Valve**—represents the MTS Series 256 and Series 257 Servo valves. Although these valves are different, they use the same adjustments. These servo valves have inner control loops.

Adjustment prerequisites

You should run a small program to warm up the system hydraulic fluid and servo valve before you adjust the valve balance, dither, or inner loop.

Refer to “How to Warm Up the Station Hydraulics” in Chapter 2, Common Tasks of the *FlexTest SE User's* manual for a detailed procedure.

When to adjust

You make servo valve adjustments to optimize the valve response to your program commands.

Normally, servo valves are balanced and tuned at the factory, and then optimized by the MTS service engineer who installs your system. However, if you change or replace a hydraulic component or notice erratic servo valve response during a test, you may need to readjust your servo valve settings.

Use the following paragraphs to determine when to perform each servovalve adjustment.

Note *During system installation, perform all of the adjustments in this section.*

Initial adjustments

Perform initial adjustments when initially installing the system or replacing a hydraulic component. These adjustments, such as setting servovalve polarity, are only needed once and should not require readjustment.

See [“Setting the Servovalve Polarity”](#) on page 73.

.Valve balance

While running a test on a properly tuned system, you observe that the controlling sensor’s peak and valley amplitudes are unequal. When you have completed a mechanical valve adjustment, always adjust the valve balance.

See [“Adjusting Valve Balance”](#) on page 75.

Dither

Adjust the dither while running a test on a properly tuned system, you observe either of the following:

- A sinusoidal test waveform is distorted at its maximum and minimum points (peak and valley values change). This will normally be more observable during a test that has either a low-frequency or a low-amplitude test waveform. This indicates that dither amplitude is insufficient.
- An unusual sound (hammering, squealing, or pounding) coming from the test system. This indicates that dither amplitude is excessive.

See [“Adjusting dither amplitude”](#) on page 76.

Inner loop tuning

Perform inner loop tuning when initially installing a system or fine tuning a system that employs a 3-stage valve driver.

See [“Tuning the Inner loop”](#) on page 77.

Setting the Servovalve Polarity

Servovalve polarity determines the direction the servovalve moves the actuator in response to a positive command. It can be set to normal or invert.

Typically, a servovalve set to normal polarity extends the actuator in response to a positive command. Conversely, a servovalve with an inverted polarity retracts the actuator in response to a positive actuator command.

Before you can set servovalve polarity, you must determine if the current servovalve polarity follows the normal convention.

Please note the following:

- The polarity of the servovalve must be checked before sensor calibration begins and before hydraulic pressure is applied for the first time.
- The polarity of any servovalve is generally set when the valve is installed.

Important

The combination of the conditioner polarity and the servovalve polarity affects the final output signal. The conditioner polarities should be set before the servovalve polarity because they do not need hydraulics to be turned on. In general, you will set the conditioner and servovalve polarity the same.

Procedure

This procedure allows you to determine servovalve polarity by observing actuator movements while applying a positive Setpoint command to the actuator.

Refer to “How to Set Servovalve Polarity” in Chapter 2, Common Tasks of the *FlexTest SE User's* manual for a detailed procedure.

Getting Things Ready

If you plan to perform any of the procedures described later in this chapter, be sure that you get the hydraulic fluid up to temperature.

Be sure that both the hydraulic fluid and the servovalve are at operating temperature. Remove any specimen and run the system in displacement control for at least 30 minutes using an 80% full-scale length command at about 0.1 Hz.

Refer to “How to Warm Up Station Hydraulics” in Chapter 2, Common Tasks of the *FlexTest SE User's* manual for a detailed procedure.

Adjusting Valve Balance

The valve balance adjustment electrically compensates for minor mechanical imbalance in the servovalve.

Your servovalve is typically balanced during installation at its midstroke position. The signal values in your station parameter set reflect that initial servovalve balance procedure.

For optimal performance, you should balance your servovalve again after you position your actuator to the test start position.

Prerequisites

The following must be true. If not, go to [“Getting Things Ready”](#) on page 74.


- The hydraulic fluid and the servovalve are at operating temperature.
- Command compensators are turned off.

Procedure

Refer to “How to Balance the Servovalve” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed valve balancing procedure.

Dither

Dither is a low-amplitude, high-frequency sine wave that your controller applies to your servovalve's spool. Dither keeps your servovalve's spool in motion so it operates smoothly and does not silt up or stick to its cylinder walls. It is especially useful for tests that use small amplitude commands or run at low frequencies.

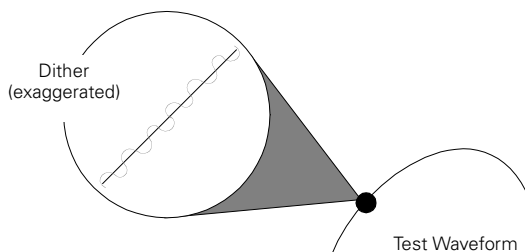

Dither amplitude was set during installation. The signal values in your station parameter set reflect that initial dither amplitude procedure, and are probably adequate for your test.

The following are signs of an improper dither adjustment:

- **Dither amplitude is too low**—While running a sinusoidal test on a properly tuned system, you notice that the waveform distorts at its maximum and minimum points. This will normally be more apparent during a test that has either a low frequency or a low amplitude test waveform.
- **Dither amplitude is too high**—You hear unusual sounds, such as hammering, squealing, or pounding coming from the test system.

Dither adjustment prerequisites

The following must be true. If not, go to [“Getting Things Ready”](#) on page 74.

- The hydraulic fluid and the servovalve are at operating temperature.
- Command compensators are turned off.

Adjusting dither amplitude

Refer to “How to Adjust Dither ” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed dither amplitude adjustment procedure.


Tuning the Inner loop

Perform inner loop tuning when initially installing a system or fine-tuning a system that employs 3-stage valve drivers. The inner loop proportional gain and rate derivative adjustments are the same types of adjustments as used with the PIDF tuning controls.

Note *During initial system installation, inner loop gain and rate adjustments must be performed before tuning the servo outer loop. For fine tuning, an initial inner loop gain adjustment may be needed if the outer loop is sluggish.*

The inner control loop is similar to a displacement control mode for the outer loop. The Model 493.15 Three-Stage Valve Driver module includes the electronics necessary to support the inner control loop.

The innerloop (proportional) gain and rate (derivative) adjustments are the same types of adjustments as the proportional and derivative gain adjustments of the outerloop tuning controls.

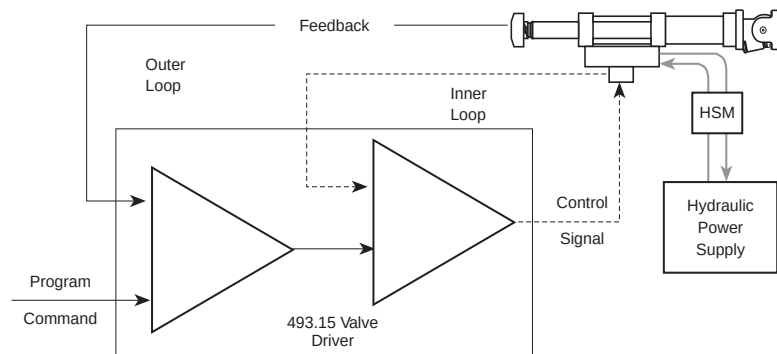

Important

Always tune the inner loop without the hydraulics applied to the actuator. Perform the inner loop gain adjustments with hydraulic pressure removed from the main spool while maintaining pressure at the pilot stage. This prevents interaction between the inner and outer loops.

Procedure

For a detailed inner loop tuning procedure, refer to “How to Tune Three-Stage Servovalves” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual.

Zero the Spool Position Signal

This task matches the electronic null of the spool position signal with the mechanical null position of the servovalve pilot spool.

During inner loop tuning, it may be necessary to complete this procedure if the spool position signal voltage is not approximately equal (though opposite polarity) at opposite endcaps of a servovalve.

1. Set the **Valve Balance** to zero.

Stand-Alone— Path: **Setup** > **Output(3-stage)** > **Valve Balance**

Automated— On the **Drive** panel, click the **Valve** tab, then set the **Valve Balance** to zero.

2. Ensure that the **Offset** control is set to zero.

Stand-Alone— Path: **Setup** > **Disp** > **Offset/Zero** > **Manual Offset**

Automated— Click the **Conditioner** tab on the **Drive** panel, then check the **Offset** setting.

3. Apply hydraulic pressure.



WARNING

Do not remove the LVDT adjustment locknut or assembly when adjusting the servovalve LVDT spool position.

If it is removed, hydraulic fluid will spray from the servovalve at full pressure. You should refer to the servovalve product manual to identify the main stage LVDT spool adjustment.

4. Loosen (but do not remove) the LVDT locknut.
5. Adjust the LVDT in or out of the servovalve to provide a zero spool position signal.
6. Tighten the locknut while holding the LVDT in position.

Inner Loop Signals

To monitor inner loop signals on the FlexTest SE Controller:

1. Connect a service calibration cable package (MTS part number 100-026-213) to connector **J3 Service** on the I/O carrier module.
2. Connect a DVM or oscilloscope to the appropriate **BNC Output Channel** on the service cable, depending on which slot the valve driver occupies in the I/O Carrier module.

You can also set up the FlexTest SE scope or meters to monitor inner loop signals.

Note Only the **Spool Position** signal is available to the FlexTest SE meters or scope.

Chapter 5

Sensors

This chapter describes sensor signals, connections, and cabling. Shunt calibration for DC sensors is also described.

Contents	Sensor Signals	82
	Transducer Connections	83
	Sensor Cables	86
	Shunt Calibration	89
	Shunt Calibration/Bridge Completion	92

Sensor Signals

With the Station Builder program, you can allocate station resources (conditioners) to sensors connected to your test system. Once a conditioner is linked to a sensor, the sensor signal (feedback) can be used as a control mode and/or for data acquisition. Available sensor signals vary with the type of controller in your system.

The FlexTest™ SE controller supports the following types of sensor signals:

- *AC conditioner* signals are conditioned by a Digital Universal Conditioner (DUC) daughter board plugged into the I/O Carrier module on the Controller's VME chassis. The DUC must be configured for the AC mode. An LVDT requires AC conditioning.
- *DC conditioner* signals are conditioned by a Digital Universal Conditioner (DUC) daughter board plugged into the I/O Carrier module on the Controller's VME chassis. The DUC must be configured for the DC mode. A force transducer (load cell) requires DC conditioning.

Full-Range DUC Conditioner

The Model 493.25 DUC module used with your FlexTest SE controller is a full-range conditioner that provides one calibrated range for each sensor.

Transducer Connections


Transducer connections require a conditioner daughter board be installed in the I/O Carrier module. The following conditioners can be installed:

- Model 493.25 Digital Universal Conditioner
- Model 493.47 Encoder
- Model 493.48 Acceleration Conditioner

Each Model 493.40 I/O Carrier module can include up to four daughter boards. Each installed daughter board is assigned a specific I/O Carrier module front panel connector (**J4-J7 I/O**). These connections can be used for any type of sensor (provided the appropriate daughter board is installed).


A hardware interface file (.hwi) defines each type of module (and their associated daughter boards) and maps each module location for the system software. The .hwi file and the physical locations for each type of module and associated daughter boards must match.

Excitation and feedback signals are passed through to the transducer.

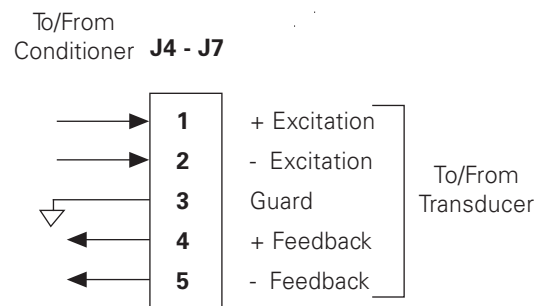


LVDT connections

An LVDT requires an AC conditioning daughter board.

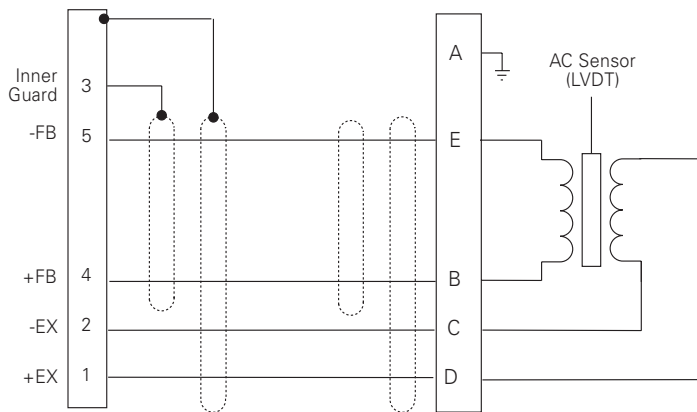


Temposonics II connections

A Temposonics II transducer requires a DC conditioning daughter board.

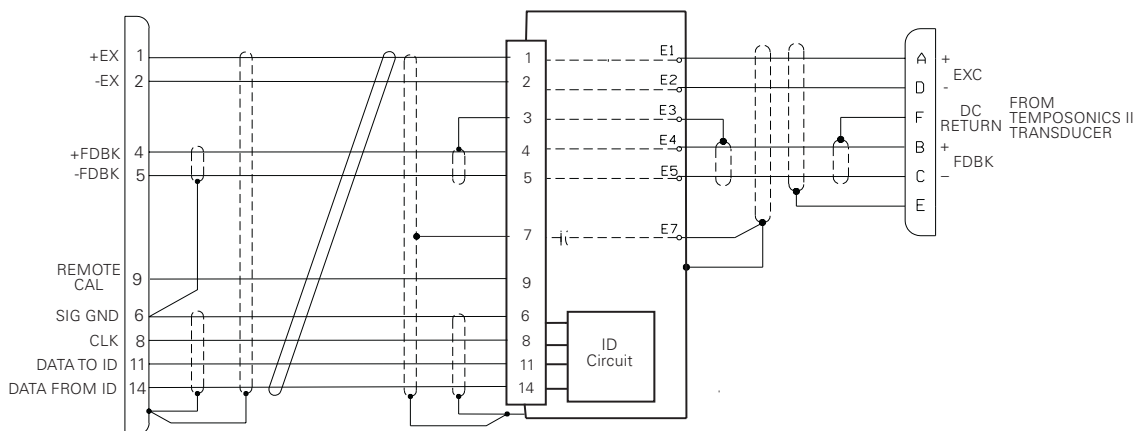


Temposonics III connections

A Temposonics III transducer requires a DC conditioning daughter board.

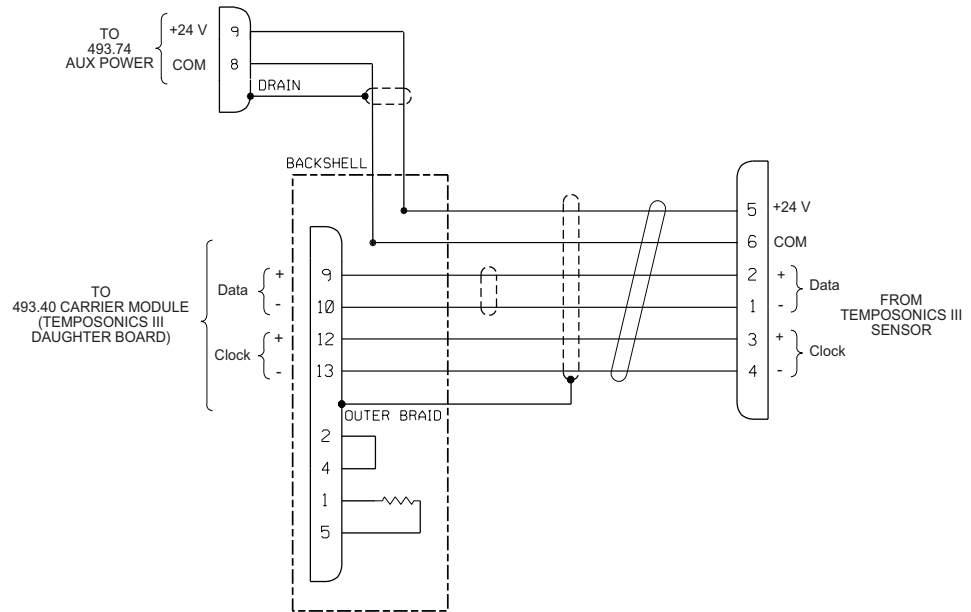

Force/strain sensor connections

Force and strain sensors require a DC conditioning daughter board.

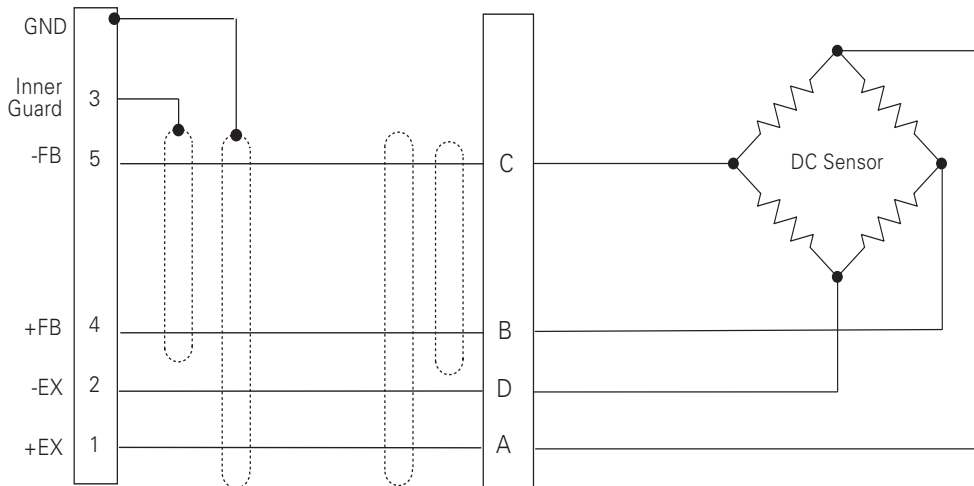

Sensor Cables

A typical system is provided with a standard set of sensor cables as specified on the System Cable/Jumper Plug 493 Package Selection drawing (PN 700-000-656). Refer to this drawing for the most current part numbers. Standard sensor cables do not have ID modules.

Sensor cables with an ID module built into them are available as an option. Sensor cables with ID modules use a system cable to bridge the sensor cable to the appropriate connector on the rear panel of the chassis.

Specifications

- 15 contact type D male EMI connector
- Backshell—EMI metallized plastic
- Cable type—For all applications including CE EMC Compliance, use MTS cable material 505301-01 (two 22 AWG twisted pairs with inner and outer braided shield for the excitation and feedback signals, plus a twisted quad for the ID signals, and a single wire for the shunt calibration signal). Shield connections can vary from sensor to sensor.
- If purchased as an option, each sensor includes one cable with a transducer ID module and a system extension cable. A system cable is required between the transducer ID cable and the Model 493.02 Controller's VME chassis.

Sensor Cable Part Numbers

Sensor cables
without ID Module

See the System Cable/Jumper Plug 493 Package Selection drawing (PN 700-000-656) for the most current sensor cable part numbers.

CABLE DESCRIPTION		CABLE	MODULE CONNECTOR
ADT	120°	562348-XX	493.40 J4-J7
	300°	562531-XX	493.40 J4-J7
Extensometer 633 capacitive		516495-XX	493.40 J4-J7
Force Transducer w/PT connector	w/MS connector	464402-XX	493.40 J4-J7
	w/MS connector	464406-XX	493.40 J4-J7
	w/PC	562529-XX	493.40 J4-J7
LVDT		464403-XX	493.40 J4-J7
ΔP control		479276-XX	493.40 J4-J7
Pressure Control (Sensotec)		562530-XX	493.40 J4-J7
Strain	w/Amphenol connector	562336-XX	493.40 J4-J7
	w/PT connector	501200-XX	493.40 J4-J7
Temposonics		491532-XX	493.40 J4-J7
Temposonics II (low power conditioner)		562532-XX	493.40 J4-J7
Temposonics III		563167-XX	493.40 J4-J7
RVDT w/MS connector		512028-XX	493.40 J4-J7

Sensor cables with ID Module

See the System Cable/Jumper Plug 493 Package Selection drawing (PN 700-000-656) for the most sensor cable current part numbers.

Each sensor includes a cable with an ID module built into it. Use a system cable to bridge the sensor cable to the rear panel of the controller chassis.

CABLE DESCRIPTION		ID MODULE W/CABLE	SYSTEM CABLE ¹	MODULE CONNECTOR
ADT	120°	525435-XX	561258-XX	493.40 J4-J7
	300°	524436-XX	561259-XX	493.40 J4-J7
Extensometer 633 capacitive		525434-XX	525443-XX	493.40 J4-J7
Force Transducer w/PT connector	w/PC connector	525425-XX	525442-XX	493.40 J4-J7
	w/MS connector	525426-XX	525442-XX	493.40 J4-J7
	w/MS connector	525427-XX	525442-XX	493.40 J4-J7
LVDT		525431-XX	525442-XX	493.40 J4-J7
ΔP control		525432-XX	525442-XX	493.40 J4-J7
Pressure Control (Sensotec)		525433-XX	525442-XX	493.40 J4-J7
Strain	w/Amphenol connector	525429-XX	525442-XX	493.40 J4-J7
	w/PT connector	525430-XX	525442-XX	493.40 J4-J7
Temposonics		525437-XX	561260-XX	493.40 J4-J7
Temposonics II (low power conditioner)		525438-XX	525442-XX	493.40 J4-J7
RVDT w/MS connector		527508-XX	525442-XX	493.40 J4-J7

1. -XX specifies cable length. -01 through -09 represent 10–50 ft. in 5 ft. increments. Higher numbers represent custom cable lengths.

Shunt Calibration

You can verify the calibration accuracy of a DC sensor/conditioner pair through shunt calibration. Shunt calibration works by shunting a precision resistor across one arm of the sensor's bridge.

A current shunt calibration value, taken before a test, should be compared to the shunt calibration reference value recorded when the sensor was last calibrated. If the reference value and the current value differ too greatly, the sensor/conditioner pair should be recalibrated to establish a new shunt reference value.

Note *It is possible to adjust excitation to compensate for small to moderate changes in the shunt calibration value.*

When to use shunt calibration

You should perform a shunt calibration (establish a new shunt reference value) when the following occur:

- You start a new test.
- You move a sensor to a different DC conditioner.
- You swap a DC conditioner module.
- You recalibrate a DC sensor.
- You change the sensor cable (resistance may differ).

Note *Shunt calibration can not be used to compensate for different length cables.*

Note *You cannot check shunt calibration of a sensor being used with the active control mode when hydraulic pressure is on.*

Note *Shunt calibration does not compensate for changes in the sensor sensitivity over time.*

How to perform a shunt calibration

Each resistive bridge type transducer (DC sensor) uses a shunt resistor to check the calibration accuracy of the sensor/conditioner combination. Each DC conditioner supports a shunt resistor.

Perform a shunt calibration to establish a new shunt reference value for a DC sensor/conditioner pair as follows:

1. Turn off hydraulic power
2. Remove the load standard.

3. Turn on hydraulic power.
4. Zero the DC sensor output.

Stand-Alone:

Path: **Setup > Force > Offset/Zero > Manual Offset**

Adjust the **Manual Offset** for a 0 kN output. The sensor output must be 0.000 kN for a proper shunt calibration.

Automated:

Adjust the **Manual Cmd** slider on the **Manual Command** window for a 0 kN output. The sensor output must be 0.000 kN for a proper shunt calibration.

5. Change the control mode to displacement.

Stand-Alone— Path: **Status > Control Mode > Disp.**


Automated— Change **Control mode** on the **Manual Command** window to a **Displacement** control mode.

Shunt calibration cannot be performed on a sensor when it is in control of the servo loop.

6. Determine the shunt calibration resistor from the following table:

BRIDGE RESISTANCE	SENSITIVITY	RANGE (% FULL SCALE)	RESISTOR VALUE
350 Ω	2 mV/V	100%	49.9 k
		50%	100 k
		20%	249 k
		10%	499 k
350 Ω	1 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k
700 Ω	2 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k
700 Ω	1 mV/V	100%	200 k
		50%	402 k
		20%	1000 k
		10%	2000 k

7. Install the shunt calibration resistor as follows:
 - A. Select the appropriate shunt calibration resistor.
 - B. Bend the resistor leads 90° for a 0.3 inch separation.
 - C. Cut the resistor leads 0.12 inch from the bend.
 - D. Insert the resistor into the connector solder cups and solder.
 - E. Complete and attach a shunt calibration label as specified on the 493.40/41 Carrier I/O Shunt Calibration Kit (MTS PN 100-028-185).
 - F. Install the shunt calibration resistor/connector assembly into the appropriate **SHUNT CAL** connector slot on the front panel of the appropriate I/O Carrier Module.

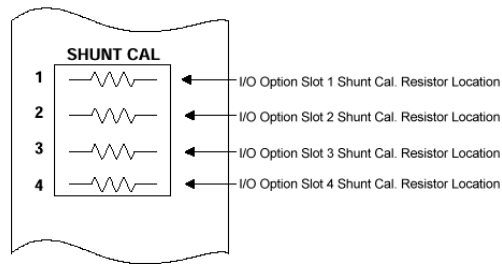

8. Verify that force is still zero.

While it is unlikely, it is possible for the force signal to change when the control mode changes. If it does, select **Auto Offset** to zero the force output.

9. Perform a shunt calibration.

Refer to “How to Perform a Shunt Calibration” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed procedure.

Shunt Calibration/Bridge Completion

On a typical system, shunt calibration and bridge completion resistor installation is completed on the I/O Carrier module.


If you have purchased optional sensor cables with transducer ID modules, shunt calibration and bridge resistors are installed on these modules.

I/O Carrier Module

Shunt calibration connector

The I/O Carrier module has a shunt calibration connector on its front panel that allows up to four shunt resistors (1 per slot) to be plugged in. The **SHUNT CAL** connector is labeled to indicate which slot the shunt calibration resistor is tied to.

Each shunt calibration resistor is soldered to a 2-pin holder (MTS part number 114338-26). This holder plugs into the front panel connector shown below. Refer to the 493.40/41 Carrier I/O Shunt Calibration Kit (MTS part number 100-028-185) for more detailed information on kit components and installation.

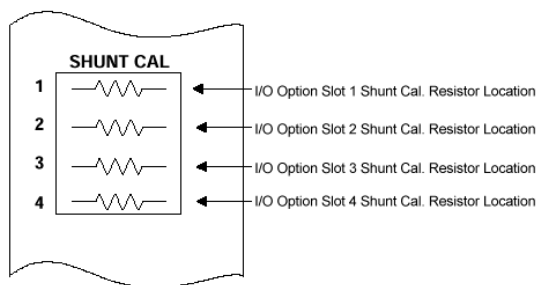


Bridge completion circuits


Each of the four I/O option card slots on the I/O Carrier module provides support for up to three bridge completion resistors as well as a shunt calibration resistor. The bridge completion resistors can be installed into sockets on the I/O Carrier printed wiring board. The shunt calibration resistor sockets are accessible from the I/O Carrier front panel.

The following figures show three typical bridge configurations for a DC conditioner installed on an I/O Carrier module.


4 Wire Full Bridge

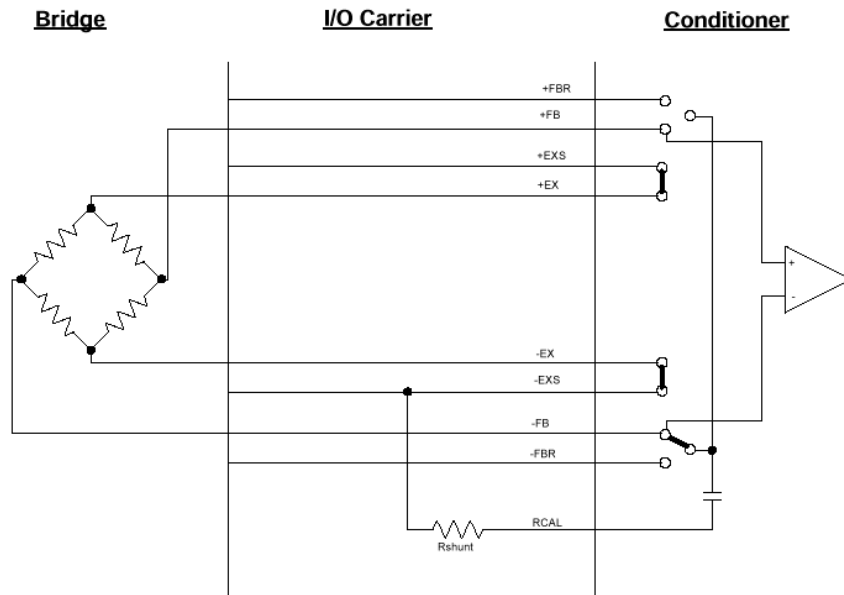

3 Wire Quarter Bridge

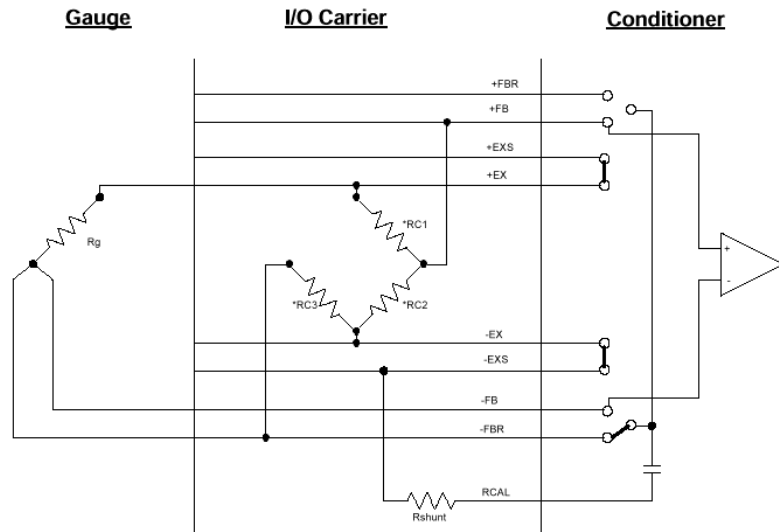

7 Wire Full Bridge

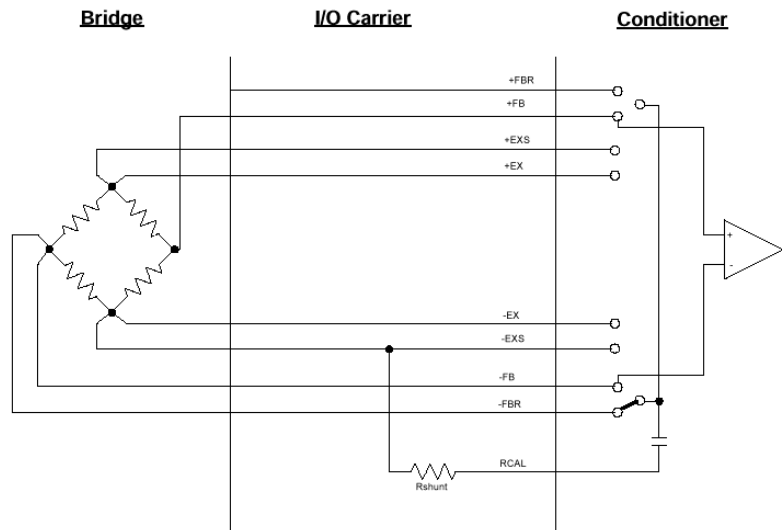

Chapter 6

Calibration

This chapter describes how to calibrate the sensors connected to your system. All sensors require calibration to ensure that their outputs accurately represent the physical condition they sense (e.g., force or displacement). When you calibrate a sensor you are calibrating the test system to properly interpret the sensor signal.

Sensors included with your test system are usually factory-calibrated, and the corresponding sensor calibration files are included with your system software. If you change a sensor or add a new sensor to your system, you must calibrate the new sensor/conditioner pair against a standard to ensure the sensor's accuracy.

You must calibrate all sensors before they can be used to support control modes or auxiliary data channels.

Contents

Before You Begin	97
Calibrating an LVDT	99
Calibrating a Force Sensor	128
Calibrating an Extensometer	174

Prerequisite

You must have a configuration file that includes the sensor(s) you wish to calibrate.

Initial calibration

If you are calibrating a sensor for the first time, you may find it necessary to:

- Perform an initial tuning of the sensor channel before calibration.
- Perform the procedure twice.

Abbreviated procedures

The abbreviated procedure provides an overview of the calibration procedure for those who are experienced at calibrating sensors. The abbreviated procedure lists the tasks and steps of the calibration procedure. Each task and step includes the page number of the detailed procedure where the task/step is fully explained.

Detailed procedures

The detailed procedures follow the abbreviated procedures. They provide an enhanced sequence of the calibration procedure for those who are inexperienced at calibrating sensors. Each detailed procedure is a step-by-step procedure arranged by tasks. Each task is a group of detailed steps that accomplish a portion of the procedure. Some steps include examples or helpful information.

Note *Procedures for "Automated Controllers" assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.*

Before You Begin

Before you start sensor calibration, *be sure* the following are true:

- The sensors are properly connected to the controller (see [“Stand-Alone Cabling Overview”](#) on page 41).
- A configuration file has been created that includes the hardware resources associated with the sensors you want to calibrate.
- You have completed an initial, nominal tuning of the sensor channel you are calibrating. This is especially important if you have not calibrated the sensor before.
- The hydraulics are warmed up (see System warm-up below).
- Conditioner **Gain** is set to 1 (3-stage servovalves only).
- You know your signal polarity (see [Signal polarity](#) below).

System warm-up

Be sure that both the hydraulic fluid and the servovalve are at operating temperature before calibration. Remove any specimen and run the system in displacement control for at least 30 minutes using a 80% full-scale length command at about 0.1 Hz.

Refer to “How to Warm Up Station Hydraulics” in the Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed procedure.

Signal polarity

Some test systems are configured to extend the actuator in response to a positive command, while other test systems are configured to retract the actuator in response to a positive command. Conditioner polarity determines feedback polarity.

You *must know* how your test system is configured so you can determine the appropriate polarity for the values used in this chapter. The valve polarity is established first (see [“Setting the Servovalve Polarity”](#) on page 73).

Full-range conditioners

The FlexTest SE controller uses a full-range conditioner. Consider the following when calibrating sensors that use full-range conditioners, such as the 493.25 DUC:

- Full-range conditioners allow a gain/linearization calibration option which require you to set up a linearized data table during sensor calibration.
- When using linearized data, you must retain copies of the initial calibration report (containing non-linearized data) and the calibration report after applying linearization.
- When calibrating sensors that use a full-range conditioner, **Electrical Zero Lock** on the **Offset/Zero** menu must be set to **Lock**. Readjustment of electrical zero after calibration will change the point at which linearization takes place, disturbing other calibration settings (especially delta K).

Calibrating an LVDT

An LVDT is calibrated with a dial indicator or some other displacement measuring device. Displacement is usually calibrated such that the maximum extension and retraction represent $\pm 100\%$ of the full-scale capacity of the LVDT, with mid-displacement set at zero. Displacement can also be calibrated to any range within the full-scale capacity of the sensor. Also, ranges do not have to be centered on zero.

Prerequisites

Be sure the items described in “[Before You Begin](#)” on page 97 are true. An LVDT requires a digital universal conditioner (DUC) in AC mode to process the feedback signal. You must know which conditioner is connected to the LVDT.

Note *If you are recalibrating a sensor, use the existing calibration values as a starting point.*

What you will need

You will need a dial indicator gage (or for longer displacements a measuring device such as a long ruler, laser, or optical detector) to calibrate an LVDT. All calibration tools should also be calibrated to an industry standard.

Note *This calibration procedure calibrates the conditioner for an actuator displacement of ± 10 cm. You will need to adjust the procedure to accommodate your actuator displacement.*

Important Notes

- During calibration, **Manual Offset** should always be set to zero.
- Ensure that **Electrical Zero Lock** on the **Offset/Zero** submenu is set to **Lock**. After completing LVDT calibration, readjustment of electrical zero will change the point at which linearization takes place, disturbing other calibration settings (especially delta k).
- Procedures for “Automated Controllers” assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Calibration Types

The FlexTest SE controller’s full-range conditioner allows you to choose Gain/Delta K or Gain/Linearization calibration for LVDTs.

The other calibration types, mv/v Pos Tension and mv/v Pos Comp are typically not used for LVDT calibration.

Pre-calibration tuning

Use the following procedure for initial tuning of the LVDT sensor channel prior to calibration. Pre-tuning is especially important if the LVDT has never been calibrated.

1. Select the **Calibration** access level.

Stand-Alone— Path: **Config > Access Level > Calibration**

Automated— On the **Station Manager** toolbar, select **Calibration** in the User Level access box

2. Configure a meter to monitor displacement feedback.

Stand-Alone— Path: **Meters > Meter 1 > Signal > Disp.**

Automated— From the **Display** menu on the **Station Manager** window, select **Meters**, and then set up to monitor displacement feedback.

3. On the **Inputs** panel (**Automated Systems Only**), enter **Fullscale Min/Max** values that conform with your sensor specifications.

Typically, you should set the fullscale min/max values according to the dynamic stroke rating of your actuator. The **DYN STROKE** rating is usually printed on a nameplate on the side of the actuator. For example, if the dynamic stroke rating of your actuator is 102 mm, you should set your full-scale min to -51 mm and your full-scale max to +51 mm.

4. Display the **Calibration** submenu or tab, then set and adjust parameters.

Stand-Alone— Path: **Setup > Disp > Calibration**

Automated— Click the **Channel Input Signals** icon to open the **Inputs** panel, and then click the **Calibration** tab

- A. Enter fullscale **Minimum/Maximum** values that conform with your sensor specifications (**Stand-Alone systems only**).
- B. Set **Excitation** to 10 volts.
- C. Adjust **Post-amp Gain** for a 5 volt readout on the meter.
- D. Adjust **Phase** for the maximum output voltage on the meter.
- E. Adjust **Post-amp Gain** for a 9.5 volt readout on the meter.

5. Set conditioner polarity to **Normal** (default) so that a positive command extends the actuator.

Stand-Alone — Path: **Setup > Disp > Calibration > Polarity > Normal**

Automated — On the **Calibration** tab, select **Normal** for conditioner **Polarity**.

6. Check to ensure that the polarity of the servovalve signal is set correctly. See [“Setting the Servovalve Polarity”](#) on page 73.

Stand-Alone — Path: **Setup > Output > Polarity**

Automated — Click the **Channel Drive** icon to open the **Channel Drive** panel, then click the **Valve** tab.

Check the valve polarity setting. If you do not know what polarity to use for your servovalve, select **Normal** (default).

7. Set **P Gain** to 0.5

Stand-Alone — Path: **Tuning > P Gain**

Automated — From **Station Setup**, click the **Channel Tuning** icon, click the **Adjustments** tab, and then set **P Gain**.

8. Ensure that displacement control mode is selected.

Stand-Alone — Path: **Status > Control Mode > Disp.**

Automated — Check **Control Mode** on the Station Manager **Function Generator** panel.

9. Ensure that the **Span** is set for 100%.

Stand-Alone — Path: **Status > Span**

Automated — Check the **Master Span** setting on the **Station Controls** panel

10. Check hydraulic and program interlock indicators.

Stand-Alone — If the **Hydraulic Interlock** or **Program Interlock** indicator is lit on the front panel, determine the cause, correct it, and then click **Reset**.

Automated — If the **Interlock** or **Program** indicator is lit on the **Station Controls** panel, determine the cause, correct it, and then click **Reset** or **Reset/Override**.

If either interlock indicator lights again, you will need to determine the cause of the interlock and correct it before proceeding.



Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system. If servovalve polarity and/or conditioner polarity are set incorrectly, the actuator may move with full force.

Stay clear of the actuators when applying hydraulic pressure.

11. Apply power to the hydraulic service manifold (HSM).

Stand-Alone — Click the **HSM Low** button, and then **HSM High**.

Automated — In the power selection box, click the **Power Low** button, and then **Power High**.

12. Check the movement of the actuator.

Perform this step to verify that the actuator moves as you want.

Stand-Alone — Enable the front panel Dial, and then use the Dial to increase the **Setpoint** adjustment for a positive command.

Automated — Open the **Manual Command** window, and then click on the **Enable Manual Command** check box to enable manual command. Increase the **Manual Cmd** adjustment for a positive command.

Note *The following conditions assume you want a positive command to extend the actuator.*

Actuator fully retracted
or extended

Actuator not fully
retracted or extended

- A. If the actuator is fully retracted and applying a positive **Setpoint** or **Manual Cmd** does not extend it, zero the command, remove hydraulic pressure, and change the servovalve polarity. Then retry this test. If it still does not move, return to Step 7 and increase the gain setting.
 - If the actuator is fully extended and applying a negative **Setpoint** or **Manual Cmd** does not retract it, zero the command, remove hydraulic pressure, and change the servovalve polarity. Then retry this test. If it still does not move, return to Step 7 and increase the gain setting.
 - If the actuator does not move at all, return to Step 7 and increase the gain setting.
 - If the actuator retracts, the servovalve polarity is correct.
 - If the actuator extends, the servovalve polarity must be reversed. Check the **Polarity** setting and change it (from **Normal** to **Inverted** or vice versa).
- B. Check the movement of the actuator. Use the Dial to adjust **Setpoint** or the slider to adjust **Manual Cmd** to extend and retract the actuator.

13. Display the Function Generator application

Stand-Alone — Click **FG** on the front panel menu to display the **Function Generator** menu.

Automated — In the **Station Manager** navigation pane, click the **Function Generator** icon to display the **Function Generator** panel.

14. Set up the **Function Generator** with the following settings:

CONTROL	SETTING
Control Mode	Displacement
Compensator	None
Target Setpoint	0
Amplitude	5% of full scale
Frequency	1 Hz
Wave Shape	square

15. Set up scope parameters to display the channel's command and feedback signals.

Stand-Alone — Select **Scope** on the front panel.


Automated — In the **Station Manager** toolbar, click the **Scope** button to display the **Scope** window.

16. Click **Program Run** to start the function generator.
17. Increase **P Gain** while observing the displacement feedback signal.

Stand-Alone — Path: **Tuning > P Gain**

Automated — On the **Tuning** panel **Adjustments** tab, increase **P Gain**

18. Initial tuning is achieved when the displacement feedback signal approximates the square wave as shown below:

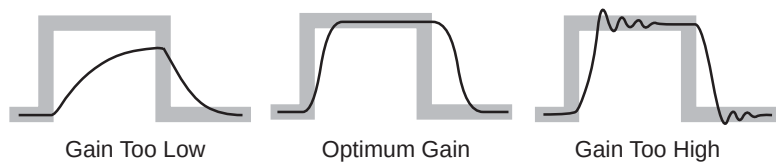

Abbreviated Procedure

Online readers *All procedure entries are hypertext links.
Click on any entry to jump to the corresponding page.*

The following abbreviated procedure outlines a displacement sensor (LVDT) calibration process. More detailed calibration information is available on the pages listed.

[Task 1, “Get things ready,”](#) on page 106

[Task 2, “Turn on hydraulic pressure,”](#) on page 108

[Task 3, “Verify the conditioner polarity,”](#) on page 109

[Task 4, “Set the phase,”](#) on page 110

[Task 5, “Set the zero and offset,”](#) on page 111

[Task 6, “Gain/Delta K Calibration,”](#) on page 114

[Task 7, “Gain/Linearization Calibration,”](#) on page 119

[Task 8, “Save the calibration,”](#) on page 127

Task 1 Get things ready

Perform the following before you start sensor calibration.

1. Locate relevant documentation.

- You need information about the sensor such as the serial number, model number, excitation voltage, displacement, etc. This information can be found on the appropriate Calibration Data sheet included with your system, or the Final Inspection card included with all MTS sensors.
- You need calibration identification numbers for any calibration tools that will be used for this calibration procedure (e.g., the dial indicator used for LVDT calibration). The calibration information is usually on a sticker attached to the equipment.
- You need the appropriate DUC Conditioner serial number.

2. Select the **Calibration** access level.

Stand-Alone— Path: **Config > Access Level > Calibration**

Automated— In the **Station Manager** window toolbar, select **Calibration**

3. Set up a signal monitor.

You will be monitoring the sensor output when making adjustments throughout this procedure. You can monitor the sensor output in the same units that you are using for the calibration.

You can use an external DVM to monitor sensor output from a BNC connector located on the FT SE Controller front panel.

You can also use the **Meters** window to monitor sensor output.

For **Automated** systems, you can also use the **Station Signals** panel to monitor sensor output. On the Station Manager **Display** menu, select **Station Setup**. In the navigation pane, select **Station Signals** to display the **Station Signals** panel to monitor current values for user-defined signals.

For more information on using the **Station Signals** panel, refer to “About the Station Signals Panel” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual.

4. Select the desired calibration type.

Stand-Alone— Path: **Setup > Disp > Calibration > Cal Type**

Automated — On the Station Setup **Inputs** panel **Calibration** tab, use **Cal Type** for your selection

5. On the **Calibration** submenu or tab, set the following initial conditioner calibration values:

CONTROL	SETTING
Polarity	Normal
Pre-Amp Gain	1.0
Post-Amp Gain	1.5
Excitation	10 volts
Phase	45°
Delta K	1
(Gain/Delta K calibration only)	
Fine Zero	0

Task 2 Turn on hydraulic pressure

This task activates the hydraulic pressure.



Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system.

Stay clear of the actuators when applying hydraulic pressure.

1. Ensure that displacement control mode is selected.

Stand-Alone — Path: **Status > Control Mode > Disp.**

Automated — Check **Control Mode** on the Station Manager **Function Generator** panel.

2. Ensure that the **Span** is set for 100%.

Stand-Alone — Path: **Status > Span**

Automated — Check the **Master Span** setting on the **Station Controls** panel

3. Check hydraulic and program interlock indicators.

Stand-Alone — If the **Hydraulic Interlock** or **Program Interlock** indicator is lit on the front panel, determine the cause, correct it, and then click **Reset**.

Automated — If the **Interlock** or **Program** indicator is lit on the **Station Controls** panel, determine the cause, correct it, and then click **Reset** or **Reset/Override**.

If either interlock indicator lights again, you will need to determine the cause of the interlock and correct it before proceeding.

4. In the power selection box, click the **Low** button, and then **High** for the HPU. If an HPU is not listed, start the HPU at the pump.
5. If an HSM is present, click the **Low** button, and then **High** for the HSM.

Task 3 Verify the conditioner polarity

This task checks the polarity of the conditioner. Different types of test systems are configured with different conditioner polarities. The polarity of the conditioner, the polarity of the valve driver, and the orientation of system cabling all play a role in controlling the actuator and determining how signals are displayed. This procedure assumes the servovalve polarity is set to **Normal** on the Station Setup **Drive** panel **Valve** tab.

1. Check the sensor connection.

Be sure the displacement sensor is properly connected.

2. Apply a positive actuator command.

Stand-Alone— Enable the front panel Dial, and then use the Dial to increase the **Setpoint** adjustment for a positive command.

Automated — Open the **Manual Command** window, and then click on the **Enable Manual Command** check box to enable manual command. Increase the **Manual Cmd** adjustment for a positive command.

3. Monitor the displacement feedback.

If the signal value is positive for actuator extension, the conditioner polarity is correct. If desired, you can change the conditioner polarity to make the signal value negative for actuator extension.

Task 4 Set the phase

This task determines the proper phase adjustment. The phase adjustment matches the phase of the AC feedback signal to the 10 kHz demodulation excitation signal.

1. Fully retract the actuator.

Stand-Alone— Using the front panel Dial, adjust the **Setpoint** to fully retract the actuator. Path: **Status > Setpoint**

Automated— Adjust the **Manual Cmd** slider control on the **Manual Command** window to fully retract the actuator.

2. Remove hydraulic pressure.
3. Adjust phase for the maximum conditioner output.

Monitor the appropriate AC conditioner feedback signal. Adjust **Phase** to achieve a maximum value.

Stand-Alone—Path: **Setup > Disp > Calibration > Phase**

Automated—Adjust the **Phase** control on the **Calibration** tab to achieve a maximum value. For automated systems, use the **Station Signals** panel to monitor the appropriate AC conditioner feedback signal

Note *When adjusting phase, the LVDT feedback may exceed 10 volts. You may need to lower conditioner gain before continuing phase adjustment.*

Task 5 Set the zero and offset

Establishing zero requires the actuator to be set at mid-displacement when you calibrate the LVDT for equal amounts of actuator extension and retraction.

Suppose you have an actuator with ± 10 cm displacement—which actually has a 20 cm displacement. Setting zero at mid-displacement produces a displacement of ± 10 cm (this is the most common approach). However, you can set zero anywhere within the full scale of the sensor, such as with the actuator fully extended or retracted to produce a displacement range of 0 mm - 20 mm.

Before beginning, ensure the following are true:

- The **Fine Zero** adjustment is set to 0.

Stand-Alone—Path: **Setup > Disp > Calibration > Fine Zero**

Automated—Adjust **Fine Zero** on the **Calibration** tab.

- The **Manual Offset** is set to 0.

Stand-Alone—Path: **Setup > Disp > Offset/Zero > Manual Offset**

Automated—Adjust **Manual Offset** on the **Offset/Zero** tab.

- The **Electrical Zero** adjustment is set to 0.

Stand-Alone—Path: **Setup > Disp > Offset/Zero > Electrical Zero**



Automated—Adjust **Electrical Zero** on the **Offset/Zero** tab

1. Mount the displacement measuring device.

Mount the measuring device to measure the distance between the end of the actuator's piston rod and a stationary point such as the actuator's upper endcap. There are a variety of ways to measure actuator displacement:

- Dial Indicator
- Tape Measure/Ruler
- Optical Detector

- Encoder

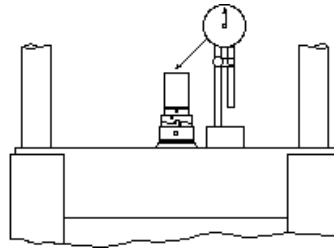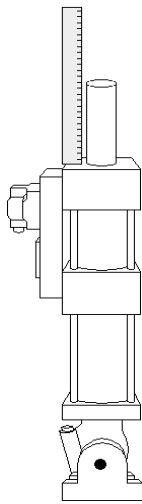

- You may need to place the dial indicator on a block to measure the mid-displacement position.
- Be sure to zero the dial indicator after you position it properly.

2. Ensure that displacement control mode is selected.

Stand-Alone — Path: **Status > Control Mode > Disp.**

Automated — Check **Control Mode** on the Station Manager **Function Generator** panel.

3. Evaluate the mid-displacement position for the actuator.

Stand-Alone:

- Enable the front panel Dial.
- Use the Dial to increase the **Setpoint** adjustment for a positive command.

Path: **Status > Setpoint**

- Adjust the **Setpoint** to fully extend the actuator and note the displacement signal value.
- Adjust the **Setpoint** to fully retract the actuator and note the displacement signal value.

Automated:

- A. Move the **Manual Cmd** slider to apply a positive command (extend the actuator).
- B. Adjust the **Manual Cmd** slider to fully extend the actuator and note the displacement signal value in the **Station Signals** panel.
- C. Adjust the **Manual Cmd** slider to fully retract the actuator and note the displacement signal value in the **Station Signals** panel.

The noted displacement signal values should be within 1% of each other.

If these displacement signals are not within 1%, you can evaluate the following procedures to establish the zero reference:

- Use the **Fine Zero** adjustment to shift the sensor conditioner's zero reference position.

Stand-Alone— Path: **Setup > Disp > Calibration > Fine Zero**

Automated— Adjust **Fine Zero** on the **Calibration** tab.

- In some cases, a mechanical adjustment may be necessary to center the LVDT (for instructions, see the actuator product manual).


Task 6 Gain/Delta K Calibration

If you using **Gain/Delta-K** for your calibration type, complete the following procedure. If not, complete **Task 7 Gain/Linearization Calibration** on page 119

Calibrate actuator retraction

LVDTs can be calibrated so that a positive output represents actuator extension and a negative output represents actuator retraction, or vice versa.

You calibrate the negative side of the output with gain and the positive side of the output with Delta K.

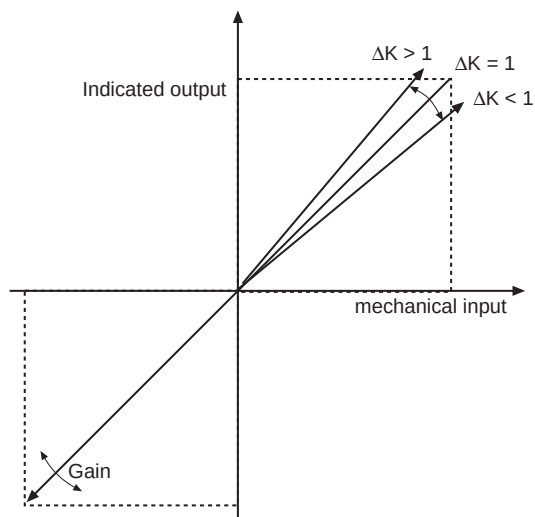

Delta K compensates for differences in symmetry between the positive and negative outputs.

You should calibrate actuator extension at 80% of the full scale range.

Gain controls

Pre-Amp gain is a selectable gain amplifier with predefined values. Since changes in **Pre-Amp** gain can cause spikes in the feedback signal, **Pre-Amp** gain can only be adjusted when hydraulics are off.

Post-Amp gain is a finer, operator-defined gain control that can be adjusted when hydraulics are on.

The **Total Gain** value is calculated by multiplying the **Pre-Amp** and **Post-Amp** gain values. If the total desired gain amount is known (from a calibration sheet), you can enter the amount in the **Total Gain** box and the software will calculate the **Pre-Amp** and **Post-Amp** gain values automatically.

When you are calibrating an AC conditioner, use the **Post-Amp** gain control to increase gain. If more gain is needed, you must disable

hydraulics and increase the **Pre-Amp** gain. You can then turn on hydraulics and continue to adjust the **Post-Amp** gain.

Note *This procedure assumes a positive command extends the actuator and a negative command retracts the actuator. If not, use the opposite polarity for any values given.*

Procedure

1. Select **Gain/Delta-K** for **Cal Type**.

Stand-Alone— Path: **Setup > Disp > Calibration > Cal Type > Gain/Delta-K**

Automated— Select **Gain/Delta-K** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. Apply a retraction command that is 80% of the full scale range.

Stand-Alone:

- A. Enable the front panel Dial.
- B. Use the Dial to adjust the **Setpoint** for 80% of the full scale range.
- C. Verify that your LVDT displacement signal equals 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your LVDT displacement signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may take repeated adjustment for the two values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the actuator's physical retraction will not equal your commanded value. You will adjust gain in the next step so that the actuator's physical retraction and your commanded retraction match.

Example: Suppose your actuator has a 100% retraction of -10 cm. In this step you would apply a -8 cm command, and even though the station signals would read -8 cm of feedback, the actuator may retract only -4 cm. This shows the conditioner/sensor pair are out of calibration.

3. Adjust gain to retract the actuator until it equals your retraction command.

Adjust **Post-Amp Gain** until your dial indicator or other readout device shows that the actuator's physical retraction equals your retraction command.

Note *This procedure assumes a positive command extends the actuator and a negative command retracts the actuator. If not, use the opposite polarity for any values given.*

Calibrate actuator extension

4. Apply an extension command that is 80% of the full scale range

Stand-Alone:

- A. Enable the front panel Dial.
- B. Use the Dial to adjust the **Setpoint** for 80% of the full scale range.
- C. Verify that your LVDT displacement signal equals 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your LVDT displacement signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may take a while for the two values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this*

*control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already calibrated, the actuator's physical extension will not equal your commanded value. You will adjust Delta K in the next step so that the actuator's physical extension and your commanded extension match.

Example: Suppose your actuator has a 100% extension of 10 cm. In this step you would apply a 8 cm command, and even though the station signals would read 8 cm of feedback, the actuator may extend only 4 cm. This shows the conditioner/sensor pair are out of calibration.

5. Adjust **Delta K** to extend the actuator until it equals your extension command.

Adjust **Delta K** until the dial indicator or other readout device shows that the actuator's physical extension equals your extension command.

Record data points

The accuracy tolerance of your data depends on the manufacturer of your sensor. Your sensor should include a calibration data sheet that shows the data point tolerance. Sensors from MTS include a sensor calibration data sheet that shows the data points as it was calibrated.

1. Record the data points for LVDT extension.

Stand-Alone:

- A. Adjust the **Setpoint** to achieve zero command.
- B. Adjust the dial indicator for a zero reference.
- C. Adjust the **Setpoint** to 20% extension and record the dial indicator reading. Repeat this step for 40%, 60%, 80%, and 100% actuator extension.

Automated:

- A. Adjust the **Manual Cmd** slider to achieve zero command.
- B. Adjust the dial indicator for a zero reference.
- C. Adjust the **Manual Cmd** slider to 20% extension and record the dial indicator reading. Repeat this step for 40%, 60%, 80%, and 100% actuator extension.

2. Record the data points for LVDT retraction.

Stand-Alone:

- A. Adjust the **Setpoint** to achieve zero command.
- B. Adjust the dial indicator for a zero reference.
- C. Adjust the **Setpoint** to 20% retraction and record the dial indicator reading. Repeat this step for 40%, 60%, 80%, and 100% actuator retraction.

Automated:

- A. Adjust the **Manual Cmd** slider to achieve zero command.
- B. Adjust the dial indicator for a zero reference.
- C. Adjust the **Manual Cmd** slider to 20% retraction and record the dial indicator reading. Repeat this step for 40%, 60%, 80%, and 100% actuator retraction.

Task 7 Gain/Linearization Calibration

If you are using **Gain/Linearization** for your calibration type, complete the following procedure. If not, complete **Task 6 Gain/Delta K Calibration** on page 114.

Important *Using linearization data requires specific conditioner zeroing practices. Ensure that **Electrical Zero Lock** on the **Offset/Zero** menu is set to **Locked**. Adjusting electrical zero after calibration may invalidate linearization data.*

Initial LVDT calibration

For initial calibration of an LVDT complete the following procedure:

1. Select **Gain/Linearization** for **Cal Type**.

Stand-Alone— Path: **Setup > Disp. > Calibration > Cal Type > Gain/Linearization**

Automated— Select **Gain/Linearization** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. Apply a retraction command that is 80% of the full scale range.

Stand-Alone:

- A. Enable the front panel Dial.
- B. Use the Dial to adjust the **Setpoint** for 80% of the full scale range.
- C. Verify that your LVDT displacement signal equals 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your LVDT displacement signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may take repeated adjustment for the two values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Calibration** submenu or tab) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the actuator's physical retraction will not equal your commanded value. You will adjust gain in the next step so that the actuator's physical retraction and your commanded retraction match.

Example: Suppose your actuator has a 100% retraction of -10 cm. In this step you would apply a -8 cm command, and even though the station signals would read -8 cm of feedback, the actuator may retract only -4 cm. This shows the conditioner/sensor pair are out of calibration.

3. Adjust gain to retract the actuator until it equals your retraction command.

Path: **Setup > Disp. > Calibration > Cal Type > Gain/Linearization > Post-Amp Gain**

Adjust **Post-Amp Gain** on the **Calibration** submenu or tab until your dial indicator or other readout device shows that the actuator's physical retraction equals your retraction command.

4. Record dial indicator and conditioner feedback readings at predetermined retraction command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a 0% command.
- B. Record the dial indicator value for the 0% command.
- C. Enter the corresponding conditioner feedback reading.
- D. Use the Dial to adjust the **Setpoint** for a -2% retraction command.
- E. Record the dial indicator value and conditioner feedback at the -2% row of your record sheet.

- F. Repeat steps D and E for other retraction commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a 0% command.
 - B. Record the dial indicator value for the 0% command.
 - C. Enter the corresponding conditioner feedback reading in the **Conditioner** column at the appropriate row in the window.
 - D. Adjust the **Manual Cmd** slider for a -2% retraction command.
 - E. Record dial indicator value and conditioner feedback at the -2% row of your record sheet.
 - F. Repeat steps D and E for other retraction commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).
5. Record dial indicator and conditioner feedback readings at predetermined extension command points.

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a +2% extension command.
- B. Record the dial indicator and conditioner feedback values at the +2% row of your record sheet.
- C. Repeat steps A and B for other extension commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% extension command.
 - B. Record the dial indicator value and conditioner feedback at the +2% row of your record sheet.
 - C. Repeat steps A and B for other extension commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale)
6. Turn off system hydraulics.

- On the Linearization Data window, enter the dial indicator and conditioner feedback readings for all command points previously recorded.

Stand-Alone— Path: **Setup > Disp > Calibration > Cal Type > Gain/Linearization > Linearization Data**

Linearization Data		
	Standard	Conditioner
-10.0000:	-10.0000	9.9900 mm
-8.0000:	-8.0000	7.9900 mm
-6.0000:	-6.0000	5.9800 mm
-4.0000:	-4.0000	3.9900 mm
-2.0000:	-2.0000	1.9900 mm
0.00000:	0.0000	0.0000 mm
2.0000:	2.0000	1.9900 mm

Automated— Click **Linearization Data** on the **Calibration** tab to open the Linearization Data window.

Recommended	Standard	Conditioner
-0.080000:	-0.080000	-0.080000 cm
-0.060000:	-0.060000	-0.060000 cm
-0.040000:	-0.040000	-0.040000 cm
-0.020000:	-0.020000	-0.020000 cm
0.0000:	0.000000	0.000000 cm
0.020000:	0.020000	0.020000 cm
0.040000:	0.040000	0.040000 cm
0.060000:	0.060000	0.060000 cm
0.080000:	0.080000	0.080000 cm

- Turn on system hydraulics.

LVDT recalibration

If the LVDT has been previously calibrated, use the following procedure:

1. Locate the calibration data sheet for the appropriate conditioner.
2. Ensure that system hydraulics is off.
3. Open the **Linearization Data** window.

Stand-Alone—Path: **Setup > Disp > Calibration > Cal Type > Gain/Linearization > Linearization Data**

Automated— Click **Linearization Data** on the **Calibration** tab to open the Linearization Data window.

4. Transfer **Standard** and **Conditioner** data from the conditioner's calibration data sheet to corresponding data entries on the Linearization Data window.
5. Turn on system hydraulics.
6. Verify the linearization data.

Stand-Alone:

- A. Using the front panel Dial, adjust the **Setpoint** for each retraction and extension command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**) with the corresponding values on the Calibration Data sheet.

Automated:

- A. Adjust the **Manual Cmd** slider for each retraction and extension command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**) with the corresponding values on the Calibration Data sheet

If the data is valid: **Stop** this procedure.

If the data is not valid: **Proceed** to the next step.

7. Reset Linearization Data window to default values.

Stand-Alone—Path: **Setup > Disp > Calibration > Cal Type > Gain/Linearization > <<Reset>>**

Automated— Click **Reset** on the Linearization Data window.

8. Apply a retraction command that is 80% of the full scale range.

Stand-Alone:

- A. Use the front panel Dial to adjust the **Setpoint** for 80% of the full scale range. Path: **Status > Setpoint**
- B. Verify that your LVDT displacement signal equals 80% of the full scale range.

Automated:

- A. Adjust the **Manual Cmd** slider on the **Manual Command** window for 80% of the full scale range.
- B. Use the **Station Signals** panel to verify that your LVDT displacement signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may take repeated adjustment for the two values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the actuator's physical retraction will not equal your commanded value. You will adjust gain in the next step so that the actuator's physical retraction and your commanded retraction match.

Example: Suppose your actuator has a 100% retraction of -10 cm. In this step you would apply a -8 cm command, and even though the station signals would read -8 cm of feedback, the actuator may retract only -4 cm. This shows the conditioner/sensor pair are out of calibration.

9. Adjust gain to retract the actuator until it equals your retraction command.

Stand-Alone— Path: **Setup > Disp > Calibration > Cal Type > Gain/Linearization > Post-Amp Gain**

Automated— Adjust the **Post-Amp Gain** slider control on the **Calibration** tab

Adjust **Post-Amp Gain** until your dial indicator or other readout device shows that the actuator's physical retraction equals your retraction command.

10. Record dial indicator and conditioner feedback readings at predetermined retraction command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the front panel Dial to adjust the **Setpoint** for a 0% command.
- B. Record the dial indicator value at 0% command.
- C. Record the corresponding conditioner feedback reading on your record sheet.
- D. Use the Dial to adjust the **Setpoint** for a -2% retraction command.
- E. Record the dial indicator value and conditioner feedback at the -2% row of your sheet.
- F. Repeat steps D and E for other retraction commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a 0% command.
- B. Record the dial indicator value at 0% command.
- C. Record the corresponding conditioner feedback reading at the 0% row of your record sheet.
- D. Adjust the **Manual Cmd** slider for a -2% retraction command.

- E. Record the dial indicator and conditioner feedback values at the -2% row of your record sheet.
 - F. Repeat steps D and E for other retraction commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).
11. Record dial indicator and conditioner feedback readings at predetermined extension command points.

Stand-Alone:

- A. Use the front panel Dial to adjust the **Setpoint** for a +2% extension command.
- B. Record the dial indicator value and conditioner feedback at the +2% row of your record sheet.
- C. Repeat steps A and B for other extension commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% extension command.
 - B. Record the dial indicator value and conditioner feedback at the -2% row of your record sheet
 - C. Repeat steps A and B for other extension commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).
12. Turn off system hydraulics.

13. On the Linearization Data window, enter the dial indicator and conditioner feedback readings for all command points previously recorded on a separate sheet.
14. Turn on system hydraulics.
15. Verify linearization data.

Stand-Alone:

- A. Using the front panel Dial, adjust the **Setpoint** for each retraction and extension command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**).
- C. Check validity before entering each pair of values on a new Calibration Data Sheet.

Automated:

- A. Adjust the **Manual Cmd** slider for each retraction and extension command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**).
- C. Check validity before entering each pair of values on a new Calibration Data Sheet.

Task 8 Save the calibration

It is important that you save your sensor calibration values.

Stand-Alone— Path: **Setup > Open/Save Parameters > <<Save>>**

Automated— Click **Save** on the **Calibration** tab to save the current calibration values to the sensor calibration file.

Calibrating a Force Sensor

A force sensor (also called a load cell) is calibrated with a load standard. It is calibrated such that the maximum compression and tension represent $\pm 100\%$ of the full-scale capacity of the force sensor, with zero force set at midcapacity.

Prerequisites

Be sure the items described in “[Before You Begin](#)” on page 97 are true. A force sensor requires a Digital Universal Conditioner (DUC) configured for the DC mode that processes a DC feedback signal. You must know which conditioner is connected to the sensor.

Initial calibration

If you are calibrating a sensor for the first time, you may find it necessary to:

- Perform an initial tuning of the sensor channel before calibration.
- Perform the procedure twice.

Recalibration

If you are recalibrating a sensor, use the existing calibration values as a starting point.

What you will need

You will need the following items to calibrate a force sensor. All calibration tools should also be calibrated to an industry standard.

- A load standard can be a calibrated force sensor with its own electronics or it can be a calibrated set of dead weights.

Note *This calibration procedure calibrates the DC conditioner for a force sensor of ± 10 kN. You will need to adjust the procedure to accommodate your force sensor.*

- A DVM to monitor the output of the load standard.

Calibration Types

The FlexTest SE controller’s full-range conditioner allows you to choose Gain/Delta K, Gain/Linearization, mV/V Positive Tension, or mV/V Positive Compression calibration.

Important note

Procedures for “Automated Controllers” assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Abbreviated Procedure

Online Readers *All procedure entries are hypertext links.
Click on any entry to jump to the corresponding page.*

The following abbreviated procedure outlines a force sensor (load cell) calibration process. More detailed calibration information is available on the pages listed.

[Task 1, “Get things ready,”](#) on page 130

[Task 2, “Turn on hydraulic pressure,”](#) on page 132

[Task 3, “Verify the conditioner polarity,”](#) on page 133

[Task 4, “Set the zero and offset,”](#) on page 134

[Task 5, “Gain/Delta K Calibration,”](#) on page 135

[Task 6, “Gain/Linearization Calibration,”](#) on page 142

[Task 7, “Millivolt/Volt Calibration,”](#) on page 153

[Task 8, “Establish the shunt calibration reference,”](#) on page 157

[Task 9, “Save the calibration,”](#) on page 160

Task 1 Get things ready

Perform the following before you start sensor calibration.

1. Locate relevant documentation (e.g., sensor information, conditioner serial number, and calibration tool ID numbers)
2. Set up to monitor load standard output.
3. Select the **Calibration** access level.

Stand-Alone— Path: **Config > Access Level > Calibration**

Automated— In the **Station Manager** window toolbar, select **Calibration**

4. Set up a signal monitor.

You will be monitoring the sensor output when making adjustments throughout this procedure. You can monitor the sensor output in the same units that you are using for the calibration.

You can use an external DVM to monitor sensor output from a BNC connector located on the FT SE Controller front panel.

You can also use the **Meters** window to monitor sensor output.

For **Automated** systems, you can also use the **Station Signals** panel to monitor sensor output. On the Station Manager **Display** menu, select **Station Setup**. In the navigation pane, select **Station Signals** to display the **Station Signals** panel to monitor current values for user-defined signals.


For more information on using the **Station Signals** panel, refer to “About the Station Signals Panel” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual.

5. Mount the force standard.

The illustration shows a load standard in-line with the force train coupled with the force sensor.

The load standard reacts like a stiff specimen. Be sure the gain settings (PID) for the control mode are appropriate.

If the control mode has not been tuned yet, use some default values. Then recalibrate the sensor after the initial tuning.

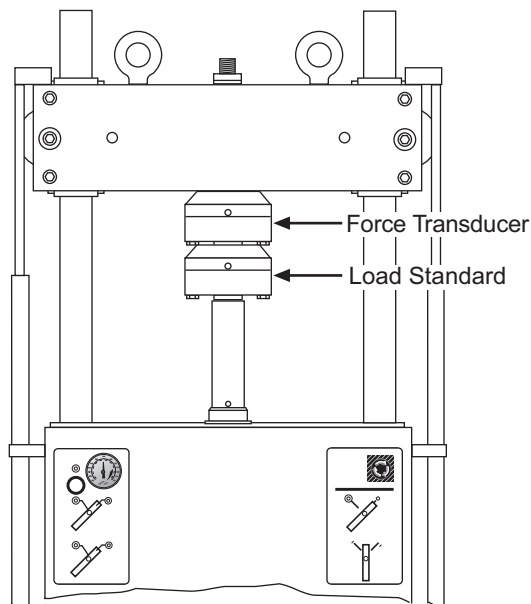

6. If you using the Gain/Delta K or Gain/Linearization for calibration, set the following initial conditioner calibration values on the Calibration submenu.

Control	Setting
Polarity	Normal
Pre-amp Gain	480
Post-amp Gain	1
Total Gain	500
Excitation	10 volts
Fine Zero	0
Zero/Balance	0
Delta K (Gain/Delta K calibration only)	1

Task 2 Turn on hydraulic pressure

 WARNING

Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system.

Stay clear of the actuators when applying hydraulic pressure.

See [“Turn on hydraulic pressure”](#) on page 108 for a detailed procedure.

Task 3 Verify the conditioner polarity

This task checks the polarity of the conditioner. Different types of test systems are configured with different conditioner polarities. The polarity of the conditioner, the polarity of the valve driver, and the connection positions of system cabling all play a role in controlling the actuator and determining how signals are displayed.

This procedure assumes the servovalve polarity is set to **Normal** on the Station Setup **Drive** panel **Valve** tab.

1. Check the sensor connection.

Be sure the force sensor is properly connected to the rear panel of the controller.

2. Apply a load to the force sensor.

Push on the force sensor (with your hand) and note the signal value on the DVM, front panel meter (stand-alone), or **Station Signals** (automated).

If the signal value is positive for actuator compression, the conditioner polarity is correct. If desired, you can change the conditioner polarity to make the signal value negative for actuator compression.

Task 4 Set the zero and offset

This task records the load standard readout as the zero reference.

Using a load standard

Stand-Alone — Adjust the **Setpoint** for 0 kN. Then zero the load standard readout. Path: **Status > Setpoint**

Automated — Adjust the **Manual Cmd** slider on the **Manual Command window** for 0 kN. Then zero the load standard readout.

Using dead weights

Stand-Alone— Remove all dead weights, and then click **Auto Offset** on the **Offset/Zero** menu. Path: **Setup > Force > Offset/Zero > <<Auto Offset>>**

Automated— Remove all dead weights, and then click **Auto Offset** on the **Offset/Zero** tab (**Inputs** panel).

Task 5 Gain/Delta K Calibration

If you using **Gain/Delta-K** for your calibration type, complete the following procedure. If not, complete **Task 6 Gain/Linearization Calibration** on page 142 or **Task 7 Millivolt/Volt Calibration** on page 153


Calibrate tension

Force sensors can be calibrated so that a positive output represents actuator compression and a negative output represents actuator tension, and vice versa.

You calibrate the negative side of the output with gain and the positive side of the output with Delta K.

Delta K compensates for differences in symmetry between positive and negative outputs.

Calibrate compression at 80% full scale for each range.

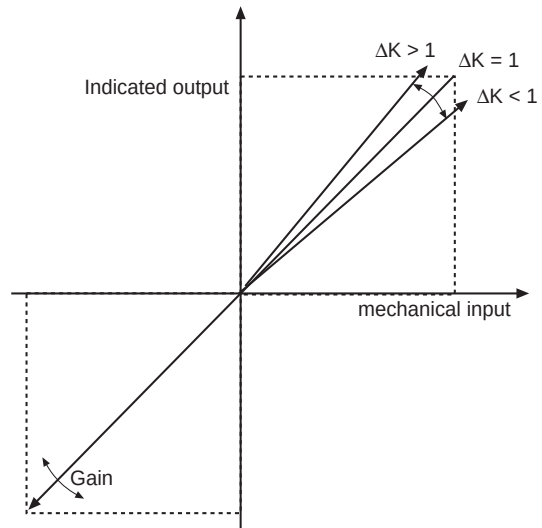

Note This procedure assumes a positive command extends the actuator and a negative command retracts the actuator. If not, use the opposite polarity for any values given.

Gain controls

Pre-Amp gain is a selectable gain amplifier with predefined values. Since changes in **Pre-Amp** gain can cause spikes in the feedback signal, **Pre-Amp** gain can only be adjusted when hydraulics are off.

Post-Amp gain is a finer, operator-defined gain control that can be adjusted when hydraulics are on.

The **Total** gain value is calculated by multiplying the **Pre-Amp** and **Post-Amp** gain values. If the total desired gain amount is known (from a calibration sheet), you can enter the amount in the **Total** gain box

and the software will calculate the **Pre-Amp** and **Post-Amp** gain values automatically.

When you are calibrating an DC conditioner, use the **Post-Amp** gain control to increase gain. If more gain is needed, you must disable hydraulics and increase the **Pre-Amp** gain. You can then turn on hydraulics and continue to adjust the **Post-Amp** gain.

1. Select **Gain/Delta-K** for **Cal Type**.

Stand-alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Delta-K**

Automated— Select **Gain/Delta-K** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. Exercise the force standard.

Stand-Alone— After enabling the front panel Dial, adjust the **Setpoint** to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis. Path: **Status > Setpoint**

Automated— Use the **Manual Cmd** slider on the **Manual Command** window to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis.

Example: When calibrating a ± 10 kN range, exercise the actuator between 0 and -10 volts.

3. Apply a tensile force command that is 80% of the full scale range.

Stand-Alone:

- A. Using the Dial, adjust the **Setpoint** for a tensile force command that is 80% of the full scale range.
- B. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your force transducer signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the tensile force command and feedback values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the tensile force applied to the force transducer will not equal your commanded value. You will adjust gain in the next step so that the actual tensile force (as measured by the load standard) and your commanded tensile force match.

Example: Suppose your actuator has a 100% tensile force rating of -10 kN. In this step you would apply -8 kN of command, and even though the station signals would read -8 kN of feedback, the force standard may only read -4 kN. This shows the conditioner/sensor pair are out of calibration.

4. Adjust **Post-amp Gain** on the **Calibration** submenu or tab to increase the tensile force reading on the load standard until it equals your tensile force command.

Calibrate compression

Note *This procedure assumes a positive command extends the actuator and a negative command retracts the actuator. If not, use the opposite polarity for any values given.*

1. Exercise the force sensor.

Stand-Alone— After enabling the front panel Dial, adjust the **Setpoint** to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis. Path: **Status** > **Setpoint**

Automated— Use the **Manual Cmd** slider on the **Manual Command** window to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis.

Example: When calibrating a ± 10 kN range, exercise the load standard between 0 and 10 kN.

2. Apply a compressive force command that is 80% of the range's full scale.

Stand-Alone:

- A. Enable the front panel Dial.
- B. Using the Dial, adjust the **Setpoint** for a compressive force command that is 80% of the full scale range.
- C. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for a compressive force command that is 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your force transducer signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the compressive force command and feedback values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the compressive force applied to the force transducer will not equal your commanded value. You will adjust Delta K in the next step so that the actual compressive force and your commanded compressive force match.

Example: Suppose your actuator has a 100% compressive force rating of 10 kN. In this step you would apply 8 kN of command, and even though the station signals would read 8 kN of feedback, the force standard may only read 4 kN. This shows the conditioner/sensor pair are out of calibration.

3. Adjust Delta K until the actual compressive force equals your compressive force command.

Adjust **DeltaK** on the **Calibration** submenu or tab to increase the compressive force reading on the load standard until it equals your compressive force command.

Record data points

The accuracy tolerance of your data depends on the manufacturer of your sensor. Your sensor should include a calibration data sheet that shows the data point tolerance. Sensors from MTS include a sensor calibration data sheet that shows the data points as it was calibrated.

1. Record the data points for compression.

Stand-Alone:

- A. Adjust the **Setpoint** to achieve a load standard readout of zero.
- B. Adjust the **Setpoint** between zero and full compression three times. This exercises the force sensor to remove hysteresis.
- C. Establish the zero reference.

Using a load standard

- Adjust **Setpoint** for 0 kN. Then zero the load standard readout.

Using dead weights

- Remove all dead weights.
- Adjust the **Manual Offset** for a signal value of 0 kN on the DVM or other monitoring device.

Path: **Setup > Force > Offset/Zero > Manual Offset**

- D. Adjust the **Setpoint** to achieve a load standard reading of 20% compression and record the meter reading. Repeat this step for 40%, 60%, 80%, and 100% compression.

Automated:

- A. Adjust the **Manual Cmd** slider on the **Manual Command** window to achieve a load standard readout of zero.
- B. Adjust the **Manual Cmd** slider between zero and full compression three times. This exercises the force sensor to remove hysteresis.
- C. Establish the zero reference.

Using a load standard

Using dead weights

- Adjust **Manual Cmd** slider for 0 kN. Then zero the load standard readout.
 - Remove all dead weights. On the **Inputs** panel, click on the **Offset/Zero** tab, and then adjust **Manual Offset** for a signal value of 0 kN on the DVM or **Station Signals** panel.
- D. Adjust the **Manual Cmd** slider to achieve a load standard reading of 20% compression and record the meter reading. Repeat this step for 40%, 60%, 80%, and 100% compression.
2. Record the data points for the tension.

Stand-Alone:

- A. Adjust the **Setpoint** to achieve a load standard readout of zero.
- B. Adjust the **Setpoint** between zero and full tension three times. This exercises the force sensor to remove hysteresis.
- C. Establish the zero reference.

Using a load standard

Using dead weights

- Adjust the **Setpoint** for 0 kN. Then zero the load standard readout.
- Remove all dead weights.
- Adjust **Manual Offset** for a signal value of 0 kN on the DVM or other monitoring device.

Path: **Setup > Force > Offset/Zero > Manual Offset**

- D. Adjust the **Setpoint** to achieve a force standard reading of 20% tension and record the meter reading. Repeat this step for 40%, 60%, 80%, and 100% compression.

Automated:

- A. Adjust the **Manual Cmd** slider to achieve a load standard readout of zero.
- B. Adjust the **Manual Cmd** slider between zero and full tension three times. This exercises the force sensor to remove hysteresis.
- C. Establish the zero reference.

Using a load standard

- Adjust the **Manual Cmd** slider for 0 kN. Then zero the load standard readout.

Using dead weights

- Remove all dead weights. Then adjust the **Offset** control for a **Signal Value** of 0 kN on the **Input Signals** window.
- D. Adjust the **Manual Cmd** slider to achieve a force standard reading of 20% tension and record the meter reading. Repeat this step for 40%, 60%, 80%, and 100% compression.

Task 6 Gain/Linearization Calibration

If you are using **Gain/Linearization** for your calibration type, complete the following procedure. If not, complete **Task 5 Gain/Delta K Calibration** on page 135 or **Task 7 Millivolt/Volt Calibration** on page 153.

Important *Using linearization data requires specific conditioner zeroing practices. Ensure that **Electrical Zero Lock** on the **Offset/Zero** menu is set to **Locked**. Adjusting electrical zero after calibration may invalidate linearization data.*

Initial force sensor calibration

For initial calibration of a force sensor, complete the following procedure:

1. Select **Gain/Linearization** for **Cal Type**.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization**

Automated— Select **Gain/Linearization** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. Exercise the force standard.

Stand-Alone— Enable the front panel Dial, then adjust the **Setpoint** to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis. Path: **Status > Setpoint**

Automated— Use the **Manual Cmd** slider on the **Manual Command** window to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis.

Example: When calibrating a ± 10 kN range, exercise the actuator between 0 and -10 volts. To calibrate the same force sensor for a different range such as ± 5 kN, exercise the load standard between 0 and -5 volts.

3. Apply a tensile force command that is 80% of the range's full scale.

Stand-Alone:

- A. Enable the front panel Dial.

- B. Using the Dial, adjust the **Setpoint** for a tensile force command that is 80% of the full scale range.
- C. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Open the **Manual Command** window, and then click on the **Enable Manual Command**.
- B. Adjust the **Manual Cmd** slider on the **Manual Command** window for a tensile force command that is 80% of the full scale range.
- C. Use the **Station Signals** panel to verify that your force transducer signal equals 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the tensile force command and feedback values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the tensile force applied to the force transducer will not equal your commanded value. You will adjust gain in the next step so that the actual tensile force and your commanded tensile force match.

Example: Suppose your actuator has a 100% tensile force rating of -10 kN. In this step you would apply -8 kN of command, and even though the station signals would read -8 kN of feedback, the force standard may only read -4 kN. This shows the conditioner/sensor pair are out of calibration.

- 4. Adjust the **Post-amp Gain** control to increase the tensile force reading on the load standard until it equals your tensile force command.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization < Post-Amp Gain**

Automated— Adjust the **Post-amp Gain** control on the **Calibration** tab of the **Inputs** panel.

5. Apply a compressive force command that is 80% of the full scale range.

Stand-Alone:

- A. Using the front panel Dial, adjust the **Setpoint** for a compressive force command that is 80% of the full scale range.
- B. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Adjust the **Manual Command** slider for a compressive force command that is 80% of the full scale range.
 - B. Use the **Station Signals** panel to verify that the compressive force signal is approximately equal to 80% of the full scale range.
6. Record force standard and conditioner feedback readings at predetermined tensile force command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a 0% command.
- B. Record the force standard's readout value in the 0% row of your record sheet.
- C. Enter the corresponding conditioner feedback reading.
- D. Use the Dial to adjust the **Setpoint** for a -2% tensile force command.
- E. Record the force standard's readout value and its corresponding conditioner feedback reading in the -2% row of your record sheet.
- F. Repeat steps D and E for other tensile force commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a 0% command.
 - B. Record the force standard's readout value and corresponding conditioner feedback reading at 0% command.
 - C. Adjust the **Manual Cmd** slider for a -2% tensile force command.
 - D. Record the force standard's readout value and its corresponding conditioner feedback reading in the -2% row of your record sheet.
 - E. Repeat steps E-G for other tensile force commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).
7. Record conditioner feedback readings at predetermined compressive force command points.

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a +2% compressive force command.
- B. Record the force standard's readout value in the +2% row of your record sheet.
- C. Enter the corresponding conditioner feedback reading.
- D. Repeat steps A-C for other compressive force commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% compressive force command.
 - B. Record the standard's readout signal and corresponding conditioner feedback reading in the +2% row of your record sheet.
 - C. Repeat steps A and B for other compressive force commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).
8. Turn off system hydraulics

- On the Linearization Data window, enter the force standard values and corresponding conditioner feedback readings for all command points previously recorded on a separate sheet.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization > Linearization Data**

Linearization Data		
	Standard	Conditioner
-60.000:	-60.0000	-60.0000 DaN
-40.000:	-40.0000	-40.0000 DaN
-20.000:	-20.0000	-20.0000 DaN
0.00000:	0.0000	0.0000 DaN
20.000:	20.0000	20.0000 DaN
40.000:	40.0000	40.0000 DaN
60.000:	60.0000	60.0000 DaN

Automated— Click **Linearization Data** on the **Calibration** tab to open the Linearization Data window.

The screenshot shows the 'Linearization Data' window with the following fields and table:

Fullscale Min/Max: -1000.0 1000.0 DaN

Data Range: From: 100% To: 100% [Reset]

	Recommended Standard	Conditioner
-80.000:	-80.000	-80.000 DaN
-60.000:	-60.000	-60.000 DaN
-40.000:	-40.000	-40.000 DaN
-20.000:	-20.000	-20.000 DaN
0.0000:	0.00000	0.00000 DaN
20.000:	20.000	20.000 DaN
40.000:	40.000	40.000 DaN
60.000:	60.000	60.000 DaN
80.000:	80.000	80.000 DaN

- Turn on system hydraulics.

Force transducer recalibration

If the force transducer has been previously calibrated, use the following procedure:

1. Locate the calibration data sheet for the appropriate conditioner.
2. Turn off system hydraulics.
3. Click **Linearization Data** to open the Linearization Data window.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization > Linearization Data**

Automated— Click **Linearization Data** on the **Calibration** tab of the **Inputs** panel.

4. Transfer **Standard** and **Conditioner** data from the conditioner's calibration data sheet to corresponding data entries on the Linearization Data window.
5. Turn on system hydraulics.
6. Verify linearization data.

Stand-Alone:

- A. Using the Dial, adjust the **Setpoint** for each tensile and compressive force command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**) by comparing them with the corresponding values on the Calibration Data sheet.

Automated:

- A. Adjust the **Manual Cmd** slider for each tensile and compressive force command point on the Linearization Data window.
- B. At each command point, verify both the dial indicator value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**) by comparing them with the corresponding values on the Calibration Data sheet

If the data is valid: **Stop** this procedure.

If the data is not valid: **Proceed** to the next step.

7. Reset Linearization Data window to default values.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization > <<Reset>>**

Automated— Click **Reset** on the Linearization Data window to return to default values.

8. Exercise the force standard.

Stand-Alone— Enable the front panel Dial, then adjust the **Setpoint** to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis. Path: **Status > Setpoint**

Automated— Use the **Manual Cmd** slider on the **Manual Command** window to cycle the load standard readout between zero and full tension three times. This removes sensor hysteresis.

Example: When calibrating a ± 10 kN range, exercise the actuator between 0 and -10 volts. To calibrate the same force sensor for a different range such as ± 5 kN, exercise the load standard between 0 and -5 volts.

9. Apply a tensile force command that is 80% of the range's full scale.

Stand-Alone:

- A. Using the Dial, adjust the **Setpoint** for a tensile force command that is 80% of the full scale range.
- B. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Adjust the **Manual Cmd** slider for a tensile force command that is 80% of the full scale range.
- B. Verify that your force transducer feedback signal is 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the tensile force command and feedback values to match.

Note *If the actuator response is sluggish and/or the signal value does not match the command, you will need to adjust the tuning of this control mode. Increase the proportional gain (**P Gain** on the **Tuning** menu) to correct sluggish actuator movement. Increase the reset integration value (**I Gain**) to help the feedback match the command.*

At this point, unless the conditioner is already in calibration, the tensile force applied to the force transducer will not equal your commanded value. You will adjust gain in the next step so that the actual tensile force and your commanded tensile force match.

Example: Suppose your actuator has a 100% tensile force rating of -10 kN. In this step you would apply -8 kN of command, and even though the station signals would read -8 kN of feedback, the force standard may only read -4 kN. This shows the conditioner/sensor pair are out of calibration.

10. Adjust the **Post-amp Gain** control to increase the tensile force reading on the load standard until it equals your tensile force command.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > Gain/Linearization > Post-Amp Gain**

Automated— Adjust the **Post-amp Gain** control on the **Calibration** tab of the **Inputs** panel.

11. Apply a compressive force command that is 80% of the full scale range.

Stand-Alone:

- A. Using the Dial, adjust the **Setpoint** for a compressive force command that is 80% of the full scale range.
- B. Verify that your force transducer feedback signal is 80% of the full scale range.

Automated:

- A. Adjust the **Manual Command** slider for a compressive force command that is 80% of the full scale range.
- B. Use the **Station Signals** panel to verify that the compressive force signal is approximately equal to 80% of the full scale range.

12. Record conditioner feedback readings at predetermined tensile force command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a 0% command.
- B. Record the force standard's readout value and corresponding conditioner feedback reading in the 0% row of your record sheet.
- C. Use the Dial to adjust the **Setpoint** for a -2% tensile force command.
- D. Record the force standard's readout signal and corresponding conditioner feedback reading in the -2% row of your record sheet.
- E. Repeat steps C and D for other tensile force commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a 0% command.
- B. Record the force standard readout signal and corresponding conditioner feedback reading at the 0% command line of your record sheet.
- C. Adjust the **Manual Cmd** slider for a -2% tensile force command.
- D. Record the force standard readout signal and corresponding conditioner feedback reading at the -2% command line of your record sheet.
- E. Repeat steps C and D for other tensile force commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

13. Record conditioner feedback readings at predetermined compressive force command points.

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a +2% compressive force command.
- B. Record the force standard's readout value and corresponding conditioner feedback reading in the +2% row of your record sheet.
- C. Repeat steps A and B for other compressive force commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% compressive force command.
 - B. Record the force standard readout signal and corresponding conditioner feedback reading at the +2% command line of your record sheet.
 - C. Repeat steps A and B for other compressive force commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).
14. Turn off system hydraulics.
 15. On the Linearization Data window, enter the force standard values and corresponding conditioner feedback readings for all command points previously recorded on a separate sheet.
 16. Turn on system hydraulics.
 17. Verify linearization data.

Stand-Alone:

- A. Using the Dial, adjust the **Setpoint** for each tensile and compressive force command point on the Linearization Data window.
- B. At each command point, verify both the force standard value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**).

- C. Check validity before entering each pair of values on a new Calibration Data Sheet.


Automated:

- A. Adjust the **Manual Cmd** slider for each retraction and extension command point on the Linearization Data window.
- B. At each command point, verify both the force standard value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**).
- C. Check validity before entering each pair of values on a new Calibration Data Sheet.

Task 7 Millivolt/Volt Calibration

If you are using **mV/V Calibration** for your calibration type, complete the following procedure. If not, complete **Task 5 Gain/Delta K Calibration** on page 135 or **Task 6 Gain/Linearization Calibration** on page 142.

Millivolt/volt calibration is used for transducers that have two different slopes (positive and negative).

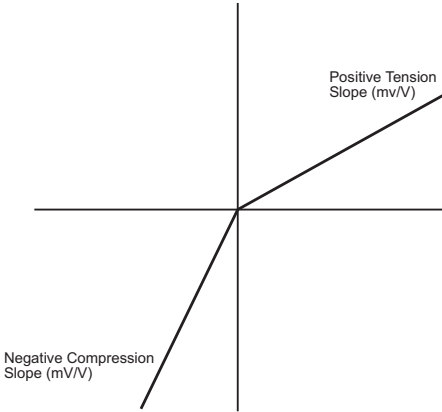

In this calibration process, system software calculates conditioner Delta K Gain and Gain values from previously measured mV/V values under both tension and compression.

The slope and gain values are derived from, and are relative to, the output of the load cell transducer as follows:

$$\text{Delta K Gain} = \frac{\text{Compression mV/V}}{\text{Tension mV/V}}$$

Where:

Compression is specified using the **Neg Compression** or **Pos Compressive** entry box on the Calibration submenu or tab.

Tension is specified using the **Neg Tension** or **Pos Tension** entry box on the Calibration submenu or tab.

$$\text{Gain} = \frac{\text{Conditioner Output Voltage}}{\text{Excitation Voltage} \times \text{Compression mV/V}}$$

Where:

Conditioner Output Voltage is typically 10 Vdc.

Excitation Voltage is specified using the **Excitation** entry box on the **Calibration** submenu or tab.

Compression is specified using the **Negative Compression** or **Positive Compressive** entry box on the Calibration submenu or tab.

mv/v Positive Tension Calibration

Use the following procedure if your force transducer is set up so that a positive output represents actuator retraction (tension).

1. Select **mv/v Pos Tension** for your calibration type.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > mv/v Pos Tension**

Automated—Select **mv/v Pos Tension** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. From the Calibration Data sheet for your force transducer enter the following values on the **Calibration** submenu or tab:

Stand-Alone:

- A. Enter the full scale force values in the **Minimum** and **Maximum** entry boxes.
- B. Enter the tension sensitivity value (+mV/v) in the **Pos Tension** entry box.
- C. Enter the compression sensitivity value (-mv/V) in the **Neg Compression** entry box.
- D. Enter the calibration excitation value (Vdc) in the **Excitation** entry box.

Automated:

- A. On the **Inputs** panel, enter the full scale force values in the **Fullscale Min/Max** entry boxes.
- B. Adjust **Pos Tension** for the required tension sensitivity value (+mv/v).
- C. Adjust **Neg Compression** for the required compression sensitivity value (-mv/V).
- D. Adjust **Excitation** for the required calibration excitation value (Vdc).

mv/v Positive
Compression Calibration

Use the following procedure if your force transducer is set up so that a positive output represents actuator extension (compression).

1. Select **mv/v Pos Comp** for your calibration type.

Stand-Alone— Path: **Setup > Force > Calibration > Cal Type > mv/v Pos Comp**

Automated— Select **mv/v Pos Compression** for **Cal Type** on the **Calibration** tab of the **Inputs** panel

2. From the Calibration Data sheet for your force transducer enter the following values on the **Calibration** submenu or tab:

Stand-Alone:

- A. Enter the full scale force values in the **Minimum** and **Maximum** entry boxes.
- B. Enter the tension sensitivity value (-mV/v) in the **Neg Tension** entry box.
- C. Enter the compression sensitivity value (+mv/V) in the **Pos Compression** entry box.
- D. Enter the calibration excitation value (Vdc) in the **Excitation** entry box.

Automated:

- A. Enter the full scale force values in the **Fullscale Min/Max** entry boxes.
- B. Adjust **Neg Tension** for the required tension sensitivity value (+mv/v).
- C. Adjust **Pos Compression** for the required compression sensitivity value (-mv/V).
- D. Adjust **Excitation** for the required calibration excitation value (Vdc).

Task 8 Establish the shunt calibration reference

Each resistive bridge type transducer (DC sensor) uses a shunt resistor to check the calibration accuracy of the sensor/conditioner combination. Each DC conditioner supports a shunt resistor.

1. Turn off hydraulic power.
2. Remove the load standard.
3. Turn on hydraulic power.
4. Zero the force sensor output.

Stand-Alone:

Adjust the **Setpoint** for a 0 kN output. The sensor output must be 0.000 kN for a proper shunt calibration. If not, return to [“Set the zero and offset”](#) on page 134.

Automated:

Adjust the **Manual Cmd** slider on the **Manual Command** window for a 0 kN output. The sensor output must be 0.000 kN for a proper shunt calibration. If not, return to [“Set the zero and offset”](#) on page 134.

5. Change the control mode to displacement.

Stand-Alone— Path: **Status > Control Mode > Disp.**

Automated— On the **Manual Command** window, change **Control Mode** to **Displacement**.


Shunt calibration cannot be performed on a sensor when it is in control of the servo loop.

6. Determine the shunt calibration resistor from the following table:


BRIDGE RESISTANCE	SENSITIVITY	RANGE (% FULL SCALE)	RESISTOR VALUE
350 Ω	2 mV/V	100%	49.9 k
		50%	100 k
		20%	249 k
		10%	499 k
350 Ω	1 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k
700 Ω	2 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k
700 Ω	1 mV/V	100%	200 k
		50%	402 k
		20%	1000 k
		10%	2000 k

7. If you have sensor cables with optional transducer ID modules, complete the following procedure. If not, proceed to Step 8.

Install the shunt calibration resistor into the **R9** location of the sensor ID module. The sensor identification cartridge is molded into the sensor cable.

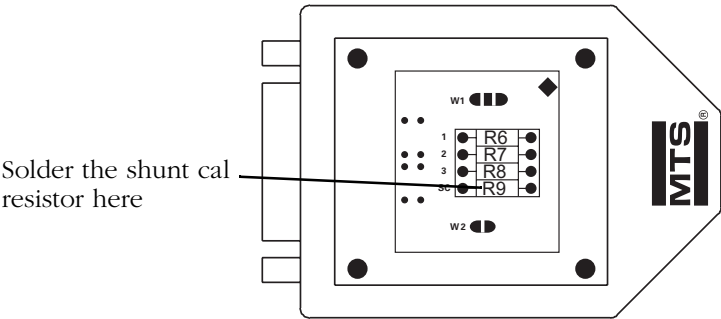

8. If you do not have transducer ID modules on your sensor cables, install the shunt calibration resistor as follows:
 - A. Select the appropriate shunt calibration resistor.
 - B. Bend the resistor leads 90° for a 0.3 inch separation.
 - C. Cut the resistor leads 0.12 inch from the bend.
 - D. Insert the resistor into the connector solder cups and solder.
 - E. Complete and attach a shunt calibration label as specified on the 493.40/41 Carrier I/O Shunt Calibration Kit (MTS PN 100-028-185).
 - F. Install the shunt cal resistor/connector assembly into the appropriate slot of the **SHUNT CAL** connector on the front panel of the appropriate I/O Carrier Module.

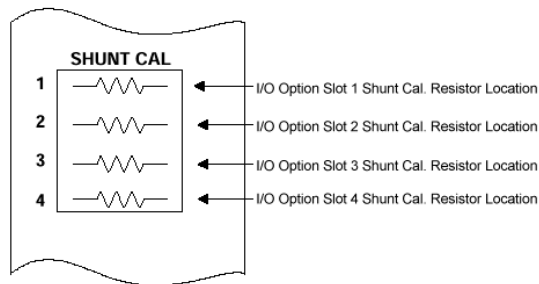

9. Verify that force is still zero.

While it is unlikely, it is possible for the force signal to change when the control mode changes. If it does:

Stand-Alone— Click **Auto Offset** on the **Offset/Zero** submenu to zero the force output. Path: **Setup > Force > Offset/Zero > Auto Offset**

Automated— Click **Auto Offset** on the **Offset/Zero** tab (**Inputs** panel) to zero the force output.

10. Perform shunt calibration.

Stand-Alone:

Path: **Setup > Force > Calibration > Select Cal Type**

- A. Select required **Shunt Display** units.
- B. Ensure that **Shunt State (+)** is set to **On**. Polarity is always positive.

Note the **Shunt Ref (+)** value, it should be 60%–90% (80% is ideal) of the calibrated range of the sensor.

- C. Click **Update** to copy the current shunt reference value into the **Shunt Reference** box.
- D. Set **Shunt State (+)** to **Off**.

Automated:

- A. In **Station Setup** select the appropriate force channel on the navigation panel., click the **Channel Input Signals** icon, and then click the **Shunt** tab.
- B. Select the shunt type. Use (+) polarity if you are not sure what to select.
- C. In the **Current Shunt Value** box, click the **On** button. Note the **Current Shunt Value**, it should be 60%–90% (80% is ideal) of the calibrated range of the sensor.
- D. Click **Update** to copy the **Current Shunt Value** into the **Shunt Reference Value** box, and then click **Off**.

Task 9 Save the calibration

It is important that you save your sensor calibration values.

Stand-Alone— Path: **Setup > Open/Save Parameters > <<Save>>**

Automated— On the **Station Setup** window **Inputs** panel, click the **Calibration** tab, and then **Save**. This saves current calibration values on the **Calibration**, **Sensor**, and **Shunt** tabs to the sensor calibration file.

Calibrating Encoders

Encoders are connected to the controller through a 493.40 Carrier I/O board. The encoder requires the Model 493.47 Encoder Interface daughter board to be installed in a Model 493.40 Carrier I/O board. The Carrier I/O connector you use is based on the installed location of the Model 493.47 Encoder Interface daughter board on the board of the Carrier I/O module.

Determine installed location

For automated FT SE Controllers, determine the installed location of the Model 493.47 Encoder Interface daughter board by using the **Hardware** tab on the **Station Signals** window. Access **Station Signals** on the **Station Setup** window navigation pane.

Defining an input

Defining an encoder sensor input signal is no different from any other input signal. However, specific resources must be available to define either input signal.

For automated FT SE Controllers, use the Station Builder program to allocate an encoder to the station configuration file and assign units to the signal.

Feedback resources labeled “Encoder Input #” or “Heidenhain 417/425 Input #” indicate that an optional encoder daughter board is installed in the Model 493.40 Carrier I/O board.

Zeroing

The encoder signal is defined in the Station Setup **Inputs** panel. Signal definition is handled the same way as any other input signal.

Note *Keep in mind that you cannot zero an encoder if it is selected for the active control mode.*

Note *The most common use for these controls is to establish a zero position after a specimen has been installed.*

Important note

Procedures for “Automated Controllers” assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Abbreviated Procedure

Online readers *All procedure entries are hypertext links.
Click on any entry to jump to the corresponding page.*

The following abbreviated procedure outlines an encoder calibration process. More detailed calibration information is available on the pages listed.

[Task 1, “Get things ready,”](#) on page 163

[Task 2, “Create a calibration file,”](#) on page 164

[Task 4, “Turn on hydraulic pressure,”](#) on page 165

[Task 5, “Set the zero position,”](#) on page 165

[Task 6, “Save the calibration,”](#) on page 166

Task 1 Get things ready

Perform the following before you start encoder calibration.

1. Locate relevant documentation.

When calibrating an encoder, you will need information about the encoder such as the serial number, model number, and a specification called measuring step (resolution).

2. Open a station configuration file.

You need a station configuration file that includes a control channel and a control mode that uses the encoder you intend to calibrate.

Stand-Alone— Path: **Config > Edit Config > Configuration File**

Automated— On the **File** menu, select **Open Station** to open the appropriate configuration file.

3. Select the **Calibration** access level.

You must access the Calibration user access level before you can perform any of the calibration procedures. You may need to enter a password.

Stand-Alone— Path: **Config > Access Level > Calibration**

Automated— In the **Station Manager** window toolbar, select **Calibration**

4. Set up a signal monitor.

Note *You cannot monitor the output of a new sensor until a sensor calibration file has been created and the sensor assigned to an input signal.*

You will be monitoring encoder output when making adjustments throughout this procedure. You can monitor the encoder output in the same units that you are using for the calibration.

You can use an external DVM to monitor sensor output from a BNC connector located on the FT SE Controller front panel.

You can also use the **Meters** window to monitor sensor output.

For **Automated** systems, you can also use the **Station Signals** panel to monitor sensor output. On the Station Manager **Display** menu, select **Station Setup**. In the navigation pane, select **Station Signals** to display the **Station Signals** panel to monitor current values for user-defined signals.

For more information on using the **Station Signals** panel, refer to “About the Station Signals Panel” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual.

Task 2 Create a calibration file

Note *If you already have a sensor calibration file, skip this task.*

Note *This task applies to automated FT SE controllers only*

This task creates a sensor calibration file and sets up any ranges you may want. An encoder does not require ranges, its resolution is always the same.

See “How to Create a Sensor File” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual for a detailed procedure.

Setting encoder resolution

In the **Resolution** box, enter the encoder resolution supplied in the encoder documentation.

Note *If want to use units different than those supplied in the sensor documentation, enter the full scale and resolution in the supplied units first, and then switch to the desired full-scale units. The units conversion will be calculated automatically.*

Task 3 Assign a calibration file

Note *This task applies to automated FT SE controllers only*

This task links a sensor calibration file (created in [Task 2](#)) to a hardware resource. The purpose for this is to select one of the sensor ranges for the input signal definition.

See “How to Assign a Sensor File” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual for a detailed procedure.

Task 4 Turn on hydraulic pressure

This task sets up the **Control Panel** so you can turn on the hydraulic pressure.



Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system.

Stay clear of the actuators when applying hydraulic pressure.

See “[Turn on hydraulic pressure](#)” on page 108 for a detailed procedure.

Task 5 Set the zero position

The zero position can be set anywhere within the full-scale range of the encoder.

Stand-Alone:

- A. Using the front panel Dial, adjust the **Setpoint** to move the actuator to the position you want to assign as zero.
- B. Select any control mode that does not use the encoder.

Path: **Status > Control Mode**

Note *If the actuator should move after making the change in control modes, you will need to reposition the actuator, then change to a more stable control mode.*

- C. With the actuator in the desired zero position, click <<**Auto Zero**>> button on the **Offset/Zero** submenu.

Path: **Setup > Disp. > Offset/Zero > <<Auto Zero>>**

Automated:

- A. Adjust the **Manual Cmd** slider on the **Manual Command** window to move the actuator to the position you want to assign as zero.
- B. Use **Control Mode** on the Change control modes on the **Control Panel**. Select any control mode that does not use the encoder.

Note *If the actuator should move after making the change in control modes, you will need to reposition the actuator, then change to a more stable control mode.*

- C. With the actuator in the desired zero position, click the **Auto Zero** button on the **Offset/Zero** tab (**Inputs** panel).

Note *When you change the encoder resolution on the **Calibration** tab, it immediately changes the resolution of signal values displayed on the **Station Signals**, **Meters**, and **Scope** windows.*

Task 6 Save the calibration

It is important that you save your sensor calibration values.

Stand-Alone— Path: **Setup > Open/Save Parameters > <<Save>>**

Automated— On the **Station Setup** window **Inputs** panel, click the **Calibration** tab, and then **Save**. This saves current calibration values on the **Calibration**, **Sensor**, and **Shunt** tabs to the sensor calibration file.

Calibrating Temposonics Sensors

Temposonics sensors require a Model 493.47 Encoder Interface daughter board to be installed in a Model 493.40 Carrier I/O board. The Carrier I/O connector used depends on the installed location of the daughter board on the board of the Carrier I/O module.

Determine installed location

For automated FT SE controllers, determine the installed location of the Model 493.47 Encoder Interface by using the **Hardware** tab on the **Station Signals** window. Access **Station Signals** on the **Station Setup** window navigation panel.

Defining an input

Defining a Temposonics sensor input signal is no different from any other input signal. For automated FT SE controllers, use the Station Builder application to allocate a Temposonics sensor to the station configuration file. The Station Builder application also assigns units to the signal.

Feedback Resources labeled “Temposonics Input #” or “Temposonics III Input #” indicate that the optional Temposonics daughter board (Model 493.47 Encoder Interface) is installed in the Model 493.40 Carrier I/O board.

Important note

Procedures for “Automated Controllers” assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Abbreviated Procedure

Online readers *All procedure entries are hypertext links.
Click on any entry to jump to the corresponding page.*

The following abbreviated procedure outlines a Temposonics sensor calibration process. More detailed calibration information is available on the pages listed.

[Task 1, “Get things ready,”](#) on page 169

[Task 2, “Create a calibration file,”](#) on page 170

[Task 4, “Turn on hydraulic pressure,”](#) on page 171

[Task 5, “Set the zero position,”](#) on page 172

[Task 6, “Save the calibration,”](#) on page 173

Task 1 Get things ready

1. Review “Before You Begin” on page 97
2. Locate relevant documentation.

When calibrating a Temposonics sensor, you will need information about the sensor such as the serial number, model number, and a specification called measuring step (resolution).

3. Open a station configuration file.

You need a station configuration file that includes a control channel and a control mode that uses the encoder you intend to calibrate.

Stand-Alone— Path: **Config > Edit Config > Configuration File**

Automated— On the **File** menu, select **Open Station** to open the appropriate configuration file.

4. Select the **Calibration** access level.

You must access the Calibration user access level before you can perform any of the calibration procedures. You may need to enter a password.

Stand-Alone— Path: **Config > Access Level > Calibration**

Automated— In the **Station Manager** window toolbar, select **Calibration**

5. Set up a signal monitor.

Note *You cannot monitor the output of a new sensor until a sensor calibration file has been created and the sensor assigned to an input signal.*

You will be monitoring temposonics sensor output when making adjustments throughout this procedure. You can monitor the temposonics sensor output in the same units that you are using for the calibration.

You can use an external DVM to monitor sensor output from a BNC connector located on the FT SE Controller front panel.

You can also use the **Meters** window to monitor sensor output.

For **Automated** systems, you can also use the **Station Signals** panel to monitor sensor output. On the Station Manager **Display** menu, select **Station Setup**. In the navigation pane, select **Station Signals** to display the **Station Signals** panel to monitor current values for user-defined signals.

For more information on using the **Station Signals** panel, refer to “About the Station Signals Panel” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual.

Task 2 Create a calibration file

Note *This task applies to automated FT SE controllers only.*

This task creates a sensor calibration file and sets up any ranges you may want. A Temposonics sensor does not require ranges, its resolution is always the same.

See “How to Create a Sensor File” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual for a detailed procedure.

Setting Temposonics resolution

In the **Resolution** box, enter the Temposonics resolution supplied in the Temposonics documentation.

Note *If want to use units different than those supplied in the sensor documentation, enter the full scale and resolution in the supplied units first, and then switch to the desired full-scale units. The units conversion will be calculated automatically.*

Task 3 Assign the calibration file

Note This task applies to automated FT SE controllers only.

This task links a sensor calibration file (created in [Task 2](#)) to a hardware resource; effectively selecting one of the sensor ranges for the input signal definition.

See “How to Assign a Sensor File” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual for a detailed procedure.

Task 4 Turn on hydraulic pressure

This task sets up the **Control Panel** so you can turn on the hydraulic pressure.



Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system.

Stay clear of the actuators when applying hydraulic pressure.

See “[Turn on hydraulic pressure](#)” on page 108 for a detailed procedure.

Task 5 Set the zero position

The zero position can be set anywhere within the full-scale range of the Tempsonics sensor.

Stand-Alone:

- A. Using the front panel Dial, adjust the **Setpoint** to move the actuator to the position you want to assign as zero.
- B. Select any control mode that does not use the encoder.

Path: **Status > Control Mode**

Note *If the actuator should move after making the change in control modes, you will need to reposition the actuator, then change to a more stable control mode.*

- C. With the actuator in the desired zero position, click <<**Auto Zero**>> button on the **Offset/Zero** submenu.

Path: **Setup > Disp. > Offset/Zero > <<Auto Zero>>**

Automated:

1. Adjust the **Manual Cmd** slider on the **Manual Command** window to move the actuator to the position you want to assign as zero.
2. Use **Control Mode** on the **Control Panel** to select any control mode that does not use the Tempsonics sensor.

Note *If the actuator should move after making the change in control modes, you will need to reposition the actuator, then change to a more stable control mode.*

3. With the actuator in the desired zero position, click the **Auto Zero** button on the **Offset/Zero** tab (**Inputs** panel).

Note *When you change the encoder resolution on the **Calibration** tab, it immediately changes the resolution of signal values displayed on the **Station Signals**, **Meters**, and **Scope** windows.*

Task 6 Save the calibration

It is important that you save your sensor calibration values.

Stand-Alone— Path: **Setup > Open/Save Parameters > <<Save>>**

Automated— On the **Station Setup** window **Inputs** panel, click the **Calibration** tab, and then **Save**. This saves current calibration values on the **Calibration**, **Sensor**, and **Shunt** tabs to the sensor calibration file.

Calibrating an Extensometer

Extensometers are usually calibrated such that the maximum strain represents $\pm 100\%$ of the full-scale capacity of the extensometer.

To calibrate your extensometer you will need:

- An extensometer calibrator
- A digital voltmeter (DVM)

Important note

Procedures for “Automated Controllers” assumes the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

How To Calibrate an Extensometer

Online readers *All procedure entries are hypertext links.
Click on any entry to jump to the corresponding page.*

[Task 1, “Get things ready,”](#) on page 175.

[Task 2, “Turn on hydraulic pressure,”](#) on page 176.

[Task 3, “Adjust offset,”](#) on page 177.

[Task 4, “Gain/Delta K Calibration,”](#) on page 178.

[Task 5, “Gain/Linearization Calibration,”](#) on page 180.

[Task 6, “Establish the shunt calibration reference,”](#) on page 188.

[Task 7, “Save the calibration settings,”](#) on page 190.

Task 1 Get things ready

1. Review “[Before You Begin](#)” on page 97.
2. Locate all relevant documentation including information about the extensometer such as the serial number, model number, etc.
3. Select **Calibration** for Access Level.

Path: **Config > Access Level > Calibration**

4. Set up to monitor strain feedback.

You will be monitoring strain feedback when making adjustments throughout this procedure. You can monitor strain feedback in the same units that you are using for the calibration.

You can use an external DVM to monitor strain feedback from a BNC connector located on the FT SE Controller front panel.

You can also use the **Meters** window to monitor strain feedback.

For **Automated** systems, you can also use the **Station Signals** panel to monitor strain feedback. On the Station Manager **Display** menu, select **Station Setup**. In the navigation pane, select **Station Signals** to display the **Station Signals** panel to monitor current values for user-defined signals.

For more information on using the **Station Signals** panel, refer to “About the Station Signals Panel” in Chapter 3, Station Manager of the *Model 793.00 System Software* manual.

5. Mount the extensometer to the calibrator.

Review the extensometer product manual for mounting information and calibrator requirements.

Task 2 Turn on hydraulic pressure

This task activates the hydraulic pressure and ensures you have control of your actuator.

WARNING

Do not place any part of your body in the path of a moving actuator.

A crush zone exists between the actuator and any equipment in the path of its movement. Immediate and unexpected actuator response is possible when you apply hydraulic pressure to your system. Stay clear of the actuators when applying hydraulic pressure.

1. Ensure that the extensometer signal you are calibrating has strain selected for its active control mode.
2. If the **Hydraulic Interlock** or **Program Interlock** indicator is lit, determine the cause, correct it, and then click **Reset**.

If either interlock indicator lights again, you will need to determine the cause of the interlock and correct it before proceeding.

3. In the Power selection box, click the **Low** button, and then **High** for the HPU. If an HPU is not listed, start the HPU at the pump.

Note *The HPU can be configured for "first on." If this is the case, start the appropriate HSM.*

4. If an HSM is present, click the **HSM Low** button, and then **HSM High** for the appropriate HSM.
5. Apply a positive strain command, and observe the strain feedback value on your meter.

If you have control of the actuator, proceed to [Task 3](#) on page 177.

If you do not have control of the actuator (for example, the actuator is hunting or moving in the wrong direction), disable hydraulics, change the conditioner polarity, and then perform [Task 2](#) again.

For more detailed information on applying hydraulic pressure and clearing interlocks, refer to *FlexTest SE User's manual*.

Task 3 Adjust offset

This task verifies the sensor's zero position and offsets any imbalance due to specimen size, forces from test components, cable length, and so forth. The zero position can be set anywhere within the full-scale range of the strain sensor.

Note *The arms of the extensometer must be in the zero reference position. Depending on the extensometer, this can be accomplished using the zero pin, stop block, or a special fixture.*

Stand-Alone:

1. Adjust the **Setpoint** for 0 cm/cm.
2. Monitor the current strain output to ensure that it is zero. If it is not zero, click Auto Offset.

Path: **Setup > Strain > Offset/Zero > <<Auto Offset>>**

Automated:


1. Adjust the **Manual Cmd** slider for 0 cm/cm.
2. Click Auto Offset icon on the **Station Controls** panel to display the **Signal Auto Offset** window.
3. If the current strain output is not zero, click the Auto Offset icon next to the signal value to offset it. automatically.

Task 4 Gain/Delta K Calibration

If you are using **Gain/Delta K** for your calibration type, complete the following procedure. If not, complete **Task 5 Gain/Linearization Calibration** on page 180.

Calibrate the negative output (tension)

This task calibrates the extensometer negative output using the calibration **Gain** controls. Since the **Gain** setting will affect your **Delta K** setting, you should always calibrate the negative side first.

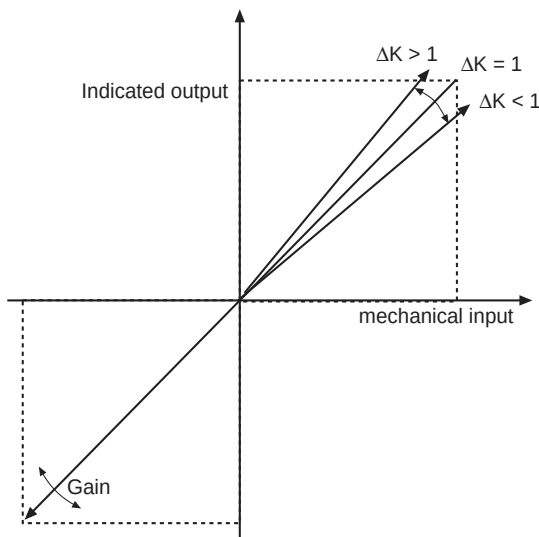

To calibrate the negative extensometer output:

1. Use the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) to adjust the calibrator between zero and 100% of the extensometer's full-scale range three times. This exercises the extensometer to remove any hysteresis
2. Apply a negative command equal to 80% of the negative full scale value (-8 V DC, or in this example, a calculated output of -8 cm/cm).
3. Note the strain signal value on your meter.
4. If the signal value is does not match the commanded level, increase **Post-Amp Gain** on the **Calibration** submenu or tab to achieve an 80% value (-8 cm/cm). Record your final strain signal value from the meter for the 80% output.

Note If you cannot apply enough **Post-amp** gain to achieve an 80% value, you will need to disable hydraulics, change the **Excitation** voltage, enable hydraulics, and then repeat this task.

- D. Repeat steps 1–4 for a 20%, 40%, 60%, and 100% negative output.

Calibrate the positive output (compression)

To calibrate the positive extensometer output:

1. Use the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) to adjust the calibrator between zero and 100% of the extensometer's full-scale range three times. This exercises the extensometer to remove any hysteresis
2. Apply a positive command equal to 80% of the positive full scale value (+8 V DC, or in this example, a calculated output of +8 cm/cm).
3. Monitor the strain signal value on your meter.
4. If the extensometer signal value is above +8 cm/cm, adjust the **DeltaK** control on the **Calibration** submenu or tab to achieve an 80% value (+8 cm/cm). Record your final strain signal value from the meter for the 80% output.

If the extensometer signal is below +8 cm/cm, **DeltaK** adjustment cannot be made. Return the **DeltaK** adjustment to its original setting. Use the **Post-amp** gain control to increase the calculated output to a value halfway between its present value and +8 cm/cm (this splits the difference between compression and tension).

5. Repeat steps 1- 4 for a 20%, 40%, 60%, and 100% positive output.

Compare recorded data points to calibration sheet

Your sensor should include a calibration data sheet that shows the data point tolerance.

1. Compare your recorded output values to the calibration data sheet that accompanied your sensor.
2. Make sure your current values fall with the permissible variation.

If they do not, you must go back to [Task 5](#) on page 135, and recalibrate the extensometer negative and positive outputs.

Task 5 Gain/Linearization Calibration

If you are using **Gain/Linearization** for your calibration type, complete the following procedure. If not, complete **Task 4 Gain/Delta K Calibration** on page 178.

Important *Using linearization data requires specific conditioner zeroing practices. Ensure that **Electrical Zero Lock** on the **Offset/Zero** menu is set to **Locked**. Adjusting electrical zero after calibration may invalidate linearization data.*

Initial extensometer calibration

For initial calibration of an extensometer, complete the following procedure:

1. Select **Gain/Linearization** for **Cal Type**.

Stand-Alone— Path: **Setup > Strain > Calibration > Cal Type > Gain/Linearization**

Automated— Select **Gain/Linearization** for **Cal Type** on the **Calibration** tab of the **Inputs** panel.

2. Exercise the extensometer.

Stand-Alone— Enable the front panel Dial, use **Setpoint** to adjust the calibrator between zero and 100% of the extensometer's full-scale range three times. This exercises the extensometer to remove any hysteresis. Path: **Status > Setpoint**

Automated— Use the **Manual Cmd** slider on the **Manual Command** window to adjust the calibrator between zero and 100% of the extensometer's full-scale range three times. This exercises the extensometer to remove any hysteresis.

3. Apply a negative strain command that is 80% of the negative full scale range.

Stand-Alone: Using the Dial, adjust the **Setpoint** for a negative strain command that is 80% of the full scale range.

Automated: Adjust the **Manual Cmd** slider for a negative strain command that is 80% of the full scale range.

Verify that your extensometer feedback signal is 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the negative strain command and feedback values to match.

At this point, unless the conditioner is already in calibration, the negative strain applied to the extensometer will not equal your commanded value. You will adjust gain in the next step so that the actual strain and your commanded strain match.

4. Adjust gain until the actual strain equals your strain command.

Adjust the **Post-amp Gain** control to increase the negative strain reading on the calibrator until it equals your negative strain command.

5. Apply a positive strain command that is 80% of the positive full scale range.
 - A. Using the Dial, adjust the **Setpoint** (Stand-Alone) or the **Manual Cmd** slider (Automated) for a positive strain command that is 80% of the full scale range.
 - B. Verify that your extensometer feedback signal is 80% of the full scale range.
6. Record conditioner feedback readings at predetermined negative strain command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a 0% command.
- B. Record the calibrator's readout value and the corresponding conditioner feedback reading in the 0% row of your record sheet.
- C. Use the Dial to adjust the **Setpoint** for a -2% strain command.
- D. Record the calibrator's readout value and corresponding conditioner feedback reading in the -2% row of your record sheet.
- E. Repeat steps C and D for other negative strain commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider on the **Manual Command** window for a 0% command.
 - B. Record the calibrator's readout value and the corresponding conditioner feedback reading in the 0% row of your record sheet.
 - C. Adjust the **Manual Cmd** slider for a -2% strain command.
 - D. Record the calibrator's readout value and corresponding conditioner feedback reading in the -2% row of your record sheet.
 - E. Repeat steps C and D for other negative strain commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).
7. Record conditioner feedback readings at predetermined positive strain command points.

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a +2% positive strain command.
- B. Record the calibrator's readout value and corresponding conditioner feedback reading in the +2% row of your record sheet.
- C. Repeat steps A and B for other positive strain commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% positive strain command.
 - B. Record the calibrator's readout value and corresponding conditioner feedback reading in the +2% row of your record sheet.
 - C. Repeat steps A and B for other positive strain commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).
8. Turn off system hydraulics.

9. On the Linearization Data window, enter the calibrator readout values and corresponding conditioner feedback readings for all command points previously recorded on a separate sheet.

Stand-Alone— Path: **Setup > Strain > Calibration > Cal Type > Gain/Linearization > Linearization Data**

Linearization Data		
	Standard	Conditioner
-0.60000:	-0.6000	-0.6000 cm/c
-0.40000:	-0.4000	-0.4000 cm/c
-0.20000:	-0.2000	-0.2000 cm/c
0.00000:	0.0000	0.0000 cm/c
0.20000:	0.2000	0.2000 cm/c
0.40000:	0.4000	0.4000 cm/c
0.60000:	0.6000	0.6000 cm/c

Automated— Click **Linearization Data** on the **Calibration** tab.

Linearization Data		
Fullscale Min/Max		
-10.000 10.000 cm/cm		
Data Range		
From: 100%	To: 100%	Reset
Recommended	Standard	Conditioner
-0.80000:	-0.80000	-0.80000 cm/cm
-0.60000:	-0.60000	-0.60000 cm/cm
-0.40000:	-0.40000	-0.40000 cm/cm
-0.20000:	-0.20000	-0.20000 cm/cm
0.00000:	0.00000	0.00000 cm/cm
0.20000:	0.20000	0.20000 cm/cm
0.40000:	0.40000	0.40000 cm/cm
0.60000:	0.60000	0.60000 cm/cm
0.80000:	0.80000	0.80000 cm/cm
1.00000:	1.00000	1.00000 cm/cm

10. Turn on system hydraulics.

Extensometer recalibration

If the extensometer has been previously calibrated, use the following procedure:

1. Locate the calibration data sheet for the appropriate conditioner.
2. Turn off system hydraulics.
3. Click **Linearization Data** to open the Linearization Data window.
4. Transfer **Standard** and **Conditioner** data from the conditioner's calibration data sheet to corresponding data entries on the Linearization Data window.
5. Turn on system hydraulics.
6. Verify linearization data.
 - A. Adjust the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) for each strain command point on the Linearization Data window.
 - B. At each command point, verify both the calibrator readout value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**) by comparing them with the corresponding values on the Calibration Data sheet

If the data is valid: **Stop** this procedure.

If the data is not valid: **Proceed** to the next step.

7. Reset Linearization Data window to default values.

Stand-Alone— Path: **Setup > Strain > Calibration > Cal Type > Gain/Linearization > <<Reset>>**

Automated— Click **Reset** on the Linearization Data window to return to default values.

8. Use the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) to adjust the calibrator between zero and 100% of the extensometer's full-scale range three times. This exercises the extensometer to remove any hysteresis.

9. Apply a negative strain command that is 80% of the negative full scale range.
 - A. Adjust the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) for a negative strain command that is 80% of the full scale range.
 - B. Verify that your extensometer feedback signal is 80% of the full scale range.

During the initial calibration and tuning of your system, it may require repeated adjustment for the negative strain command and feedback values to match.

At this point, unless the conditioner is already in calibration, the negative strain applied to the extensometer will not equal your commanded value. You will adjust gain in the next step so that the actual strain and your commanded strain match.

10. Adjust gain until the actual strain equals your strain command.

Stand-Alone:

Adjust the **Post-amp Gain** control on the **Calibration** submenu to increase the negative strain reading on the calibrator until it equals your negative strain command. Path: **Setup > Strain > Calibration > Cal Type > Gain/Linearization > Post-Amp Gain**

Automated:

Adjust the **Post-amp Gain** control on the **Calibration** tab to increase the negative strain reading on the calibrator until it equals your negative strain command.

11. Apply a positive strain command that is 80% of the positive full scale range.
 - A. Adjust the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) for a positive strain command that is 80% of the full scale range.
 - B. Verify that your extensometer feedback signal is 80% of the full scale range.

12. Record conditioner feedback readings at predetermined negative strain command points.

Note *After shutting down system hydraulics, you will enter these recorded readings on the Linearization Data window.*

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a 0% command.
- B. Record the calibrator's readout value and the corresponding conditioner feedback in the 0% row of your record sheet.
- C. Use the Dial to adjust the **Setpoint** for a -2% strain command.
- D. Record the calibrator's readout value and the conditioner feedback reading in the -2% row of your record sheet.
- E. Repeat steps C and D for other negative strain commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a 0% command.
- B. Record the calibrator's readout value and the corresponding conditioner feedback in the 0% row of your record sheet.
- C. Adjust the **Manual Cmd** slider for a -2% strain command.
- D. Record the calibrator's readout value and the conditioner feedback reading in the -2% row of your record sheet.
- E. Repeat steps C and D for other negative strain commands (typically at -4, -6, -8, -10, -20, -40, -70, and -100 percent of full scale).

13. Record conditioner feedback readings at predetermined positive strain command points.

Stand-Alone:

- A. Use the Dial to adjust the **Setpoint** for a +2% positive strain command.
- B. Record the calibrator's readout value and the conditioner feedback reading at the +2% row of your record sheet.
- C. Repeat steps A and B for other positive strain commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).

Automated:

- A. Adjust the **Manual Cmd** slider for a +2% positive strain command.
 - B. Record the standard's readout value and the conditioner feedback reading at the +2% row of your record sheet.
 - C. Repeat steps A and B for other positive strain commands (typically at +4, +6, +8, +10, +20, +40, +70, and +100 percent of full scale).
14. Turn off system hydraulics.
 15. On the Linearization Data window, enter the calibrator values ((**Standard**) and its corresponding conditioner feedback readings (**Conditioner**) for all command points previously recorded on a separate sheet.
 16. Verify linearization data.
 - A. Adjust the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) for each strain command point on the Linearization Data window.
 - B. At each command point, verify both the calibrator readout value (**Standard**) and its corresponding conditioner feedback value (**Conditioner**).
 - C. Check validity before entering each pair of values on a new Calibration Data sheet.

Task 6 Establish the shunt calibration reference

Each DC conditioner supports a shunt resistor. To establish the shunt reference value, perform the following tasks.

1. Disable hydraulic pressure and remove the calibrator.
2. Activate hydraulic pressure and zero the strain sensor output.

Adjust the **Setpoint** (Stand-Alone) or **Manual Cmd** slider (Automated) for a 0 cm/cm output. The sensor output must be 0.000 cm/cm for a proper shunt calibration. If not, review [Task 3](#), “Adjust offset,” on page 177.

3. Change the control mode to displacement.

Stand-Alone— Path: **Status > Control Mode > Disp.**

Automated— On the **Manual Command** window, change your control mode to **Disp.**


Shunt calibration cannot be performed on a sensor when it is in control of the servo loop.

4. Determine the shunt calibration resistor from the following table:

BRIDGE RESISTANCE	SENSITIVITY	RANGE (% FULL SCALE)	RESISTOR VALUE
350 Ω	2 mV/V	100%	49.9 k
		50%	100 k
		20%	249 k
		10%	499 k
350 Ω	1 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k

BRIDGE RESISTANCE	SENSITIVITY	RANGE (% FULL SCALE)	RESISTOR VALUE
700 Ω	2 mV/V	100%	100 k
		50%	200 k
		20%	499 k
		10%	1000 k
700 Ω	1 mV/V	100%	200 k
		50%	402 k
		20%	1000 k
		10%	2000 k

5. Install the shunt calibration resistor as follows:
- A. Select the appropriate shunt calibration resistor.
 - B. Bend the resistor leads 90° for a 0.3 inch separation.
 - C. Cut the resistor leads 0.12 inch from the bend.
 - D. Insert the resistor into the connector solder cups and solder.
 - E. Complete and attach a shunt calibration label as specified on the 493.40/41 Carrier I/O Shunt Calibration Kit (MTS PN 100-028-185).
 - F. Install the shunt cal resistor/connector assembly into the appropriate slot of the **SHUNT CAL** connector on the front panel of the appropriate I/O Carrier Module.

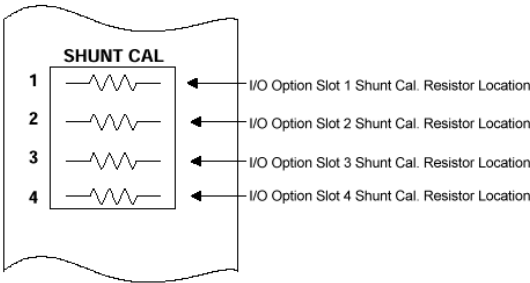

6. Perform shunt calibration.

Stand-Alone:

Path: **Setup > Strain > Calibration > Select Cal Type >**

- A. Select required **Shunt Display** units.
- B. Ensure that **Shunt State (+)** is set to **On**. Polarity is always positive.

Note the **Shunt Reference (+)** value, it should be 60%–90% (80% is ideal) of the calibrated range of the sensor.

- C. Click **Update** to copy the current shunt reference value into the **Shunt Reference** box.
- D. Set **Shunt State (+)** to **Off**.

Automated:

- A. In **Station Setup** select the appropriate strain channel on the navigation panel., click the **Channel Input Signals** icon, and then click the **Shunt** tab.
- B. Select the shunt type. Use (+) polarity if you are not sure what to select.
- C. In the **Current Shunt Value** box, click the **On** button. Note the **Current Shunt Value**, it should be 60%–90% (80% is ideal) of the calibrated range of the sensor.
- D. Click **Update** to copy the **Current Shunt Value** into the **Shunt Reference Value** box, and then click **Off**.

Task 7 Save the calibration settings

It is important that you save your sensor calibration values.

Path: **Setup > Open/Save Parameters > <<Save>>**

Chapter 7

Tuning

Tuning affects the response and stability of the servo-control loop. Proper tuning improves the performance of the system.


Note *Precise tuning is not necessary. A good tuning adjustment is one that produces near-optimal behavior over a wide variety of conditions.*

- Each control mode uses a different sensor feedback signal for servo-loop control. Each control mode must be tuned.
- Tuning optimizes test performance by minimizing the system error in the selected control mode.

Contents	About Tuning	192
	If You've Never Tuned Before	193
	When to Tune	194
	Control Mode Characteristics	196
	How the Tuning Controls Work	199
	Creating a Tuning Program	207
	Other Considerations	210
	Monitoring Waveforms	211
	Tuning Displacement	215
	Tuning Force	216
	Auto tuning	217

About Tuning

When you tune, you are setting the stability and response of the servo control loop. Proper tuning improves the performance of the test system.

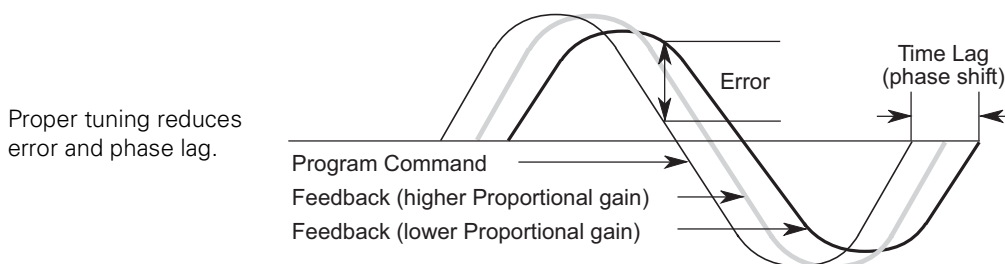

Inaccurate tuning increases the error and phase lag between the program command and the sensor feedback. Large error reduces control accuracy and repeatability, and keeps the full program command from being applied to the specimen.

Compensating for specimen changes

Optimal system operation may require a level of detuning to compensate for specimen changes during a test.

- A highly tuned system provides the greatest level of response, but this places the system near the point of oscillation or instability.
- As a specimen changes characteristics during testing, the response of the system also changes. This can cause unstable operation.
- You may need to retune the system response when the characteristics of the specimen change during a test.
- For the greatest control accuracy, use a compensator.

If You've Never Tuned Before

If you are unfamiliar with the tuning controls, review the following guidelines. Before you start tuning you should:

- Define upper and lower limits for the displacement and force sensor before you start tuning.
- Tune the displacement control mode first since no specimen is needed.
- Note the value of the tuning control before adjusting it so you can return it to that value if necessary.
- Make small initial tuning adjustments. If the feedback waveform does not appear to change, increase the adjustments.

Auto tuning provides a moderate level of tuning for PIDF control modes automatically. For more information, see [“Auto tuning”](#) on page 217.

What if you adjust something wrong?

If you make an inappropriate adjustment, the system will go unstable or shut down. An unstable system produces humming or screeching sound. A system shutdown displays an error.

- If an adjustment causes the system to go unstable, quickly readjust the control until the noise stops. If you cannot eliminate the sound, shut down the system by pressing the **Emergency Stop** switch.

Important *In multi-channel configurations, pressing Emergency Stop will shut down the HPU and all channels in the interlock chain.*

- If an adjustment causes the system to shut down, readjust the control to the level where the system was last stable. Then reset the system and continue tuning.

Saving the tuning parameters

The tuning values are saved as part of the controller parameter set. The parameter set can save one set of tuning values for each control mode.

When to Tune

Tuning is needed whenever any of the following events occurs:

- A gross change in the compliance or size of the test specimen. *For example*, you were testing steel and change to rubber.
- The servohydraulic configuration has changed. *For example*, a servovalve is replaced or changed to a different capacity.
- The system is sluggish (slow to react or not reaching the desired peaks). However, this is not always a tuning problem; it could be insufficient velocity capability such as a low-capacity servovalve.
- If a control channel or sensor is recalibrated.
- The system is unstable (indicated by a humming or screeching sound).
- When you observe a degradation in controlled accuracy.
- When you create a new control mode, or, if the sensor for a control mode is changed.
- The end levels or frequencies are significantly different from those observed earlier in the test. *For example*, you notice that the specimen characteristics change during the test (this could also mean the specimen is failing).

Checklist

Use this checklist when you tune a system. You need to determine the following:

- What type of control mode do you wish to tune?
Read [“Control Mode Characteristics”](#) on page 196.
- What controls should you use?
Read [“How the Tuning Controls Work”](#) on page 199.
- What kind of a tuning program should you use?
Read [“Creating a Tuning Program”](#) on page 207.
- Do you have a dummy specimen?
Read [“Other Considerations”](#) on page 210.
- Where do you connect the oscilloscope and what signal do you monitor? Read [“Monitoring Waveforms”](#) on page 211.

What to do first

The following are tasks that should be completed before you tune. It is not necessary to perform every task each time you tune. The condition of your system dictates which of the following tasks you must perform.

For example, a new system or a system under complete recalibration requires all of the following to be completed. If you are performing periodic or fine-tuning, review the following and determine which tasks you need to complete.

- Connect an oscilloscope to your system or use the controller scope. You need to monitor the sensor signal or error signal for the control mode you intend to tune. Go to [“Monitoring Waveforms”](#) on page 211 for help.
- Balance the servovalve. The electrical valve balance adjustment compensates for minor mechanical imbalance—it is an intermediate adjustment. Go to [“Adjusting Valve Balance”](#) on page 75 and perform the electrical valve balance adjustment procedure.
- Calibrate each sensor used for a control mode or data acquisition. Perform the appropriate calibration procedure.
- If your sensor calibration schedule does not require calibration at this time, perform a shunt calibration check to determine if your DC sensor/DC conditioner is within tolerance. See [“Shunt Calibration”](#) on page 89.
- If you have a three-stage (Series 256 or 257) servovalve, tune the inner loop (gain and rate) before tuning the outer loop. The rules for inner loop tuning are similar to those of the outer loop. Go to [“Tuning the Inner loop”](#) on page 77 for help.

Getting started

When you set out to tune your system, it is best to run auto-tuning first. Auto-tuning establishes reasonable tuning levels that will be adequate for most control modes. See [“Auto tuning”](#) on page 217 for more information


If the results from auto-tuning are not satisfactory, you should create a tuning function, and then manually tune each control mode.

Automated procedures

The “Automated” paths and procedures described in this manual assume the FlexTest SE Controller is equipped with the PC-Supervision option, and that Exclusive Control is assigned to Station Manager. For more information about Station Manager, see the Model 793.00 System Software manual that accompanies your system.

Control Mode Characteristics

A control mode uses a program command and sensor feedback to control the servovalve. The controller uses a group of gain controls—proportional, integral, derivative, and feed forward gain. These controls are called PIDF. The PIDF controller can also incorporate stabilization gain and an adjustable forward loop filter.

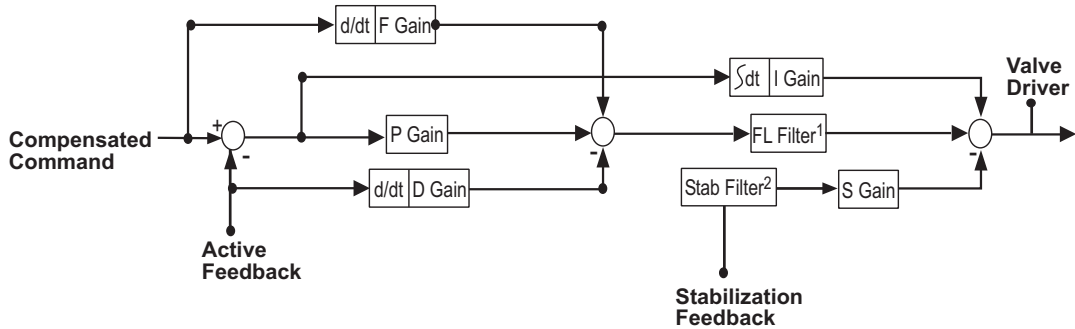

- 1 FL Filter** on the Tuning Menu
Sets filter frequency and select filter type.
- 2 Stabilization Filter** on the Tuning Menu
Sets filter frequency and select filter type.

Each control mode has different tuning characteristics. This section describes the characteristics of the following control modes:

- Displacement control
- Force control
- Strain control
- CLC control
- Dual Compensation control

Command sources

The program command source can come from an internal source (such as the **Function Generator** application) or from an external device (such as an external profiler or function generator).

Displacement control

Displacement control mode uses the LVDT sensor in the actuator as the controlling feedback source.

- Displacement control mode only needs to be tuned once.
- Does not need a specimen installed for tuning.
- Displacement control uses a square wave when tuning an LVDT but not when tuning a displacement gage.
- If gain is too low, there may not be any actuator movement.
- If gain is too high, the actuator will move quickly and noisily.

Force control

Force control uses a force sensor (also called a load cell) as the controlling feedback source.

- Tune for each type of specimen or any changes in the force train.
- Force control requires a specimen to be installed.
- Force control uses a ramp waveform for the initial tuning. If the required results cannot be achieved, change to a square waveform.
- If gain is too low, the system may be sluggish or unresponsive with large static offsets.

Strain control

Strain control uses an extensometer or strain gage bonded to the specimen as the controlling feedback source.

- Tune for each type of specimen or any changes in the force train.
- Strain control requires a specimen to be installed (you may choose to use a broken specimen).
- Use a ramp waveform for the initial tuning.
- Do not use a square waveform for tuning. A square wave can cause the extensometer to move or fall off the specimen, which can cause the system to go unstable.
- If gain is too low, the system may be sluggish or unresponsive with large static offsets. Or, it may be uncontrollable.

CLC control mode

Channel limited channel (CLC) control modes are used for specimen installation and removal. Channel limited channels require two feedback signals. See [“Tuning a CLC Control Mode”](#) on page 219

Refer to “Tuning” in Chapter 3, Menus Descriptions of the *FlexTest SE Users Manual* for more information about CLC tuning controls and guidelines.

Dual Compensation control mode

Select a dual compensation control mode for a channel when the feedback for the desired control mode is unsuitable for maintaining closed-loop control.

A dual compensation mode requires a primary and a secondary feedback signal:

- The more stable primary feedback signal is used by the PIDF controller to maintain closed-loop control.
- The less stable secondary feedback signal is used for command compensation in command programs provided by the **Function Generator** and other applications.

Refer to “Tuning” in Chapter 3, Menus Descriptions of the *FlexTest SE Users Manual* for more information about dual compensation tuning controls and guidelines.

How the Tuning Controls Work

The controller system software includes five tuning controls. You do not need to use all of the controls to properly tune your system. *In fact, most testing can be accomplished with just the proportional gain adjustment.* The other adjustments introduce a signal to the command to compensate for specific situations.

Note Throughout this chapter the terms gain, reset, and rate represent proportional gain, reset integration, and rate derivative respectively.


The five available gain controls have the following functions:

- Proportional gain (P Gain) increases system response.
- Integral gain (I Gain) increases system accuracy during static or low-frequency operation and maintains the mean level at high frequency operation.
- Derivative gain (D Gain) improves the dynamic stability when high proportional gain is applied.
- Feed forward gain (F Gain) increases system accuracy during high-frequency operation.

Changing adjustment ranges

For automated systems, It is possible that the amount of adjustment for a control is too coarse or inadequate. Click the adjustment button (such as **P Gain**) and use the **Range Select** window to change the range of the adjustment. Reducing the range produces smaller steps between values (higher resolution) while increasing the range produces larger steps between values.


Example: Suppose the default range for the Proportional Gain adjustment is 50. Assume you are adjusting the gain and you reach the maximum adjustment (50). Clicking the **P Gain** slider label displays the **P Gain** range window where you can change the range of the adjustment. Change the range by typing a new value in the maximum entry field.

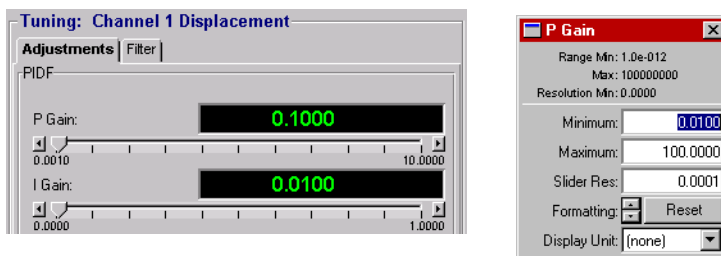

Proportional gain (P)

Proportional gain is used for all tuning situations. It introduces a control factor that is proportional to the error signal. Proportional gain increases system response by boosting the effect of the error signal on the servovalve.

The tuning command is shown as a gray square waveform, and the black waveform is the sensor feedback

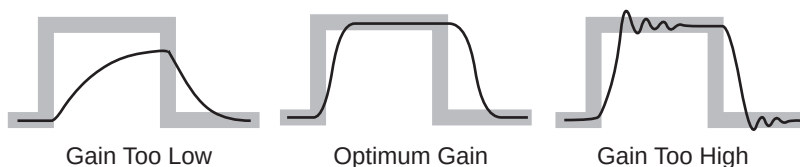

Keep in mind:

- As proportional gain increases, the error decreases and the feedback signal tracks the command signal more closely.
- Higher gain settings increase the speed of the system response.
- Too much proportional gain can cause the system to become unstable.
- Too little proportional gain can cause the system to become sluggish.
- Gain settings for different control modes may vary greatly. For example, the gain for force may be as low as 1 while the gain for strain may be as high as 10,000.


Note *The rule of thumb is—adjust gain as high as it will go without going unstable.*

Integral gain (I)

Integral gain introduces “an integral of the error signal” that gradually, over time, boosts the low-frequency response of the servovalve command.

Integral gain increases system response during static or low-frequency operation and maintains the mean level at high-frequency operation. It can offset a DC or steady-state error, such as that caused by valve imbalance.

The following ramp and hold waveforms illustrate different levels of reset. The **I Gain** adjustment determines how much time it takes to improve the mean level accuracy.

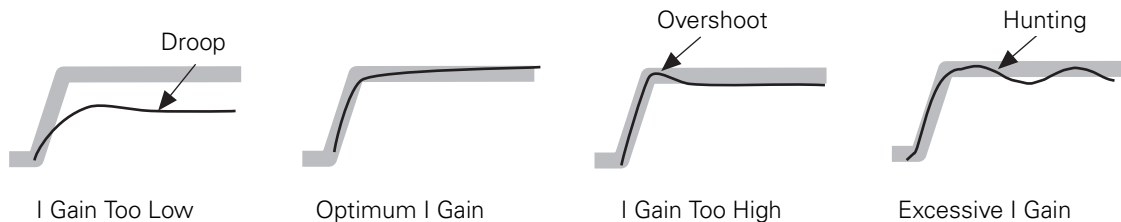

Integral gain:


- Improves mean level response during dynamic operation
- Corrects feedback droop caused by the spring characteristic of the servovalve in static and very low-frequency test programs
- Minimizes the amount of time the system needs to recover from transitions or transients

Keep in mind:

- Higher integral gain settings increase system response.
- Too much integral gain can cause a slow oscillation (hunting).
- You may want to use the max/min display to monitor the mean level, reset the display, and check it again.

Derivative gain (D)

Derivative gain is used with dynamic test programs. It introduces a “derivative of the feedback signal.” This means it anticipates the rate of change of the feedback and slows the system response at high rates of change.

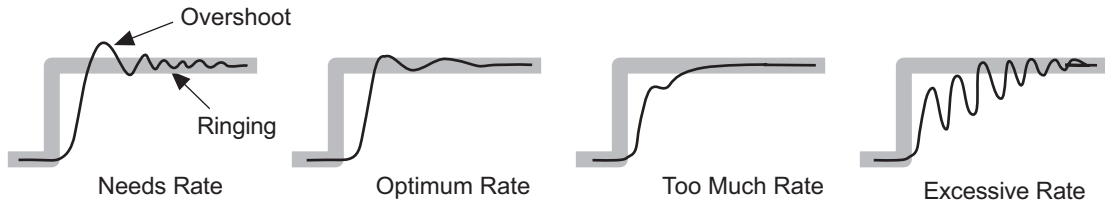

Derivative gain:

- Reduces ringing
- Provides stability and reduces noise at higher proportional gain settings
- Tends to amplify noise from sensors
- Tends to decrease system response when set too high

Keep in mind:

- Too much derivative gain can create instability at high frequencies, and too much proportional gain may cause a ringing or screeching sound.
- Too little derivative gain can make a rumbling sound. The correct amount of derivative gain results in the system running quietly.


Note *Series 256 and 257 Servovalves may require derivative gain applied to both the inner control loop and outer control loop.*

Note *Excessive negative (–) D Gain can cause your system to become unstable.*

Feed forward gain (F)

Feed forward gain is like derivative gain except that it introduces a derivative of the command signal. It anticipates how much valve opening is needed to reach the required response and adds that to the valve command—like compensating for phase lag.

Adjusting feed forward causes the command to begin sooner so the feedback may track the original command more closely

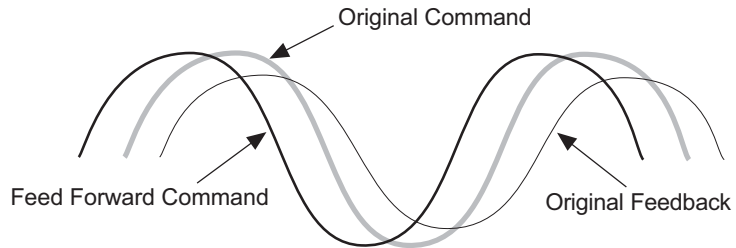

Feed forward gain:

- Does not compensate for normal changes during testing (such as temperature changes, servovalve droop, and so forth).
- May be used to minimize phase lag.
- Should be used in a way similar to derivative gain. However, it is applied to the test command signal instead of the feedback signal. Feed forward gain helps the servo-control loop react quickly to an abrupt change in the command.
- Is needed when testing a soft specimen in force control.

Stabilization gain (S)

Stabilization gain allows a second signal to be integrated into the composite command signal as a stabilizing factor. It enhances stability for systems that move large masses at high speeds. The second signal is generated by a special transducer such as ΔP (differential pressure) or accelerometer.

Stabilization controls will be available only if a stabilization resource was added to the control channel in the Station Builder program.

Delta P (ΔP)

Delta P is a differential pressure sensor that measures the difference in pressure at each end of the actuator. It compensates for hydraulic compliance (compressed hydraulic fluid acts like a spring). Delta P improves displacement control of heavy mass loaded systems.

Delta P is typically used on systems with large hydraulic fluid flow rates. This adjustment is usually needed when the natural frequency of the actuator is less than the 90° phase lag frequency of the servovalve. The servovalve 90° phase lag frequency can be found in the servovalve product literature.

The natural frequency can be approximated with the following formula:

$$\text{Actuator Frequency} = \frac{CA}{WV}$$

Where: C = constant for English (2500) or metric units (1060)

A = actuator piston area expressed as in² (cm²)

W = any directly coupled mass including the actuator piston mass expressed in lbs (kg)

V = hydraulic fluid volume contained inside the actuator and manifold expressed as in³ (cm³)

- If the system response deteriorates when adding delta P, then change the polarity of the signal. If changing polarity does not improve system response, try adjusting the stabilization filter. See [“Stabilization Filter”](#) on page 206
- Check all amplitudes for overshoot. Do not allow more than 10% overshoot (preferably none) at any amplitude of a square wave response.
- Delta P will not compensate for additional compliance from swivels, linkages, test tables, and so forth. In this case, a mass accelerometer signal from an accelerometer may be used in place of a delta P signal for stabilization. See “Acceleration stabilization” below.

Acceleration stabilization

Test systems with specimens affected by acceleration resonances can use a mass accelerometer signal for stabilization. Acceleration stabilization dampens the resonances (vibrations) affecting the specimen.

Typical systems that benefit from acceleration stabilization include:


- Load units that operate at high frequencies with massive grips
- Test systems that employ swivels, linkages, and test tables

Sensor feedback is provided by an accelerometer attached to (or near) the specimen. The controller converts this feedback into a stabilization signal which is combined with the composite command signal (post-PIDF correction). The “stabilized” command signal is then sent to the valve driver.

Note *Acceleration stabilization works to minimize compliances from swivels, linkages, and test tables. **Acceleration compensation** is used to correct the signal from a moving load cell. The system software does not support acceleration compensation.*

Forward loop filter (FL)

FL filter adjustments compensate for noise in the servoloop—which usually comes from sensor feedback. FL filter adjustments establish a frequency bandwidth for the servo-loop command signal.

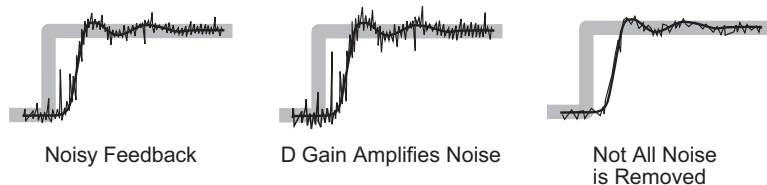

Keep in mind:

- By default, the FL filter is set to one-half the system rate.
- The minimum FL filter frequency setting is 0.01.
- Be sure the forward loop filter frequency is higher than any frequency in the test program. (Most testing occurs below 50 Hz.)
- Systems with moving load cells or heavy grips can produce a noisy force signal.

- If you observe a noisy sensor feedback signal, reduce the FL filter setting to about 100 (providing your test does not reach 100 Hz). If additional adjustment is needed, reduce the setting by 5 - 10 Hz at a time.

Stabilization Filter

Use this feature to define the characteristics of the stabilization filter, which works with the S Gain to integrate a second signal in the control mode as a stabilizing factor. Some systems with a higher actuator frequency may benefit from changing the filter setting for the stabilization signal.

Stabilization filters are only available for control modes equipped with stabilization resources and include:

- A **1 Hz High-pass** filter that attenuates signals below 1 Hz.
- A **Band-pass** filter that attenuates signals outside of a user-definable band.

Stand-Alone Systems

To select a **Stabilization** filter, select, and set up the desired filter type of **1 Hz High-pass** or **Band-pass**.

Path: **Tuning > Manual > Stabilization Filter > Filter Type**

- For **Band-pass** filters, use **Filter Min** and **Filter Max** to set the frequency band.

Note *Some systems with a higher actuator frequency may benefit by selecting the following frequency limits: a low cut-off frequency (**Filter Min**) that is approximately the actuator frequency and a high cut-off frequency (**Filter Max**) approximately 5-10 times the actuator frequency.*

Refer to “Tuning” in Chapter 3, Menus Descriptions of the *FlexTest SE Users Manual* for more information about the stabilization filter settings.

Automated Systems

See “How to Enable a Tuning Filter” in Chapter 5, Tuning of the *Model 793.00 System Software* manual for a detailed procedure for changing the stabilization filter setting.

Creating a Tuning Program

The purpose of a tuning program is to produce a command that reflects the most demanding system response expected from a test.

Note The **Function Generator** is very useful for quickly setting up a tuning program.

Initial tuning is best done with a waveform that has abrupt changes. This excites the system at frequencies likely to be unstable with excessive gain. Square and ramp waveforms are preferred. Final tuning can be done with the actual program command for the test.

Note Always monitor the sensor feedback or error signal to evaluate the control accuracy. See [“Monitoring Waveforms”](#) on page 211.

A typical tuning program is a low-amplitude (5% to 10% of full-scale), low-frequency (1 Hz to 2 Hz) square waveform.

This section describes how the amplitude, frequency, and waveform type of a tuning program can be selected to reflect the capabilities of the testing system or the testing requirements.

Auto tuning

Auto tuning provides a moderate level of tuning for PIDF control modes.

Auto tuning exercises the actuator (with a sweep function) while monitoring the feedback of the control mode being tuned. The response of the control mode is determined and the appropriate tuning parameters are calculated.

For more information, refer to [“Auto tuning”](#) on page 217.

Command waveforms

A tuning program produces a cyclic program command to exercise the system while you make the initial tuning adjustments. A square wave is best because it demands the maximum response of the servo hydraulic system. The square wave tuning program may not be suitable for all systems. The following describe the different waveform characteristics:

Square/Tapered Square

A square waveform requires the servovalve to open rapidly to a large opening. It is the most demanding waveform because it requires the maximum response from the servoloop system. It also places a large acceleration on the test system and specimen.

Tapered square waves taper from 0% to 100% amplitude at the beginning of execution, and from 100% to 0% at the end of execution.

- A square waveform is most useful for tuning displacement.
- A square waveform has an infinite velocity command.
- Do not use a square waveform when tuning a control mode that uses an extensometer. The large accelerations can cause the extensometer to move or fall off the specimen, which can cause the system to go unstable.
- Monitor the feedback or error signal to evaluate the system stability.

Ramp/Tapered Ramp

A ramp waveform (also called a triangle waveform) requires the actuator to move at a constant rate. This requires the servovalve to move quickly between two discrete openings. Cycling a ramp waveform produces a triangle waveform.

Tapered ramp waves taper from 0% to 100% amplitude at the beginning of execution, and from 100% to 0% at the end of execution.

- A ramp waveform is useful for all levels of tuning.
- Use a ramp waveform if a square waveform creates excessive velocities or acceleration for the type of specimen being tested.
- Monitor the feedback or error signal to evaluate the system stability.

Sine/Tapered Sine

A sine waveform (also called sinusoidal or haversine) requires the servovalve to move at a variety of rates.

Tapered sine waves taper from 0% to 100% amplitude at the beginning of execution, and from 100% to 0% at the end of execution.

- Monitor the feedback or error signal to evaluate the system stability.

Random function generator

When tuning AIC compensator configurations, it is necessary to generate random functions to properly simulate typical test conditions.

Random functions employ a pre-emphasis filter to make the convergence rate constant over all frequencies. The random function options include:

- Random - $1/F^2$
- Random - $1/F$
- Random - Flat (none)
- Random - F
- Random - F^2

Frequency

A low-frequency waveform is adequate for most testing. Tests at higher frequencies cause a frequency shift that cannot be completely corrected with the PIDF adjustments.

- Do your initial tuning at a low frequency, and then fine tune at the highest frequency in your test program. Common values are 1–2 Hz.
- Servo adjustments that do not improve performance at high frequencies generally indicate that the servovalve is running at 100% capacity or the HPS is running at 100% capacity.

This characteristic can easily be seen when tuning with a sine waveform. The feedback waveform appears to be more like a ramp waveform when running at 100% capacity.

Amplitude

A system tuned at a low amplitude may become unstable at high amplitudes. Tuning should be accomplished under conditions similar to the anticipated usage.

- Use a moderate amplitude (5% to 10% full scale) for initial tuning.
- Be sure the maximum velocity of the tuning command is 10% to 50% of the maximum velocity of the system.
- Increase the amplitude for fine tuning.
- You may find it helpful to check tuning over a variety of amplitudes by creating a test that cycles once at each of the target amplitudes.

Other Considerations

Servovalves

Most of the servovalve adjustments are performed during the system installation and do not require periodic adjustment. There are two types of servovalves:

- Three-stage servovalves, such as the MTS Series 256 and 257 Servovalves, have an inner loop control system which must be tuned before the outer loop can be tuned.
- Two-stage servovalves, such as the MTS Series 252 Servovalves, do not have inner loop tuning requirements.

After initial system tuning and before final tuning, the valve balance should be checked and adjusted if necessary.

Using specimens

Specimens can be very expensive. A dummy specimen is an inexpensive material that has similar characteristics to the specimen selected for testing. The most important specimen characteristic is its spring rate.

The advantage of a dummy specimen is that it can simulate how your testing system reacts to real specimen. You can establish a more precise level of tuning with a dummy specimen.

Tuning without dummy specimens

If you do not have a dummy specimen or if a dummy specimen is not practical, review the following recommendations if you must use a real specimen:

- Start your PIDF controls at minimum settings.
- Do not use a square waveform for a massive specimen or a specimen prone to vibrations.
- Adjust rate to minimize any oscillation, overshoot, or ringing in the waveform.
- Be very conservative by beginning with a ramp waveform to establish initial control. Then use a waveform that resembles the test waveform to provide a precise level of control.

Tuning without a specimen

A specimen is required to tune force and strain control modes. Initial force tuning may be accomplished with the actuator up against the force sensor. The actuator acts as a specimen reacting against the force sensor.

1. If you are using a load frame, adjust the load unit crosshead so the actuator can reach the force sensor.
2. Carefully adjust the actuator using a tuned length control mode so it contacts the force sensor.
3. You can now switch to force control and proceed with initial tuning.

Monitoring Waveforms

When you tune the servoloop you need to monitor the results of your adjustments. There are two ways to monitor a waveform during tuning.


- An oscilloscope is preferred.
- The controller scope is adequate if you do not have an oscilloscope.

Note Set up your scope to monitor the area of the waveform that shows characteristics useful for tuning. You can monitor the sensor feedback or the error signal of the control mode.

What to monitor

The accuracy of the waveform represents how well it reaches the amplitude of the command or how repeatable the end levels are. The peaks and valleys of triangle and sine waveforms should be consistent. Use the area of the square wave after the ringing settles to monitor the end levels.

You do not need to monitor the entire waveform. Instead, zoom in on the area of interest.

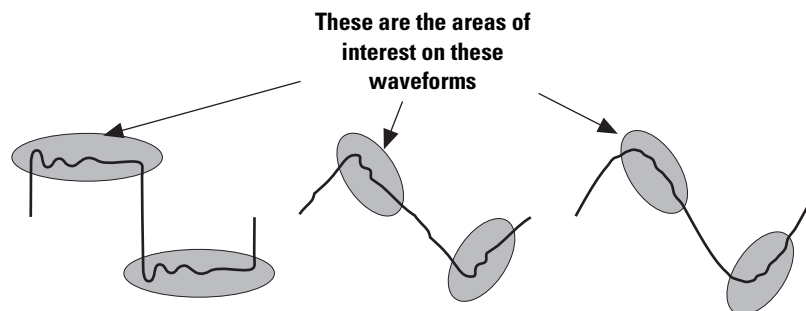

Monitoring the error signal


If the amplitude of the feedback cannot be achieved without going unstable, and the end levels are repeatable, simply increase the command to achieve the desired end levels.

The error signal shows similar characteristics as a feedback signal. The error signal represents the difference between the command and sensor feedback. The following diagrams show the error signal characteristics for each type of waveform.


A square waveform is best suited to view the overshoot and ringing characteristics that occur when tuning a system. Review the following waveforms to determine the kind of characteristics that can be found in an error signal.

The error signal from a square wave should show the feedback ringing centered on the zero reference.


A static accuracy difference in the error signal can be corrected with reset.

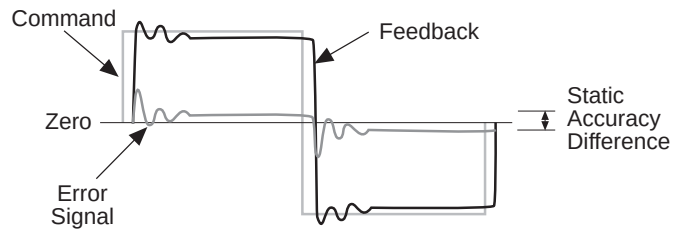

The square wave shape of the error signal represents the phase lag of the feedback signal.

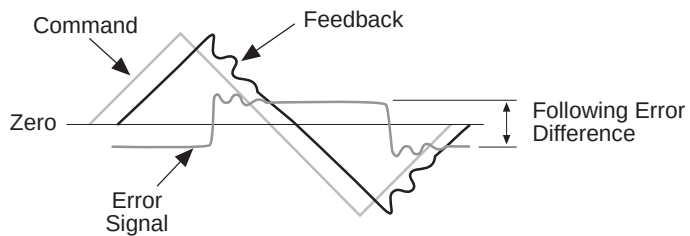

The error signal from a sine should be a small amplitude sine waveform that looks like a rounded square waveform.

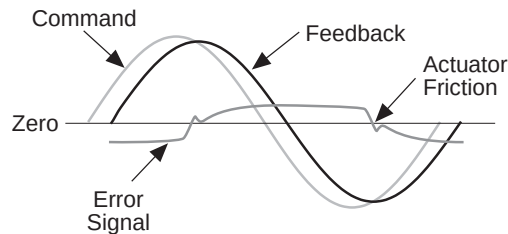

Using the controller scope

If you do not have an oscilloscope, use the controller scope feature for tuning control modes. Review the following:

- Select **Scope** on the FlexTest SE front panel (Stand-Alone) or **Scope** on the Station Manager **Display** menu (Automated).
- Select a continuous sweep.
- Enter the minimum and maximum ranges on the Y axis to zoom into the area of interest.

For more information on the controller scope, refer to the *FlexTest SE Users* manual.

Using an oscilloscope

An oscilloscope has a higher resolution and is faster than the software controller scope. Review the following:

- You must have a Readout defined.
- Set up the Readout to monitor the sensor signal of the control mode you intend to tune.
- Or, you could monitor the error signal. You can tune using either signal.
- Connect the oscilloscope to the appropriate BNC connector on the Model 493.40 I/O Carrier module located at the rear panel of the Model 493.02 Chassis.

Note *You can also connect an oscilloscope to one of the BNC connectors on the FT SE Controller front panel (Monitor 1/Monitor 2).*

Tuning Displacement

A displacement control mode uses the feedback signal from an LVDT (linear variable differential transformer). You do not need a specimen to tune a displacement control mode.

When to tune

A displacement control mode usually only needs to be tuned once.

However, you may want to retune a displacement control mode if:

- The fixtures attached to the actuator have changed (such as grips). The main tuning factor is a change in the mass attached to the actuator.
- Any time hydraulic system potential has changed, such as after servovalve, hose, or pump replacement.
- You want to fine tune the control mode.
- The LVDT ranges are changed.
- You deem it necessary as a result of scheduled system calibration or you feel system response should be improved or reduced.

Prerequisites

Be sure the following items are completed before you begin tuning the displacement control mode:

- Hydraulic pressure is off.
- The specimen is not installed.
- You have created a station configuration file.
- You have created a station parameter set.

Tuning procedure

Refer to “How to manually tune the displacement control mode” in Chapter 2, Common Tasks of the *FlexTest SE Users* manual for a detailed tuning procedure.

Tuning Force

To complete this task, you will make sure the force tuning values established in your station parameter set are appropriate for the test you are about to run. To do this, you will:

- Create and apply a simple tuning program.
- Evaluate the current force tuning values by comparing command and feedback signals.

The displacement tuning values established in the station parameter set are unlikely to require adjustment. Optimal force tuning values, however, are a function of your specimen's compliance, which may change over time, or from test-to-test. You should also tune force whenever you make any change to the force train (such as changing fixtures).

Prerequisites

Be sure the following items are done before you begin tuning the force control mode:

- Hydraulic pressure is off.
- The specimen is not installed.
- You have created a station configuration file.
- You have created a station parameter set.

Tuning procedure

Refer to “How to manually tune the force control mode” in Chapter 2, Common Tasks of the *FlexTest SE Users* manual for a detailed tuning procedure.

Auto tuning

Purpose The auto tuning feature automatically calculates tuning values for PIDF control modes.

Note *Auto tuning is only available for PIDF control modes.*

How auto tuning works The auto tuner disregards your current PIDF gain settings. It applies the minimum required drive signal to ramp the feedback to 80% of the auto tuning limits. It then measures the relationship between the feedback velocity and the valve opening, and derives the minimum PIDF gains required to track the command.

The majority of tests will run adequately with the settings calculated through basic auto tuning, however, advanced auto tuning may be used to optimize the results obtained through basic auto tuning.

Accepting the auto tuning values The **Current** column displays your current PIDF gain values. When auto tuning completes successfully, the calculated tuning parameters are loaded into the **New Values** column on the **Auto-Tuning** control panel.

You can click **Accept** to transfer the auto-tuned values (**New Values**) to the **Current** column and the tuning **Adjustments** tab.

How to Auto-Tune Control Modes

First, auto-tune the displacement control mode. Then install a dummy specimen and auto-tune the force control mode.

Auto-tune the displacement control mode


See “How to auto-tune” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed procedure.

Auto-tune the force control mode

See “How to auto-tune” in Chapter 2, Common Tasks of the *FlexTest SE User’s* manual for a detailed procedure.

Tuning a CLC Control Mode

CLC control modes are used for specimen installation and removal. Channel limited channels require two feedback signals. The first one is used as the master feedback (it is normally displacement) and the second one is used as the limiting feedback (it is normally force). When you command the actuator over a channel limited channel, the controller will not allow the actuator to exceed limits specified on either the master or limiting channels.

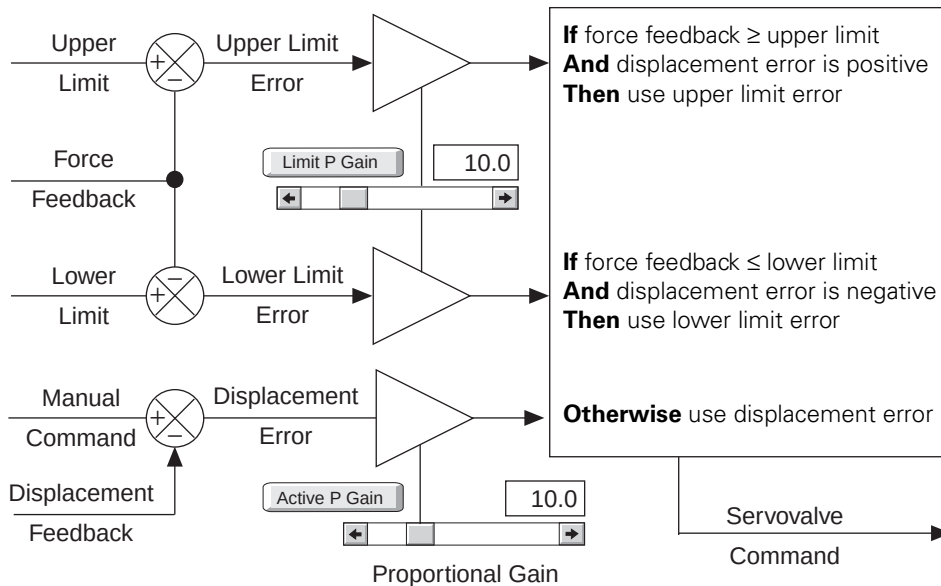

The CLC control mode uses one of three error signals. The **Limiting P Gain** adjustment acts as a conversion factor to scale the limit feedback to similar units as the active P feedback.

Refer to “Tuning” in Chapter 3, Menu Descriptions of the *FlexTest SE Users Manual* for more information about CLC tuning controls and guidelines.

Auto tuning

Hydraulic Configurations

This section describes how to connect the Model 493.02 Chassis to a variety of MTS hydraulic configurations.

You will use the following connectors and cables to connect the Model 493.02 Chassis to your HPU or HPS:

493 Chassis to 493.07 HPS Converter

- 15 contact type D female EMI connector at **J25** of the 493.42 System I/O module in the rear panel of the Model 493.02 Chassis. Backshell—EMI metallized plastic.
- 14 contact type CPC male connector at **J1** of the 493.07 HPS Converter chassis.
- Cable—24 AWG 10 conductor with overall foil shield, (Carol C0745 or equivalent) with drain wire connected to metallized plastic backshell at the 493.02 chassis, and pin 14 at the 493.07 HPS Converter chassis.

493.07 HPS Converter to HPS


- 24 contact type CPC female connector at J25 of the 493.07 HPS Converter chassis.
- 14 contact type MS connector at J1 of the HPS.
- Cable—18 AWG 14 conductor with overall foil shield, (Alpha 2248C or equivalent) with drain wire connected to pin 4 of connector J25 and pin A of the pump connector.

Hydraulic pump configurations

The following diagrams show how to connect the chassis to a hydraulic power supply.


- Single 493 chassis with a 24 V PLC (programmable logic controller) pump or 505 pump
- Single 493 chassis with a non-PLC pump
- Multiple 493 chassis with a non-PLC pump
- Compatible controllers controlling a pump

 Single 493 Chassis with a 24 V PLC pump (506.52-.92) or 505 pump




Note The following three configurations have cables to support both 24 V DC and 115 V AC control voltages. A 493.07 HPU Converter Box is available for each voltage (not both). Be sure the cables and HPU Converter box are rated for the same voltage.


Single 493 Chassis with a non-PLC pump

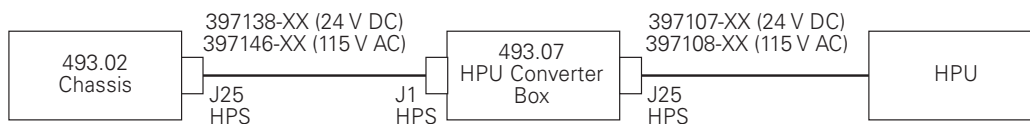

Multiple 493 Chassis and 407 Controllers

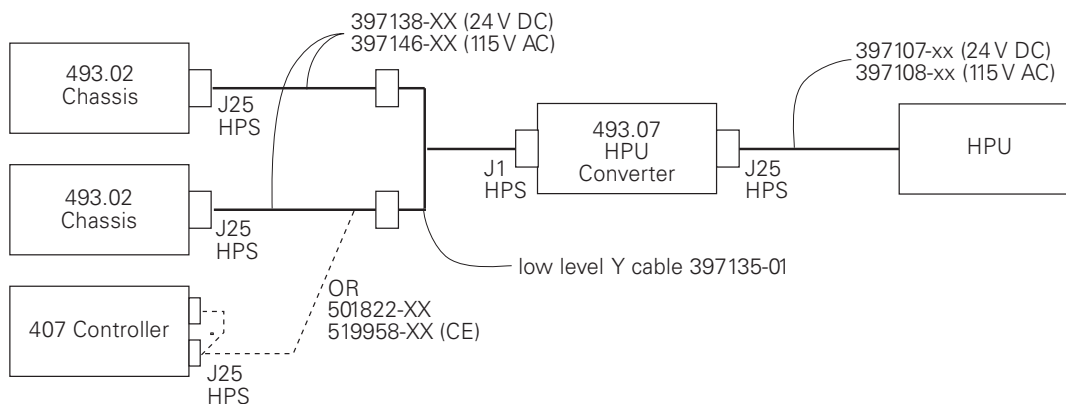

Compatible Controllers

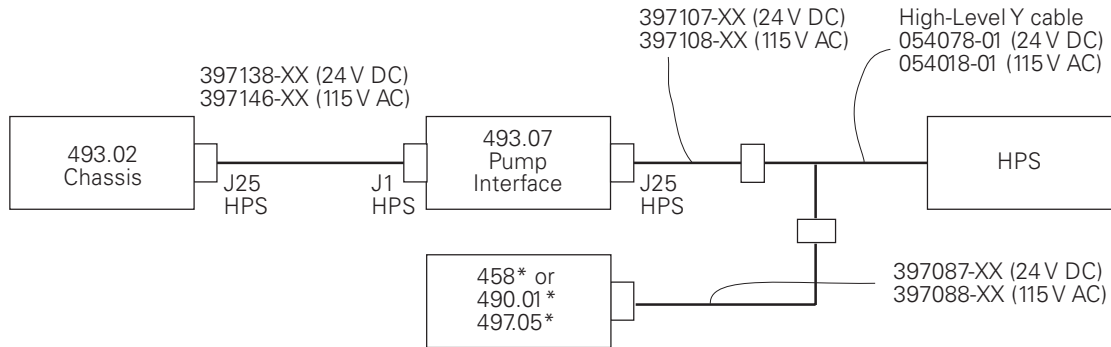

* For standard 493.07 jumper setting only. Alternate settings are required for 436.11 and 413.05 controllers.

You can mix 493.07, 458, 490, and 497.05 controllers directly on the same HPU (without the use of an HPU isolation box).

You cannot mix 493.07, 458, 490, and/or 497.05 controllers with 436, 413.05, or 413.8X controllers unless you use an isolation box.

You can jumper the 493.07 converter box so you can use it directly with 436 and 413.05 controllers. However, if you do this you must use an isolation box if you attempt to mix the 493.07 with 458, 490, and 497.05 controllers. See Appendix B, [“Model 493.07 HPU Converter”](#) on page 229


Multiple Controller Interconnections

FlexTest SE supports the following hydraulic interconnections for multiple controller configurations:

- Independent HSM control with no HPU
- Independent HSM control with a shared HPU
- Shared HSM with an HPU
- Shared HSM without HPU
- Independent HSM controlled with a shared HPU using first-on-last-off

See “[Multiple Controller Connections](#)” on page 43 and the FlexTest SE User’s Manual for more detailed information multiple controller configurations.

Independent HSM (no HPU)

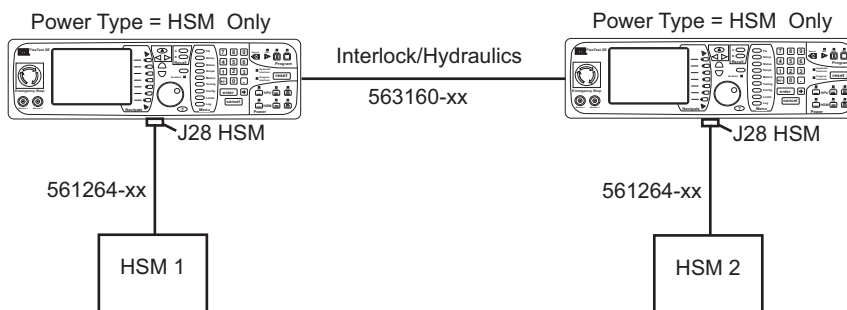


For this multiple controller configuration:

- Each controller has an independent hydraulic service manifold (HSM).
- No hydraulic power unit (HPU) is connected.
- Select **HSM Only** for Power Type on each connected controller.

Path: **Config > Edit Hardware > Power Options > Power Type > HSM Only**

Independent HSM (shared HPU)

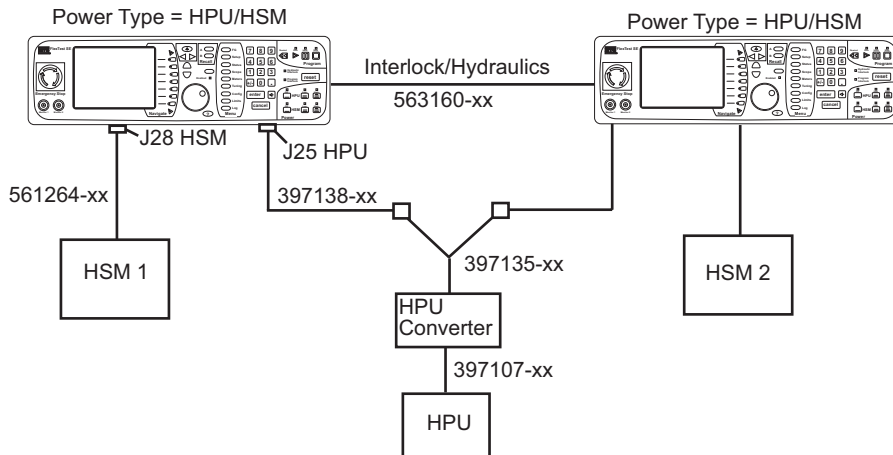


For this multiple controller configuration:

- Each controller has an independent hydraulic service manifold (HSM).
- An HPU is shared by all connected controllers via Y-cables.
- Select **HPU/HSM** for Power Type on each connected controller.

Path: **Config > Edit Hardware > Power Options > Power Type > HPU/HSM**

Shared HSM (with HPU)

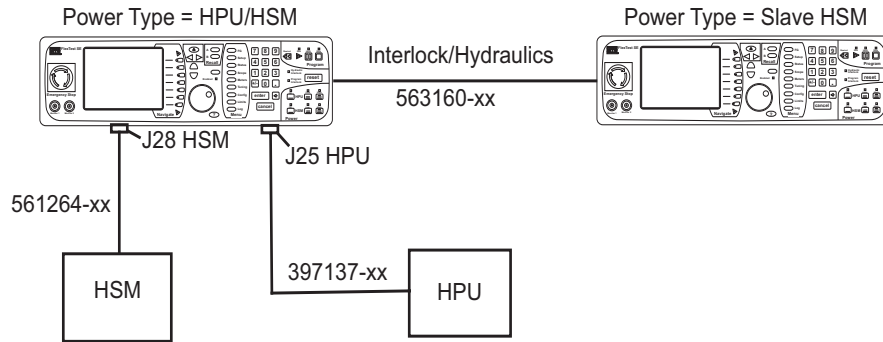


For this multiple controller configuration:

- The HSM and HPU are connected to one controller only.
- Select **HPU/HSM** for Power Type on the controller to which the HSM and HPU is connected.

Path: **Config > Edit Hardware > Power Options > Power Type > HPU/HSM**

- Select **Slave HSM** for Power Type on controllers connected to the "master" controller.

Shared HSM (no HPU)

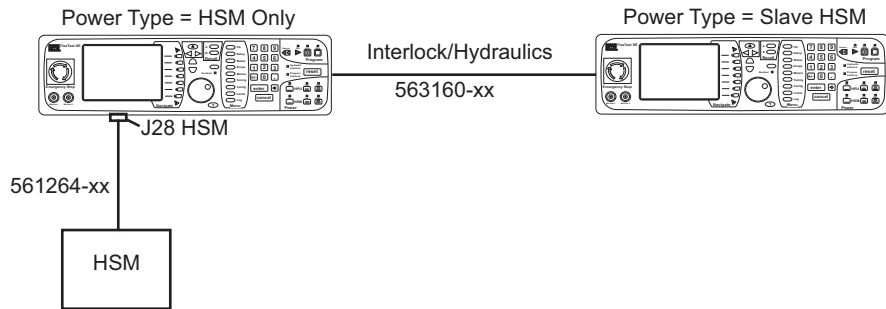

For this multiple controller configuration:


- An HSM is connected to one controller only.
- Select **HSM Only** for Power Type on the controller to which the HSM is connected.

Path: **Config > Edit Hardware > Power Options > Power Type > HSM Only**

- Select **Slave HSM** for Power Type on controllers connected to the "master" controller.

Independent HSM with HPU (FO-LO)

Note This interconnect option is only available for controllers on the same interlock.

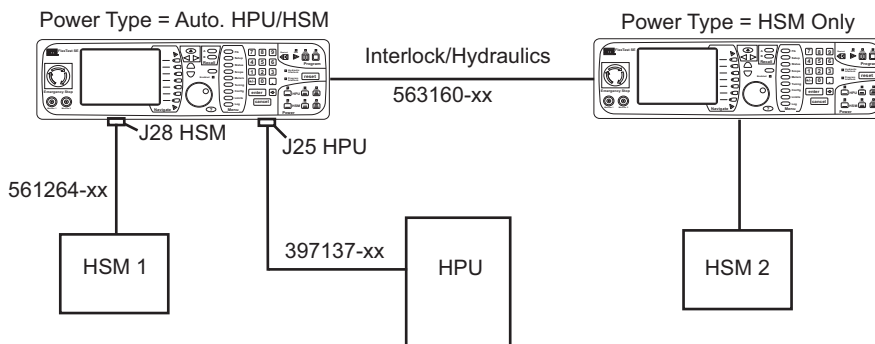

For this controller configuration:

- Two or more FlexTest SE controllers are connected.
- An HSM is connected to each controller only.
- Select **Auto. HPU/HSM** for Power Type on the controller to which both a HSM and HPU is connected.

Path: **Config > Edit Hardware > Power Options > Power Type > Auto. HPU/HSM**

- Select **HSM Only** for Power Type on controllers with an independent HSM, but no HPU.

Note The HPU can be connected to any controller in the interconnected group of controllers.

Appendix B

Model 493.07 HPU Converter

The 493.07 HPU Converter (PN 499694-xx) is designed to connect the 493.02 chassis to a hydraulic power unit (HPU) such as MTS Model 506 HPS or equivalent relay-operated pump. The HPU converter converts logic-level signals to and from the 493.02 chassis to relay signals used by the HPU pump.

For pumps that are 24V PLC compliant, the HPU converter is not needed. This includes all Series 505 HPUs and 506.52-.92 HPUs.




CAUTION

You must have the Model 493.07 HPU Converter designed for the correct voltage before installation. Connecting a 24 V interface box to a 115 V (AC) HPS causes improper operation.

Be sure the voltage marked on the cover of the 493.07 HPU Converter matches the required voltage for the hydraulic power supply.

The following figure shows the main components of the 493.07 HPU Converter, including connectors and jumpers.

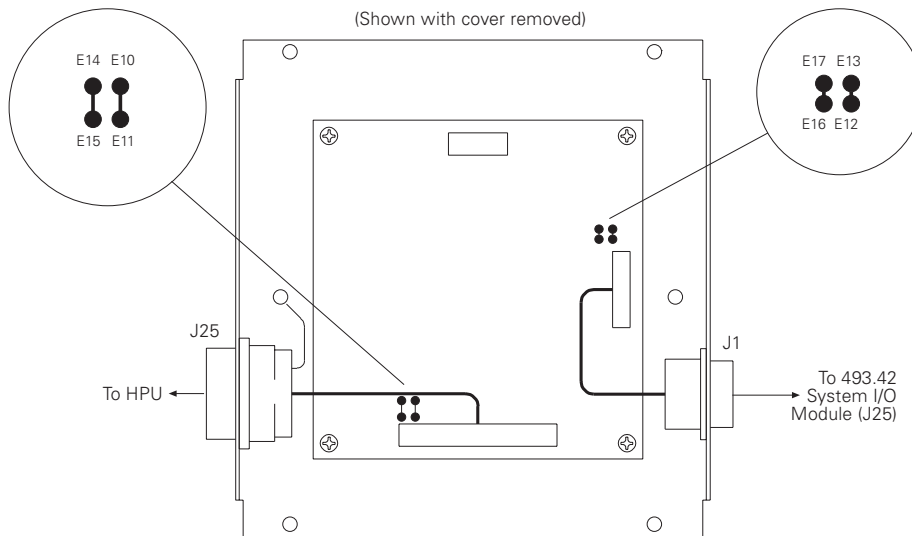



Disconnect all cables from the Model 493.07 HPU Converter before removing the cover. Failure to do so could expose the operator to dangerous voltages.

If the HPU Converter remains connected to a 120 volt HPS, this voltage will be present. Always remove all cable before removing the cover.

Jumper configurations

As shipped, the HPU interface on the 493.07 HPU Converter is compatible with 458.10/.20, 490.01 (TestStar II), 493.xx, and 497.05 controllers.

The 493.07 HPU Converter may be connected to other controllers (as shown in the following table) using a “Y” cable.

Note *If the 493.02 chassis is the only device connected to the HPU, the jumper settings do not matter.*

COMPATIBLE WITH	JUMPERS
Model 458.05/.10/ .20/.40 Model 490.01 Model 497.05	Standard jumper setting: E10–E13 remove E14–E17 remove E10–E11 install E12–E13install E14–E15 install E16–E17install
Model 413.05 Model 436.11 Model 407.05	Jumper change required: E10–E11remove E12–E13 remove E14–E15remove E16–E17remove E10–E13install E14–E17install

Note *The Model 493.07 HPU Converter can not be compatible with both groups of controllers at the same time. If this functionality is needed, use an HPS isolation box.*

Appendix C

Service Tools


A Service Tool application is provided with FlexTest SE systems to perform the following tasks:

- Install or update new versions of 793 software for both stand-alone and automated configurations, including multi-controller systems
- Backup and restore test information files including hardware configuration (.hwi), station configuration (.cfg), and *.txt files.
- Set a controller box name and ID number
- Configure a controller box to boot in automation or stand-alone mode
- Register, unregister, and enable a controller for automation mode

FlexTest SE Service Tool Application

A Service Tool application is contained in the system software installed on your FlexTest SE controller.

Upon launching this application the FlexTest SE Service Tool Application window is displayed.

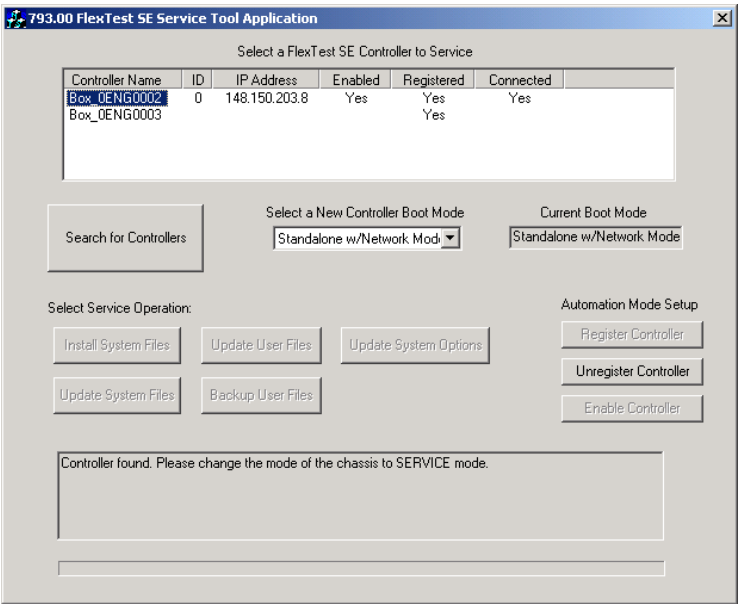

You can use this window to perform the following tasks:

- Verify that the correct software version is installed.
- Copy required system files to a specified controller.
- Copy/restore required user files to a specified controller.
- Backup user files from the FlexTest SE controller to your PC.
- Modify system options stored in the registry.ini file that is specific to a particular controller.
- Retrieve a crash dump file from a specified controller.

Service Tool Application (part 1 of 2)

ITEM	DESCRIPTION
Search for Controllers	Initiates search for all FlexTest SE controllers connected to your PC network. Search results are displayed in the list at the top of the window
Connected controllers	This list displays each FlexTest SE controller connected to or registered on your PC including its name, ID, and IP address. Select a controller to service from this list
Select a New Controller Boot Mode	Allows you to select another boot mode for the selected controller.
Current Boot Mode	Displays the current boot mode for a selected controller: automated, stand-alone, stand-alone w/network, or service.
Select Service Operation	
Install System Files	Removes all files stored on the selected FlexTest SE controller, and then copies all system software files to this controller. Note <i>You should back up user files before selecting this option. A warning message prompts you to back up these files.</i>
Update System Files	Copies all system software files to the selected FlexTest SE controller. You will not be prompted to verify overwriting any existing files.
Update User Files	Copies all user files to the selected FlexTest SE controller. If the same file exists on the controller, the user will be prompted to verify overwriting the existing file. Note <i>The user is not allowed to select individual files to copy; only the source root directory (e.g., a floppy disk).</i>
Backup User Files	Copies all user files to a designated root directory destination.
Update System Options	Allows you to configure the FlexTest SE registry.ini file. Dialogs prompt the user to enter required information including .hwi filename, passwords, and system options.
Automation Mode Setup	
Register Controller	Creates a controller-specific folder (e.g., box a) in the "Boxes" folder on the disk. The .hwi file and config folder are then copied to this new folder from the controller being registered for use when running automation mode.

Service Tool Application (part 2 of 2)

ITEM	DESCRIPTION
Unregister Controller	Deletes a controller-specific folder from the "Boxes" folder on the disk. Note <i>You have the option of not deleting this "Boxes" folder containing both the .hwi and config files.</i>
Enable Controller	Enables a selected controller. In multi-controller configurations you must enable each controller you are using in automation mode.

Initializing a FlexTest SE Controller

To initialize a FlexTest SE controller, use the FlexTest SE Service Tool application to perform the following functions:

- Locate all available controllers and display controller information on the Service Tool window, including controller ID and IP address
- Required system and user files are copied to the selected controller
- The selected controller can be registered and enabled for use in automation mode.

Procedure

The following procedure assumes that each FlexTest SE controller is configured for service mode and connected to a PC.

1. Open the FlexTest SE Service Tool Application window
2. Search for all available controllers.

Select **Search for Controllers** on the FlexTest SE Service Tool Application window. Select controller to service from the displayed list of controllers.

3. Copy necessary system files to selected controller.

Select either **Install System Files** or **Update System Files**.

Note *Selecting **Install System Files** will delete all existing files before copying system file to the controller. Be sure to back up user files to the PC before making this selection.*

4. Copy necessary user files to selected controller.

Select **Update User Files** to copy all user files. You will be prompted to select a root directory on the PC which contains user files to be copied.

If the automation package was purchased and the selected controller is to be used in automation mode, complete steps 5 and 6. In not, the procedure is completed.

5. Register the selected controller.

Select **Register Controller** to create a controller-specific folder (e.g., **box a**) in the "Boxes" folder on your PC registry. The .hwi file and config folder are then copied to this new folder from the controller being registered.

6. Enable the selected controller.

Select **Enable Controller** on the FlexTest SE Service Tool Application window.

Updating System Options

Selecting **Update System Options** on the FlexTest SE Service Tool Application window opens the System Options window which allows you to configure the FlexTest SE registry.ini file

You can use the System Options window to change system options, passwords, and chassis attributes. Hardware configuration file, station configuration file, and unit assignment set file selections can also be made here.


System Options Tab

The System Options tab allows you to install options for your FlexTest SE controller. Check the appropriate option box, then enter the corresponding option key provided by MTS Systems.

Install	Option Key	Description
☒		Advanced Function Generation
☒		Auto-Tuning
☒		Scope
☐		PVP Optimizer

Unit Assignment Set Tab

Use the Unit Assignment Set tab to enter the file name for a default Unit Assignment Set.

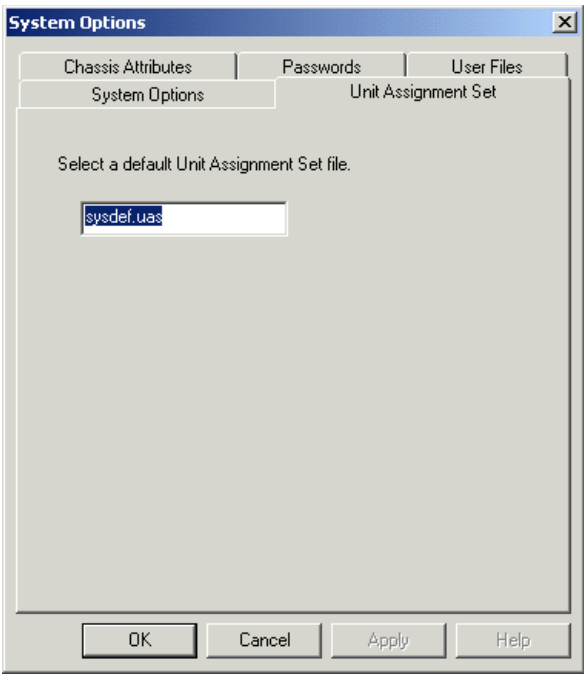

Chassis Attributes Tab

Use the Chassis Attributes to:

- Enter a name for the controller selected on the FlexTest SE Service Tool Application window.
- Enter a unique ID number for the controller selected on the FlexTest SE Service Tool Application window.


The screenshot shows a dialog box titled "System Options" with a close button (X) in the top right corner. It has three tabs: "System Options", "Unit Assignment Set", and "Chassis Attributes". The "Chassis Attributes" tab is selected. Inside the tab, there are three sub-sections: "Chassis Attributes", "Passwords", and "User Files". The "Chassis Attributes" sub-section contains the following text and controls:

- "Enter a unique name for this controller chassis." followed by a text input field containing "Box 0ENG0002".
- "Enter an ID (between 1 and 16) for this controller chassis." followed by a dropdown menu showing "0".
- A note: "Note: This chassis ID determines the network TCP/IP address of the controller on the network. Each controller on the same network must have a unique ID."
- A text input field containing "148.150.203.8".
- The text "Chassis IP address for selected ID." below the IP address field.

At the bottom of the dialog box are four buttons: "OK", "Cancel", "Apply", and "Help".

Passwords Tab


Use the Passwords tab to enter passwords for tuning, calibration, and configuration level access for the selected controller.

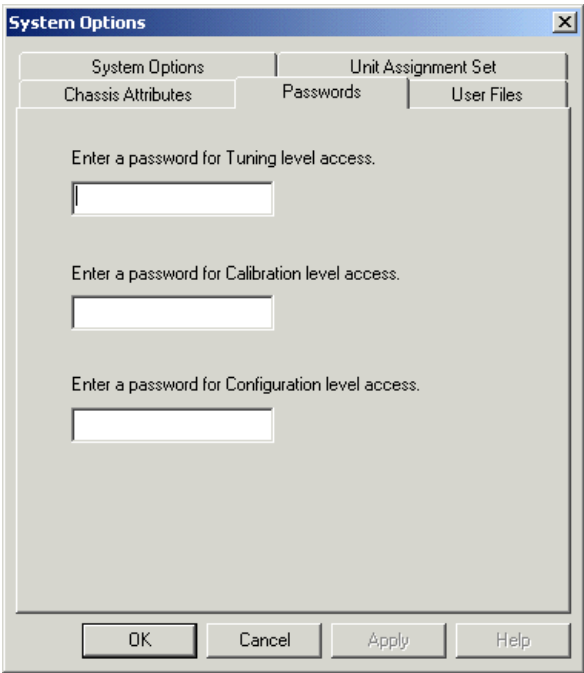

Important Passwords should only containing characters found on the controller front panel's numeric keypad. These are the only keys available when entering passwords in stand-alone mode.

User Files Tab

The User Files tab allows you to select the name of both the hardware configuration file and station configuration file for the controller selected on the FlexTest SE Service Tool Application window.

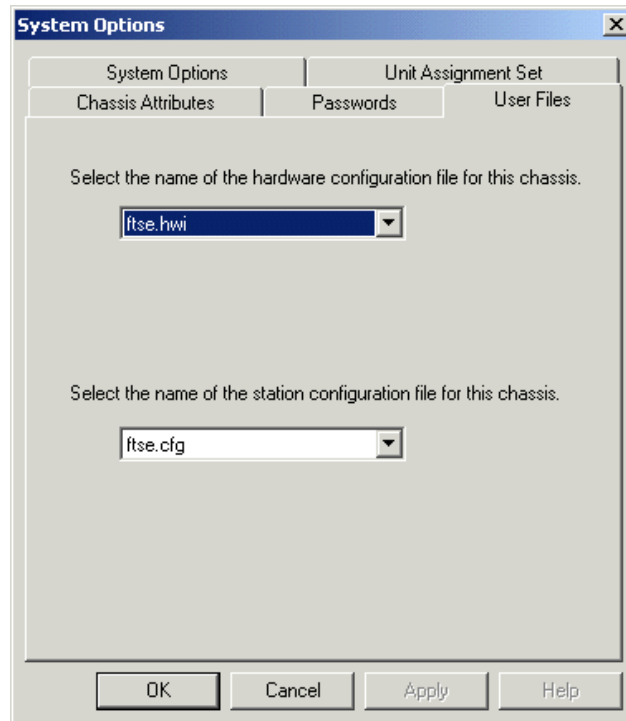

Index

Numerics

- 252 servovalve
 - I/O carrier connection [49](#)
- 256 servovalve
 - I/O carrier connection [50](#)
- 257 servovalve
 - I/O carrier module connection [51](#)
- 493.07 HPU Converter [229](#)
- 493.42 System I/O
 - auxiliary power connection (J43) [65](#)
 - E-stop connection (J29) [62](#)
 - HPU connection (J25) [59](#)
 - HSM connection (J28) [61](#)
 - Interlock connection (J43) [64](#)
- 493.42 System I/O module
 - description [58](#)
- 793.00 System Software [23](#)

A

- AC conditioners
 - calibration [99](#)
 - polarity [109](#), [133](#)
- AC power connections [34](#)
- acceleration, stabilizing with [205](#)
- accelerometer
 - I/O carrier connection [55](#)
- accessing the online manual [11](#)
- actuator
 - determine natural frequency [204](#)
- analog I/O
 - cable specifications [53](#)
 - I/O carrier connections [52](#)
- auto tuning [207](#), [217](#)
 - accepting values [217](#)
 - basic [217](#)
 - control panel [218](#)
 - displacement [218](#)
 - force [218](#)
- automated configuration [23](#)
- automated system cabling [42](#)

B

- back panel [21](#)

- balance, adjust valve [75](#)
- Box In (J51) [66](#)
- Box Out (J52) [67](#)
- bridge completion
 - I/O carrier module [93](#)

C

- cable specifications
 - analog I/O [53](#)
 - digital inputs [68](#)
 - digital output [69](#)
 - J25 HPU [59](#)
 - J28 HSM solenoid [61](#)
 - J29 E-stop [63](#)
 - J29 E-stop input [63](#)
 - J43 interlock [64](#)
 - J49 auxiliary power [65](#)
 - J54 system I/O [59](#)
 - servovalve [48](#)
- cables
 - CE ECM compliant [40](#)
 - fabrication [40](#)
 - HPU connector [59](#)
 - part number list [45](#)
 - sensor [86](#)
 - system [45](#)
- cabling
 - automated system [42](#)
 - E-stop [63](#)
 - front panel [52](#)
 - low-frequency ground loops [40](#)
 - rear panel
 - J25 HPU [59](#)
 - J28 HSM solenoid [61](#)
 - J29 E-stop [62](#)
 - J43 Interlock [64](#)
 - J43 interlock
 - J43 interlock connection [64](#)
 - J49 auxiliary power [65](#)
 - J54 System I/O [59](#)
 - stand-alone system [41](#)

- calibration
 - AC conditioners (displacement) 99
 - DC conditioners (force) 128
 - encoders 161
 - gain controls 135
 - hydraulics turn on 108, 132, 165, 171
 - LVDT 99
 - phase adjustment 110
 - shunt 89
 - shunt, performing 89
 - Temposonics sensors 167
 - using full-range conditioner 98
- calibration file
 - resource assignment 164
- CE EMC compliance
 - cabling 40
- chassis
 - grounding 32
 - installation options 30
 - power connections 32
 - power description 33
- CLC control 198
- command sources 197
- conditioner
 - polarity 73
- configurations
 - AC power 34
- connecting
 - electrical power 32
- connection
 - workstation 56
- connections
 - AC power 34
 - chassis ground 32
 - encoders 161
 - multiple controllers 43
 - System I/O module 58
- control modes
 - characteristics 196
 - CLC 198
 - displacement 197
 - dual compensation 198
 - force 197
 - strain 197
- controller
 - automated configuration 23
 - back panel 21
 - basic functions 22
 - front panel 20
 - handle kit install 36
 - interlocks 22
 - mounting requirements 24
 - multiple connections 43
 - plug-in modules 21
 - stand alone configuration 20
- controller scope
 - tuning use 213

D

- d gain. *see* derivative gain
- daughter boards 28
- DC conditioners
 - calibration 128
 - checking polarity 133
- DC sensor calibration
 - shunt calibration 89
 - shunt resistor table 90
- delta P sensors, stabilizing with 204
- derivative gain 202
- digital inputs
 - cable specification 68
 - J54 Dig In connector 68
- digital outputs
 - cable specification 69
 - J55 Dig Out connector 69
- displacement
 - calibrate actuator retraction 114
 - mounting dial indicator 111
 - sensor calibration 99
- displacement control 197
- displacement tuning 215
 - auto tune 218
 - prerequisites 215
 - procedure 215
 - when to tune 215
- dither
 - about 76
 - adjusting dither amplitude 76
- dual compensation control 198

E

- emergency stop
 - cable specifications 63
 - E-stop out connector (J29) 62
 - HPU transition connectors 62
- encoder calibration
 - calibration file 164
 - connections 161
 - defining an input 161
 - setting resolution 164
 - setting zero 161, 165
 - signal monitoring 163
- error signal 212

- extensometer calibration
 - adjust offset 177
 - calibrate compression 179
 - calibrate tension 178
 - gain/delta K 178
 - gain/linearization 180
 - recalibration 184
 - record data 179
 - shunt calibration reference 188

F

- feed forward gain 203
- force control 197
- force sensor calibration
 - about 128
 - calibration types 128
 - check conditioner polarity 133
 - compression calibration 137
 - gain/delta K 135
 - gain/linearization 142
 - initial values 131
 - millivolt/volt 153
 - prerequisites 128
 - recording data 139
 - setting offset 134
 - setting zero 134
 - shunt cal reference 157
 - shunt calibration 160, 190
 - shunt resistor table 158
 - tension calibration 135
 - what you need 128
- force tuning
 - auto tune 218
 - prerequisites 216
 - procedure 216
- force/strain sensor
 - I/O carrier connection 85
- forward loop filter 205
- front panel 20
- function generation 22
- function generator
 - random 209

G

- gain
 - derivative (d gain) 202
 - feed forward (F gain) 203
 - forward loop filter (FL filter) 205
 - integral (I gain) 201
 - proportional (P gain) 200
 - stabilization (S gain) 203
- gain/linearization calibration 98

- grounding
 - low-frequency ground loops 40
- grounding chassis 32

H

- HPU 59
- HPU connector (J25) 59
- HPU transition board
 - E-stop cable specifications 63
 - E-STOP connectors 62
 - HPU cable specifications 59
- HSM
 - proportional output 61
- hydraulic pressure control 22

I

- I gain. *See* integral gain
- I/O carrier module
 - 252 servovalve connection 49
 - 256 servovalve connection 50
 - 257 servovalve connection 51
 - accelerometer connection 55
 - analog I/O cable specifications 53
 - analog I/O connection 52
 - analog I/O connections 52
 - analog inputs 52
 - bridge completion circuits 93
 - connecting force/strain sensor 85
 - connecting LVDT 84
 - D/A connection 53
 - daughter boards 28
 - J3 Service connector 57
 - servovalve connections 48
 - shunt calibration connector 92
- initialize controller 235
- innerloop
 - signals 79
 - tuning 77
- installing
 - handle kit 36
 - plug-in modules 26
 - VMEbus modules 27
- integral gain 201
- interlock 64
- interlocks 22

J

- J29 E-stop 62

J49 auxiliary power connector 65
 J51 Box In connections 66
 J52 Box Out connections 67
 J54 Digital Input connections 68
 J55 Dig Out connection 69
 jumpers
 HPU converter 230
 J25 HPU 59
 J29 E-stop input 63
 J43 interlock 64
 J52 Box Out 67
 rear panel 67

L

low-frequency ground loops
 correcting noise problem 40
 LVDT
 I/O carrier connection 84
 LVDT calibration
 about 99
 actuator retraction 114
 calibration types 99
 check conditioner polarity 109
 gain/delta K 114
 gain/linearization 119
 initial values 107
 mounting dial indicator 111
 pre-calibration tuning 100
 prerequisites 99
 setting offset 111
 setting zero 111
 signal monitoring 106, 130
 what you need 99

M

monitor, innerloop signals 79
 monitoring waveforms 211
 areas of interest 211
 error signal 212
 using controller scope 213
 using oscilloscope 214
 multiple controllers
 connecting 43

O

offset, setting
 displacement sensor 177
 force sensor 134
 LVDT 111
 options
 system software 24
 oscilloscope
 tuning use 214

P

passwords, setting 240
 plug-in modules 21
 installing 26
 polarity
 conditioner 73
 displacement sensors 109, 133
 force sensors 133
 servovalve 73
 power cabling 32
 pressure control 22
 proportional gain 200
 proportional output 61

R

random functions 209

S

save
 tuning parameters 193
 sensor
 cables 86
 connections 83
 signals 82, 97
 sensor cables
 part numbers 87
 specifications 86
 with ID module 88
 without ID module 87
 sensor calibration
 shunt calibration 89
 shunt resistor table 90
 service connections
 J3 Service(I/O carrier) 57

- service tools 231
 - application 232
 - initializing controller 235
 - setting passwords 240
 - updating system options 237
- servovalve
 - adjust valve balance 75
 - adjusting dither amplitude 76
 - cable specifications 48
 - dither 72
 - I/O carrier connection 48
 - polarity check 103
 - valve balance 72
 - warmup 74
- setting passwords 240
- shunt calibration 89, 157
 - I/O carrier connector 92
 - procedure 89
 - shunt resistor connector 92
 - shunt resistor installation 158
 - shunt resistor table 90
 - when to use 89
- signal polarity 97
- specifications
 - sensor cables 86
 - servovalve cable 48
- specimens 210
 - changing 192
 - tuning with 210
 - tuning without 211
- spool position
 - zeroing
 - zero spool position 78
- square wave shape 208
- stabilizing
 - with acceleration feedback 205
 - with delta P feedback 204
- stand alone configuration 20
- strain control 197
- system cables
 - analog I/O 53
 - part number list 45
- system cables/jumpers 45
- system cabling
 - automated 42
 - stand-alone 41
- System I/O module connections 58
- system options, updating 237
- system software 23
 - options 24
- system warm-up 97

T

- Temposonics calibration
 - setting resolution 170

- temposonics calibration
 - signal monitoring 169
- Temposonics sensor calibration
 - calibration file 170
 - connections 167
 - defining an input 167
 - setting zero 172
- Temposonics sensors 167
- transducer cables
 - part numbers 87
 - specifications 86
- transducer connections 83
- tuning
 - about 192
 - auto tuning 217
 - checklist 194
 - compensation 192
 - control modes 196
 - control range adjust 199
 - controls 199
 - creating a program 207
 - displacement 215
 - force control modes 216
 - guidelines 193
 - innerloop 77
 - monitoring waveforms 211
 - pre-calibration, LVDT 100
 - prerequisites 195
 - proportional gain 200
 - selecting amplitude 209
 - selecting frequency 209
 - specimens
 - changing 192
 - tuning with 210
 - tuning without 211
 - waveforms 207
 - when to tune 194

V

- valve balance adjustment 75
- valves
 - polarity check 103
- VMEbus modules
 - descriptions 28
 - installing 27

W

- waveforms 207, 211
 - areas of interest 211
 - error signal 212
 - monitoring 211
- workstation connection 56

Z

zero, setting

displacement sensor [177](#)

encoders [161](#), [165](#)

force sensor [134](#)

LVDI [111](#)

Temposonics sensor [172](#)