

Table Of Content

I. Overview	
1. Fundamental function of the system.....	1
2. Basic kits configuration.....	1
3. Technical Parameters.....	1
II. The installation of the alarm system	
1. Installation of main panel.....	2
2. Installation of door detector.....	4
3. Installation of P.I.R.	4
III. The usage of main panel	
1. Record alarming voice information.....	4
2. Setup the main panel.....	5
3. Coding between main panel and wireless detectors.....	6
4. Setting function of main panel through remote telephone.....	7
5. Alarm activated, answer and release.....	7
IV. Usage of wireless remote controller	10
V. Technical parameters for wireless detectors.....	10
VI. Frequency Questions & Answers.....	12

I. Overview

Thanks for selecting this wireless digital zones intelligent alarm system, please read the user manual carefully before installation and operation.

1. Fundamental function of the system

- 1) The main panel communicate with the alarm detectors through wireless link, supports all kinds of wireless detectors, PIR, infrared balusters, smoke sensors, gas sensors, panic buttons and so on.
- 2) The main panel supports up to 8 wireless alarm zones, also supports rolling codes detectors, easy to add and delete detectors.
- 3) The main panel has pressing keys, it is easy to set functions.
- 4) It is easy to set Arm at home and Arm away whatever through main keypads or remote controllers.
- 5) The main panel would dial up to 6 group preserved alarm phone numbers and 2 group alarm center number automatically, when alarm is activated.
- 6) The main panel has high priority to make the alarm phone call, if the phone is used(not alarming) when alarm is activated.
- 7) The main panel would send out "Di...Di" alarm beep when the telephone link is absent or destroyed, and the siren would sound when the main panel is armed.
- 8) The main panel could record voice information, this voice would be sent out to alarm phone automatically when the alarm phone call is connected.
- 9) The main panel has the backup rechargeable battery, could keep working without losing any information ever the external power supply is down.
- 10) User could setup the system status through phone connection anytime.
- 11) User could set arm, disarm, or panic through remote controllers.
- 12) For security reasons a password is used for remote access.
- 13) Onsite voice Monitoring through telephone from long distance.
- 14) Have one onsite high volume siren, send sound when alarm occurs, the alarm sound period could adjust from 1 min to 20 min.
- 15) Design for anti-static, anti-thunder, and safe to use.

2. Basic kits configuration

Main panel	1 pc
Power supply	1 pc
Wireless P.I.R.	1 pc
Wireless Smoke	1 pc
Wireless Door detector	1 set
Remote controller	2 pcs
External siren	1 pc
Telephone line	1 pc
User manual	1 pc

3. Technical Parameters:

1. Power supply: AC220V ~ DC9V 300mA
2. Static Current: $I_s < 35\text{mA}$
3. Alarm current: $I_a < 20\text{mA}$
4. Wireless frequency: 433.92 MHz
5. Wireless Modulation: ASK
6. Wireless interference Rejection: $>40\text{dB}(30\text{-}1000\text{MHz})$
7. Wireless received sensitivity: $-95\text{dBm}@12\text{dB SINAD}$
8. Support wireless detectors: ≥ 32
9. Volume of siren: $\geq 110\text{dBspl}$
10. Working Environment: $-15^\circ\text{C} \sim +55^\circ\text{C}$
R.H. $\leq 90\%$

II. The installation of the alarm system

1. Installation of main panel

The main panel should be installed firmly wherever there is telephone line and power supply, connect the phone line to the Line In socket of the main panel, and Line Out to one telephone by the phone line, then plug the power supply and external siren to the corresponding socket, the main panel is ready to use.

Remark:

- 1) The position of the main panel should not be closed to the computer, motor, mobile devices etc. which could interfere the performance of the system.

- 2) Plug the phone and line into the right sockets.
- 3) The system is designed only for indoor used.

2. Installation of door detector

From the principle of Magnetic Door/Window detector: When the gap of magnet and Magnetron is increased to a certain distance, the magnetism decreases accordingly and the switch in the Magnetron turns on and result from alarming. It can detect the opening of doors and windows. Magnet part is easy to install on doors or windows, the other part then fixed on the door frames by adhesive tape, the activated gap is about 15mm.

3. Installation of P.I.R.

PIR could detect body in the certain range. Detection distance is from 5 to 15 meters (adjustable), Horizontal detection angle is 110 degrees, and vertical detection angle is 60 degrees. Adjust the direction and distance to the suitable position and then fix the sensor on the wall or the furniture. Please be noted: the position and direction of the sensor would affect the detection performance, please contact your suppliers if you meet difficulties when make the installation.

III. The usage of main panel

1. Record alarming voice information

Keep pressing “Rec” key until one beep, release the key, the main panel starts to record the voice, press the “Rec” key again could stop the recording, the max. Period is 40 seconds, stop automatically with two “Di...Di” beep when overtime. Note: the voice information should be short and simple, eg. “This is xxxx(detail address) , the house is invaded, please help...”

2. Setup the main panel

The parameters of main panel are set by pressing keys, the setting operation started with “Prog”, and completed with “Prog” also, one successful setup would result from one “Di” beep.

Note: In this manual, the letters with square brackets “[]” represents one according key pressing, the digits(0-9) with double quotation represents the one or more according key pressing, the “+” means the following key pressing.

1) Set alarm phone number

Format: [Prog] + [xxxxxxx(phone numbers)] + [*] + [#] + [1(2-6)]+[Prog]

Description: User must set at least 1 valid alarm phone number before use the main panel, otherwise the main panel would make “Di...Di...Di” alarm beep every 30 seconds, and it is impossible to dial if the alarm is activated.

Example: [Prog] + [12345678] + [*] + [#] + [1] + [Prog]

Remark: Set the 1st alarm phone number to “12345678”, with the same method, user could set the others alarm phone numbers.

Note:

- A. The period between two pressing is not longer than 10ms.
- B. The input alarm number must valid, add necessary zone code(or country code), or access permission code for extension phone.
- C. The latest setup would replace the original one.

2) Delete alarm phone number

Format: [Prog] + [*] + [#] + [1(2-6)] + [Prog]

Example: [Prog] + [*] + [#] + [2]

Remark: delete the 2nd alarm phone numbers:

3) Set/modify password of remote phone control

Format: [Prog] + [xxxx(new password)] + [*] + [#] + [7]+[Prog]

Description: Set the new password(4 bits) for remote phone controlling, the default is “1234”

Example: [Prog] + [6789] + [*] + [#] + [7] + [Prog]

Remark: set the new password to “6789” .

4) Set ring times before answering the remote calling

Format: [Prog] + [007] + [xx(00-12)] + [##] + [Prog]

Description: The ring times should be set by two digits, from 00 to 12.

Example: [Prog] + [007] + [03] + [##] + [Prog]

Remark: Set the ring times to “3” before answering.

5) Set siren period when the alarm is activated

Format: [Prog] + [007] + [xx(00-20)] + [**] + [Prog]

Description: Siren period should be set from 00 to 20 minutes.

Example: [Prog] + [007] + [05] + [**] + [Prog]

Remark: Set the siren period to “5” minutes when alarm is activated.

6) Set siren On when the alarm is activated

Format: [Prog] + [007007] + [##] + [Prog]

7) Set siren Off when the alarm is activated

Format: [Prog] + [007007] + [**] + [Prog]

8) Alarm is activated when the phone line is broken

Format: [Prog] + [007] + [##] + [Prog]

Description: If the telephone line is unplug or broken, the alarm would be activated after 35 seconds when the main panel is in arm status.

9) Alarm is not activated when the phone line is broken

Format: [Prog] + [007] + [**] + [Prog]

10) Set the user ID of main panel

Format: [Prog] + [xxxx(4 digits ID)] + [*] + [#] + [0]+ [Prog]

Description: Set user ID of main panel when connected to the Alarm center.

Example: [Prog] + [1212] + [*#0]+ [Prog]

Remark: Set the user ID “1212” to main panel.

11) Set alarm center phone number

Format: [Prog] + [xxxxxxxx(center numbers)] + [*] + [#] + [8(9)]+[Prog]

Description: user could set up to 2 alarm center phone numbers when the main panel connected to the alarm center, if the alarm is activated, the main panel would dial the alarm center number at first, after send out the detail alarm message to the center, the main panel would dial the others alarm phone numbers.

Example: [Prog] + [55558888] + [*] + [#] + [9] + [Prog]

Remark: Set the 2nd alarm center number to “55558888”.

3. Coding between main panel and wireless detectors

All wireless detectors had been registered (coded) to the main panel from the factory. But it is absolutely necessary to know the coding process:

1) Coding all detectors during the particular period

Keep pressing “Code” key for about 4s to 5s until one beep, then release the key, the system is in coding status. Following input the zone No.(from keypad) and select arm type(Arm home or Arm Out), then make the related wireless detectors work and send signal. Then main panel could save its ID, one coding process finished. User could make up to 20 detectors into one zone by this style, totally 8 zone could registered up to 38 detectors. The system ends the coding status after 30 seconds

Note: Main panel sends out one beep “Di” when make one coding successfully.

2) Adding code

If user want to add more detectors codes and do not remove the current, just press “Code” key, release and then press again, after one beep, the system is in coding status, the coding process is the same as above description, after finishing coding, Press “Code” key again, the main panel ends coding process with two "Di...Di" beeps, the previous code still remained.

3) Remove the code or recode

User could make the coding process according to process 1), the main panel would only recognize the new registered, the others would be lost automatically.

4. Setting function of main panel through remote telephone

When user dial the number of main panel, main panel would answer the phone automatically, then enter correct password (default: “1234”), after one beep, user could make the function configuration through pressing the following key:

- 1 Arm
- 2 Disarm
- * Onsite monitoring (30 seconds)
- # Release the alarm and hang up the phone

5. Alarm activated, answer and release

1) Alarm Activated

The following way could activate the alarm of main panel:

Any time pressing panic button of remote controller or panic button;




 
Alarm signal from PIR, door detector, gas detector, smoke detector etc. when the main panel is in the arm status.

2) Valid answer/release alarm

When one alarm occurs, siren rings, main panel dials alarm center number and alarm phone number continuously up to 5 times if there is no valid answer or release action.

When user answer the alarm phone call, press “*” could make 30 seconds on site monitoring, press “#” would release this alarm, the main panel would not dial anymore.

IV. Usage of wireless remote controller

The remote controller has four buttons: Arm Button , Arm at home button , Disarm Button , Panic Button . When press Arm Button, status LED on the panel blinks about 25s, then armed (delay arm). Press arm followed by panic button immediately would get into arm status at once (instant arm). Arm at home button has the same operation as arm button except only specified at home armed detectors could activate the alarm. Pressing panic button would activate the alarm, and disarm button would release and cancel the alarm at any time.

V. Technical parameters for wireless detectors

1. Wireless gap (door/window) Detector

Power supply: DC=12V~8.4V(inner battery DC=12V)

Static Current: $I_1 \leq 15\mu A$

Transmission Current: $I_2 \leq 15mA$

Transmission Frequency: 433.92 \pm 0.2MHz/ 315MHz if specified

Transmission Time: $T \geq 1S$

Transmission Distance: No Obstacle \geq 80m;
 Internal distance: 15mm
 Working Condition: $-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$
 Relative Humidity: $\leq 90\%$

2. Wireless P.I.R. Detector

Power supply: DC=9V \sim 7.2V(inner battery DC=9V)
 Static Current: $I_1 \leq 30\mu\text{A}$
 Transmission Current: $I_2 \leq 20\text{mA}$
 Transmission Frequency: $f=433.92 \pm 0.2\text{MHz}/ 315\text{MHz}$ if specified
 Transmission Time: $T \geq 1\text{s}$
 Transmission Distance: No Obstacle \geq 80m
 Preheating Time: $\leq 2\text{min}.30\text{s}$
 Interval of twice Emission: $\leq 35\text{s}$
 Detected Distance: 5 \sim 15m
 Detected Angle: Horizontal: 110° , Vertical: 60°
 Working Condition: Temperature: $-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$
 Relative Humidity: $\leq 90\%$

3. Wireless Remote Controller

Power supply: DC=12V \sim 8.4V
 Static Current: $I_1=0$
 Transmission Current: $I_2 \leq 15\text{mA}$
 Transmission Frequency: $f=433.92 \pm 0.2\text{MHz}/ 315\text{MHz}$ if specified
 Transmission Time: $T \leq 1\text{s}$
 Transmission Distance: No Obstacle \geq 80m
 Working Condition: Temperature: $-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$
 Relative Humidity: $\leq 90\%$

4. Wireless Smoke Detector

Power supply: DC = 9V \sim 7.2V(inner battery DC=9V)
 Static Current: $I_1 \leq 10\mu\text{A}$
 Transmission Current: $I_2 \leq 20\text{mA}$

Transmission Frequency: $f = 433.92 \pm 0.2\text{MHz} / 315 \text{ MHz}$ if specified

Transmission Time: $T \geq 1\text{S}$

Transmission Distance: No Obstacle $\geq 80\text{m}$;

Detecting Area : 20 Square Meter

Working Temperature: $-10^{\circ}\text{C} \sim +50^{\circ}\text{C}$ RH $\leq 95\%$

VI. Frequency Questions & Answers

Problems	Probable Reasons	Solutions
Main panel can't alarm	1.Invalid arm 2.No valid phone number or incorrect 3.Door detector installation is unsuitable 4.PIR installation is unsuitable 5.invalid coding with main panel	1.Make arm correctly 2.Set phone numbers correctly 3.Adjust the gap of two contacts of detector 4.Instal carefully according to user manual 5.Coding again
Bad control distance of remote controller	1.Low battery 2.battery spring is rust 3.Antenna is not pull up	1.Replace new same type battery 2.Remove the corruption 3. Make the antenna out
Indication LED of PIR or door detector lit	Low battery	Replace new same type battery
Alarm dialing is too slow	1. Extra phone numbers saved in the main panel 2. Low power supply	1. Set alarm phone number again 2. Check the power supply
Main panel can't receive alarm signal	1. Not make coding process 2. Detector is out or range	1.code again 2.Power on again 3. Make it in suitable range