

BENQ T80
Smartphone
User Manual

Safety precautions	7	dictionary	22
Phone Overview	10	T9 settings	22
Front view	10	Entering symbols and special characters	23
Description of indicator	12	My Text	23
Rear view	12	Inserting My Text	23
Startup	13	Editing My Text	23
Removing the back cover	13	Phone settings	23
Inserting the SIM card	13	Phone	24
Inserting the battery	13	Sounds	24
Removing the battery	14	Profiles	24
Installing the back cover	14	Presentation Style	24
Charging the battery	14	Clock & Alarm	25
Icons in charging	14	Connections	25
microSD card	15	Security	25
Inserting the microSD card	15	Device Lock	26
Removing the microSD card	15	Disable/Enable SIM PIN	26
Switching the phone on/off	16	Change SIM PIN	26
Switching the phone on	16	Change PIN2	26
Entering the PIN	16	Change Private Password	26
First time startup	16	Private Folder	26
Signal strength	17	Private Contact	27
Quick list	17	Certificates	27
Sleep mode	17	Encryption	27
Keypad lock	17	Remove Programs	27
Master Reset	18	Power Management	27
Switching the phone off	18	Accessibility	27
Navigating the menu	18	Regional Settings	28
Home screen	19	Owner Information	28
Home screen icons	20	About	28
Input methods	21	Error Reporting	28
Changing input methods	21	Customer Feedback	28
Text input without T9	21	NFC Function Settings	28
Text input with T9	22	Using the Phone as Card Reader ...	28
Adding a new word to the T9		Using the phone as smardcard	28

Slider setting	29	Messages	37
Windows update	29	Messaging	37
Calling	29	Text Messages	37
Making a call	29	MMS	38
Dialling with number keys	29	E-mail	39
Dialling previous numbers	29	Setting up an e-mail account	39
Making a call from Contacts	29	Writing/sending an e-mail	39
Making a speed dial call	29	Receiving and viewing new messages	40
Dialling using Speech Commander ...	30	Options for viewing SMS/MMS/e-	mail messages
Listening to voicemail	30	Message folders	41
Setting connection alert	30	IM	41
Answering a call	30	Messenger	41
Rejecting a call	31	Email Auto Setting	42
Muting a call	31	Entertainment	42
Ending a call	31	Windows Media®	42
Adjusting the volume	31	Camera	42
Making a conference call	31	Taking pictures	43
Making an emergency call (SOS) ..	31	Recording videos	44
Talking with speakerphone	31	Settings for the image/video files ..	44
Talking with the handsfree headset ..	32	FM Radio	45
Using the programs	32	Pictures & Videos	45
Programs	32	Browsing and opening image, video	or music files
Phone	34	Ringtone Editor	47
Contacts	34	Bubble Breaker & Solitaire	47
Adding new contacts	35	Internet Radio	47
Options menu for contacts	35	Internet	48
Call History	36	Internet Explorer®	48
Speed Dial	36	Windows Live™	48
Setting a function shortcut	36	RSS	49
Starting function/calling number	using shortcuts	Reading the feeds	49
using shortcuts	36	Scheduling the feeds download	49
Voice Mail	37	Downloading the feeds manually ..	50

STK	50	Calculator	57
Organizer	50	2D barcode	58
Alarm Clock	50	Adding contacts using 2D barcode	58
Calendar	50	Java™	58
Audio Notes	50	Connectivity	60
Tasks	51	Beam	60
System	51	<i>Bluetooth</i> ®	60
Settings	51	Turning <i>Bluetooth</i> ® function on ...	60
Task Manager	51	Turning <i>Bluetooth</i> ® function off ..	60
Ending a task	51	Making the phone visible	60
CommManager	51	Creating a <i>Bluetooth</i> connection ..	61
Battery Storage Status	51	Using a <i>Bluetooth</i> stereo headset ..	61
File Explorer	51	Sending a file by <i>Bluetooth</i>	
Synchronisation	52	technology	61
ActiveSync®	52	Printing via <i>Bluetooth</i> technology	62
Installing ActiveSync® on PC	52	Changing the name of your phone ..	62
Setting up a sync relationship	52	Operating files on other <i>Bluetooth</i>	
Synchronising information	53	devices	62
Windows Mobile Device Center		Dial-up	63
(WMDC)	53	GPRS	63
Installing WMDC	53	Proxy	63
Setting up a sync relationship	53	VPN	63
Synchronising information	53	Wi-Fi	63
Adding programs	54	Turning Wi-Fi on	64
Removing programs	55	Connecting to an existing wireless	
Push Mail	55	network	64
Connecting your phone and the		Adding a new wireless network	64
computer using <i>Bluetooth</i>		USB to PC	64
technology	55	Questions & Answers	65
SimManager	56	Care and maintenance	69
Speech Commander	56	Product data	70
Internet Sharing	57	SAR	71
Master Reset	57	MICROSOFT	
Extras	57	SOFTWARE LICENSE TERMS	72

License Agreement 76

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is furthest away from the pacemaker. For more information consult your doctor.



Always keep the phone and accessories out of reach of small children.

Small parts such as the SIM card, as well as the microSD card can be dismantled and swallowed by small children.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Do not look directly into the LED (e.g. flash LED) with optical magnifiers because of radiation.



Permanent hearing loss may occur if you use ear- or headphones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. Set your volume to a safe level. If you experience discomfort or buzzing in your ears, reduce the volume or discontinue use of your ear- or headphones.



Ringtones, info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



The mains voltage (V) specified on the power supply unit must not be exceeded. Otherwise the charging device may be damaged.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



You may only open the phone to replace the battery and SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



- Only use original batteries and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.
- All batteries can cause property damage, injury or burns if a conductive material such as jewelry, keys or beaded chains touch exposed terminals. The material may complete an electrical circuit and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Your batteries are supplied with a protective cover. Please attach this cover to your batteries when detached from the phone and not in use.
- Do not dispose of batteries in fire as they may explode.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.

As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of 1.5 cm is required.

Bluetooth® technology



Your phone has a *Bluetooth*® interface. This makes it possible to establish a wireless connection with your phone and a headset of a car kit, or other *Bluetooth*-enabled devices. This smart phone is also qualified by Bluetooth SIG with QD ID: B013227.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves one time by using a password/PIN. To ensure sufficient security, you should choose a 4-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).
- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimize security risks.
- You should restrict the "visibility" of your phone if possible. This will make it much more difficult for unknown devices to establish a connection with your phone. To do this, see "Making the phone visible" on page 60.
- The name of your phone is transmitted in a *Bluetooth* connection. The factory

default name is "BenQ T80". The first time *Bluetooth* function is activated, or later in the *Bluetooth* menu, you can change this name. See Page 62.

- If *Bluetooth* function is not needed, this function should be deactivated.
- Before using *Bluetooth* accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

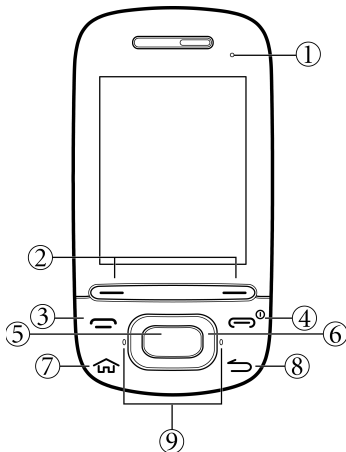
DRM

This phone features Digital Rights Management (DRM) technology. DRM allows copyright-protected audio/visual content transmissions for playback in computers, portable devices and network devices, while protecting them from unauthorised use.

- This user manual provides important procedures and information to familiarise yourself with the device. Please keep this manual in a safe place for future reference.
- Support for the CD content is provided by BenQ. Instead of going to the operator/dealer, contact your local BenQ office for further assistance.
- Windows®, Windows Mobile® and the Windows Flag logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Phone Overview

Front view



① Power indicator

See "Description of indicator" on page 12 for more information.

② Soft keys

- The current functions of these keys are shown in the bottom line of the display. Press to run a command as instructed by the screen.
- : Press and hold to bring up CommManager.

③ Send key (Call key)

- Press to pick up incoming calls.
- Press to bring up the Dial screen and the call records.
- Press to make a call after dialling.
- Press to hold/unhold the call.

④ Power on/off/End key

- Press and hold to turn the phone on/off.
- During a call, press to end a call.
- Press to reject an incoming call.
- Press to cancel dialling.
- Press to return to Home screen.

⑤ OK key

Press to start a function/confirm selection.

⑥ Navigation keys

Scroll up, down, left and right to the preferred item.

⑦ Home key

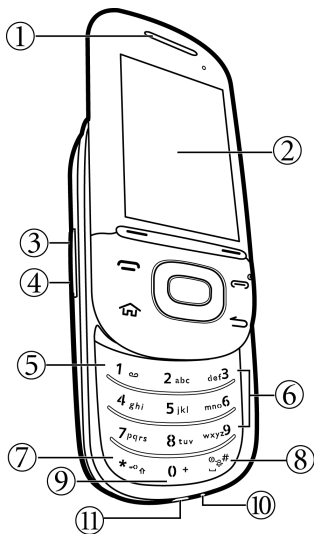
- Press to return to Home screen.
- Press and hold to enter Quick List.

⑧ Back/delete key

- Press to go back to the previous screen.
- Press to delete the text/number just entered.
- Press and hold to delete all the entered texts quickly.

⑨ Front LED indicator

See "Description of indicator" on page 12 for more information.



① **Earpiece**

② **Display**

③ **Speech Commander / Audio recorder key**

- Press to activate **Speech Commander**.
- Press and hold to activate **Audio Notes**.

④ **Shortcut key**

- Press and hold to assign a function shortcut to this side key.
- Press to activate your selected function. (default: launch Camera mode.)

⑤ **Voicemail**

In Home screen, press and hold to access voicemail.

⑥ **Number keys**

⑦ **Asterisk key**

- Press to enter an asterisk (“*”).
- Press and hold this key and then press **Yes** to activate the keypad lock.
- Press to change input methods for text input.

⑧ **Pound key**

- Press to enter “#”.
- Press and hold to activate/deactivate the Vibrate profile.
- Press to insert space for text input.
- Press and hold to open the symbol table for text input.
- In dialling screen: press and hold to switch between L1 and L2.

⑨ **0 + key**

While dialling a number, press and hold to make an international call (entering “+”).

⑩ **Microphone**

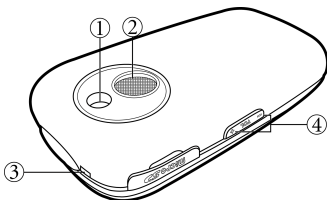
⑪ **USB connection socket**

For charger, headset, USB cable, etc.

Description of indicator

Power indicator		
Red	Flash	Indicates that there are new missed call(s), or the battery power is low (also indicated by the appearance of certain icons on the title bar).
	On	Charging in progress.
Green	On	Charging is complete.
Front LED indicator		
Red	Flash	Indicates that charging is in progress, or there are new incoming call(s) or message(s).
	On	Charging is complete or when the slider is open and screen is on.

Rear view



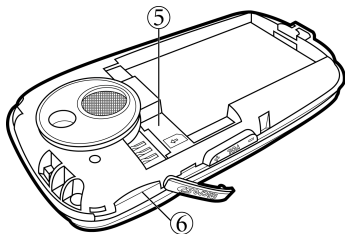
① Camera lens

② Loudspeaker

③ Strap hole

④  Volume keys

Press to adjust volume.



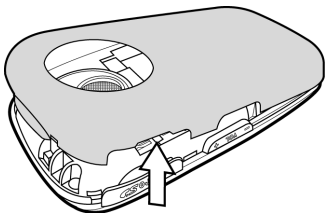
⑤ SIM card holder

⑥ microSD card holder

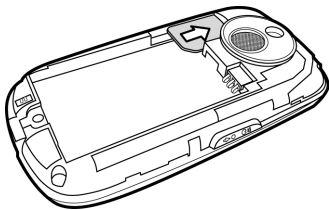
Startup

Removing the back cover

Use a thin object, such as your fingernail, to press in at the groove beside the microSD card holder and then lift the cover off the phone.

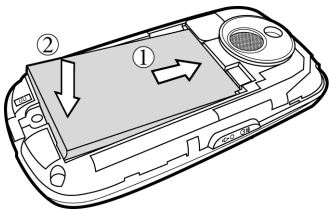


cut corner at the down right as illustrated.



Inserting the battery

1. Slide the top end of the battery down into the top end of the battery bay.
2. Press the bottom end of the battery down so that it locks in place.



Inserting the SIM card

You can obtain a SIM card from a mobile phone service provider when you sign on as a subscriber. When you insert a SIM card into your smartphone, you can begin using it to make and receive phone calls. Follow the instructions below to insert a SIM card into the phone.

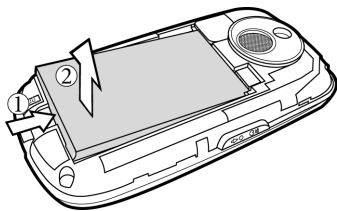
A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it.

Slide the entire SIM card into the SIM card holder, with the metal contacts of the SIM card facing downward and the

Removing the battery

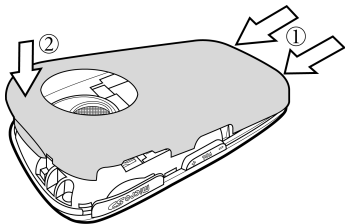
Switch off your phone before removing the battery.

1. Press upward against the battery on the bottom edge of the battery bay.
2. Lift the battery off the phone.



Installing the back cover

1. Insert the tabs on the inside bottom edge of the back cover into the slots on the bottom edge of the phone.
2. Press the cover down onto the phone to lock in place.



Charging the battery

The battery is not fully charged when first unpacked and should be used up completely before charging the battery for the first time. While charging the battery, charge it for eight hours for the first time and afterwards at least two hours (the battery is 90% charged in two hours) each time.

Use the provided charger cable for charging. Connect one end of the charger cable into the phone and the other end into a wall outlet to begin charging.

You can also charge your phone using the USB data cable while it is connected to the PC as an alternative to the charger cable.

- Do not remove the battery while charging to avoid possible damage.
- It takes at least one charging-discharging cycle for the battery to reach its peak performance.
- When the battery is discharged, the charging may not start immediately when you plug in the connector. Wait 2 to 5 minutes for the phone to begin charging.
- Charging is only possible within a temperature range of 0 °C (+32 °F) to +45 °C (+113 °F).

Icons in charging

Different messages and icons may display while charging.

The phone may show the following icons when it is switched off:



Charging is in progress.



Charging is complete.



Invalid battery. Please use a genuine one.



Invalid charger. Please use a genuine one.



Battery temperature is too high and charging is terminated. Please unplug the charger and wait for the battery to cool down before recharging.



Timeout of charging. Charging is terminated. Please unplug the charger, wait for 10 seconds and then re-plug the charger.



Charging error may refer to over-current protection for the charger or over-voltage protection for the battery. Try to replace the charger or the battery.

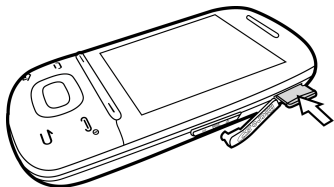
microSD card

The microSD card gives your phone a very large memory capacity. This allows you to save multimedia data, including images, photos, MP3 audio files, ring tones, and Java games. You can also use this memory card to store any other files.

- Your phone can support a microSD card with capacity up to 2GB.
- Your phone supports a microSD card using FAT32 file system only.
- You are strongly recommended to transfer and store the newly added programs on your external memory.

Inserting the microSD card

1. Swing the cover of the microSD card slot out.
2. Insert the entire microSD card into the card holder. Ensure that the card's metal contacts face down.



3. Close the cover of the slot.


Removing the microSD card

1. Swing the cover of the slot out.
2. Press the microSD card to release it.
3. Close the cover of the slot.

The newly added programs cannot be activated if the program files are stored on the removed microSD card. Yet you can still see the program access in the menu of your smartphone.

Switching the phone on/off

Switching the phone on

 
After you have installed the battery and finished charging it, you are ready to switch on the phone. Press and hold  to switch the phone on.

You may be required to enter the PIN code.

The first time you switch on the phone, you will be guided through a series of setup screens. See "First time startup" on page 16.

It may take a while to power on the phone for the first time before it enters the setup screen.

Entering the PIN

Enter your PIN using number keys and confirm with .


The PIN (Personal Identification Number) is the password provided by your network operator. You need this password in order to use the SIM card.

 

When the PIN code entered has been accepted, the phone will automatically search for the designated network. This search process may take a few seconds.

 
- The SIM card can be protected with a 4- to 8-digit PIN.
- The SIM card will be locked if you enter the PIN incorrectly three times before the correct one. You must now enter the PUK (Personal Unblocking Key) for the SIM card in order to unlock it. Please contact your service provider to obtain a PUK.
- To activate/deactivate/change PIN, see "Change SIM PIN" on page 26.

First time startup

 
 
 
 
After you have installed the battery and finished charging it, you are ready to power on the phone. The first time you power on the phone, you will be guided through a series of setup screens. Follow the on-screen instructions or the steps below to start up your phone and complete the initial setup.

1. With the battery and the SIM card inserted, press and hold  to power on the phone.
2. Wait for the phone to boot up with the BenQ screen. This may take a moment.
3. If your SIM card is protected by the PIN, you will be required to enter the PIN when the phone is powered on.

Press  (Done) or  to proceed.

4. Set up the time information, including the time zone of your location, the date and the time. Press  (Next).

Or you can set the time information later while synchronising your phone with a PC.

- Press  (Next) to enter a password if you want to protect access to your data and available networks while using the phone. If you do not need the password, press  (Skip).
- Press  (Next) to set an e-mail account if you want to send and receive e-mail messages on this phone. Or press  (Skip) to complete the setup process.

Please note that your phone needs about 5 seconds to finish the booting procedure. If you want to switch the power off after you power it on, wait for 5 seconds to power off the phone.

Signal strength

The signal strength is indicated in the top right corner of the display. The number of bars displayed indicates the strength of the signal (the more bars the stronger the signal).



Strong signal.

The signal strength meter will show no bars if the phone is not able to detect the designated network or links to a network that you are not authorised to use. You will only be able to make emergency calls in this case.

Quick list

Quick List provides quick access to manage the phone status and switch between different profiles.


When the slider is open, press and hold



to bring up Quick List.

Power off	Switch phone off.
Comm-Manager	Control the connectivity of the phone.
All profiles are provided in Quick List as well. For information on profiles, see "Profiles" on page 24.	


 

 

 

Sleep mode

The phone will automatically enter the sleep mode if it is inactive for 1 minute by default. During the sleep mode, the screen shuts off and the system stands by for incoming phone calls or user input. To switch on the phone again, press any key when the slider is open, or press  when the slider is closed.

You can customise the length of inactivity before entering the sleep mode. See "Power Management" on page 27 for more on display time out settings.

 
 
Keypad lock

Keypad lock prevents inadvertent phone usage. However, you can still be called and you can still make an emergency call.

- By default, the keys are locked when the slider is closed.
When the slider is open and in Home screen, press and hold  and then press  (Yes) to activate the keypad lock.
Or, when the slider is closed, press and hold  to activate the keypad lock.
- To deactivate the keypad lock:
When the slider is open, press  (Unlock) and then .
Or, when the slider is closed, press  (Unlock) and then .



Master Reset

Master Reset restarts the smartphone by erasing all data, programs as well as system settings, and thus returns to its factory default settings.

1. Select **Start > System > Master Reset**.
2. You will be required to enter a default passkey **1234** to proceed. Press  (Yes) to confirm, or  (No) to exit.

 


 



Once confirmed, the phone will be powered off and on automatically. You need to proceed with the startup procedure again. See "First time startup" on page 16.

Switching the phone off

- Press and hold  to switch the phone off.
- Press and hold  and select **Power off**.

Navigating the menu

The phone features various functions and settings organised in menus and submenus.

- Press  (**Start**) in Home screen to open the main menu.
 - Scroll the menu by pressing , , , and .
- Alternatively, press the key corresponding to the number shown before an item, if available.
- If you find **More...** in your menu list, you can either press the number shown before it, or press  to find out more options.
 - Confirm the selection with .
 - Follow the on-screen commands and press the corresponding key to complete/exit the configuration.

 
 
- Main menu can be organised in different views: **BenQ list**, **Microsoft grid**, and **Microsoft list**. The order and levels of the items in Main menu might slightly be different according to the menu style you choose. To change menu view, go to **Start > System > Settings > Presentation Style > Menu style**.
- In this user manual, the steps needed to reach a function refer to the Main menu in **BenQ list** style and are shown in condensed form, for example: **Start > System > Settings**.

Home screen

You will enter Home screen after you have completed the first-time startup procedure. You can use Home screen to view the following information:

- Date and time
- Name of network operator
- Most recently used programs
- Upcoming appointments
- Commonly used programs (predefined)
- Current phone profile
- Phone locked/unlocked status
- On/Off for Phone carrier, *Bluetooth* function and Wi-Fi
- Windows Live™ sign-in access (depending on your setup)

Information shown on Home screen may vary according to the Home screen layout you select. To change the appearance of Home screen, go to **Start > System > Settings > Presentation Style**.

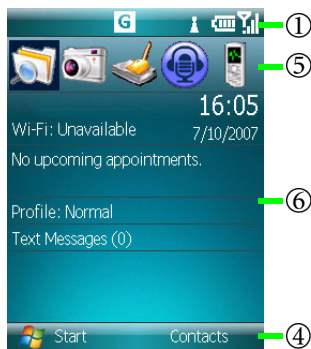
In addition, two soft keys are available at the screen bottom as access to different functions/menus depending on the actual situation. For example, in Home screen, you can see **Start** and **Contacts**. As you switch to a different screen, program, or when a new message is received, names and commands for the two soft keys may vary at the screen bottom. To access the designated functions, press  and .

The below figures demonstrate some of the various components shown on the screen.

Default BenQ Home screen:



Windows Default Home screen:



① Title bar

Located at the top of the screen, the title bar contains various system icons showing the system status of the phone. See "Home screen icons" on page 20 for details.



② Flash display

Flash animations as your screen display available only when you select **BenQ HomeScreen** to be your Home Screen layout. See "Presentation Style" on page 24 for details.

③ Launch bar (predefined)

Up to 6 commonly used programs will be displayed as a quick access. See "Presentation Style" on page 24 for details.

④ Soft key bar

-  The **Start** button: press to bring up the main menu, which is an access to all the programs and utilities in this phone.
- : access the designated function.

⑤ Recently used programs

10 recently used programs will be displayed here as a quick access.

⑥ Personal information management

Personal information such as the upcoming appointments, your currently selected profile, number(s) of unread text message(s) and missed call(s) will be displayed.

Home screen icons



Battery is charging



Battery status



Battery low



Alarm set



Silent profile active



Vibrate profile active



Bluetooth technology active



Wi-Fi active



Wi-Fi network searching



Wi-Fi connected



Line 1/2 in use



GPRS available



GPRS in use



EDGE available



EDGE connected



Instant message received



Call incoming



Phone call(s) missed



Signal strength



Searching for phone network



Phone service unavailable



Phone service off



SIM card not loaded



New message(s) received

 


 

 

Available icons may vary depending on the style of the home screen you are using, the program you are running and the service available in your area. For example, a "G" icon is displayed if you have subscribed to a GPRS service with your SIM card and the GPRS signal is available in the area where your phone is.

Input methods



When an editing screen is displayed, the current text input method is indicated in the upper right corner of the display.

Available text input methods may vary depending on the language version of the operating system. Change the language in **Start > System > Settings > Regional Settings**.

 





Following are some of the input methods:

-  Lowercase text input with T9.
-  Text input with T9 with the first letter capitalised.
-  Uppercase text input with T9.
-  Lowercase text input without T9.
-  Text input without T9 with the first letter capitalised.
-  Uppercase text input without T9.
-  Numeric input.

Changing input methods



 






- Press  repeatedly to select an input method available in the same language.
- Press and hold  to select more input methods and settings.

Text input without T9

- Press a number key repeatedly until the required letter appears. After a brief interval, the cursor will advance. Example:
Press  once to enter the letter "a", twice to enter "b", etc.
Press and hold to write the number.
- Press  to delete the letter left of the cursor or marked text.
Press and hold to delete text quickly.
- Press  to move the cursor (forwards/back).
- Press  once/repeatedly: ., - ? ! ' @ / : 1.
Press and hold: insert 1.
- Press  to insert a space.
Press and hold to open the symbol table to select a symbol or a special character.
- Press  to insert a line feed.

Text input with T9

 
T9 predicts the most probable word from a sequence of keys you press.

- Simply press the keys where the relevant letter is located once.
- If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first.
- If the first highlighted word is not the word you want, press  to highlight the desired word.
- Press  or  to enter the highlighted word.
- To end a word, press  to move the cursor to the right of the word.
 - Press  to insert space. Press and hold to open the symbol table to select a symbol or a special character.
 - Press  /  to move the cursor.
 - Press  to insert a line feed.
 - Press  to delete the letter left of the cursor or marked text. Press and hold to delete text quickly.


Adding a new word to the T9 dictionary

If a desired word is not in the list of word suggestions (as indicated by an **Add Word** option in the list), the word is not


yet included in the T9 dictionary. You can add the word to the dictionary.

- Select **Add Word** at the end of the list of word suggestions.
- In the **Add My Word** field, enter the new word.
- Confirm with  (Done).

The next time you enter the word, it is in the list of word suggestions.

To edit the new words you added to the T9 dictionary, press and hold , and go to **T9 Settings > My Words**.

 



 

T9 settings

To setup your preferences for T9 text input, press and hold , and select **T9 Settings**.

Preferences	Set whether you want the list of word suggestions to complete the predicted word, and whether you want to show the next word prediction, and more.
My Words	You can add/delete the words to/from the T9 dictionary. Note that the predefined words cannot be deleted.
Help	Online T9® Text Input user guide.
About T9	Details on T9® Text Input.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573, 6,970,599; Australia Pat. Nos. 727539, 746674, 747901; Austria Pat. Nos. AT225534, AT221222; Brazil P.I. No. 9609807-4; Canada Pat. Nos. 1,331,057, 2,227,904, 2,278,549, 2,302,595; Japan Pat. Nos. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. Nos. 51383, 66959, 71976; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1, KR226206B1, 402252; People's Republic of China Pat. No. ZL96196739.0; Mexico Pat. Nos. 208141, 216023, 218409; Russian Federation Pat. Nos. 2206118, 2214620, 2221268; and additional patents are pending worldwide.

 


Entering symbols and special characters

- Press and hold  to open the symbol table.
Alternatively, you can press and hold  and select **Symbols**.
- Press  /  to navigate to character.
- Press  (**Next**) to switch to next page.
- Press  to insert character.

 
 
My Text

My Text refers to short excerpts of texts to be inserted in your SMS or MMS messages.

Inserting My Text

- Press  (**Menu**) in your text editing screen.
- Select **My text** and then use  scroll to the desired text template.
- Press  (**Insert**).

Editing My Text

- When a text template is selected in **My Text**, press  (**Menu**) and select **Edit My Text**.
- Revise the text.
- Press  (**Done**) to save the new text template.

Phone settings

Start > System > Settings

You can customise how your smartphone looks and behaves by changing its internal settings.

Phone

You can change settings like auto answer, auto power on/off, auto SMS reply, call barring, call forwarding, related call options, call waiting, caller ID, channels, connection alert, fixed dialling, and showing your number, as well as network related settings for phone calls.

Sounds

 

System sounds provide an audio alert when your attention is needed, whether you have an upcoming appointment, an incoming phone call, or someone has sent you an instant message.

This option lets you enable sound for a number of occasions. You can turn off or turn on to select preferred ring tone and other event sounds (sounds produced by the operating system to indicate errors, for example), program sounds (sounds produced by software you have downloaded) and their notifications. You can also customise the keypad tone/slider sound and set it to be off, click or tone.

Profiles

A profile is a group of settings that determine, for example, whether the phone will alert you to incoming calls through a ring tone or a vibrating alert, and how ring tones in general are used on the phone. These settings allow the

phone's operations to best suit the environment you are in.

You can press and hold  to activate/deactivate **Vibrate** profile in Home screen quickly. Alternatively, you can press and hold  for access to other profiles.

Presentation Style

Aside from acting as the launch point for most activities on your smartphone, Home screen is a powerful canvas on which you can customise to display pertinent information and to better suit you aesthetically.

Home screen layout/Color scheme provide a listing of item/color arrangement on your Home screen or device available for your use. By loading a new layout/color scheme, you can change the skin-color distribution, adjust the Home screen height and font, and arrange the way the appointments and date to be displayed on Home-screen.

You also have the option of selecting a JPG or BMP image as the **Background image** for your device.

Homescreen theme provides a listing of Home themes installed on your phone. By loading a new theme, the arrangement of color and background image in the Start menu and sub-menus will be changed in your favour; the

BenQ Homescreen will also display different animations.

Launch bar provides up to 6 commonly used programs which will be shown on your Home screen as a quick access. Check/uncheck each item to add/erase the predefined programs shown on the launch bar.

You also have the option of selecting the way the **Menu style** will be presented, while in the option of **Messenger**, you can choose whether to show a dialogue window whenever a SMS/MMS message is received.


In the option of **Time out**, choose how many minutes of inactivity will result in returning to Home screen.

- **Color Scheme/Background image** are not available when you select **BenQ HomeScreen** as your Home screen layout.
- **Launch bar** is available only when you select **BenQ HomeScreen** as your Home screen layout.


Clock & Alarm

This option lets you set the system clock and alarms.

Set the time zone, date and time in **Date and Time**; the information is then used as your system clock.

Set the alarm time and switch the alarm on in **Alarm Clock**.  is displayed in Home screen when the alarm is switched on.

To set more alarms and for advanced time options, go to **Start > Organizer > Alarm Clock** on Page 50 .

Depending on the style of the Home screen you select, the  icon may not be shown on the display.

Connections

You need to configure the connections properly in order to connect to other networks. Refer to "Connectivity" on page 60.

Security

The phone and SIM card are protected against misuse by several security codes.


Keep these confidential numbers in a safe place where you can access them again if required.

Device Lock	Protect your phone from unauthorised use. Must be entered at the first security setting.
PIN	(Personal Identification Number) Protect your SIM card from unauthorised use.
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.

PUK	(Personal Unblocking Key) Used to unlock SIM cards after the wrong PIN has been entered three consecutive times.
-----	---

Device Lock

 
This option lets you enable a password lock to your smartphone if it is left unused for a certain time.

1. Check **Prompt if device unused for** and scroll to select a time in minutes or hours.
2. Enter a password in **Password**, and then enter it again in **Confirm password**.
3. Select  (**Done**) to save the setting.

- The SIM card will be locked if you enter the PIN incorrectly three times before the correct one. You have to enter the PUK for the SIM card in order to unlock it. Please contact your network operator to obtain a PUK.
- If the PUK has been lost, please contact your network operator.

 
Disable/Enable SIM PIN

The PIN is the password provided by your network operator and is usually requested each time the phone is switched on. You can deactivate this feature but you then risk unauthorised use of your SIM card. Some network operators do not permit deactivating the PIN control.

1. Select **Disable/Enable SIM PIN**.
2. Enter PIN and confirm with  (**Done**).

Change SIM PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.

1. Select **Change SIM PIN** (available when SIM PIN is enabled).
2. Enter current PIN code in **Old PIN**.
3. Enter new PIN code in **New PIN**.
4. Re-enter new PIN code in **Confirm new PIN**. Confirm with  (**Done**).

Change PIN2

(Display only if PIN2 is available)

Proceed as described under **Change SIM PIN**.

Change Private Password

You can change the private password (default: 0123) set to protect your Private Folder and Private Contact.

Proceed as described under **Change SIM PIN**.

Private Folder

Entry of the private password (default: 0123) is required to access Private Folder.

You can select whether to protect access to your private folder with private password.

Private Contact

Entry of the private password (default: 0123) is required to access Private Contact.

Check to activate Private Mode, protect your SMS/Call logs and make distinctions by using private message-list/private contact icons. You can also choose a period for password authority timeout.

Certificates

 
Public key certificates let you establish your identity when you are logging onto a secure network. Certificates also aid in establishing the identity of other computers that you might want to connect to. Using certificates helps prevent unauthorised users from accessing your device or data. There are three types of certificates that can be installed on your device, and they are managed in the same way. Consult your IT department for information on certificates and device security.

Encryption

Check to encrypt the files stored on the storage card so that the files are readable only by your smartphone.

Remove Programs

This option lets you remove a program from the smartphone.

1. Select a program, press  (Menu) and then select **Remove**.

2. Follow the on-screen instructions to complete uninstallation.

- You can only remove programs you have installed on the storage memory.
- Programs that came pre-installed on your phone cannot be removed.

Power Management

This option lets you check how much battery power is left, and determine the backlight brightness and whether to enable front LED. You can specify respectively when the phone uses the battery power and the AC power, the duration of the display's backlight and how long the display and keypad backlight remains on after the last key is pressed.

Accessibility

Multipress time out	Set the length of the pause between key presses.
Confirmation time out	Set the time elapsed before an unconfirmed action times out.
In-call alert volume	Set the volume of the alert tone during a call.
Smartdial Setting	Set the method for fast search through contacts and call history.

Regional Settings

This option lets you choose a language for the operating system, and customise how data appears on your smartphone, such as currency, time, dates and numbers.

 
Owner Information

Just as it is wise to label valuable assets with your name or e-mail address, so is it important to stamp your smartphone with your information.

Fill in your identification and notes to reflect your personal contact information.

About

This option gives you technical details about the software version of Windows Mobile® powered smartphone running, processor type and total available internal memory. Copyrights information reveals license being used by your version of Windows Mobile® smartphone.

To find out the expansion slot (storage slot) usage, go to **Start > System > Task Manager >  (Menu) > System Information**.

Error Reporting

When the smartphone detects an error, a text error report - like the one in Windows® XP - is generated and can be sent to Microsoft if you choose to do so.

Customer Feedback

Enable this option to join the Microsoft Customer Experience Improvement Program by sending your feedback to Microsoft.

NFC Function Settings

* Network support dependent.

Your phone provides NFC (Near Field Communication) technology which enables mobile payment, identification and communication with other devices within certain range. You can use your phone as fare-paying device when taking public transportation.

Using the Phone as Card Reader

You can use your phone as an NFC card reader. To enable this function, check **RF-Tag detect function**. Simply move the card to be identified towards your phone. Once detected, your phone will vibrate and perform the corresponding service (the services provided should vary according to the network service providers).

Using the phone as smardcard

The SIM card you use must support NFC function. For details on the supported types of cards, please contact your network provider.

If the type of the SIM card inserted is correct, the screen will display its card type in **Certification resource**. You can then use your phone as fare-paying

device to pay ticket fare or to add value to it.

Slider setting

This option provides further settings about the use of the slider. You can also set the **Slider Key Lock** to be disable, prompt or enable.



Windows update


This option provides the latest updates for Windows mobile®.

Calling



Making a call

 
Dialling with number keys

1. Enter the phone number by pressing the number keys in Home screen.
2. Press  or . The number displayed is dialled.

 
To clear a wrong number, press .

Dialling previous numbers


 
 
1. Press  to enter the Dial screen. The call records are displayed in the lower part of the screen. Or you can go to **Start > Phone > Call History**.
2. Press  to select the number you want to dial.

3. Press .

Entering international dialling codes:

Press and hold  until “+” is displayed. Enter country and area codes then.

Making a call from Contacts



1. Open **Contacts** by either pressing the corresponding key in Home screen or going to **Start > Phone > Contacts**.
2. Scroll and press  to select a contact person.
3. Press  or  (Call) to dial.

Making a speed dial call


Speed dialling allows you to make a call by pressing and holding the key assigned for a contact.

You must assign a number as the shortcut for a particular phone number in order to use speed dial for that phone number.

Adding a speed dial entry



1. Open **Contacts** by either pressing the corresponding key in Home screen or going to **Start > Phone > Contacts**.
2. Select a contact person and press  to open the contact information.
3. Press  (Menu) and select **Add to Speed Dial** to create a speed dial entry for this contact person.
4. Assign a key available for this speed dial entry.

5. Press  (Done) to save and exit.

The numbers you can use for speed dial assignment are 2 to 99. The first speed dial entry assigned for  is voicemail.

Making a speed dial call

Press and hold the number that is designated for a contact person in Home screen. The phone then starts dialling automatically.

Alternatively, go to **Start > Phone > Speed Dial** to view the list of shortcuts. Scroll to the contact person, and then press  (Go) or select  (Menu) > Run.

- If the key number you press is designated for a function instead of a contact person, the phone will not dial but activate the function.
- If the shortcut number is 2-digit, press the first key and then press and hold the second one.

Dialling using Speech Commander

Start > System > Speech Commander

Or

Press .

After hearing the prompt “Say command”, follow the on-screen instruction and say the predefined commands for dialling.


- Call <Contact> at <Home/Work/Mobile>: make a call

depending on how you saved these numbers.

- **Digit Dial/Redial/Callback:** say the number to dial.

Select **Menu > Help** for usages and examples.

Listening to voicemail

Press and hold .



You will be asked to set the voicemail number if it is not stored on your SIM card.

Setting connection alert

You can set the phone to vibrate or flash the backlighting when the recipient of a call has answered.

To setup connection alert, go to **Start > System > Settings > Phone > Connection Alert**.

Answering a call

Press  or  (Answer) to answer a call.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information

To answer the call by pressing any key, go to **Start > System > Settings > Phone > Call Options**, and check **Any key answer**.


Rejecting a call

Press  or  (Ignore) to reject an incoming call.

 
Muting a call

Press  to mute an incoming call.

Ending a call

When you are finished with your phone call, press  to end the call.

 
 
Adjusting the volume

During a call, press  to adjust the volume.

Making a conference call

* Network support dependent.

 
You can create a three-way conference call between yourself and two or more parties. Call up multiple parties one by one and link them together in a multiparty call.

1. Make a call to the first person.
2. While the first call is active, press  (Menu) and select **Hold**. The active call is put on hold.
3. Dial a second number to call the second person.
4. While the second call is active, press  (Menu) and select **Conference** to engage in a three-way conference with the first and second parties.

5. If you want to speak to more people, repeat steps 3 and 4.

 
 
Making an emergency call (SOS)

 
You can make an emergency call even if your phone is locked or cannot access your network, or if there is no SIM card inserted, as long as you are within range of a network of the type supported by your phone.

1. Enter 112 (the international emergency number).
2. Press .

Talking with speakerphone

Turn the speakerphone on and continue your conversation while using other phone functions. This is a great feature for allowing your colleagues to participate in your call.

1. First make a phone call.
2. Press  (Menu) and select **Speakerphone On**.
3. To turn off the speakerphone, press  (Menu) and select **Speakerphone Off**.

To turn the speakerphone on/off, you can also press and hold .

Talking with the handsfree headset

You can put the phone aside during a call and hear the caller via the headset. To activate handsfree talking, you need to connect a handsfree headset to your phone first.

To use a *Bluetooth*-enabled headset during a call,

- select **Menu > Turn Hands-free On** to activate the function, or
- select **Menu > Turn Hands-free Off** to deactivate the function.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear. Otherwise you will damage your hearing.

Additional information

 
To set how quickly the incoming call is answered during handsfree operation, go to **Start > System > Settings > Phone > Auto Answer**.





Using the programs











Many of the programs require network connectivity. Make sure that the phone connectivity is configured properly before you activate these programs.











The different connectivity methods are automatically used depending on the surrounding network and your provider. Depending on your provider you may set which method to use.










Programs





Press  (**Start**) in Home screen to access the main menu, and then to all the built-in programs and tools.

Icon	Description	Where to find
Phone		
	Contacts An electronic phone book for managing your contacts.	Page 34
	Call History Records of the past phone activity.	Page 36
	Speed Dial A list of single or double-digit numbers to access the contacts/functions quickly.	Page 36
	Voice Mail Access to your voicemail.	Page 37

Icon	Description	Where to find
Messages		
	Messaging Send and receive e-mail, SMS, MMS messages.	Page 37
	IM An instant messaging application that combines multiple instant messaging networks.	Page 41
	Messenger Send and receive instant MSN messages.	Page 41
	Email Auto Setting Set your e-mail accounts easily.	Page 42
Entertainment		
	Windows Media Audio/video file player.	Page 42
	Camera Access to digital camera and camcorder.	Page 42
	FM Radio Access to FM radio stations.	Page 45
	Pictures & Videos View digital photos or video files.	Page 45
	Ringtone Editor Edit a music file and assign it as new ringtone.	Page 47
	Bubble Breaker A pre-installed game.	Page 47

Icon	Description	Where to find
	Solitaire A pre-installed game.	Page 47
	Internet Radio Access to internet radio stations.	Page 47
Internet		
	Internet Explorer A Web browser for browsing various on-line contents on the Internet.	Page 48
	Windows Live Access to a group of Microsoft services.	Page 48
	RSS Read the news headlines distributed by the websites.	Page 49
	STK Extra services provided by your SIM card carrier.	Page 50
Organizer		
	Alarm Clock Set the alarm time.	Page 25
	Calendar Schedule appointments.	Page 50
	Audio Notes Voice recorder.	Page 50
	Tasks Manage your to-do items.	Page 51

Icon	Description	Where to find
System		
	Settings Set up custom settings for your phone.	Page 23
	Task Manager Manage the programs in use.	Page 51
	CommManager Control the connectivity of your phone.	Page 51
	Battery Storage Status View remaining capacity of the battery and remaining space in other storage.	Page 51
	File Explorer View files and folders in the phone.	Page 51
	ActiveSync Synchronise data between your smartphone and a PC (or an Exchange Server).	Page 52
	SimManager Copy the phone book data from or to a SIM card.	Page 56
	Speech Commander Use voice command to control programs.	Page 60
	Internet Sharing Set up modem link.	Page 57

Icon	Description	Where to find
	Master Reset Delete all data on the phone and restore it to the factory settings.	Page 18
Extras		
	Calculator Electronic calculator.	Page 57
	2D barcode Scan and decode the barcode to show information stored in it.	Page 58
	Java™ A Java manager that allows you to download and run Java programs.	Page 58




 
Your newly installed programs will be listed in **Extras**, while the newly installed Java programs will be listed in **Extras > Java**.

Phone

 


Contacts

Start > Phone > Contacts

You can store contacts with a variety of phone and fax numbers as well as additional contact details. You can enter both personal and business information such as picture, ringtone and company name.

-  shows beside the contacts stored in your phone memory;
-  shows beside the contacts stored on your SIM card.
-  shows beside your Windows Messenger contacts synchronised to the phone.
-  shows beside the invalid Windows Messenger contacts.

Adding new contacts

1. Press  (New).
2. Select a save location: **Outlook Contact/SIM Contact**.
3. Scroll to the desired data fields and fill in the fields. Different fields will be available depending on the save location.
4. Press  (Menu) for more options. Different options will be offered depending on the save location.
5. Save with  (Done).

Options menu for contacts

Different functions are offered depending on the current situation.

Edit	Edit the entry.
Send Contact	Send the contact information by beam or SMS.
Copy Contact	Add new contact with duplicate information.
Send as vCard	Send the contact information by MMS.




Send MMS	Send an MMS to the contact person.
Delete Contact	Delete the contact.
Block Contact	Block the contact.
Privatize Contact	Protect the contact with Private Password.
View By	A list is displayed with contacts that contain the chosen feature.
Filter	Apply different filter criteria to all contacts.
Print via Bluetooth	Send the contact information to a <i>Bluetooth</i> printer and print it out. You need to create the <i>Bluetooth</i> connection between your phone and the printer in advance.
When viewing a contact only	
View All Calls	View the call history of the contact.
Save to Contacts/SIM	Copy the contact to phone/SIM.
Send Text Message	Send an SMS to the contact person.
Add to Speed Dial	Assign a Speed Dial key for this contact.

 
 

 
Privatize Contact is available only when **Private Mode** is activated. See "Private Contact" on page 27 for details.

Call History

Start > Phone > Call History

The phone stores information about all voice calls made to and from the phone in a call log, which is named **Call History** on your phone. In this view, you can see at a glance the phone numbers of all incoming, outgoing and missed calls along with when the activity occurred.

-  shows beside missed calls;
-  shows beside dialled calls;
-  shows beside answered calls.

- Select an item and confirm with , and a small dialogue will show the exact time and duration of the call.
- Press  (**Save**) on an item and you will be able to save the entry to **Contacts** (so long as it is not already in **Contacts**).
- Press  (**Menu**) to find the contact information, send a text message or e-mail, delete one or all items, view the summary of how many minutes were used for one and all calls in the log.
- Press  (**Menu**) and select **Filter** to show missed calls, incoming calls or outgoing calls separately.

Speed Dial

 
Start > Phone > Speed Dial


You can assign one important number/function to a single or double-digit number from 2 to 99. These numbers can then be used as shortcuts to start functions/dial numbers (speed-dial numbers).

For details about speed-dial, see "Making a speed dial call" on page 29.

 
Setting a function shortcut

Before using this function, you have to select **Microsoft grid** or **Microsoft list** in **Start > System > Settings > Presentation Style > Menu Style** first.

1. Scroll to a function.
2. Select **Menu > Add Speed Dial**.
3. Name the shortcut and assign a number for this function.
4. Confirm with  (**Done**).


 is predefined as the speed dial key for the voicemail number. You cannot change its function.

Starting function/calling number using shortcuts

- Press and hold the corresponding key to start the function/dialling.
- Go to **Start > Phone > Speed Dial**, and then press  (**Go**).

Voice Mail

Start > Phone > Voice Mail

Select to access your voicemail. You can also enter it by speed-dialling . See Page 30 for details.

Messages

Messaging

Start > Messages > Messaging

You can create and receive Internet e-mail, multimedia and text messages in **Messaging**.



Internet e-mail messages are sent by using an address you receive from your Internet Service Provider (ISP). Text and multimedia messages are sent and received through your mobile phone service provider by using a phone number as the message address. Before sending a multimedia message, you must complete the MMS settings first.

Text Messages

Long SMS messages you send are automatically divided into concatenated SMS messages.

Writing/sending an SMS

1. Select **Menu** > **New** in the editor screen.

2. Press  to switch to different fields and then enter text/add items (see **SMS options**).
3. Press **Add Recipient** in **Menu** to select a contact person, or enter a number manually in the **To:** field.
4. Press  (**Send**).

SMS options

Different options will be offered depending on the current field you are about to fill in.



 
Add Recipient	Select a contact person from Contacts list.
Check Names	Display the recipient's name if the entered recipient's number is saved in Contacts already.
Insert	Insert pictures, voice notes, and files.
My Text	Insert pre-set template.
Save to Drafts	Save the message in the Drafts folder.
Cancel Message	Discard the message.
Message Options	Set if you want message delivery notification.

MMS

The Multimedia Message Service (MMS) enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged into a “slide show”.

Ask your service provider whether this service is available. You may need to register separately for this service.

Writing/sending an MMS

1. Press  (Menu) and select **New** in the editor screen.
2. Press  to switch to different fields and then enter text/add items (see **MMS options**).
3. Press **Add Recipient** from **Menu** to select a contact person, or enter a number/e-mail address manually in the **To:** field.
4. Press  (Send).

MMS options

Different options will be offered depending on the current field you are about to fill in.

Add/ Remove Recipient	Select a contact person from Contacts list.
Check Names	To display the recipient's name if the entered recipient's number is saved in Contacts already.
Template	Set the current MMS message as a template or import one from gallery.
Insert	Insert picture/video/audio/short text template/vCalendar/vCard or other file(s) stored on the phone/the loaded storage card.
Remove Subject	Remove picture/video/audio files you have inserted.
Slides	To insert/delete a slide, go to the next/previous slide, move slides or set the slide duration.
Options	Set Background Color and Send Options .
Preview	Start playback of all slides.
Save to Drafts	Save the message in the Drafts folder.
Cancel Message	Discard the message.

E-mail

You can receive, view, compose and send e-mail in HTML format.

To create new e-mails, you have to configure at least one e-mail account.

A list of accounts is displayed if more than one account is configured.

Before an e-mail can be read, it must be retrieved from the server.

The files listed and the options menu vary depending on the receive server type of the selected account.

Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device or PC.




Setting up an e-mail account

You need to configure the Internet settings in **Connections**.

1. Go to **Start > Messages > Messaging > New E-mail Account** and fill in your e-mail address.
2. Check **Try to get e-mail settings automatically from the Internet**. Alternatively, uncheck this option and set up manually. You may need to contact your e-mail service provider for the settings in detail, including the mail server type, the mail server name, and account type.
3. Follow the on-screen instructions to complete the setup.

You can also set up e-mail accounts easily in **Email Auto Setting**. See Page 42.

Writing/sending an e-mail

1. Press  (**Menu**) and select **New** in the editor screen.
2. Press  to switch to different fields and then enter text/add items (see **E-mail options**).
3. Press **Add Recipient** from **Menu** to select a contact person, or enter a number/e-mail address manually in the **To:** field.
4. Press  (**Send**).

E-mail options

Different options will be offered depending on the current field you are about to fill in.

Add/ Remove Recipient	Select a contact person from Contacts list.
Check Names	Display the recipient's name if the entered recipient's number is saved in Contacts already.
Insert	Insert picture/voice note/file.

My Text	Insert a text template.
Save to Drafts	Save the message in the Drafts folder.
Cancel Message	Discard the message.
Message Options	Set priority, security, permission, and language.

Receiving and viewing new messages

When there are any new SMS/MMS/e-mail messages received, you will be notified by the message icon in the title bar on the top of Home screen or the flash message dialogue box appeared in the center of your phone display. You may also be informed about the number of new messages in Home screen, depending on your region and the software variant.

To view new messages, press

 (Message).

Options for viewing SMS/MMS/e-mail messages

Different options will be offered depending on the current situation.

New	Start a new message.
Reply/Reply All/Forward	Reply/reply all/forward the current message.
Mark as Unread/Read	Mark the current message as unread/read.
Move	Move the current message to other message folders.
Folders	Switch to different message folders. See Page 41.
Tools	<ul style="list-style-type: none"> • Switch Accounts: Switch to different message accounts. • Empty Deleted Items: Delete all messages stored in Deleted Items. • Options: Set up how messages are displayed and sent.
Copy to Phone/SIM	Copy the message to your Phone/SIM.
Send/Receive	To send/receive message(s) manually.
For MMS/e-mail only	
Download Message	To download the complete message.
For MMS only	
MMS Settings	To set up MMS connection.

Message folders

By default, there are 5 different message folders for SMS, MMS, and e-mail respectively.

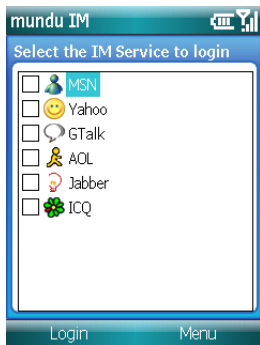
Inbox	Incoming messages/e-mails are saved here.
Deleted Items	Messages/e-mails to be deleted are saved here.
Drafts	You can save a message/e-mail as a draft while creating it.
Outbox	Messages/e-mails failed to be sent are saved here.
Sent Items	Messages/e-mails successfully delivered are saved here.


IM

Start > Messages > IM

Instant Messaging (IM) provides real-time communication service which lets you connect to multiple IM networks wirelessly.

You will be able to know if your friends are available to chat online, and receive instant messages from them from different popular instant messaging services on the Internet, including MSN, Yahoo, Google Talk, AOL, Jabber, and ICQ.



1. Select a service.
2. You will be required to enter your account name and the password.
3. Press  (Login).

 

 
 
Make sure you have configured the Internet connection properly before using IM service.

Messenger

Start > Messages > Messenger

This option provides the same chat environment as Windows Live™ Messenger on your PC. Use it to see who is online, send and receive instant messages, group chat, tell contacts that you are unavailable, and block contacts from seeing your status or sending you messages.

You need to register an MSN or Windows Live™ Messenger account on the Internet in advance.

1. When you launch this service for the first time on your smartphone, follow the on-screen instructions to complete Windows Live™ Setup.
2. You will be informed that your Windows Live™ contacts are to be added to your phone's address book. Press  (OK) to proceed.
3. Read the on-screen instructions and refer to the websites as directed for details about Terms of Use. Press  (Accept) to proceed.
4. Enter your e-mail address and the password that you used for MSN or Windows Live™ Messenger account registration. Press  (Next) to proceed.
5. Check if you want to show Windows Live™ services on Home screen and access it quickly later on.
6. Select the types of data you want to sync, i.e., **Contacts** and **Messenger** and **E-mail**. The phone starts synchronising the type(s) of data you selected.
7. Once the synchronisation is complete, your friends list in MSN or Windows Live™ Messenger will be displayed. Note that only friends currently online are listed.
8. Scroll to a friend and press  (Send IM) to open a conversation window to chat with your friend.

Email Auto Setting

Start > Messages > Email Auto Setting

This option lets you set up e-mail accounts easily. All you need to have is the e-mail address, the user name, and the password before setting up an e-mail account.

Entertainment

Windows Media®

Start > Entertainment > Windows Media


You can use Windows Media® Player Mobile to play digital audio and video files stored on your device or a network such as a website. For more settings on the media files, see "Pictures & Videos" on page 45.

 
Supported file formats include MP3, AAC, AAC+, AMR, WAV, WMA, WMV, MPEG-4, 3GP, H.263, and H.264.

Camera

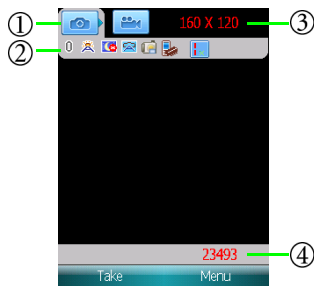
Start > Entertainment > Camera

Your phone supplies you with a digital camera. You can access the camera and the camcorder functions, which allow you to take photographs and record video clips. In addition, you can edit your image files.

To switch between camera and camcorder, press  to go to



Taking pictures



① Mode status

② Camera status

Brightness, shooting mode, white balance, effects, save location and zooming ratio.


 

The icons displayed depend on your settings.

③ Resolution

Image size.

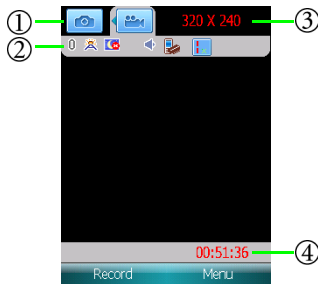
④ Numbers of remaining photos to take

Finger grease and dirt may be left on the camera lens and will result in unclear photos. Be sure to clean the camera lens before taking photos.

1. To enter the camera mode, go to **Start > Entertainment > camera**, and select .
2. Select **Menu > Resolution** to select an image size.
3. Select **Shooting Mode** to select a shooting mode from **Single** (one shot), **Timer** (self timer), and **Multi** (multiple shots).
4. Select **Settings > Camera** to select where to save the pictures.
5. Customise options such as zoom ratio, white balance, or effects.
6. The lens is located on the back of the phone. When you are ready to snap a picture, press  (Take) or . The picture just taken will be named automatically by the phone.

While taking pictures, the smartphone will automatically enter the Standby mode to save power if it is idle for a while. To resume, press any key.

Recording videos



① Mode status

② Camcorder status

Brightness, white balance, effects, microphone status, save location and zooming ratio.

The icons displayed depend on your settings.

③ Resolution

Image size.

④ Remaining time for video recording.

Finger grease may be left on the camera lens and will result in unclear pictures. Be sure to clean the camera lens before recording videos.

- To enter the camcorder, go to **Start > Entertainment > Camera**, and then press to scroll to .

- Decide the time limit, the file format and where to save the video file in **Menu > Settings > Camcorder**.
- Customise other options such as zoom ratio, white balance or effects.
- The lens is located on the back of the phone. When you are ready to shoot a video, press (Record) or to start shooting.
- To pause, press (Pause); to resume, press (Resume). To stop recording, press (Stop).

Settings for the image/video files

Settings available for each picture/video may vary depending on the resolution.

Brightness	Adjust the reflective quality of how bright/dark an image/video appears.
White Balance	Adjust the lighting condition.
Effects	Give an image/video a stylised look by adjusting various options.
Settings	Set advanced settings including backlight, shutter sound, flicker, contrast, standby time and more.
Resolution	Set current image/video size.
About	Show the program information.

Exit	Exit the current mode.
For picture only	
Shooting Mode	Select a preferred shooting mode.
For video only	
Microphone	Turn the microphone on/off.





- The higher the resolution you set, the fewer pictures/video you can take/record and save to the phone memory or your storage card.


FM Radio

Start > Entertainment > FM Radio

- This feature is only accessible when a stereo headset without a built-in FM receiver is connected to the phone.
- For accessories compatible with your phone, contact local office to inquire about availabilities and detailed information.

1. Connect the stereo headset and the FM radio is then turned on.
2. To locate a channel:

- Press  to select a channel previously saved in **Favorites**.
 - Press  to search for channels in sequential order.
 - Press and hold  to rapidly scan for channels with signals.
3. To adjust volume, press .

4. Press  (**Menu**) to open the options menu.

Record	Record current channel.
Add to favorites	Add current channel to your favorite list.
Favorites	Display your favorite station list and select one to play/edit its name.
Set frequency	Enter the frequency of a channel to access it directly.
Turn on/off loudspeaker	Switch loudspeaker on/off. If it is on, the radio will be heard over the loudspeaker.
Recordings	Display radio recordings and select one to play.
More	Advanced options to autostore current channel, turn on/off RDS and save recordings to memory card/phone.
Exit	Close this application.

Pictures & Videos

 

Start > Entertainment > Pictures & Videos

Pictures & Videos is a program where you can view image files such as BMP and JPG or videos such as WMV and 3GP stored on your phone or a memory card. You can then edit or send these files, view a slideshow, or set a picture as the background on Home screen.

Browsing and opening image, video or music files

By default, all pictures and videos you have shot are stored in the **My Pictures** and **My Videos** folders respectively in **Menu > Folders > My Device > My Documents** (the main memory). You can use **File Explorer**, **Pictures & Videos** or **Windows Media** (video and music files only) to find the file you want.

Viewing images

1. Select an image to open from within **Pictures & Videos** or **File Explorer**.
2. Press  (Menu) and then select an option like **Zoom** or **Play Slide Show** (for multiple image playback) as needed.
3. Press  to view the previous or next image.

Menu options

Zoom	Change the zoom ratio.
Play Slide Show	Play images as slide show.
Use as Home Screen	Set the image as background image in Home screen.
Beam picture...	Beam the picture to other devices.
Edit	Rotate or crop the image.
Save	Save as an image ID for a contact.

Properties	Check the properties of the image, including name, file type, dimension, file size, created date, and whether the image is protected. You can also rename the image here.
Options	Advanced options for image setting, video recording and slide show playback.
Send to your space	Send the image to your Windows Live™ Space.
Print via Bluetooth	Print via a <i>Bluetooth</i> printer (available when the printer is connected).
Send Image via Bluetooth	Send the image to other <i>Bluetooth</i> devices (available when <i>Bluetooth</i> technology is active).
Image Processing	Advanced options to process the image. You can change brightness, contrast, saturation, sharpness, shadow boost, and effect of the image. You can also resize the image, add text or a frame to it.

Viewing videos or playing music

1. Select a video or music file to open from within **Windows Media** or **File Explorer**.
2. The selected file starts playing automatically. Available controls are similar to those in **Windows Media® Player** on your PC or notebook computer. Select **Menu** for options as needed.
3. Select **Menu > Library** or return to **File Explorer** to select another video or music file for playback.

 
 
Menu options

Library	Access to all the multimedia files.
Play/Pause	Play or pause the playback.
Stop	Stop the playback.
Shuffle/Repeat	Setup the shuffle and repeat mode.
Full Screen	Enter full screen mode.
Options	Define the behaviour of the playback and the look of the player. You can also assign keys to perform playback quickly.
Properties	Information on the file, such as its length, title or genre, and the save location.
About	Details on the program (Media Mobile).

Ringtone Editor

Start > Entertainment > Ringtone Editor

You can record, edit and save part of a music file to be your ringtone.

1. Locate a music file and select to play.
2. When the file is being played, and when you reach the start of a segment you wish to save as a ringtone, press  (Start).
3. When the play reaches the end of the segment you want to save as the ringtone, press  (Finish).
4. You can play, save or assign the newly-recorded segment as the ringtone of your phone. Or you can re-edit the file.

Bubble Breaker & Solitaire



 
Start > Entertainment > Bubble Breaker/Solitaire

You have two built-in games in your phone: **Bubble Breaker** and **Solitaire**.

 
 
Internet Radio

Start > Entertainment > Internet Radio

This program enables you to listen to Internet radio stations on your phone. You can access them by data connection as long as you are within your service provider's network or your phone has integrated Wi-Fi.

1. Locate a station from the defaults. Or select **More Stations** and pick one station from your favored music genre.
2. Press  (Play) or  to start playback.
3. Press  (Options) to open the options menu.

Menu options

Change User	Enter new username and its password to switch user.
Search	Enter keyword of your desired music categories or stations and select one from the Search Playlist.
Schedule	<ul style="list-style-type: none"> • Scheduler: schedule the begin/end time for your selected station to be recorded or listened to. • Scheduled stations: display infos for your scheduled stations. Press  (Delete) to delete the unwanted schedule(s).
Manage Playlist	Manage your playlist by logging on to radio.mumdu.com. Press  (Menu) to open options menu.
Proxy Settings	Set up your web proxy settings if necessary. Contact your ISP for detailed info.
About	Details on the program.
Exit	Close the program.

- To perform **Manage Playlist** function requires access to Internet Explorer.
- This program supports playing files in *.mp3 and *.wma formats.

Internet

Internet Explorer®

Start > Internet > Internet Explorer

Internet Explorer® Mobile allows you to view information on the World Wide Web or on WAP pages. You can also bookmark your favourite pages or save them for off-line viewing.

Before using the Internet services, you need to configure the Internet connection. The configuration is preloaded on the SIM card by your network service provider. Your phone detects the predefined settings on the SIM card automatically before accessing the Internet.

To setup an Internet account manually, go to **Start > System > Settings > Connections**. If you intend to use certain WAP services, it might also be necessary to set up a WAP account in **Start > System > Settings > Connections > GPRS**.

Windows Live™

Start > Internet > Windows Live

Windows Live is a group of Microsoft services, including Live Search™, Windows Live™ Mail, Windows Live™ Messenger, and Windows Live™ Spaces. To use Windows Live services for the first time, follow the on-screen instructions to complete signing-in.

Windows Live options

Home screen options	Set if you want to show the Windows Live™ access in Home screen.
Sync options	Select the data type you want to sync on your smartphone.
Sync schedule	Set the time to synchronise.
Sync status	Display the details of last synchronisation.
E-mail	Settings for e-mail retrieved from Windows Live™ Mail (Hotmail).
Messenger	Settings for Windows Live™ Messenger, including sound notification and font size.



RSS


Start > Internet > RSS

Really simple syndication (RSS) refers to the news feeds that contain the headlines of the new content. You can use the integrated RSS reader to read RSS feeds provided by the website owners. You can have the news headlines, sports or shopping feeds delivered directly to you as scheduled, or get the feeds manually.

Reading the feeds



 
1. When you launch RSS reader for the first time, you can download the default channels and add them into the subscription list. The phone will get the feeds from the default websites automatically.
To add a new channel, go to **Menu > Subscriptions > Add Channel...**
2. The number in front of each category signifies the number of unread feeds.

Scroll  to read the headlines in different categories; scroll  to read the headlines in the same category.

3. Select one headline and confirm with  to read more or for advanced options.


You will be charged extra when visiting the website for the details of each news, depending on the new data downloaded to your phone.

Scheduling the feeds download

1. Go to **Menu > Settings > Schedules...**
2. Press  to check and change the settings.
Press  again to uncheck and disable the schedule.
3. Confirm with  (Done).

The phone connects to the Internet to get the feeds automatically at the scheduled time. The cost for the downloads varies depending on the network service available at the time.

Downloading the feeds manually

1. Go to **Menu > Get news**.
2. Select one or all of the saved channels/categories in your favor. The phone then starts retrieving news from the website(s).
3. Confirm with  (Done).

STK

Start > Internet > STK

(Network-support-dependent)


Your service provider may offer special applications, such as mobile banking, share prices, etc. via the SIM card.

For further details, please contact your service provider.

Organizer

Alarm Clock

Start > Organizer > Alarm Clock

Set the alarm time.  is displayed in Home screen when the alarm is switched on.

Depending on the style of the Home screen you select, the icon may not be shown on the display.

Calendar

Start > Organizer > Calendar

Use **Calendar** to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Week, Month, and Agenda) and set **Calendar** to remind you of appointments with sound or other methods.

After you have scheduled a meeting and send a notice to the attendees, you can check the acceptance status of all attendees in meeting view.

Your **Calendar** on the phone can be synchronised with Microsoft® Office Outlook® while connecting to your PC using ActiveSync® (Windows® XP) or Windows Mobile Device Center (Windows Vista®).

Audio Notes

Start > Organizer > Audio Notes

This option helps to record short memos and play them back. You can select a preferred recording format and save location. You can also set the recording as ringtone as well.

For details, read **Help in Menu**.

Your phone does not support recording calls.

Tasks

Start > Organizer > Tasks

Use **Tasks** to keep track of things you need to do. You can use categories to help you organise your tasks and set reminders for them.

System

Settings

Start > System > Settings

Customise your phone by adjusting the settings. See "Phone settings" on page 23.

Task Manager

Start > System > Task Manager

This option lets you check the programs or processes that are running on your phone. To improve the phone's performance, you can select to end the unnecessary programs or those that have stopped responding.



Ending a task

1. Select a program. It may take a while for **Task Manager** to detect all the programs that are running.
2. Select **Menu** > **End Task** to end the program.
3. Select **Menu** > **Exit** to exit.

CommManager

Start > System > CommManager

This program determines the connectivity of your phone. You can alternatively access it by:

 
- press and hold ;
- press and hold , and select **CommManager** in **Quick List**.

Select an icon to activate/deactivate the function it represents. You can configure Phone, *Bluetooth*® function, and Wi-Fi in **Menu**.

Constant connection may cause extra loss of cost as well as battery power.

Battery Storage Status

Start > System > Battery Storage Status

Press  repeatedly to let you check the remaining power of the main battery as well as the remaining space in other storage, including phone memory, phone storage, SIM Contact, SIM Message and Storage Card.

File Explorer

Start > System > File Explorer

Use **File Explorer** to browse through the files and folders that are in your phone. Once you find a file you are interested in, select it and open it up in its associated program application.

Synchronisation

Using Microsoft ActiveSync® (Windows® XP) or Windows Mobile Device Center (Windows Vista®), you can synchronise the information on your desktop computer with the information on your device.

Synchronisation compares the data on your device with your desktop computer and updates both computers with the most recent information. For example:

- Keep Microsoft® Office Outlook® Mobile data up-to-date by synchronising your device with Microsoft Outlook® data on your desktop computer.
- Back up and restore your device data.
- Copy (rather than synchronise) files between your device and desktop computer.
- Control when synchronisation occurs by selecting a synchronisation mode. For example, you can synchronise continually while connected to your desktop computer or only when you choose the synchronise command.
- Select which information types are synchronised and control how much data is synchronised. For example, you can choose how many weeks of past appointments you want synchronised.

System requirements:

- Windows® XP Service Pack 2 for ActiveSync®.
- Windows Vista® for Windows Mobile Device Center.

For Windows Vista® users, please visit Microsoft Windows Mobile website (<http://www.microsoft.com/>) for details of Windows Mobile Device Center.

ActiveSync®

Start > System > ActiveSync

Installing ActiveSync® on PC

Insert the Companion CD containing ActiveSync® into the optical drive of your computer, and then follow the instructions on the screen to complete installation.

Setting up a sync relationship

After you have installed ActiveSync® on your PC, you can begin to connect your phone to the PC. Take the included data cable and connect the mini-USB end to your phone's mini-USB socket and the USB end to your computer's USB socket.

Once the data cable connects the phone to the PC, a **Synchronization Setup Wizard** will automatically pop up on the PC side.

Synchronising information

1. Decide if you want to synchronise your information with a Microsoft Exchanger Server, and then click **Next**.
2. Select an information type (such as Contacts and Calendar) to synchronise, and then click **Next**.
3. Click **Finish** to close the wizard and start synchronisation. During synchronisation, ActiveSync® examines each of the information types you selected to be synchronised and sees which records are not the same on both the phone and the PC. Once both the phone and the PC have the same information, all information types will be listed as **synchronized**.

After synchronisation, you can check that the information you have stored in Microsoft® Office Outlook® on your PC has been copied to your smartphone without having to type a word. Disconnect your phone from your PC and you are ready to go.

Once you have set up ActiveSync® and completed the first synchronisation process, you can start synchronisation again anytime from your smartphone or the PC. To do so, connect your phone to the PC and then synchronisation will automatically start. You can also select **Start > System > ActiveSync** on your smartphone, or click **Synchronize** from within ActiveSync® on the PC.

Windows Mobile Device Center (WMDC)

Installing WMDC

Insert the Companion CD containing Windows Mobile Device Center into the optical drive of your computer. And then follow the instructions on the screen to complete installation.

Setting up a sync relationship

1. Connect your phone to your PC using the included data cable. The WMDC will appear on your computer.
2. Select **Set up your device** to set your phone for full synchronisation.
3. To synchronise with an Exchange Server, enter the requested information.
4. Select the information type you want to synchronise, and then click **Next**.
5. Name the new partnership. And click **Set up** to proceed. WMDC will guide you to the WMDC main page.

Synchronising information

1. Connect your phone to your PC using the included data cable. WMDC starts automatically.
2. On your phone, go to **Start > System > ActiveSync**, and select **Sync**.

- If the connection between your phone and the PC is not stable, go to **Start > System > Settings > Connections > USB to PC** and uncheck **Enable advanced network functionality**. If the problem still exists, disable the virus protection program and/or the firewall on the PC.
- While your smartphone and the PC are connected, every time the data of an information type is updated (for example, a new e-mail is available in the Inbox), the same update will be automatically synchronised to your smartphone shortly afterwards.

Adding programs

If you want to install a new program to your smartphone, you will need to install it first on your PC.

1. Determine your smartphone's processor type so that you know which version of the software to install. To do so, go to **Start > System > Settings > About**, and then make a note of the information about the processor.
2. Download the program to your PC (or insert the CD or disk that contains the program into your PC). You may see a single *.xip, *.exe, or *.zip file, a Setup.exe file, or several versions of files for different device types and processors. Be sure to select the program designed for Windows Mobile® powered smartphone and your device processor type.

3. Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions.
4. Connect your smartphone and PC.
5. Double-click the *.exe file. If the file is an installer, the installation wizard will begin. Follow the on-screen directions. Once the software has been installed on your PC, the installer will automatically transfer the software to your smartphone.

If the file is not an installer, you will see an error message stating that the program is valid but is designed for a different type of computer. You will need to move this file to your smartphone. If you cannot find any installation instructions for the program in the Read Me file or documentation, use **ActiveSync Explore** to copy the program file to the Program Files folder on your device. For more information on copying files using ActiveSync® or WMDC, see ActiveSync Help or Windows Mobile Device Center Help.

Once installation is complete, select the program icon to switch to it.

You are strongly recommended to transfer and store the newly added programs on your external memory.

Removing programs

1. Select **Start > System > Settings > Remove Programs**.
2. Select the program you wish to remove.
3. Select **Menu > Remove**, and then follow the on-screen instructions to complete uninstallation.

After removing a program from your smartphone, the program might still exist on the PC.

Push Mail

In addition to synchronising with a PC, you can synchronise with the Exchange Server 2003 Service Pack 2. By doing so, without a data cable, you can still receive email on your smartphone as soon as there are new ones available from your mail server. This feature is often called “Push Mail”. You can also synchronise Contacts, Calendar, and Tasks.

Setting up Push Mail

1. Connect to an existing modem connection such as GPRS.
2. Select **Start > System > ActiveSync**.
3. Select **Menu > Add Server Source**.
4. Enter the address of your Outlook Web Access server and uncheck **This server requires an encrypted (SSL) connection**. Then select **Next**.
5. Enter your user name, password, and domain name. Then select **Next**.

6. Choose the data types you want to synchronise.
7. Synchronisation now starts. Wait for a while to receive mails.

Select **Menu > Schedule** to customise the synchronisation interval as needed.

Connecting your phone and the computer using *Bluetooth* technology

Without a data cable, you can still connect your smartphone to a computer supporting *Bluetooth*® technology (either built-in or with a *Bluetooth*® dongle).

- The computer must use either Windows® XP Service Pack 2 or Windows Vista®.
- If you are using a *Bluetooth* dongle, use the default driver that comes with Windows® XP.

1. On the computer, right-click the *Bluetooth* icon on the Notification area on your computer (or click **Start > Control Panel > Bluetooth Device**) to open the *Bluetooth Device* window.
2. On the **Options** tab, select **Turn discovery on** and **Allow Bluetooth devices to connect to this computer** (Windows® XP), or check options in **Discovery and Connections** (Windows Vista®).
3. On the **COM Ports** tab, click **Add**.
4. Select **Incoming** (device initiates the connection) and click **OK**.

- Record the number of the COM port that was added. It is recommended that the COM port number is less than 10.
- Click **OK**.
- In ActiveSync® on the computer, click **File > Connection Settings**.
- Check **Allow connections to one of the following**, and then choose the COM port you noted in Step 5.
- Click **OK**.
- On the smartphone, create a new partnership with the computer.
- The computer name is displayed. Select it and make sure ActiveSync® is checked.
- In ActiveSync® on the smartphone, select **Start > System > ActiveSync**.
- Select **Menu > Connect via Bluetooth**.

Media (music and video) files can be synchronised only by using a cable connection.

SimManager

Start > System > SimManager

You can copy the selected entries in your phone book from a SIM card to Contacts in your smartphone, or vice versa.

- Go to **Menu > Switch to contacts view/Switch to SIM view** to view contacts in your Phone/SIM.

- Check the data you wish to copy and then **Select Menu > Copy to SIM/Copy to contacts**.

Speech Commander

Start > System > Speech Commander

This program lets you use voice commands to call contacts, find contacts, dial digits, start applications and have your appointments, e-mail or SMS messages read to you.

Follow the on-screen instructions to say the command and activate the function.

- Select **Menu > Help** for usages and examples.
- The language of the commands changes depending on the language you set for the operating system.
- For call-related functions, see also "Dialling using Speech Commander" on page 30.

Menu options

Menu > Settings > Menu

Contacts	Show the contacts available in Speech Commander.
Application	Show applications available in Speech Commander.
Music	Show music files available in Speech Commander.
Digit Training	Help your smartphone adapt to your voice and thus increase the accuracy.


 
Digit Settings	Set the length of phone number.
Advanced Settings	Set the sensitivity to Normal , Accurate or Sensitive .
Unselect	Uncheck selected items to disable their Speech Commander function.
Voice Tag	Build a custom voice tag by recording your own voice, and thus replace the default voice tag.
Play	Play the name of the selected item.

Internet Sharing

Start > System > Internet Sharing

This application makes your smartphone a laptop's high-speed modem via USB or *Bluetooth* connection.

1. Select to use either **USB** or **Bluetooth PAN** for PC connection.
2. If **USB** is selected, connect your computer with the phone using USB data cable.
If **Bluetooth PAN** is selected, make sure that the computer has paired with the phone.
3. Select a network connection method from the **Network Connection** drop-down list. For details on different connection methods, contact your ISP.

4. Press  (**Connect**). If the status is displayed as **Connected**, the connection is made successfully. You are able to browse the web pages in your computer.
Press  (**Disconnect**) to disconnect.

You need to install ActiveSync® (Windows® XP) or Windows Mobile Device Center (Windows Vista®) in advance.

Master Reset

Restore your phone to factory setting. For details, see Page 18.


Extras

 
Calculator




Start > Extras > Calculator


 
Just as there is a calculator on the PC, you have this function on your smartphone.

1. Enter amount to calculate.

Press  to enter decimal points.

Press  to add a minus before the number.

2. Perform calculations using ,  and , as indicated on the **Calculator** screen.

3. Press  to delete numbers and symbols entered.
Press  (Clear) to delete all numbers and symbols entered.


2D barcode

Start > Extras > 2D barcode

2D barcode is a 2-D barcode system designed for mobile electronic devices with camera module (such as camera phones, PDA, smart phones, Webcams, scanners and decoders). The system provides encode, make code, decode tools and also provides an application service.

The pre-installed 2D barcode decoder reads the 2-D barcodes scanned by the built-in camera on your phone, showing the data stored in it or importing the data into your phone.

 
2D barcode supports decoding 2D barcodes and QRcodes. You can generate new barcodes in these formats at <http://www.quickmark.com.tw/En/basic/index.asp>.

1. Activate **2D barcode**.
2. Aim the camera lens at the barcode.
Press  to zoom in/out. Your phone will decode the barcode automatically.
3. If the barcode is scanned successfully, you will be notified by a sound.



Adding contacts using 2D barcode

You may get business cards with 2-D barcodes printed on them. As a matter of fact, all the contact information are stored in these barcodes. You can scan the barcodes to save the information directly into your phone book without any text input.

1. Activate **2D barcode**.
2. Aim the camera lens at the barcode. The contact information will be decoded and displayed.
3. Press  (Options) and select **New Contact**. The new entry will be saved to **Contacts**.

Java™

Start > Extras > Java

This is a Java environment on your smartphone which allows you to download and run Java programs. You may either download the desired Java files from the Internet or beam them in

from the PC via ActiveSync® (Windows® XP), Windows Mobile Device Center (Windows Vista®) or *Bluetooth*® function. Once the files are moved to your phone, you can find them in your **File Explorer** and proceed to install them from there. The installation will in turn move the installed Java program application inside **Java**. So when you want to launch a Java program, you must first open up **Java** and launch it.

Below is a list of supported Java Specification Requests (JSR):

JSR 30 JSR 139	Connected Limited Device Configuration (CLDC)
JSR 37 JSR 118	Mobile Information Device Profile (MIDP)
JSR 75	PDA Optional Packages for the J2ME™ Platform
JSR 120	Wireless Messaging API (WMA)
JSR 135	Mobile Media API (MMAPI)
JSR 184	Mobile 3D Graphics API for J2ME™
JSR 185	Java Technology for the Wireless Industry (JTWI)
JSR 257	Contactless Communication API

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

BenQ excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. BenQ offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC.

Connectivity

Start > System > Settings > Connections

With access to the Internet, you can use e-mail and browse the web pages. Select an option in this application to setup Internet accounts depending on your internet service provider and the type of network you have access to. Contact your internet service provider (ISP) for details on the settings. Your ISP is usually your SIM card provider.

Available connection methods for setting up may vary depending on your ISP and country/region.

Beam

Check this option to decide whether to allow receiving data beamed from other devices.



 
Bluetooth®


Your phone comes with built-in *Bluetooth*® technology that lets you communicate with other *Bluetooth* devices over a maximum of approximately 10 metres (30 feet).

You must activate the *Bluetooth* function to establish a *Bluetooth* connection between your phone and other *Bluetooth* devices.

The *Bluetooth*® word mark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such marks by BenQ Corp. is under license. Other trademarks and trade names are those of their respective owners.

Turning *Bluetooth*® function on

- Select   in **CommManager** to activate *Bluetooth* function and turn on visibility.
- In **Start > System > Settings > Connections > Bluetooth**, press  (Menu) and select **Turn On Bluetooth**.

 
 is displayed when *Bluetooth* function is turned on.

Turning *Bluetooth*® function off

- Select   in **CommManager** to deactivate *Bluetooth* function.
- Press  (Menu) in **Bluetooth** and select **Turn off Bluetooth**.


 

Making the phone visible

To make the phone discoverable and enable it to be found by other *Bluetooth* devices, you need to set the visibility of your phone.

Press  (Menu) and then select **Turn On Visibility**.

When your phone is set to be invisible, your phone can still pair with other *Bluetooth* devices but can't be found by them.

Creating a *Bluetooth* connection

1. Turn on *Bluetooth* function and set the phone to be visible as instructed in "Turning Bluetooth® function on" on page 60.
2. Select **Add new device...** and confirm with .
3. The phone then begins searching for other *Bluetooth* devices. Search again by pressing  (Menu) and select **Refresh**.
4. A list of available devices is displayed. Select a device and confirm with .
5. When asked for permission to connect to the device, enter the passcode for the device, both in the phone and in the device that you are connecting to.
6. When the passcode is accepted, the device is paired. The *Bluetooth* connection is established automatically. The name of the paired device is displayed. You can rename it immediately or later in **Menu > Edit**.

- The passcode is device-dependent. Please refer to the documentation of the *Bluetooth* device for the passcode.
- You can create a default passcode for *Bluetooth* connection. Go to **Start > System > Settings > Connections > Bluetooth Profiles > Security**.

Using a *Bluetooth* stereo headset

Your phone supports Advanced Audio Distribution Profile (A2DP) which sends a stereo audio stream (such as music) to a *Bluetooth* stereo headset.

1. Turn on your *Bluetooth* stereo headset.
2. Pair the headset with your phone (see "Creating a Bluetooth connection" on page 61 for details). Follow the on-screen instructions to complete the procedure.

- If you answer an incoming call from the paired *Bluetooth* headset, the caller's voice is transmitted to the headset directly. If you answer the incoming call from your phone, and decide to switch to the headset, select **Menu > Turn Hands-free on**.
- If the music is not transmitted to the *Bluetooth* headset after pairing, go to **Start > System > Settings > Connections > Bluetooth > Menu > Set as Wireless Stereo** to make the connection again.

Sending a file by *Bluetooth* technology

You can use the *Bluetooth* connection for sending files to another *Bluetooth* device.

1. Turn on the *Bluetooth* function on both your smartphone and the remote device you are sending the file to.

2. Select **Beam...** from the menu options of the file.

If you are sending an image file in either *.jpeg, *.gif, *.png, or *.bmp format, and the remote device supports BIP (Basic Image Profile) service, select **Send Image via Bluetooth**. The imaging data will then be transmitted and is possible to be received and displayed as a thumbnail if requested by the remote device.


3. A list of the once connected devices is displayed.
4. Select a device and confirm with



If you select **Send Image via Bluetooth** to send the image file but the remote device does not have BIP service, an error message will pop up in your phone.

Printing via *Bluetooth* technology

Many of the files can be printed out via a *Bluetooth* printer.

1. Pair a *Bluetooth* printer with your phone.
2. Check to select **Basic Printing**, and confirm with  (Done).
3. To configure the connection, go to **Start > System > Settings > Connections > Bluetooth Profiles > Printer**.


 
 
4. Select **Print via Bluetooth** from the menu options of the file you intend to print.

 
Changing the name of your phone

The name of your phone will be transmitted in a *Bluetooth* connection. You can rename the phone in **Start > System > Settings > Connections > Bluetooth Profiles > Bluetooth Optional > Bluetooth Device Name**.

Operating files on other *Bluetooth* devices

Your phone supports data transfer via *Bluetooth* connection as well as file operation between your phone and another *Bluetooth* enabled device.

1. To enable file exchange service via *Bluetooth* technology, select a paired device from the *Bluetooth* device list in **Start > System > Settings > Connections > Bluetooth**.
2. Select  (Next) to proceed if you do not intend to change the name.
3. Check to select **OBEX File Transfer**, and confirm with  (Done).
4. Go to **Start > System > File Explorer**, and select  (Up).
5. Scroll to **Bluetooth Neighbourhood** and select a paired *Bluetooth* device that you want to explore.

6. You are now accessing the default root directory on the selected *Bluetooth* device for remote file exchange service. Select  (Up) to go to the upper directory. Browse different folders stored on the selected device to locate the desired file. You can view or edit the file from your phone directly, or beam the selected file to another *Bluetooth* device. For more options, select **Menu**.

- The remote *Bluetooth* device needs to have FTP server service in order to support remote file exchange service. You can tell whether the selected *Bluetooth* device has FTP server service by the availability of **OBEX File Transfer** in step 3.
- To change the root directory where the remote device can access in your smartphone for remote file exchange service, change the path in **Start > System > Settings > Connections > Bluetooth Profiles > File transfer**.

Dial-up

Dial-up creates a modem-to-modem link by using a modem to connect to the computer and a telephone line to dial into the ISP's node. When using the dial-up access for network connection, you are charged for the length of time that you are connected to the Internet.

Contact your ISP for details on the settings.

GPRS

A General Packet Radio Service (GPRS) offers high-speed data transfer. When using a GPRS access, you are charged for the amount of information you view, download, or send when you are connected to the Internet.

Contact your internet service provider for details on the settings.

Proxy

If proxy server settings are needed, contact your ISP or network administrator for the proxy server name, server type, port, type of Socks protocol used, and your user name and password.

VPN

With a Virtual Private Network (VPN) connection, you can connect to a server in your corporate network via the Internet.

Contact your network administrator for details on the settings.

Wi-Fi

 
Wi-Fi lets your phone connect to the Internet, your VPN, or another WLAN-enabled device via a wireless access point.






Turning Wi-Fi on

- Select **Start > System > Settings > Connections > Wi-Fi > Menu > Turn On Wi-Fi**.
- Select  in **CommManager**.

Your phone will automatically try to detect what wireless networks are available in the surrounding areas. If any are found, a list of available networks will be displayed.


 
Connecting to an existing wireless network

1. Turn your Wi-Fi on as instructed in "Turning Wi-Fi on" on page 64.
2. Select the network you wish to connect to in the list of available networks.
3. Select whether the wireless network connects to the Internet or your work (office) network.
4. Press  (**Connect**) (and follow the instructions required by the network) to complete connection.

-  shows beside a network that requires user ID, password, and authentication.
-  shows beside a free public network.
-  shows beside the network that is unavailable temporarily.
-  shows beside an ad-hoc connection.
-  shows beside an ad-hoc connection that is unavailable temporarily.

Adding a new wireless network

You can add a new wireless network to the listbox.

1. Turn your Wi-Fi on as instructed in "Turning Wi-Fi on" on page 64.
2. Select **New** in **Wi-Fi**.
3. Enter a name in **Network name**.
4. Select where this new network will connect to (**Internet** or **Private/Work Network**) in **Network type**.
5. If you want to connect to an ad-hoc connection, check **This is a device to device (ad-hoc) connection**. And then press  (**Next**) to proceed.
6. If authentication information is needed, check with your network administrator to obtain the setting values for your specific network.
7. Contact your network administrator to obtain the network key.
8. Complete the setting with  (**Finish**).



USB to PC

This option determines whether to enable advanced network functionality when connecting to a PC by ActiveSync® (Windows® XP) or Windows Mobile Device Center (Windows Vista®).

Questions & Answers

- If you encounter problems while using the phone, or if it performs erratically, you can consult the information in the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.
- Do not attempt to disassemble the phone by yourself. There are no user serviceable parts inside.

Problem	Possible causes	Possible solution
Call-related problems		
SIM card error.	SIM card malfunction or damage.	Take the SIM card to your service provider for testing.
	SIM card inserted improperly.	Insert the SIM card properly.
	Dirt on the SIM card contacts.	Use a soft, dry cloth to clean the SIM card contacts.
Poor reception.	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
You cannot make outgoing calls.	The SIM card is not installed.	Install a valid SIM card.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
	Your phone mode is switched off.	Activate the phone mode in CommManager . See "CommManager" on page 51.
	You have activated the Call Barring feature.	Go to Start > System > Settings > Phone > Call Barring , and then set Block outgoing calls to Off .
You have activated the Fixed Dialling feature.	Go to Start > System > Settings > Phone > Fixed Dialling and uncheck Enable Fixed Dialling to turn this feature off.	

Problem	Possible causes	Possible solution
You cannot answer incoming calls.	The SIM card is not installed. Poor signal. Your phone mode is switched off. You have activated the Call Barring feature.	Install a valid SIM card. Move to an open space, or if you are inside a building, move closer to a window. Activate the phone mode in CommManager . See "CommManager" on page 51. Go to Start > System > Settings > Phone > Call Barring , and then set Block incoming calls to Off .
Echo or noise.	Poor network trunk quality on the part of your service provider. Poor local telephone line quality.	Press  and dial again. You may be switched to a better-quality network trunk or phone line. Press  and dial again. You may be switched to a better-quality network trunk or phone line.
Noises during a call.	You may be near a strong electromagnetic source (such as a TC, a microwave oven, etc) during a call.	Move to another location to reduce the interference effects.
Echoes when using a VoIP phone.	Signal reception is not good.	Try using VoIP in a more open space or with earphones to get the best reception and quality.
Unable to select certain features.	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
PIN Code is blocked.	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card.
System problems		
Battery will not charge.	Poor contact between the battery and charger. The phone's temperature is below 0 °C or higher than 45 °C. The battery or battery charger is damaged.	Check all connectors to make sure all connections have been properly made. Adjust the battery charging environment to avoid extremes of temperature. Contact the dealer.
Unable to turn the phone on.	Battery power has been depleted. Battery contact terminals are not clean.	Recharge the phone's battery. Seek your dealer's help to clean the terminals.

Problem	Possible causes	Possible solution
Shortened standby time.	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signalling is weak, temporarily switch off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.

Message problems

Unable to send or receive text messages.	Your phone mode is switched off.	Activate the phone mode in CommManager . See "CommManager" on page 51.
	The signal strength is not strong enough.	Try moving to a different location to obtain better signal reception.
Unable to send or receive multimedia messages.	Your phone mode is switched off.	Activate the phone mode in CommManager . See "CommManager" on page 51.
	No MMS service is available.	Subscribe to the MMS service from your network service provider.
	Your MMS setting has not been configured properly.	Check your network connection, and confirm with your network service provider if your MMS setting has been configured correctly.
	No enough space is left on your phone memory.	Check if there is enough space on your phone memory. Delete some files if necessary.
Unable to send or receive e-mail.	The Internet connection or the e-mail setting is not configured properly.	Check your network connection, and confirm with your e-mail service provider if your e-mail setting has been configured correctly.

Problem	Possible causes	Possible solution
Internet problems		
Unable to connect to the network.	SIM card invalid.	Contact your service provider, or see "Connectivity" on page 60.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space or if you are inside a building, move closer to a window.
Connection problems		
Unable to connect the smartphone to PC using the data cable.	The smartphone is not turned on.	Turn on the phone. See "Switching the phone on/off" on page 16.
	ActiveSync® is not installed.	Use the Companion CD containing to install the program. See "Installing ActiveSync® on PC" on page 52.
	Data cable is damaged.	Contact the dealer.
ActiveSync® Problems		
Unable to run ActiveSync® or connection fails.	ActiveSync® (Windows® XP or Device Center (Windows Vista®) is not installed properly.	Make sure ActiveSync® is properly installed and related settings are correct.
	Data cable is damaged.	Contact the dealer.
	PC System is not stable.	Restart your PC system.
	Connection is not stable.	Go to Start > System > Settings > Connections > USB to PC and uncheck Enable advanced network functionality . Or disable the virus protection program and/or the firewall on the PC.
Unable to synchronise data.	Windows Vista® requires Windows Mobile Device Center.	Make sure Windows Mobile Device Center, which is available on your Companion CD, is properly installed.
	No data type is selected.	Make sure at least one data type is selected. For Windows® XP users, click Tools: Options on the computer. For Windows Vista® users, click Mobile Device Settings > Change content sync settings on the computer.
	The data cable is not connected properly.	Check the data cable connection, and if the data cable is damaged.

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Once your phone becomes wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.

- The phone has better protection against splashes, dust and knocks if the supplied seals are used.

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only original batteries.

Display quality statement

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Hereby, BenQ Corporation, declares that this T80 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The relevant Declaration of Conformance (DoC) has been signed. Please call the company hotline or visit the BenQ regional website if you require a copy of the original.

C€0682

Lost phone

If you lose your phone or SIM card, contact your service provider immediately to prevent misuse.

SAR

European Union (R&TTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE /
SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL
GUIDELINES FOR EXPOSURE TO RADIO
WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was 0.485 W/kg¹. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, a separation distance of 1.5 cm is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

1 The tests are carried out in accordance with international guidelines for testing.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the website of the World Health Organization (www.who.int/emf).

MICROSOFT SOFTWARE LICENSE TERMS

(FOR WINDOWS MOBILE 6 SOFTWARE)

These license terms are an agreement between you and BenQ Corporation ("BenQ"). Please read them. They apply to the software included on this device. The software also includes any separate media on which you received the software.

The software on this device includes software licensed by BenQ from Microsoft Corporation or its affiliate.

The terms also apply to any

- updates,
- supplements,
- Internet-based services, and
- support services

for this software, unless other terms accompany those items. If so, those terms apply.

As described below, using some features also operates as your consent to the transmission of certain standard computer information for Internet-based services.

By using the software, including use on this device, you accept these terms. If you do not accept them, do not use the device or software. Instead, contact BenQ to determine its return policy for a refund or credit.

WARNING!

If the software contains voice operated technologies, then operating this software requires user attention. Diverting attention away from the road while driving can possibly cause an accident or other serious consequence. Even occasional, short diversions of attention can be dangerous if your attention is diverted away from your driving task at a critical time. BenQ and Microsoft make no representations, warranties or other determinations that ANY use of this software is legal, safe, or in any manner recommended or intended while driving or otherwise operating a motor vehicle.

If you comply with these license terms, you have the rights below.

1. **USE RIGHTS.** You may use the software on the device with which you acquired the software.
2. **ADDITIONAL LICENSING REQUIREMENTS AND/OR USE RIGHTS.**
 - a. **Specific Use.** BenQ designed this device for a specific use. You may only use the software for that use.
 - b. **Included Microsoft Programs and Additional Required Licenses.** Except as provided below, these license terms apply to all Microsoft programs included with the software. If the license terms with any of those programs give you other rights that do not expressly conflict with these license terms, you also have those rights.

This agreement does not grant you any rights with respect to the Windows Mobile Device Center, Microsoft ActiveSync or Microsoft Outlook 2007 Trial which are subject to the licenses accompanying those items.
 - c. **Speech Recognition.** If the software includes speech recognition component(s), you understand that speech recognition is an

inherently statistical process and that recognition errors are inherent in the process. Neither BenQ nor Microsoft or their suppliers shall be liable for any damages arising out of errors in the speech recognition process.

d. Phone Functionality. If the device software includes phone functionality, all or certain portions of the device software may be inoperable if you do not have and maintain a service account with a wireless telecommunication carrier ("Mobile Operator"), or if the Mobile Operator's network is not operating or configured to operate with the device.

3. SCOPE OF LICENSE. The software is licensed, not sold. This agreement only gives you some rights to use the software. BenQ and Microsoft reserve all other rights. Unless applicable law gives you more rights despite this limitation, you may use the software only as expressly permitted in this agreement. In doing so, you must comply with any technical limitations in the software that allow you to use it only in certain ways. You may not:

- work around any technical limitations in the software;
- reverse engineer, decompile or disassemble the software;
- make more copies of the software than specified in this agreement;
- publish the software for others to copy;
- rent, lease or lend the software;
- use the software for commercial software hosting services.

Except as expressly provided in this agreement, rights to access the software on this device do not give you any right to implement Microsoft patents or other Microsoft intellectual property in software or devices that access this device.

You may use remote access technologies in the software such as Remote Desktop Mobile to access the software remotely from a computer or server. You are responsible for obtaining

any licenses required for use of the protocols to access other software.

4. INTERNET-BASED SERVICES.

Microsoft provides Internet-based services with the software. Microsoft may change or cancel them at any time.

a. Consent for Internet-Based Services. The software features described below connect to Microsoft or service provider computer systems over the Internet. In some cases, you will not receive a separate notice when they connect. You may switch off some of these features or not use them. For more information about these features, visit <http://go.microsoft.com/fwlink/?LinkId=8193>

1. By using these features, you consent to the transmission of this information. Microsoft does not use the information to identify or contact you.

Device Information. The following features use Internet protocols, which send to the appropriate systems device information, such as your Internet protocol address, the type of operating system, browser and name and version of the software you are using, and the language code of the device where you installed the software. Microsoft uses this information to make the Internet-based services available to you.

- *Windows Mobile Update Feature.* The Windows Mobile Update feature provides you the ability to obtain and install software updates on your device if updates are available. You may choose not to use this feature. BenQ and/or your Mobile Operator may not support this feature or an update for your device.
- *Windows Media Digital Rights Management.* Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This software and third party software use WMDRM to play

and copy WMDRM-protected content. If the software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect other content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. Microsoft software that includes WMDRM will ask for your consent prior to the upgrade. If you decline an upgrade, you will not be able to access content that requires the upgrade.

b. Misuse of Internet-based Services. You may not use these services in any way that could harm them or impair anyone else's use of them. You may not use the services to try to gain unauthorized access to any service, data, account or network by any means.

5. NOTICES ABOUT THE MPEG-4 VISUAL STANDARD. The software may include MPEG-4 visual decoding technology. This technology is a format for data compression of video information. MPEG LA, L.L.C. requires this notice:

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG 4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions about the MPEG-4 visual standard, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, CO 80206; www.mpegla.com.

6. DIGITAL CERTIFICATES. The software uses digital certificates in X.509 format. These digital certificates are used for authentication.

7. CONNECTIVITY SOFTWARE. Your device package may include Windows Mobile Device Center or Microsoft ActiveSync software. If it is included, then you may install and use it in accordance with the license terms that are provided with it. If no license terms are provided, then you may install and use only one (1) copy of the software on a single computer.

8. NETWORK ACCESS. If you are using a network, such as an employer network, the network administrator may limit features or functionality on your device.

9. PRODUCT SUPPORT. Contact BenQ for support options. Refer to the support number provided with the device.

10. LINKS TO THIRD PARTY WEBSITES. If the software provides links to third party websites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party website by Microsoft.

11. BACKUP COPY. You may make one backup copy of the software. You may use it only to reinstall the software on the device.

12. PROOF OF LICENSE. If you acquired the software on the device, or on a disc or other media, a genuine Certificate of Authenticity label with a genuine copy of the software identifies licensed software. To be valid, this label must be affixed to the device, or included on or in BenQ software packaging. If you receive the label separately, it is not valid. You should keep the label on the device or packaging to prove that you are licensed to use the software. To identify genuine Microsoft software, see <http://www.howtotell.com>.

13. TRANSFER TO A THIRD PARTY. You may transfer the software only with the device, the Certificate of Authenticity label, and these

license terms directly to a third party. Before the transfer, that party must agree that these license terms apply to the transfer and use of the software. You may not retain any copies of the software including the backup copy.

14. **NOT FAULT TOLERANT.** The software is not fault tolerant. BenQ installed the software on the device and is responsible for how it operates on the device.

15. **RESTRICTED USE.** The Microsoft software was designed for systems that do not require fail-safe performance. You may not use the Microsoft software in any device or system in which a malfunction of the software would result in foreseeable risk of injury or death to any person. This includes operation of nuclear facilities, aircraft navigation or communication systems and air traffic control.

16. **NO WARRANTIES FOR THE SOFTWARE.** The software is provided "as is". You bear all risks of using it. Microsoft gives no express warranties, guarantees or conditions. Any warranties you receive regarding the device or the software do not originate from, and are not binding on, Microsoft or its affiliates. When allowed by your local laws, BenQ and Microsoft exclude implied warranties of merchantability, fitness for a particular purpose and non-infringement.

17. **LIABILITY LIMITATIONS.** You can recover from Microsoft and its affiliates only direct damages up to fifty U.S. Dollars (U.S. \$50.00), or equivalent in local currency. You cannot recover any other damages, including consequential, lost profits, special, indirect or incidental damages.

This limitation applies to:

- anything related to the software, services, content (including code) on third party internet sites, or third party programs, and
- claims for breach of contract, breach of warranty, guarantee or condition, strict

liability, negligence, or other tort to the extent permitted by applicable law.

It also applies even if Microsoft should have been aware of the possibility of the damages. The above limitation may not apply to you because your country may not allow the exclusion or limitation of incidental, consequential or other damages.

18. **EXPORT RESTRICTIONS.** The software is subject to United States export laws and regulations. You must comply with all domestic and international export laws and regulations that apply to the software. These laws include restrictions on destinations, end users and end use. For additional information, see www.microsoft.com/exporting.

License Agreement

This License Agreement ("Agreement") is between You and BenQ Corporation ("BenQ"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from BenQ Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if BenQ or any licensor of BenQ ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, BenQ and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related BenQ or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from BenQ Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including

proprietary rights therein, are owned by BenQ, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of BenQ, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** BenQ grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

- You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.
- You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.
- You may not sublicense, rent or lease the Licensed Software.
- You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is

expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY BENQ, MAY VIOLATE U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by BenQ. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER BENQ NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS,

COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY BENQ OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND BENQ AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A BENQ REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of BenQ other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL BENQ, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF BENQ IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO

THE EXTENT BENQ'S LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. BenQ and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and BenQ or the applicable Licensor.

BenQ and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. APPLICABLE LAW AND FORUM. The laws of Taiwan govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Taipei, Taiwan shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

13. MISCELLANEOUS. This Agreement represents the entire agreement between You and BenQ relating to the Licensed Software and (i) supersedes all prior or

contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License.

Notwithstanding the foregoing, some products of BenQ may require You to agree to additional terms through an on-line "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, BenQ and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.