

Tailgate Wireless Speaker

User's Guide for Model ISB665 v1327-01



Important Safety Instructions

- Read these Instructions.
- All instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT IN WALL OUTLET. DO NOT USE PLUG WITH NARROW BLADE IN A SOCKET WITH ROUND HOLE.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- AVIS: Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou l'humidité ou aux éclaboussures.
- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- AVIS: L'utilisation de commandes ou d'exécution de procédures autres que celles spécifiées ici peuvent aboutir à une exposition à des radiations dangereuses.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- AVIS: Des changements ou des modifications sur ce produit non expressément approuvés par la partie responsable de la conformité peut annuler le droit de l'utilisateur d'utiliser cet équipement.
- WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- AVIS: Ne placez pas cette unité directement sur des surfaces de meubles dont la finition sera douce, poreuse ou sensible. Car, comme tout composé caoutchouc à base d'huiles, les pieds pourraient laisser des traces ou des taches à l'endroit où ils sont posés. Nous recommandons d'utiliser une protection comme un linge ou un morceau de verre entre l'unité et la surface pour réduire les risques de dégât et/ou de tache.
- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as may be the case.
- AVIS: L'utilisation de cette unité en présence de lampes fluorescentes peut causer des interférences lors de l'utilisation de la télécommande. En cas de dysfonctionnement, éteignez les sources de lumière fluorescentes, car celles-ci pourraient en être la cause.
- WARNING: Shock hazard - Do Not Open.
- AVIS: Risque de choc électrique - ne pas ouvrir
- Caution and marking information is located at rear or bottom of the apparatus.
- Attention et de marquage des informations est situé sur le panneau arrière ou inférieur de l'unité.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Objets remplis de liquides, tels que les vases, doivent pas être placés sur l'appareil.
- Main plug is used as disconnected device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur est utilisée pour déconnecter le système. La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- Gardez les piles neuves et d'occasion à l'occasion des enfants. Si le compartiment de la batterie ne pas fermer correctement, cesser d'utiliser le produit et garder loin des enfants.

- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Si vous pensez que les batteries peuvent avoir été avalé ou placé à l'intérieur d'une partie du corps, consulter immédiatement un médecin.
- Lead-acid Battery Warning:
- NOTE: Unit must be charged for a minimum of 8 hours before initial use.
- CAUTION: Lead acid batteries must be charged at least every 3 months, especially in a warm environment. Leaving a battery in a discharged state, or not recharging every 3 months, may result in permanent battery damage. **The Power switch should be in the OFF position to recharge the internal Lead acid battery.**
- Batteries should be recycled or disposed of as per state and local guidelines.
- Piles doivent être recyclées ou éliminées selon les directives étatiques et locales.



 
WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

FEATURES & CONTROLS

FEATURES

- Supports Bluetooth and automatic device reconnecting
- Wireless range: 60 feet
- Digital FM radio (PLL)
- Up to 20 memory presets
- Built-in FM radio antenna
- Aux in (3.5mm audio input)
- Microphone input
- Bass/Echo/Treble control
- Microphone volume control
- Master volume control
- LED light effects
- Skate wheels and retractable carry/pull handle
- Built-in 12V/2AH sealed lead-acid battery
- Battery life: approx. 5.5 hours at 50% volume

INCLUDES

- Microphone
- AC/DC Power adapter

Control Panel (front)

Source
Press to set the source between BT, FM, and Aux.


Scan
Press & hold to search all the available stations.

Lights
Press to power and cycle between the lights flashing, pause, or off.

LED Display
Low Battery Indicator
Battery Charging Indicator

Skip/Search/Tun +/-
Press to skip between tracks.
In FM mode, press to cycle through memory presets.

Pair/Play/Pause/Scan
Press and hold to begin pairing to a Bluetooth device
Press to Play/Pause an audio track.

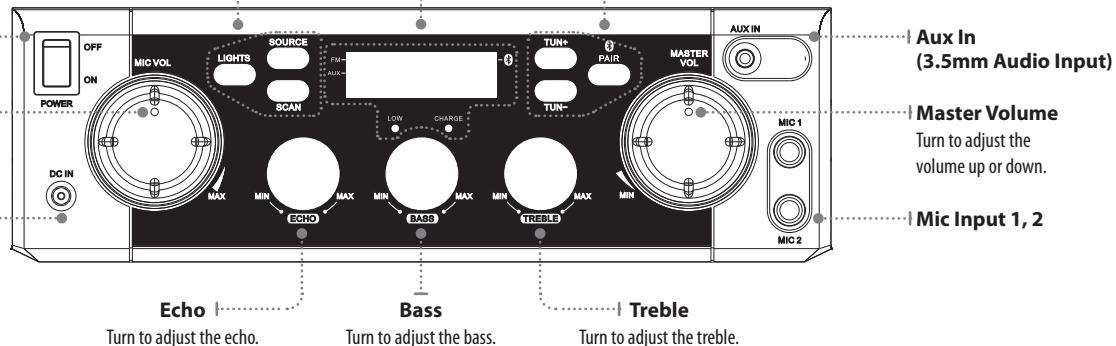

Power | Press to power the unit on or off.

Mic Volume | Press to adjust the microphone volume.

DC Power Input |

Echo | Turn to adjust the echo.

Bass | Turn to adjust the bass.

Treble | Turn to adjust the treble.

Aux In (3.5mm Audio Input) |

Master Volume | Turn to adjust the volume up or down.

Mic Input 1, 2 |

POWER & CHARGING


Requires an AC/DC power adapter (included).

1. Using the included power adapter, plug the adapter into a standard wall outlet and the DC Power Input on the speaker.

When the battery is charging, the **Charging Indicator** on the front of the unit **will display solid red**.

When the battery is fully charged, the **Charging Indicator** will turn green.

When the battery is at 10% power, the **Low Battery Indicator** will flash red.

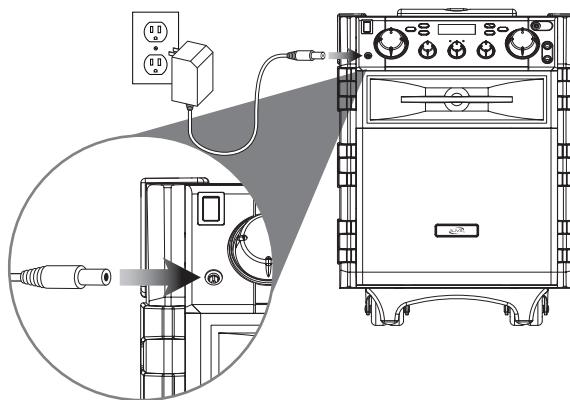

BLUETOOTH

Pairing to a Device and Playing Audio

1. Press the **Power Switch** to power the unit on.
*The **Pairing Indicator (bt)** on the LED display will **flash red**.*
2. Press and hold the **Pair/Play/Pause button** to begin pairing.
*The **Pairing Indicator (bt)** on the LED display will begin **flashing quickly**. When pairing, remain within 3 feet of the unit.*
3. Using the controls on your Bluetooth device, scan for and select **ISB665** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0 0 0 0**.
Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
4. When successfully paired, the **Pairing Indicator (bt)** on the LED display will stop flashing and an audible chime will sound through the speaker.
5. Use the controls on the connected device to select an audio track.
6. Audio played through the connected Bluetooth device will now be heard through the speaker. Use controls on the unit or your device to play, pause, and change the volume.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.

FM RADIO/SCAN/MEMORY PRESETS

This unit features an internal FM radio antenna. To improve radio reception, adjust the position of the unit.

Storing Memory Presets

1. Press **Source** to select **FM mode**.
2. Press & Hold **Scan** for 2 to 3 seconds. The unit will automatically search and store all available stations (P01-P20).

Tuning to a Memory Preset

1. Press the **Tun +/-** buttons to select from **P01 to P20**.

Tuning Manually


1. To tune a specific station, press **Scan** once. *The display will begin **flashing**.*
2. Press **Tun +/-** to tune the station manually.

AUX IN

Using Aux In (3.5mm Audio Input)

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In** on the unit and the **audio output/headphone jack** on a media player.
2. Power on the unit and press the **Source** button to select **AUX**.
3. Use the controls on the connected device to select and play audio.

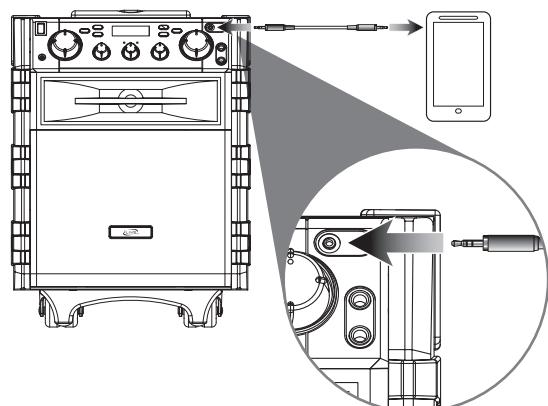

LIGHTS

1. To turn on the lights, press the **Lights** button. *The lights will automatically begin cycling through colors.*
2. To pause the lights, press the **Lights** button once. Press again to power off.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

Copyright © 2015 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

