

Dear Customer,

Thank you for choosing "YAKOYA S1" color screen GSM/GPRS digital phone.

This is a GSM/GPRS phone. In addition to common call functions, it also provides you with a variety of practical functions including phone book, 64-chord ring, ringing or image alert for incoming calls, MP3 player, recorder, calculator, timed power on/off, handsfree call, JAVA, WIFI. With this manual, you can acquire a full understanding of the usage of this phone. Our company reserves the right to revise contents in this manual without any prior notice.

CONTENT

ATTENTION AND PRECAUTIONS.....	4
1 SAFETY PRECAUTIONS.....	4
1.1 Road safety comes first.....	4
1.2 Switch off your phone in hospitals.....	4
1.3 Switch off your phone in aircrafts.....	4
1.4 Switch off your phone when refuelling.....	4
1.5 Switch off your phone when close to blasting area.....	4
2 PRECAUTIONS WHEN USING PHONE.....	4
2.1 Interference.....	4
2.2 Use sensibly.....	4
2.3 Use qualified servicing.....	4
2.4 Waterproof.....	4
2.5 Emergency calls.....	4
3 PRECAUTIONS WHEN USING BATTERIES.....	5
4 PRECAUTIONS FOR CHILDREN.....	5
5. KEYPAD DEFINITION.....	5
6. BASIC FUNCTION.....	6
1.MENU FUNCTION.....	6
1.1 Idlescreen function.....	6
1.2 Usage of menu function.....	6
Exit the Menu.....	6
2. DETAIL OF FUNCTION MENU.....	6
2.1 Call center.....	6
2.2.1 Call history.....	6
2.2.2 Call Settings.....	7
2.2 Phonebook.....	8
2.3 Dialing.....	8
2.4 Messaging.....	8
2.4.1 Write message.....	9
2.4.2 Inbox.....	9
2.4.3 Drafts.....	10
2.4.4 Outbox.....	10
2.4.5 MMS (Multimedia Message Service).....	11

2.4.6 Email.....	11
2.4.7 SMS settings.....	12
2.4.8 Template.....	12
2.4.9 Broadcast Message.....	12
2.5 Multimedia.....	13
2.5.1 Camera.....	13
2.5.2 Image viewer.....	13
2.5.3 Video Player.....	14
2.5.4 Video record.....	14
2.5.5 Audio Player.....	14
2.5.6 FM Radio.....	15
2.5.7 Sound record.....	15
2.5.8 Schedule FM Record.....	16
2.5.9 Slide Show.....	16
2.6 Settings.....	16
2.6.1 Dual SIM settings.....	16
2.6.2 Phone setup.....	16
2.6.3 Display.....	16
2.6.4 Number location.....	17
2.6.5 Network setup.....	17
2.6.6 Security settings.....	17
2.6.7 Sound effects.....	18
2.6.8 Pen calibration.....	18
2.6.9 Restore factory setting.....	18
2.7 Java.....	18
2.8 User Profiles.....	18
2.9 Organizer.....	19
2.10 File Manager.....	21
2.11 Connectivity.....	21
2.12 WIFI.....	23
2.13 Games.....	23
2.14 Other Applications.....	23
7 Common Problems & Troubleshooting.....	24
8 Device Specifications.....	26

ATTENTION AND PRECAUTIONS

Please read these brief rules. Violation of these rules might cause danger or break laws.

1. SAFETY PRECAUTIONS

1.1 Road safety comes first

When driving, care must be taken for using phone; if driving conditions are poor, please pull up at road side to use phone.

1.2 Switch off your phone in hospitals

Please abide by relevant regulations or rules. Please switch off when close to medical equipment.

1.3 Switch off your phone in aircrafts

Wireless phones can cause interference. Using phones in aircraft is both dangerous and illegal.

1.4 Switch off your phone when refueling

Do not use the phone at a refueling station or near fuels or chemicals.

1.5 Switch off your phone when close to blasting area

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “turn off two-way radio”. Obey all signs and instructions.

2. PRECAUTIONS WHEN USING PHONE

2.1 Interference

All phones are subject to interference, which will affect their performance.

2.2 Use sensibly

Use phone only in its normal position. Please do not touch antenna area unless necessary.

2.3 Use qualified servicing

Only qualified maintenance staff can assemble or repair the equipment.

2.4 Waterproof

Your phone is not waterproof, please keep it dry.

2.5 Emergency calls

Make sure the phone is switched on and in service. Input emergency service number and press Dial key, give your location and do not end

the call until told to do so.

3. PRECAUTIONS WHEN USING BATTERIES

3.1 Keep the batteries away from fire; do not dispose of batteries in a fire lest there should be danger.

3.2 Do not dispose of used batteries in rubbish, and they should be sent to designated recycling center.

4. PRECAUTIONS FOR CHILDREN

Keep the phone out of the reach of children, lest children treat it as toy and cause personal injury.

5. KEYPAD DEFINITION



The general keypad is defined as follows. For keyboard definitions of specific input method,

Left Soft Key: Usually means OK.

Right Soft Key: Usually means exit or cancel.

Trackball: Usually use for cursor move and selection.

Dial key: Have two dial keys; SIM1 dial key and SIM2 dial key

Camera Key: This phone has a key for taking a photo at the side of phone

Home key: Usually use to enter main menu, except special situation.

6. BASIC FUNCTION

1. Menu function

1.1 Idle screen function:

On the Idle screen, there are some interaction function, you can touch the monkey on the left to slip the function out of the screen you like, or slip the function you do not like inside it. Also you can touch the screen to feed the fish and so on.

1.2 Usage of menu function:

- Enter the Function main menu by pressing **HOME** key.
- In the main menu, you can slip the screen or roll the trackball to scroll to the function you need, with pressing **Left Soft Key or Trackball** to enter the function and pressing **Right Soft Key** to quit the main menu. In any submenu, roll trackball to scroll to the function you need, with pressing **Left Soft Key or Trackball** to enter the function and pressing **Right Soft Key** to quit current menu.

Exit the Menu

Generally, you can press the **Right Soft Key** to exit any menu in function menus. Press the **End Key** to back to the standby screen.

2. Detail of Function Menu

2.1 Call center

Enter call center submenu, SIM1 or SIM2 can be choose and changed settings.

2.1.1. Call history

Your phone can store the latest calls missed, calls received, and calls dialed, 20 entries for each, and you can view these records through menu.

- Enter the submenu **Missed Calls** to view the missed call list by pressing **OK or Trackball**.
- Enter the submenu **Received Calls** to view the received call list by pressing **OK or Trackball**.

-
- Enter the submenu **Dialed Calls** to view the dialed call list by pressing **OK or Trackball**.

In the call record list interface, press **Trackball** to view the details of the record, including number, starting time and date of the call.

In the call record list interface, press **Options** to practice the following operations on the piece of record selected:

View: view the details of the record.

Call: Dial the phone number

Send text message: Go to the Write Message to create a message and then can be sent to the current number.

Send multimedia message: Go to the Write Message to create a multimedia message and then can be sent to the current number.

Save to Phonebook: Save the number in the SIM card or the handset.

Add to Blacklist: to add the selected phone number to the incoming blacklist.

Edit before call: Edit the current number before making a call.

Delete: Delete this record.

- Enter submenu **Delete call log** to delete the call history.
- **Auxiliary Menus:** In call record, your mobile phone is with functions like saving call timing, cost calculating and counting.

2.1.2 Call Settings:

- **SIM1/SIM2 Call settings:** To set options like **Call ID, Call waiting, Call divert, Call barring, Line switching** for all calls.
- **Advanced settings:** You can set the call volume to you desired level, set the blacklist numbers for non-wanted incoming calls, set background sound which will play which making a call, set the call reject message which will be sent to a rejected call number, also you can set other common options in this menu.
- **Call Vibrate Settings:** to set the vibration option to ON/OFF when you make a call and the other party open.

2.2 Phonebook

You can store the names, mobile phone numbers and other name-card information of important persons in your phonebook. Choose the **Phone Book** in the main menu to enter the phone book.

- **Quick search:** In the phonebook menu, you can quickly search for a contact.
- **Add new contact:** Add a new item of record to the phonebook. You can choose to save in Phone or SIM card.
- **Option:** Press left soft key to enter to option, you have many items you can set: View, Edit, Delete, Phonebook settings, Send text message, Send multimedia message, Call, IP dial, Copy, Move, Import phonebook, Export phonebook, Delete all contact, Copy contact, Move Contact, Send Contact, Add to Blacklist, Mark Several, Print.

In the phonebook menu, you can touch the center SIM1/SIM2 call icons to quickly call the number.

2.3 Dialing

This menu is for making a call. Also you can save a number to your SIM or phone directly from here by pressing “Save”.

2.4 Messaging

If network supports and you have subscribed this service, you can freely send and receive short messages. When a new message is coming, your phone will ring (if ring function is activated) or vibrate (if vibration function is activated) to inform you of it and New Message will be indicated on the screen together with the number of the messages received. If you don't want to read it at once, the new messages will also be indicated in standby interface and automatically stored in the SIM card.

The number of messages that can be saved in the SIM card (including the messages received and those locally saved) relies on the capacity of the SIM card. Once the storage is full in the SIM card, “SIM card inbox is full” will be displayed on the screen.

To read new message, you may: enter the **Inbox** in submenu and press **Read** icon, or press the trackball to view the new message.

2.4.1 Write message

Enter this submenu to write a text message.

2.4.2 Inbox

- Enter this submenu to view the messages received; When viewing the message list of the **Inbox**, the date and time when the message was received and the name and number of the message sender will be displayed (if the number exists in the phonebook).
- Use trackball to move Up/Down to select the above message or the next one when viewing the message list.
- Press **Read** icon, or press the trackball to read the content of the message after the message list of the **Inbox** appears.
- Now you can practice following operations by pressing **Options**:
 - **Reply**: Send a message to the sender of the current message.
 - **Call Sender**: call the sender of the current message.
 - **Forward**: Send the message to another mobile phone
 - **Delete**: Delete the current message
 - **Delete All**: Delete all messages in inbox
 - **Save number**: if number of sender not already saved in the phonebook, you can save it to SIM or Phone memory.
 - **Mark several**: mark several messages to you can delete them, Copy or Move them from SIM to phone or vice versa.
 - **Mark as read/unread**: to mark the message as if read/unread message.
 - **Advanced**:
 - **Use Number**: Extract the number of the sender so that you can make a call, add to the phonebook or send SMS
 - **Use URL**: Extract URL from the message to connect to it via internet.
 - **Use Email**: Extract email from the message to save to the phonebook or to send email to.
 - **Copy**: Copy messages to phone/SIM from SIM/phone.

-
- **Move:** Move messages to phone/SIM from SIM/phone.
 - **Copy All:** Copy all messages to phone/SIM from SIM/phone
 - **Move All:** Move all messages to phone/SIM from SIM/phone

2.4.3 Drafts

To store edited messages without sending. You can practice following operations by pressing Options:

Send: To send current message.

Edit: To edit current message.

Delete: To delete current message.

Delete All: To delete all messages in the draft box.

Mark several: to mark several draft messages to delete, copy, or move them.

Advanced: to copy/ move draft to phone/SIM from SIM/phone, **or** copy all/ move all drafts to phone/SIM from SIM/phone.

2.4.4 Outbox

Save the sent message, and the message edited will be stored in the Outbox too.

- Enter **Outbox** to view the saved messages.
- Press **Read** icon, or press the trackball to read the content of the message when the message list of the **Outbox** appears.
- Now you can practice following operations by pressing **Options**:
 - **Resend:** Send this message to multi-numbers or to group from SIM1/SIM2.
 - **Forward:** Send the message to another mobile phone
 - **Edit:** Edit the current message.
 - **Delete:** Delete the current message
 - **Delete all:** Delete all messages in outbox
 - **Mark several:** mark several messages to you can delete them, Copy or Move them from SIM to phone or vice versa.
 - **Advanced:**
 - **Use Number:** Extract the number of the sender so that you can make a call, add to the phonebook or send SMS
 - **Use URL:** Extract URL from the message to connect to it

via internet.

- **Use Email:** Extract email from the message to save to the phonebook or to send email to.
- **Copy:** Copy messages to phone/SIM from SIM/phone.
- **Move:** Move messages to phone/SIM from SIM/phone.
- **Copy All:** Copy all messages to phone/SIM from SIM/phone
- **Move All:** Move all messages to phone/SIM from SIM/phone

2.4.5 MMS (Multimedia Message Service)

- **Writing Messages:** To create a multimedia message, you should input the Receiver, Duplicate, Confidential Duplicate, Subject and Content.
- **Inbox:** Enter this submenu to view the messages received.
- **Outbox:** Save the sent message and the message edited will be stored in the Outbox.
- **Drafts:** To store edited messages without sending.
- **Templates:** Some common templates used can be kept in Template to avoid repeated entering when sending messages.
- **MMS Settings:** set the MMS profiles, and common settings like (Compose, Send, Retrieve, and filter settings, also to know the memory status).

2.4.6 EMAIL

- Select EMAIL function to enter submenu, contain Items below: send & receive, write Email, Inbox, outbox, Sent, Draft, Clear mailbox, Delete marked emails, Email accounts, and templates. You must change settings before write or send Email.
- SIM card must be has activated GPRS before using Email function.
- SETUP Email setting:
 - Enter "EMAIL\ MAIL ACCOUNTS\ OPTIONS\ NEW ACCOUNT" MENU.
 - Enter "Email Address", Select protocol (POP3, or IMAP4), select data account, enter the Incoming server, enter the outgoing

server, enter username, then password, finally enter account name.

- After setup, activate mail account and enter “send and receive” or “create a new Email”, can send or receive Email.

2.4.7 SMS settings

You must set up necessary SMS information before using message functions.

- Access SMS Settings submenu.
 - **Profile Settings:** Select a proper profile. Each mode has Profile name, SMSC address, Validity period, and Message type.
 - **Voicemail server:** set your voicemail account’s name and number.
 - **Common Settings:** Select on/off of status of delivery report, reply path, or save sent message.
 - **Memory Status:** Check the status of occupied space in SIM card or handset.
 - **Preferred Storage:** Select handset or SIM card
- Set show style to mixed or divided.

2.4.8 Template

Some sentences commonly used can be kept in Template to avoid repeated entering when sending messages. Select Edit or Delete when finish entering.

2.4.9 Broadcast Message

- **Receive mode:** Select Enable to enter receiving mode, and Disable to reject cell broadcast.
- **Read message:** Enter this menu to read cell broadcast you have customized.
- **Languages:** To set the receiving language of cell broadcast.
- **Channel Settings:** To set channels of cell broadcast.

Note: Services of both Cell Broadcast and Voice Mailbox depend on the network provider, and please contact your network provider for details.

2.5 Multimedia

2.5.1 Camera

Press left soft key to enter camera preview (or use the Camera key from the idle screen) to enter Camera preview. By pressing left key “Options” you can see the following items:

- **Front Camera:** set the camera preview to front camera to ON or OFF.
- **Flash:** set the camera flash to ON or OFF.
- **Image hide setting:** to hide/unhide the settings on the camera preview.
- **Photos:** to open images list.
- **Camera Settings:** set the Shutter sound, Exposure value, Contrast, Anti-flicker, Delay time, Cont. shot.
- **White balance:** Available options including: auto, daylight, tungsten, fluorescent, cloudy and incandescent.
- **Scene mode:** You can select or close the night shot mode.
- **Effect settings:** You can select from a number of special effects.
- **Storage:** set the default storage to phone or to memory card.
- **Restore default:** Select this operation to resume the factory parameters of the camera.

2.5.2 Image Viewer:

The shot photos are stored in the image viewer. Use the trackball left/right to move between images, press the trackball to automatically move between images, By pressing left key “Options” you can see the following items:

- **Use as:** To use the image as wallpaper, Screen saver or Caller picture.
- **Send:** To transfer a photo to the desired application.
- **Print:** To Print the image via Bluetooth or PicBridge.
- **Edit:** To edit and resize the selected image.
- **Image information:** view detailed information about the selected image.
- **Settings:** to set the play speed to be (Slow, Medium, Fast)
- **Help:** see the full help about image viewer and its functions.

2.5.3 Video player

You can enjoy the video player provided by the mobile phone. After accessing to the video play function, you can carry out the following operations:

- **Play:** Play a designated video file.
- **Use as:** Set the current video to a caller video.
- **Send:** Transmitting the video file to Bluetooth or Email.
- **Rename:** Rename a selected video file.
- **Delete:** Delete a selected video file.
- **Delete all files:** Delete all the video files.
- **Sort by:** Arranging the sequence of all video files by name, type, time, size and none.
- **Storage:** set the default storage to phone or to memory card.

2.5.4 Video recorder:

Under the video shooting preview status, press up and down of trackball key to adjust the focal variation multiple (zooming), press left and right of the trackball to adjust the exposure compensation, and press the trackball to start shooting. After you enter the digital video function, press the left soft key to use the following operations:

- **Camcorder settings:** Set Exposure value, Night mode, and Anti-flicker.
- **Video settings:** Set video quality, Size limit, Time limit.
- **White balance:** Available options including: auto, daylight, tungsten, fluorescent, cloud and incandescence.
- **Effect settings:** You can select from a number of special effects.
- **Restore default:** Select this operation to resume the factory parameters of the camera.

2.5.5 Audio player:

In the Audio Player menu interface, Press up of the trackball to play, pause or resume the music. Press left and right of the trackball to go to next/previous audio file in the play list. Press the up/down on the volume icon on the screen to increase/decrease the volume level. Press the left soft

key to enter the play list, and press the option soft key to providing the following functions:

- **Play:** Playing a designated song.
- **Details:** Listing the detailed information of a song.
- **Add to ringtones:** With it, you can choose an MP3 song and set it as your incoming call ring tone.
- **Refresh list:** Updating the music file list under the [My Music] folder of the external storage. When the automatic play list generation is set at ON, it is available.
- **Settings:** Set the player settings, Display settings, Sound effect, and BT stereo settings.

2.5.6 FM radio:

This option allows you to listen to FM radio. You should plug in an earphone before accessing the application. In the FM radio menu interface, scroll the trackball (Down) to turn on/off the FM radio, press the trackball to record, scroll the trackball (Up) to turn on/off the auto search. Press left soft key, you can select following functions:

- 1) Channel list: list or edit all user saved or predefined channels.
- 2) Manual input: enter the numbers of one channel and play it directly.
- 3) Auto search: auto-search all the valid channels and update them to the channel list.
- 4) Settings: user can set ON or OFF to background play (if OFF is selected, the radio will be turned off when exiting the radio interface) and loud speaker, and set the record format, audio quality and record storage here.
- 5) Record: record the current FM radio program.
- 6) Append: append current playing FM program to the existed file.
- 7) File list: select it to access the recorded files list.

2.5.7 Sound Recorder:

Three recording formats are supported: WAV, AMR and AWB. Users can select a format with the setting function of the option to record. Recording is stored in the [Audio] directory under the file management directory. The sound recording can be stored in memory card.

2.5.8 Schedule FM record:

You can use this function to set the time and record a FM radio program.

2.5.9 Slide Show:

Select folder which contains photos which you want to slide show it, set slide show settings like type of play, speed, effect, background music, etc.

2.6 Settings

2.6.1 DUAL SIM settings:

There are four modes can be selected to use for your convenience: Dual SIM open, Only SIM 1 open, Only SIM 2 open and Flight mode.

2.6.2 Phone setup:

- **Time and Date:** Set time and date
 - **Set time/date:** Set current time and date
 - **Set format:** Set the display format of time
 - **Set home city:** Select a city for setting the time of this handset
 - **Set foreign city:** Select a foreign city for setting the time of foreign city in handset.
- **Schedule power on/off:** Set a auto power ON/OFF time of the handset
- **Language:** Select a display language of handset menu
- **Touch vibration:** set vibration to on/off if touch the trackball.
- **Trackball Speed:** Change trackball sensitive speed.
- **ACC turn settings:** Open/close add turn setting for wallpaper, MP3, MP4.
- **Greeting Text:** Select to set standby greetings ON/OFF, or select Greeting text submenu to edit the greetings.
- **Handwriting:** Set handwriting speed, handwriting pen color and full-screen handwriting switch.
- **UART setup:** Select SIM1 or SIM2 to use for UART.

2.6.3 Display:

Set standby interface wallpaper, the screen saver, the interactive screen

mode, LCD backlight, and the main menu theme.

2.6.4 Number location:

This feature allow you to know the location of a specific phone number; by entering search menu and input the phone number, then search.

2.6.5 Network settings:

- **SIM 1/2 Network settings:**

Network selection: Set the method of selecting networks to Automatic or Manual.

Preferences: Pre-save some favorite networks.

2.6.6 Security settings:

2.6.6.1 SIM1/2 security settings:

SIM Lock: You can set security settings in this menu to prevent your mobile phone from being used illegally.

Fixed Dial: You can dial only the allowed number if this function is supported by SIM card. In case the function is on, you can only dial numbers in the list, or some numbers of which with the same beginning numbers defined in the form.

Change Password: Change the Password of the SIM 1 and SIM 2 including PIN, PIN2.

2.6.6.2 Phone lock: The phone lock can prevent your mobile phone from being used illegally. Selecting **phone lock** can activate handset code-protected function, next time when you power on your mobile phone, handset code will be requested. Press it again to deactivate this function. Default handset lock code is 1234, please change it to be your own code.

2.6.6.3 Auto keypad lock: Set the waiting time for locking the keypad. After setting, keypad will be locked automatically

2.6.6.4 Change Password: Change the Password of the phone. The default password of phone is 1234.

2.6.6.5 Certificate Manager: Manage certificate

2.6.7 Sound effects:

Adjust sound effect of the player. Also set the equalizer frequency; available frequency equalizers are Normal, Bass, Dance, Classical, Treble, Party, Pop and Rock.

2.6.8 Pen calibration:

Enter touch-screen calibration

2.6.9 Restore factory setting

You can reset the settings to factory defaults. Default password is 1234

2.7 Java

You can install java program you like, and use it. Java settings and network settings are also included in the menu, you can set them.

There is some java programs already included in the headset like: Google Maps, PDF Reader, Office Mobile, eBuddy, Real player, Winrar, Opera browser, and Facebook.

2.8 User Profiles

Users can select different profiles or personalize them. This phone is with many profiles: General, Meeting, Outdoor, Indoor, Headset, Bluetooth, Silent, Power saving.

For user profiles you can find common settings like **Activate** and **Customize**:

- **Activate:** Select the item to activate the selected profile.
- **Customize:** Select settings to enter user-definition of normal profile. Available operations are including **Tone Setup**, **Volume**, **Alert Type**, **Ring Type**, **Extra Tone**, and **Answer Mode**.

Note:

Headset: This mode is turned automatically while plugging in earphone.

Bluetooth: This mode is turned automatically while Bluetooth is activated.

Power Saving: This mode is turned automatically while battery is low.

2.9 Organizer

In this menu, have many useful applications like:

2.9.1 Calendar

When you enter the options, there are some submenus:

- View: view the event that you add.
- View all: view all events that you add.
- Add event: you can add event by this function.
- Delete event: you can delete event by this function.
- Jump to date: jump to the data that you want.
- Go to weekly view: you can choose “Go to monthly view” or “Go to weekly view” mode.

2.9.2 Tasks

Press the left soft key to select “Tasks” menu, enter the task interface, select an affair to be handled, and press “option” to perform a number of operations, including view, add, edit, delete, delete overdue, delete all and other options.

If no task has been added, press the left soft key to select the “add” option to add a task.

2.9.3 Alarm

Press the left soft key to select the alarm clock entering the alarm clock interface. Five alarm clocks in total, and the default value of each alarm clock is off. Select an alarm clock, edit the alarm clock by pressing the left soft key, and carry out relevant settings.

2.9.4 Azaan alarm

Azaan alarm function shows the prayer times and can alert you using the Azaan at each prayer time. From options menu, you can activate/deactivate

the alarm, and set the Azaan time.

2.9.5 World clock

It enables you to check the current local time in different regions throughout the world.

2.9.6 Stopwatch

You can set two type of stopwatch: Typical stopwatch and nWay stopwatch.

2.9.7 Calculator

We provide the headset with a scientific calculator, so you can do all your complex calculations easily.

2.9.8 E-Book reader

You can read the text files in TXT format saved in the Memory Card or in Phone memory. Press the left soft key “Options” to operate as below:

- **Open E-Book:** to read the selected file.
- **Clean up bookshelf:** Re-arrange the files saved in this folder.
- **Global settings:** Set the display settings of the electronic book like fonts, page scroll and auto page scroll, full screen, encoding, alignment etc.
- **Book info:** Display the title, size and file format of the selected e-book.
- **Delete:** Delete the selected file.
- **Delete All Files:** Delete all files in the E-Book menu.
- **Sort by:** Sort the files in the E-Book menu; you can sort by name, type, time of saving and size.

2.9.9 Notes:

Can record what you need to do and write down your diary. In the notes list menu press the trackball to view selected note, or press left soft key to perform one of these options: view, edit, new note, mark several, or delete.

2.9.10 Currency converter

It can help you to convert from a currency to another. First, enter the rate

between the two currencies then press OK, and then go to the [input currency] menu and select the correct ratio between the currencies (the ratio or the inverse). Then enter the currency in Local and press OK, it will be converted to the other foreign currency.

2.10 File Manager

This function is for storing specified file, if memory card has been inserted, there are two documents(if not insert memory card, only “phone” document can be seen), new user must enter relative menu and set storing path (note: phone is the default path), system will automatically generate folders.

You can Open, Send, Show details, Rename, Copy, Move, Delete, and Sort you files.

2.11 Connectivity

2.11.1 Internet service

Your mobile phone supports WAP function. You can access services like news, weather forecast and flight information, etc. which supported by your service provider.

- **Homepage:** Link to the homepage. Homepage is the WAP website preset in the connection setting. The website set by the provider will be adopted if no website is set by the user.
- **Bookmarks:** Display the bookmarks previously set. Select the website connected with the bookmark.
- **Recent Pages:** Records of the visited websites.
- **Offline pages:** Records of the saved websites.
- **Input Address:** Select this function to visit any WAP or other Internet website.
- **Service Inbox:** To store information sent by service provider.
- **Settings:** WAP setting
 1. **Select SIM:** Choose the method of entering WAP
 2. **Edit Profile:** Select service-setting groups, which include three options.
 3. **Browser Options:** Change the relevant parameters for browsing. Including waiting time and displayed picture.

-
4. **Service Message Settings:** Turn ON/OFF service information.
 5. **Clear Cache:** Select this item to clear cache.
 6. **Clear Cookies:** Select this item to clear cookies.
 7. **Trusted certificates:** to edit and select wanted WAP certificate.

2.11.2 Bluetooth

Short distance wireless data transmission, it has six options: **Power, Visibility, My Device, Search audio device, My name, Advanced.**

1. **Power:** on/off Bluetooth.
2. **Visibility:** set your device visibility to on/off.
3. **My Device:** List the searching result.
4. **Search audio device:** search for a Bluetooth hand free.
5. **My name:** to edit the device Bluetooth name.
6. **Advanced:**
 - **Audio path:** set the BT headset path.
 - **Storage:** set the default storage to main memory or phone.
 - **Sharing settings:** set sharing settings (permission, and image location).
 - **Remote control:** After you install PC distance software and connect the phone with PC, the keypad of the phone can work as the input equipment of the PC (mouse and keypad).
 - **My address:** view device address.

2.11.3 Connection management:

This menu provides a way to manage you all connections to your phone.

2.11.4 Data Account:

The function is used to set the account information.

- **GSM data:** Press Edit to set Account name, Number, User name, Password, Line type, Speed and DNS.
- **GPRS:** Press Edit to set Account name, APN, User name, Password and Auth. type.

2.11.5 Phone sync:

This feature is providing a way to synchronize your phonebook with other

phones; by connecting using Bluetooth to other mobile device, then sync. your phonebook with it.

2.12 WIFI

Enter WIFI function. You can use it to browse the WIFI. Press the left key “option” to perform one of these options:

- **Connect:** to connect to selected WIFI connection.
- **Add:** to add connection configuration manually.
- **Edit:** edit selected connection configuration.
- **Delete:** to delete selected connection.
- **Change Priority:** to change WIFI connections list priorities to meet your needs.
- **WIFI status:** view WIFI status.
- **Enable/Disable WIFI:** to open/close WIFI option.
- **Refresh:** auto search again for new WIFI connections.

2.13 Games

You can choose a game according to your interest. After selecting a game, enter the game menu, you can read the game rules, adjust the game volume, set the game sound effect and etc.

There is many cool games like Sudoku, Snake, etc... also there are many motion sensor games.

2.14 Other Applications

This headset is provided with other famous applications which make you entertained and connected to others like:

- **Google Maps:** browse and navigate through your country using latest updated map from Google.
- **PDF reader:** read your PDF files in memory card and in phone easily.
- **Office Mobile:** read your Microsoft office files (word, excel, ...) in memory card and in phone easily.
- **eBuddy:** stay connected to your friends via chat using this cool application .
- **Opera browser:** navigate throw internet using this cool browser

with its latest features.

- **Facebook:** stay connected to your Facebook friends and browse your latest feeds.
- **Real player:** play your real player files (rm, rmvb, ...) using this powerful application.
- **Winrar:** compress/decompress your files in memory card and phone.

7. COMMON PROBLEMS & TROUBLESHOOTING

Before contacting the after-sales service provider, conduct the following simple checks and this may save your unnecessary time and expense on repair.

Common Problems	Cause & Troubleshooting
Unable to start the mobile phone	- Check whether you hold the start key for at least 3 seconds. - Check whether the battery is in poor state. Please remove the battery, install it again, and try to restart it. - Check whether the battery has run out of power, and if yes, please charge the battery.
Unable to connect network	- Weak signals. Please retry in a place with strong signals. - Beyond the network coverage of your network operator. - Invalid SIM card. Please contact your network operator.
Display messages at start	- Check whether the SIM card has been correctly inserted. - Locked. You have selected the automatic locking function, and entering the mobile phone password before using it. - Enter PIN. You have selected the option of entering PIN for each start of the mobile phone, and so you must enter the PIN code (When the mobile phone is first used, the PIN code on the SIM card must be entered). - Enter the PUK code. Wrong inputting of the PIN code will lock up your mobile phone, and you should use the PUK code provided by the network operator to launch it again.

Poor calling quality	- Please check whether the volume has been adjusted appropriately. - The mobile phone is used in the place with poor signals, such as near a high-rise building or in a basement, where radio waves cannot effectively reach. - The mobile phone is used in peak hours, for example, the time to go to and leave work, and line congestion makes it impossible to call.
Short standby time	- The standby time is related to the system settings of the network, and the mobile phone is possibly in an area with poor signals. When it fails to receive signals, the mobile phone will continuously transmit to look for a base station, thereby consuming a lot of battery power and leading to a shorter standby time. Please move to a place with strong signals or shut down the mobile phone for a moment. - Replacing a new battery is needed.
SIM card error	- The metal surface of the SIM card is contaminated. Please clean the metal contact of the SIM card with clean cloth. - The SIM card has not been inserted correctly. - Damaged SIM card. Please contact your network operator.
Unable to dial out	- Please confirm whether you have pressed the dial key after dialing a number. - Please confirm whether you have paid the telephone bill. - Please confirm whether the SIM card is valid. - Please confirm whether the call barring function has been activated. - Please confirm whether the fixed calling function has been activated.
Caller unable to contact you	- Please check whether you have connected your mobile to the network. - Please confirm whether you have paid the telephone bill. - Please confirm whether the SIM card is valid.

	- Please confirm whether the call barring function has been activated. - Please confirm whether the fixed calling function has been activated.
Unable to charge	- Poor contact. Check whether the plug has been connected in place. - If the battery or charger has been spoiled, change it for a new one.
Unable to set some functions	- Miss-operation. - Your network operator does not support these functions, or you have not applied for such functions.

8. DEVICE SPECIFICATIONS:

Features		Description
Model		S1
Product Features		Dual SIM Dual Standby
		Bar phone
		MP3/MP4, FM
		Bluetooth
		Java
Technology	Frequency	GSM 900/1800
	Platform	MTK6235B
Dimensions		116.5 x 56 x 14 mm
Display	Type	HVGA 3.2", Touch Screen
	Resolution	320 x 480
	Touch	Yes
Memory	Internal	NAND 1G, NOR 512
	External	Up to 16GB
Ringtones	Type	WAV/AMR/MP3
	Download	Yes
	Vibration	Yes
Capacity	Phonebook	Built-in 5000 contacts
	Call records	20 dialed, 20 received, 20

		missed call	
	Micro SD Card Slot	Yes	
Connectivity	GPRS	class 12	
	EDGE	2.75G, Support (FULL UPLOAD / DOWNLOAD)	
	Bluetooth	Yes	
	USB	Yes	
Camera	Max. Resolution	Front 0.3MP Back 5MP with flash	
	Continue shot	Yes	
	Video recorder	Yes	
	Photo Album	GIF/JPG/BMP	
Media	Video	3GP and MP4	Yes
		Video Player	Yes
		Video Recorder	Yes
	Audio	MP3/WAV/ AMR/ IMY/ MID	Yes (Lyric supported)
		Voice Recorder	Yes (AMR, WAV)
		Built-in speaker	Yes
	FM	Yes, FM recording	
Messaging	SMS / SMS Memory	Yes/450	
	MMS *	Yes	
	Broadcast *	Yes	
	Email	Yes	
Internet	Browser	Yes	
	Web Camera	Yes	
Battery	Capacity (mAh)	1500mAh	
	Stand-by Time **	200-300hours	

	Talk time **	4-6hours	
Misc.	Calculator	Yes	
	Alarm, Calendar, World Time	Yes	
	Phone Book/Groups	Yes	
	Call Divert/Call Restriction *	Yes	
	Call Waiting *	Yes	
	Game	Yes	
	Java	Yes	
	Wallpapers	Preloaded and Customizable	
	Screensavers	Preloaded and Customizable	
	Other applications	Google Maps, PDF Reader, Office Mobile, eBuddy, Opera Browser, Facebook, Real Player, and Winrar.	
Language		English, Arabic, French, Greek and Italian	
Colors		Black + Silver	
In the Box	User Manual	One piece	
	Warranty card	One piece	
	Battery	One piece	1500mAh
	Earphone	One piece	High quality earphone
	Charger	One piece	Mini USB Charger
	USB Cable	One piece	

Notes:

* Needs network support.

** In ideal conditions only. Actual performance may vary due to signal strength, temperature, movement speed ...