


AMOS-820

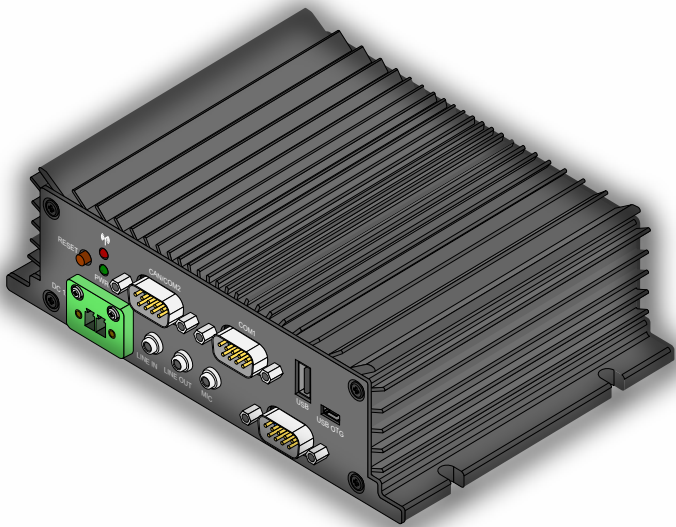

USER MANUAL

AMOS-820

Ultra Compact and Fanless System
with ARM based VAB-820 board

Copyright

Copyright © 2014 VIA Technologies Incorporated. All rights reserved.

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise without the prior written permission of VIA Technologies, Incorporated.

Trademarks

All trademarks are the property of their respective holders.

Disclaimer

No license is granted, implied or otherwise, under any patent or patent rights of VIA Technologies. VIA Technologies makes no warranties, implied or otherwise, in regard to this document and to the products described in this document. The information provided in this document is believed to be accurate and reliable as of the publication date of this document. However, VIA Technologies assumes no responsibility for the use or misuse of the information (including use or connection of extra device/equipment/add-on card) in this document and for any patent infringements that may arise from the use of this document. The information and product specifications within this document are subject to change at any time, without notice and without obligation to notify any person of such change.

VIA Technologies, Inc. reserves the right to make changes to the products described in this manual at any time without prior notice.

Regulatory Compliance

FCC-A Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his personal expense.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

Notice 3

The product described in this document is designed for general use, VIA Technologies assumes no responsibility for the conflicts or damages arising from incompatibility of the product. Check compatibility issue with your local sales representatives before placing an order.



Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

Battery Recycling and Disposal

- Only use the appropriate battery specified for this product.
- Do not re-use, recharge, or reheat an old battery.
- Do not attempt to force open the battery.
- Do not discard used batteries with regular trash.
- Discard used batteries according to local regulations.



Safety Precautions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- All cautions and warnings on the equipment should be noted.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
- Place the power cord in such a way that people cannot step on it.
- Always unplug the power cord before inserting any add-on card or module.
- If any of the following situations arises, get the equipment checked by authorized service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment has not worked well or you cannot get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.
- Do not leave this equipment in an environment unconditioned or in a storage temperature above 60°C (140°F). The equipment may be damaged.
- Do not leave this equipment in direct sunlight.
- Never pour any liquid into the opening. Liquid can cause damage or electrical shock.
- Do not place anything over the power cord.
- Do not cover the ventilation holes. The openings on the enclosure protect the equipment from overheating

Box Contents

AMOS-820

- 1 x AMOS-820
- 1 x Power cable, 2-pole Phoenix plug to DC-jack (P/N: 99G33-250043)
- 4 x Rubber foot for desktop mounting (P/N: 99G46-010238)
- 1 x COM port cable (P/N: 99G33-080527)
- 4 x Mounting screws (P/N: 99G44-030381)
- 1 x COM/CAN conversion cable (P/N: 99G33-080527)

Ordering Information

Part Number

AMOS-820-1Q10A1

Description

Fanless Embedded System with 1GB DDR3, 4GB eMMC and 1 x HDMI, 3 x USB2.0, 2 x CAN bus, 2 x COM, GPIOs, 1 x Mini-PCIe, RCA-in and USB OTG.

Optional Accessories

Part Number

99G63-020316

99G33-02032C

99G33-02034C

99G33-02033C

99G33-02031C

Description

AC-to-DC Adapter, 2-pole, DC 12V/5A, 60W

Power Cord, 180 cm, USA type

Power Cord with PSE mark, 180cm for Japan Market

Power Cord, 180 cm, Europe type

Power Cord, 180 cm, UK type

Table of Contents

1. Product Overview	9
1.1. Key Features.....	10
1.1.1. ARM based System.....	10
1.1.2. Fanless, Ruggedized, Ultra compact and Space saving.....	10
1.1.3. Stylish and fully sealed design.....	10
1.1.4. Optimize integration with multiple I/O access.....	10
1.1.5. Storage Expansion.....	10
1.1.6. Wide Range of Operating Temperatures.....	11
1.1.7. Shock Resistant.....	11
1.1.8. Networking Option.....	11
1.1.9. Power over Ethernet (optional).....	11
1.1.10. Multiple Mounting Option.....	11
1.1.11. Embedded OS ready.....	11
1.2. Product Specifications.....	12
1.3. Product Dimensions.....	15
2. I/O Interface	16
2.1. External I/O Ports.....	16
2.1.1. Reset Button.....	18
2.1.2. LED Indicator.....	18
2.1.3. CAN/COM2 Connector.....	19
2.1.4. COM1 Connector.....	20
2.1.5. USB 2.0 Port.....	21
2.1.6. Micro-B USB port.....	22
2.1.7. DC-In Power Input Connector.....	23
2.1.8. Audio Jacks.....	24
2.1.9. DIO Connector.....	25
2.1.10. Micro SD/SPI boot switch.....	26
2.1.11. LAN Port: Gigabit Ethernet.....	27
2.1.12. HDMI® Port.....	28

2.1.13.	RCA Jack.....	29
3.	Hardware Installation.....	30
3.1.	Installing the Micro SD Card	30
3.2.	Installing the 3G/WLAN (WiFi) kit	32
3.3.	Installing the Rubber Feet	36
3.4.	Mounting the AMOS-820 on Wall/Table.....	37
4.	Software and Technical Supports.....	38
4.1.	Linux Driver Support.....	38
4.1.1.	Driver Installation.....	38
4.2.	Technical Supports and Assistance.....	38

Lists of Figures

Figure 1: Dimensions of the AMOS-820 (top view).....	15
Figure 2: Dimensions of the AMOS-820 (front view).....	15
Figure 3: Dimensions of the AMOS-820 (rear view).....	15
Figure 4: Front I/O panel.....	16
Figure 5: Rear I/O panel.....	17
Figure 6: Reset button diagram.....	18
Figure 7: System LED indicator.....	18
Figure 8: CAN/COM2 connector pinout diagram.....	19
Figure 9: COM1 connector pinout diagram.....	20
Figure 10: USB 2.0 port pinout diagram.....	21
Figure 11: Micro-B USB port pinout diagram.....	22
Figure 12: Power input connector pinout diagram.....	23
Figure 13: Audio jack receptacle stack.....	24
Figure 14: DIO connector pinout diagram.....	25
Figure 15: Micro SD/SPI boot switch.....	26
Figure 16: Gigabit Ethernet port pinout diagram.....	27
Figure 17: HDMI® port diagram.....	28
Figure 18: RCA jack diagram.....	29
Figure 19: Removing the bottom access cover.....	30
Figure 20: Inserting the Micro SD card.....	31
Figure 21: Installing 3G/WLAN module.....	32
Figure 22: Securing 3G/WLAN module.....	32
Figure 23: Removing front, rear and bottom plate screws.....	33
Figure 24: Pulling out rear I/O plate and antenna hole cover.....	33
Figure 25: Installing 3G and WLAN antenna.....	34
Figure 26: Connecting 3G/WLAN port's mini coaxial cables.....	35
Figure 27: Reinstalling bottom access cover.....	35
Figure 28: Installing the rubber feet.....	36
Figure 29: Mounting the AMOS-820 system.....	37

Lists of Tables

Table 1: CAN/COM2 connector pinout.....	19
Table 2: COM1 connector pinout.....	20
Table 3: USB 2.0 port pinout.....	21
Table 4: Micro-B USB port pinout.....	22
Table 5: Power input connector pinout.....	23
Table 6: Audio jack receptacle pinout.....	24
Table 7: DIO connector pinout	25
Table 8: Gigabit Ethernet port pinout.....	27
Table 9: Gigabit Ethernet LED color definition.....	27
Table 10: HDMI® port pinout.....	28
Table 11: RCA Jack pinout	29

1. Product Overview

The VIA AMOS-820 industrial system is an ultra-compact solution designed to take full advantage of the super power-efficient, ARM based VIA VAB-820 Pico-ITX board, making it easy to create a broad spectrum of easy to assemble, fanless system designs for a wide variety of embedded applications.

A completely fanless system measuring 150.5mm (W) x 48.1mm (H) x 103.3mm (D), the AMOS-820 features a ruggedized design able to withstand a wide operating temperature range of -20°C up to 65°C while offering extremely low power consumption under typical operation.

On-board storage includes 4GB of eMMC Flash and can be expanded through one MicroSD Card. In addition, an optional Mini card slot is provided for 3G/WLAN(WiFi) connectivity. Comprehensive I/O functions on front and rear panels make the AMOS-820 a flexible solution for a wide range of embedded applications. Front I/O includes one reset button, one Power & WPAN/WWAN/WLAN LED, one D-sub 9-pin connector supporting 2 x CAN bus, one COM1 D-sub 9-pin connector, one USB2.0 port, one Micro-B USB 2.0 port (supporting OTG), one DC Power input connector, three 3.5Ø phone jack connectors and one DIO D-sub 9-pin connector; while rear I/O includes, one Micro SD/SPI boot switch, one RJ-45 connector, two USB 2.0 ports, one HDMI® connector and one composite RCA jack.

1.1. Key Features

1.1.1. ARM based System

With a Quad Core Freescale Cortex-A9 ARM SoC, the VIA Embedded ARM based system AMOS-820 delivers powerful performance to a host of connected device applications.

1.1.2. Fanless, Ruggedized, Ultra compact and Space saving

The AMOS-820 has an ultra compact, ruggedized chassis which is designed to save space that makes it suitable to install in space critical environment and to ensure maximum reliability. Its chassis design has a robust aluminum alloy top cover and steel bottom chassis.

1.1.3. Stylish and fully sealed design

The chassis of the AMOS-820 is composed of four main parts. The stylish ridged aluminum top cover does double duty and acts as the heatsink of the AMOS-820.

1.1.4. Optimize integration with multiple I/O access

Front and rear I/O access enables the AMOS-820 to easily support various applications as well as for easy integration and quick setup.

1.1.5. Storage Expansion

The MicroSD slot enables the AMOS-820 to have a flexible storage of MicroSD card memory.

1.1.6. Wide Range of Operating Temperatures

The AMOS-820 carries a qualified thermal performance design which allows a wide range of operating temperatures from -20°C up to 65°C, suitable for critical applications.

1.1.7. Shock Resistant

AMOS-820 is shock resistant to 70G for maximum reliability.

1.1.8. Networking Option

The AMOS-820 is equipped with a RJ-45 port that supports high speed Gigabit Ethernet. An optional Mini card slot is provided for 3G/WLAN(WiFi) connectivity.

1.1.9. Power over Ethernet (optional)

Integrated Powered Device (PD) controller and switching regulator intended for high power IEEE 802.3at and 802.3af applications. The power over Ethernet (PoE) PD board can output 25W of power. The AMOS-820 can be operated using either PoE or external adaptors (12V).

1.1.10. Multiple Mounting Option

The AMOS-820 supports multiple methods for mounting the chassis securely. The rugged industrial PC can be mounted to a table, wall, or any flat surface.

1.1.11. Embedded OS ready

The AMOS-820 is 100% compatible with Linux Kernel 3.0.35 and WEC7 operating systems.

1.2. Product Specifications

Computing System

- **Processor**
 - 1.0GHz Freescale i.MX 6 Quad ARM Cortex-A9

System Memory

- **Technology & Max. Capacity**
 - 1GB DDR3-1066 SDRAM using 128M x16 memory devices

Flash

- **Capacity**
 - 4MB SPI Serial Flash
 - 4GB eMMC Flash

Graphic

- **Controller**
 - Support three independent, integrated graphics processing units: an OpenGL® ES 2.0 3D graphics accelerator with four shaders (up to 200 MT/s and OpenCL support), 2D graphics accelerator, and dedicated OpenVG™ 1.1 accelerator

Ethernet

- **Controller**
 - Micrel KSZ9031RNX Gigabit Ethernet transceiver with RGMII support

Onboard Audio

- **Controller**
 - Freescale SGT5000 low power stereo codec

Video Decoder

- ADI ADV7180 10-bit, 4 × oversampling SDTV video decoder

HDMI®

- Integrated HDMI transmitter

Mini Card Slot

- 1 × Mini Card slot

- Optional support Ublox ZU200 3.75G UMTS/HSPA 3G module or VNT9485 IEEE802.11 b/g/n WiFi module

□ Onboard I/O Coastline Connectors

● Front Panel I/O

- 1 × Reset button
- 1 × Power & WPAN/WWAN/WLAN LED
- 1 × COM1 D-sub 9-pin connector supports 8-wire DTE mode
- 1 × COM2 D-sub 9-pin connector supports 1 × COM2 (COM2 Supports 2-wire Tx/Rx) and 2 × CAN Bus (Support CAN Protocol specification Version 2.0 B) through a cable
- 1 × USB 2.0 connector
- 1 × Micro USB2.0 type B connector support OTG
- 1 × DC Power input connector by 2-pole Phoenix connector
- 3 × 3.5Ø phone jack connectors as Line-out, Mic-In, Line-in
- 1 × DIO D-sub 9-pin connector support 8-bit GPIO

● Rear Panel I/O

- 1 × Micro SD/SPI boot switch
- 1 × RJ-45 (Gigabit Ethernet) port
- 2 × USB 2.0 ports
- 1 × HDMI port
- 1 × Composite RCA jack

● Bottom Opening Cover

- Open window with removable door plate to access the micro SD flash drive and Mini Card slot

□ Power Supply

● Input Voltage

- DC in 12V

□ Mechanical

● Construction

- Aluminum top cover
- Metal chassis housing
- Removable left & right of wall mountable bracket

● Dimension

- 150.5mm (W) × 48.1mm (H) × 103.3mm (D)

- **Weight**
 - 0.673kg

Environmental Specification

- **Operating Temperature**
 - -20°C ~ 65°C (3G&WiFi not included)
- **Operating Humidity**
 - 0 ~ 90% @ 45°C, non-condensing
- **Vibration Loading During Operation**
 - 7Grms, IEC 60068-2-64, random, 5 ~ 500Hz, 1 Oct./min, 1hr/axis (with onboard eMMC)
- **Shock During Operation**
 - 70G, IEC 60068-2-27, half size, 11ms duration (with onboard eMMC)

Software Compatibility

- **Operating System**
 - Linux Kernel 3.0.35
 - WEC7



Note:

As the operating temperature provided in the specifications is a result of the test performed in VIA's chamber, a number of variables can influence this result. Please note that the working temperature may vary depending on the actual situation and environment. It is highly suggested to execute a solid testing and take all the variables into consideration when building the system. Please ensure that the system runs well under the operating temperature in terms of application.

1.3. Product Dimensions

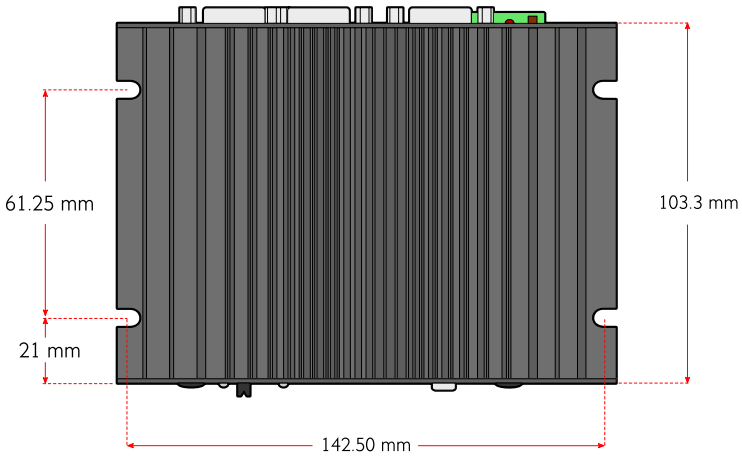


Figure 1: Dimensions of the AMOS-820 (top view)

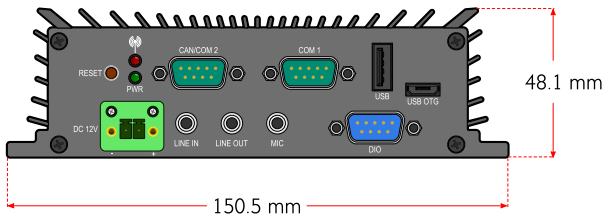


Figure 2: Dimensions of the AMOS-820 (front view)

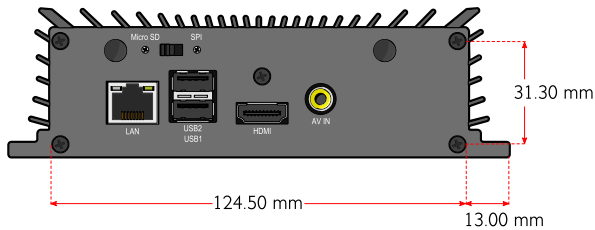


Figure 3: Dimensions of the AMOS-820 (rear view)

2. I/O Interface

The AMOS-820 has a wide selection of interfaces. It includes a selection of frequently used ports as part of the external I/O coastline.

2.1. External I/O Ports

The AMOS-820 has external I/O ports placed along both faces of the chassis.

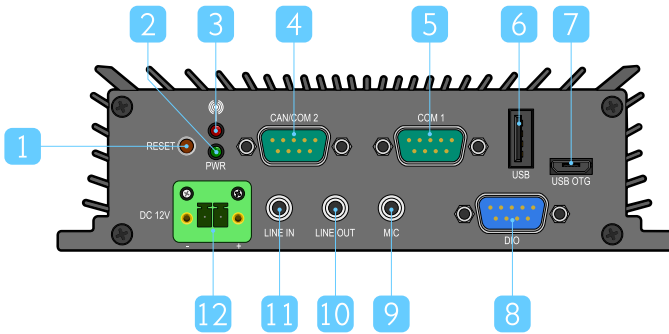


Figure 4: Front I/O panel

Item	Description	Item	Description
1	Reset button	7	Micro-B USB 2.0 port (USB OTG)
2	Power LED	8	DIO connector
3	WPAN/WWAN/WLAN LED	9	Mic-In
4	CAN/COM2 connector	10	Line-Out
5	COM1 connector	11	Line-In
6	USB 2.0 port	12	DC power input connector

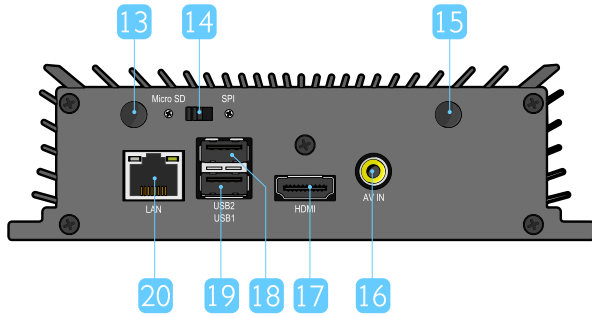


Figure 5: Rear I/O panel

Item	Description	Item	Description
13	Antenna hole	17	HDMI port
14	Micro SD/SPI boot switch	18	USB2.0 port 2
15	Antenna hole	19	USB2.0 port 1
16	Composite RCA jack	20	Gigabit Ethernet (LAN) port

2.1.1. Reset Button

The AMOS-820 comes with a reset button on the front panel.

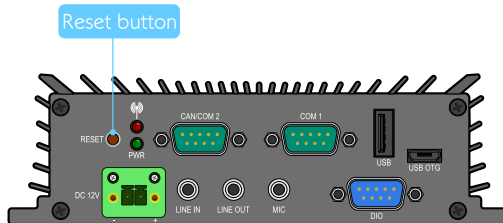


Figure 6: Reset button diagram

2.1.2. LED Indicator

There are two LEDs on the front panel of the AMOS-820 that indicate the status of the system:

- PWR LED is green and indicates the status of the system power.
- WPAN/WWAN/WLAN LED is red and indicates network status of the system.

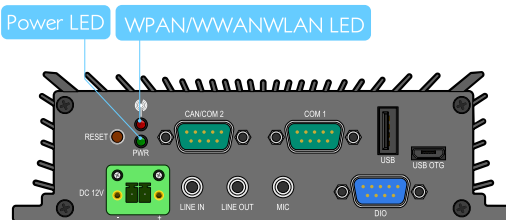


Figure 7: System LED indicator

2.1.3. CAN/COM2 Connector

The integrated 9-pin CAN/COM2 connector uses a male DE-9 connector. The CAN bus connector supports CAN protocol specification Version 2.0 B while the COM2 connector supports TX/RX. The purpose of the CAN/COM2 connector is to debug only. The pinout of the CAN/COM2 port is shown below.

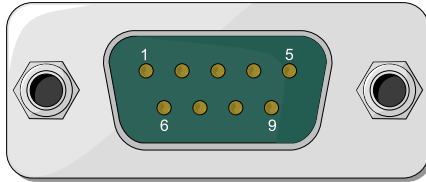


Figure 8: CAN/COM2 connector pinout diagram

Pin	Signal
1	CANH1
2	RX
3	TX
4	CANL2
5	GND
6	CANL1
7	GND
8	CANH2
9	VCC5

Table 1: CAN/COM2 connector pinout



Note:

Do not directly plug a COM connector to the CAN/COM2 connector. Please use the COM/CAN conversion cable when connecting to the CAN/COM2 connector.

2.1.4. COM1 Connector

The integrated 9-pin COM connector uses a male DE-9 connector. The COM1 connector supports the RS-232 standard. The pinout of the COM port is shown below.

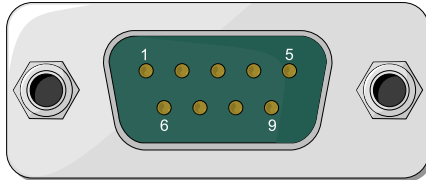


Figure 9: COM1 connector pinout diagram

Pin	Signal
1	DCD1
2	SIN1(Rx)
3	SOUT1(Tx)
4	DTR1
5	GND
6	DSR1
7	RTS1
8	CTS1
9	RI1

Table 2: COM1 connector pinout

2.1.5. USB 2.0 Port

The AMOS-820 mainboard provides three USB 2.0 ports, each USB port gives complete Plug and Play and hot swap capability for external devices. The USB interface complies with USB UHCI, Rev. 2.0. The pinout of the typical USB 2.0 port is shown below.



Figure 10: USB 2.0 port pinout diagram

Pin	Signal
1	VCC
2	USB data -
3	USB data +
4	GND

Table 3: USB 2.0 port pinout

2.1.6. Micro-B USB port

The AMOS-820 comes with a Micro USB 2.0 type B connector located on the front I/O panel. The Micro USB2.0 type B connector supports OTG and it offers expandable storage.



Figure 11: Micro-B USB port pinout diagram

Pin	Signal
1	VBUS
2	D-
3	D+
4	ID
5	GND

Table 4: Micro-B USB port pinout



Note:

The AMOS-820 is regarded as an USB device by default when connected to an USB host.

2.1.7. DC-In Power Input Connector

The AMOS-820 comes with a 2-pole Phoenix connector on the front panel that carries 12V_{DC} external power input.

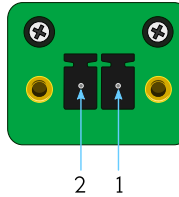


Figure 12: Power input connector pinout diagram

Pin	Signal
1	12VDC
2	GND

Table 5: Power input connector pinout

2.1.8. Audio Jacks

There are three audio jack receptacles integrated into a single stack on the I/O coastline. Each receptacle can fit a 3.5 mm Tip Ring Sleeve (TRS) connector enables connection to Line-In, Line-Out and Mic-In. The Line-In jack is for connecting an external audio device such as CD player, tape player and etc. The Line-Out jack is for connecting to external speakers or headphones. The Mic-In jack is for connecting to a microphone.

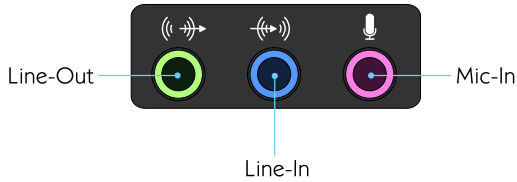


Figure 13: Audio jack receptacle stack

Wiring	Line-In	Line-Out	Mic-In
Tip	Left channel in	Left channel	Left channel
Ring	Right channel in	Right channel	Right channel
Sleeve	Ground	Ground	Ground

Table 6: Audio jack receptacle pinout

2.1.9. DIO Connector

AMOS-820 provides one D-sub 9-pin female connector. It offers Digital IO communication interface port to support 8-bit GPIO.



Figure 14: DIO connector pinout diagram

Pin	Signal
1	GPIO_7
2	GPIO_1
3	GPIO_8
4	GPIO_2
5	GPIO_9
6	GPIO_4
7	GPIO_16
8	GPIO_5
9	GND

Table 7: DIO connector pinout

2.1.10. Micro SD/SPI boot switch

The AMOS-820 comes with a boot switch which allows users to select boot device from Micro SD and SPI.

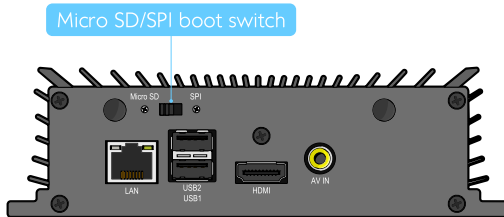


Figure 15: Micro SD/SPI boot switch

2.1.11. LAN Port: Gigabit Ethernet

The integrated 8-pin Gigabit Ethernet port is using an 8 Position 8 Contact (8P8C) receptacle connector (commonly referred to as RJ45). The pinout of the Gigabit Ethernet port is shown below.

Pin	Signal
1	Signal pair 1+
2	Signal pair 1-
3	Signal pair 2+
4	Signal pair 3+
5	Signal pair 3-
6	Signal pair 2-
7	Signal pair 4+
8	Signal pair 4-

Table 8: Gigabit Ethernet port pinout

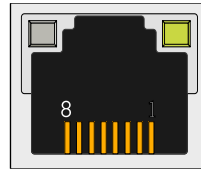


Figure 16: Gigabit Ethernet port pinout diagram

The Gigabit Ethernet port (RJ45 port) has two individual LED indicators located on the front side to show its Active/Link status and Speed status.

	Link LED (Left LED on RJ-45 connector)	Active LED (Right LED on RJ-45 connector)
Link Off	Off	Off
Speed_10Mbit	The LED is always On in Orange color	Flash in Yellow color
Speed_100Mbit	The LED is always On in Orange color	Flash in Yellow color
Speed_1000Mbit	The LED is always On in Orange color	Flash in Yellow color

Table 9: Gigabit Ethernet LED color definition

2.1.12. HDMI® Port

The integrated 19-pin HDMI® port uses an HDMI® Type A receptacle connector defined in HDMI specification. The HDMI® port is used to connect high definition video and digital audio using a single cable. It allows connecting the digital video devices which utilize a high definition video signal. The pinout of the HDMI® port is shown below.

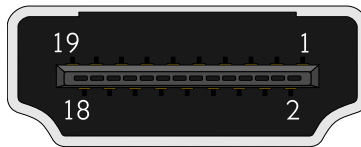


Figure 17: HDMI® port diagram

Pin	Signal	Pin	Signal
1	TMDS Data0+	2	GND
3	TMDS Data0-	4	TMDS Data1+
5	GND	6	TMDS Data1-
7	TMDS Data2+	8	GND
9	TMDS Data2-	10	TMDS Data3+
11	GND	12	TMDS Data3-
13	CEC	14	NC
15	HDMI Clock	16	HDMI Data
17	GND	18	HDMI Power
19	Hot Plug Detect		

Table 10: HDMI® port pinout

2.1.13. RCA Jack

The AMOS-820 is equipped with a RCA jack labeled as “AV IN” on the rear I/O panel. The RCA jack connects to external composite video input device.

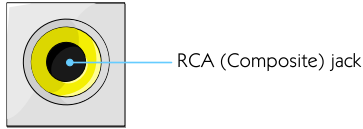


Figure 18: RCA jack diagram

Description	RCA Jack
Video	Composite Video Input

Table 11: RCA Jack pinout

3. Hardware Installation

This chapter provides information about hardware installation procedures. It is recommended to use a grounded wrist strap before handling computer components. Electrostatic discharge (ESD) can damage some components.

3.1. Installing the Micro SD Card

Step 1

Locate the bottom access cover of the chassis. Loosen the screw to remove the bottom access cover.

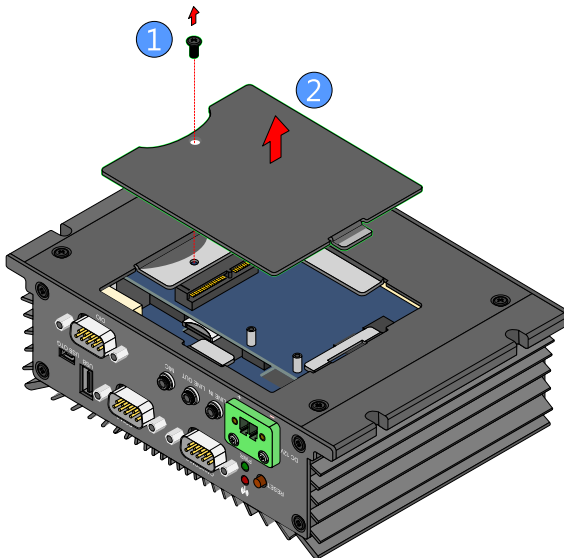


Figure 19: Removing the bottom access cover

Step 2

Gently lift up and remove the access cover.

Step 3

Gently slide the Micro SD card into the card slot reader with the label side facing down then press the card until it locks into place.

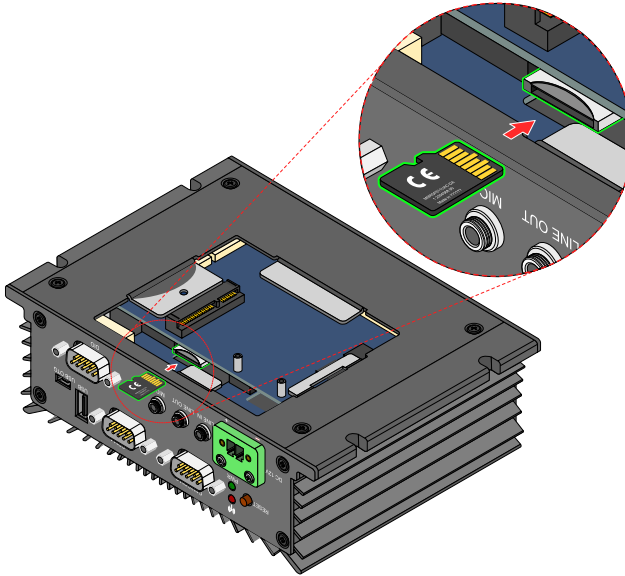


Figure 20: Inserting the Micro SD card



Note:

To remove the Micro SD card, press the card to disengage from the slot reader then gently pull out the card.

3.2. Installing the 3G/WLAN (WiFi) kit

Step 1

Align the notch on the module (3G/WLAN) with the notch on the mini card slot then insert the module at 30° angle.

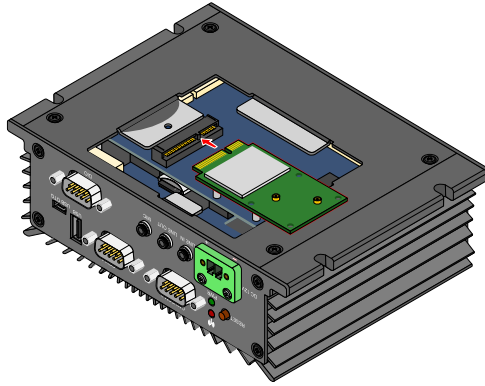


Figure 21: Installing 3G/WLAN module

Step 2

Once the module has been fully inserted, push down the module until the screw holes align with the standoff holes. Then secure the module with screws.

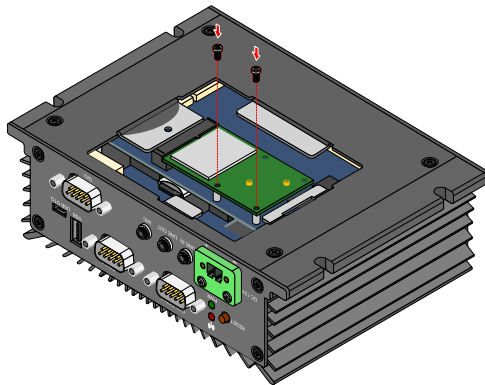


Figure 22: Securing 3G/WLAN module

Step 3

Loosen the thirteen screws of the front, rear and bottom plates.

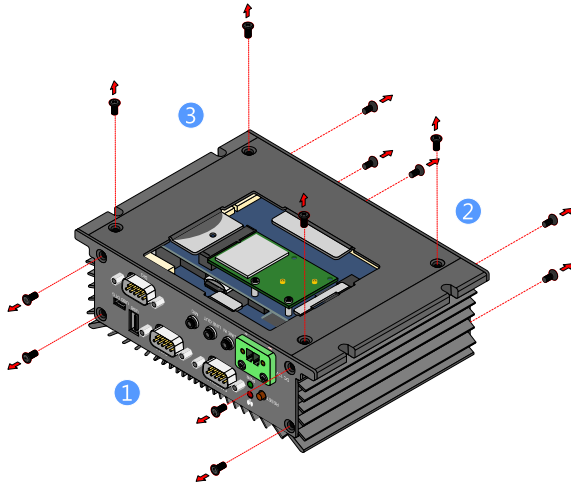


Figure 23: Removing front, rear and bottom plate screws

Step 4

Carefully pull the rear I/O face plate and the top cover chassis. Then remove the antenna hole cover.

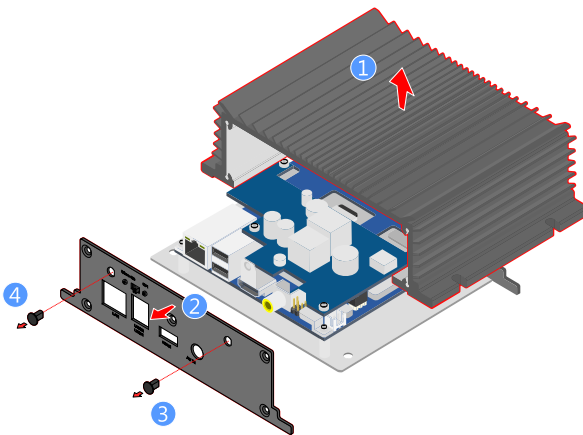


Figure 24: Pulling out rear I/O plate and antenna hole cover

Step 5

Insert the 3G/WLAN port connector into the antenna hole from the inside of the rear I/O plate. Insert the washer, fasten it with the nut, and install the antenna. Then pull the mini coaxial cables and insert them to the available space going down to the bottom side of the board. Stretch the cables out to reach the installed 3G/WLAN module.

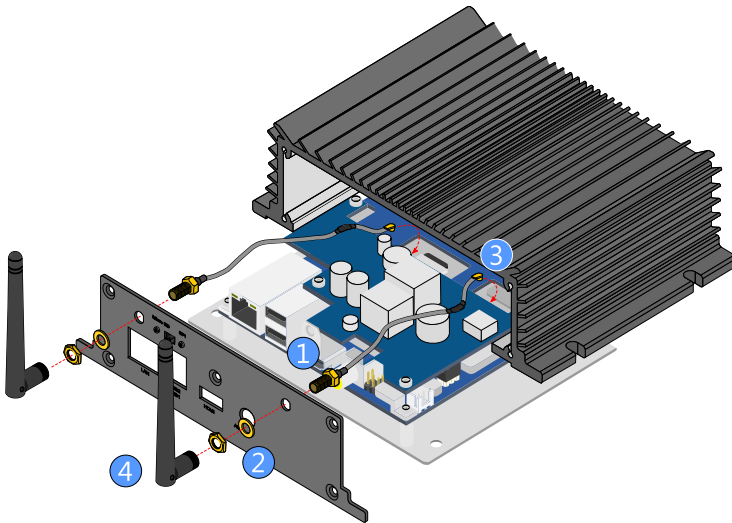


Figure 25: Installing 3G and WLAN antenna

Step 6

Reinstall the top cover chassis and rear I/O face plate then secure it with screws.

Step 7

Gently connect the mini coaxial cables of 3G/WLAN port connectors to the mini RF connectors on the 3G/WLAN module.

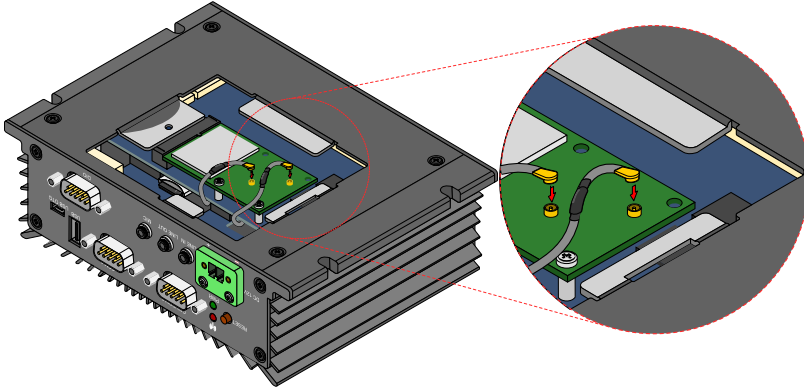


Figure 26: Connecting 3G/WLAN port's mini coaxial cables

Step 8

Reinstall the bottom access cover.

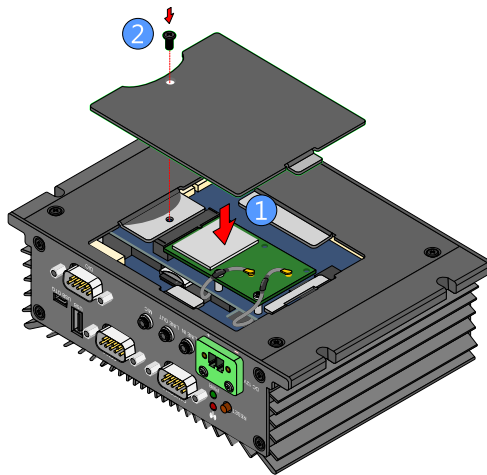


Figure 27: Reinstalling bottom access cover

3.3. Installing the Rubber Feet

Step 1

Locate the area to install the rubber feet.

Step 2

Attach carefully each rubber foot. Firmly press it down to ensure the rubber foot is properly in place.

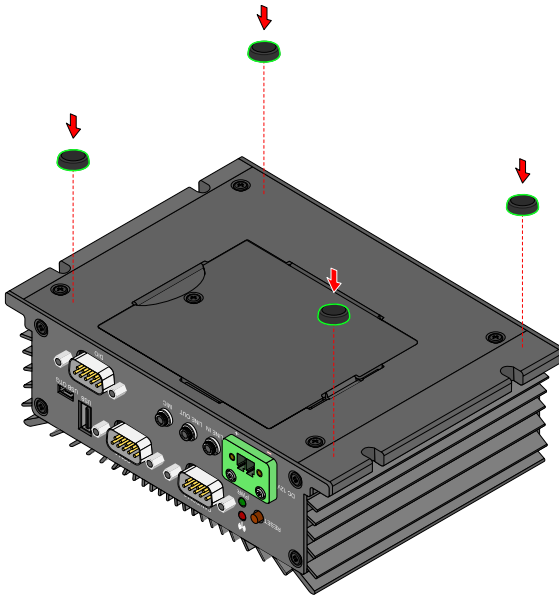


Figure 28: Installing the rubber feet

3.4. Mounting the AMOS-820 on Wall/Table

The AMOS-820 system has multiple mounting options. Using four mounting screws, the AMOS-820 system can be mounted on walls, tables or any flat surface suitable for mounting.



Reminders:

1. Make sure to remove the rubber feet before mounting the AMOS-820 system. The rubber feet are not required when mounting the system on walls or tables.
2. Do not use other types of screws on mounting the AMOS-820 system aside from the provided screws to avoid any damages.

Step 1

Find a suitable surface to mount the AMOS-820 system. Drill four holes on wall or table. Ensure that holes diameter and the distance between holes perfectly match with the AMOS-820 screw diameter and mounting holes.

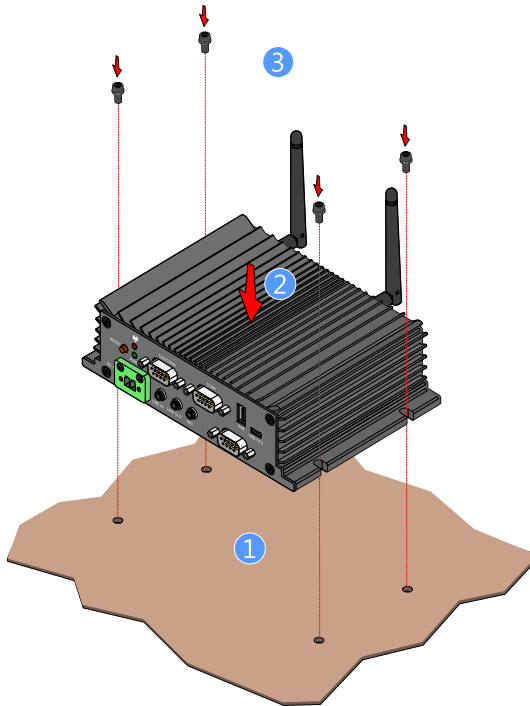


Figure 29: Mounting the AMOS-820 system

4. Software and Technical Supports

4.1. Linux Driver Support

The VIA AMOS-820 system is highly compatible with Android 4.X and Embedded Linux 3.X.

4.1.1. Driver Installation


Support and drivers are provided through various methods including:

- Drivers provided by VIA
- Using a driver built into a distribution package
- Visiting www.viaembedded.com for the latest updated drivers
- Installing a third party driver (such as the ALSA driver from the Advanced Linux Sound Architecture project for integrated audio)

4.2. Technical Supports and Assistance

- For utilities downloads, latest documentation and new information about the AMOS-820, go to <http://www.viaembedded.com/en/products/systems/>
- For technical support and additional assistance, always contact your local sales representative or board distributor, or go to <http://www.viaembedded.com/en/service/contact.jsp> to fill up the form request.

For OEM clients and system integrators developing a product for long term production, other code and resources may also be made available. Contact VIA Embedded to submit a request.

 **Taiwan Headquarters**

1F, 531 Zhong-Zheng Road
Xindian, Taipei, 23148
Taiwan

TEL: 886.2.2218.5452
FAX: 886.2.2218.5453
Email: embedded@via.com.tw

 **USA**


940 Mission Court
Fremont, CA 94539
USA

TEL: 1.510.683.3300
FAX: 1.510.687.4654
Email: embedded@viatech.com

 **Europe**

In den Dauen 6
53117 Bonn
Germany

TEL: 49.228.688565.0
FAX: 49.228.688565.19
Email: embedded@via-tech.eu

 **China**

Tsinghua Science Park Bldg. 7
No. 1 Zongguancun East Road
Haiden District, Beijing, 100084
China

TEL: 86.10.59852288
FAX: 86.10.59852299
Email: embedded@viatech.com.cn

 **Japan**

3-15-7 Ebisu MT Bldg. 6F
Higashi, Shibuya-ku
Tokyo 150-0011
Japan

TEL: 81.3.5466.1637
FAX: 81.3.5466.1638
Email: embedded@viatech.co.jp

 **Korea**

2F, Sangjin Bldg., 417
Dogok Dong, Gangnam-Gu
Seoul 135-854
South Korea

TEL: 82.2.571.2986
FAX: 82.2.571.2987
Email: embedded@via-korea.com