

USER MANUAL:

myPhone Fun 2



Tech specification:

- **RAM Memory: 512 MB**
- **4GB internal memory**
- **1750mAh battery**
- **input and output charger parameters: 100-240V AC, 50/60Hz, 150mA**
 - **output: 5V DC, 1000mA**
- **Power the phone under standard conditions:**
 - **5V DC, 500mA**
- **Smartphone`s weight: 219g netto/371g brutto**

SIM card inserting

myPhone FUN2 is a mobile phone using Dual SIM technology. Dual SIM allows you to use two mobile networks at the same time. To insert the SIM card correctly follow the instructions:

- Turn off the phone, remove the back cover (undermining the slot located in the left corner of the base of the phone with your nail) and pull out the battery.
- Insert the SIM card into the slot following the pictures from above and below the socket.



MICRO SIM ADAPTERS

Do not install hollow (with no card) micro-SIM card adapter in your smartphone. This will cause a jam. Attempt to draw jammed adapter back from the slot can cause mechanical damage of the phone. If SIM card adapter deadlocks in the socket, you should contact an authorized myPhone service!

Memory card inserting

Use only memory cards compatible and approved by myPhone. Incompatible memory card may damage itself and the device and remove stored data. Incompatibility of memory card can be caused by incorrect card format (micro SD format is required) or unsupported card size (over 32GB). To insert the memory card

correctly follow the directions:

- Turn off the phone and take off the back cover (undermining the slot located in the left corner of the base of the phone with your nail).
- The memory card slot is located above the battery on the right. Following the drawing insert the memory card into the slot.

Battery inserting

To insert the battery:

- Turn the phone back cover up.
- Take off the back cover (undermining the slot located in the left corner of the base of the phone with your nail).
- Insert the battery (pay attention to the correct orientation of the battery contacts and phone contacts – these should be adjacent to each other).
- Replace the back cover.

Battery charging

The battery should be charged prior to the first turning on the device. Charge the battery with the kit charger. The device has a battery capacity of 1750mAh. In case of any problems with the battery - the device must be provided to myPhone service center.

Use only chargers and cables approved by myPhone. Using unapproved chargers or cables could cause an explosion or damage the battery in other way.

Front view:



Rear view



Number	Symbol	Function
1		Touch screen 4.5"
2		Digital camera lens 0,3Mpx
3		Internal speaker
4		microphone
5		Menu Button
6		Home Button
7		Back Button
8	-	Volume control
9	-	Keypad lock
10		Multifunctional micro-B USB slot
11		Headphones slot mini jack 3.5mm
12		Digital camera lens 5.0Mpx
13		External speaker

 The SIM card must be inserted in such a manner as shown in the figures above and below the SIM socket. There are two SIM card slots: SIM1 supports WCDMA and GSM, and SIM2 supports only the GSM network.

Turning on/off the phone

To turn on the phone press and hold (for about 3 seconds)the

keypad lock key. To turn the phone off press and hold (for about 3 seconds) the keypad lock key and select: **[Power off]**.

Indicator icons

Icon	Description
	Battery status
	Active connection to a Wi-Fi network
	New e-mail
	New SMS
	Network signal strength
	Active 3G network
	Active 2G network
	Missed call
	Active call
	Held call
	The device is connected to a computer
	Active Bluetooth mode
	Active alarm
	Flying mode
	Speakerphone
	Sound profile set to vibrations

Declaration of conformity with EU Directives



myPhone Sp. z o.o. declares that this product is compatible with the essential requirements and other important recommendations of the European Directive 1999/5/EC – and all other EU directives.

On the website: www.myphone.pl/certyfikaty.aspx you can see the declaration of compliance for a given product, choosing its name from the list.



Attention: Some of the alerts in your phone may appear in English.

Numer Deklaracji 17/03/2014
Number of Declaration of Conformity

Data wystawienia deklaracji 13-03-2014
(date of issue of declaration)

DEKLARACJA ZGODNOŚCI WE

EC DECLARATION OF CONFORMITY

My/We, **myPhone Sp. z o. o.**
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

telefon komórkowy / GSM mobile phone
(nazwa wyrobu / name)

myPhone FUN II
(typ wyrobu / type of model)

spełnia wymagania następujących norm:

to which this declaration relates is in conformity with the following standards:

Safety: EN 60950-1:2006+A11:2009+A1:2010+A12:2011

SAR: EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 62311:2008
EN 62479:2010
EN 50566:2013

EMC: EN 301 489-1 V1.9.2
EN 301 489-3 V1.4.1
EN 301 489-7 V1.3.1
EN 301 489-17 V2.2.1
EN 301 489-24 V1.5.1
EN 301 489-34 V1.1.1

RADIO: EN 301 511 V9.0.2
EN 301 908-1 V5.2.1
EN 301 908-2 V5.2.1
EN 300 328 V1.7.1
EN 300 440-1 V1.6.1
EN 300 440-2 V1.4.1

jest zgodny z postanowieniami następujących dyrektyw:
following the provisions following directives:

Dyrektywa R&TTE 1999/5/EC - Artykuł 3.1a, 3.1b, 3.2

Rok, w którym umieszczono oznaczenie CE na produkcie: 2014

13-03-2014 Warszawa
(data i miejscowość / date, place)

Olga Olkowska

(podpis sygnatariusza)
(signature of the signatory)

myPhone sp. z o.o.
ul. Nowogrodzka 31, 00-511 Warszawa
NIP 895-18-45-043, REGON 020167256