



User Manual

*Includes Extended Metals, Dual Temp Viscometer, VIN Decoder, Particle Counter,
MetalLab and Viscometer Only*

OSA4™ VERSION 6.1

Original Instructions

Guide to the OSA4™ Analyzer

CE certified

ASTM D7417-10

PREFACE

This user manual is the first part of the complete guide to the OSA4™ Analyzer. This manual is intended to guide operators of the Analyzer through the normal procedures associated with processing oil samples.

This manual is intended for mechanics, technicians, or anyone else who wants to learn the proper way to analyze oil samples using the OSA4™ Analyzer. The introductory sections of this manual orient the user with the equipment and supplies that are used. The Standardization section covers the procedures that give the user confidence that the Analyzer is performing to specifications. The largest section of this manual is the How To... section. The reader is taken through a step-by-step process of how to analyze an oil sample. The Printing and Flushing sections complete the start-to-finish organization of this manual.

This manual includes features that are designed to aid the reader in quickly referencing helpful information. The outlining is extensive so that the reader can easily find the topic of interest. Useful tips are emphasized in boxes entitled “Key to Successful Oil Analysis.” The electronic version of this document includes hyperlinks and bookmarks to further speed the reader’s access to information.

© Copyright 2008
On-Site Analysis, Inc.
7108 Fairway Drive
Suite 130
Palm Beach Gardens, FL 33418
561-775-5756

On-Site Analysis, Inc. declares that their OSA4™ Oil Analyzer with the following models:

MotorCheck™, TruckCheck™, MilitaryCheck 3M™, MetalLab™, and MicroLab™ are classified within the following directives:

EU Low Voltage Directive 2006/95/EC
EU Electromagnetic Compatibility Directive 2004/108/EC
EN 60950-1:2006 - EN55022 (2006) +A1:2007 - EN 55024 (1998) + A2:2003

User Manual Outline

I-Introduction	
Overview.....	4
Safety Information	5
Analyzer Features.....	6
II-Getting Started	
Routine Tasks	8
Necessary Supplies	11
The Main Menu	13
III-Standardization	
Explanation	14
Baseline Test.....	14
Verify Metals	16
Standardize.....	17
IV-How to Analyze an Oil Sample	
Collecting the Oil Sample and Data.....	18
Sample Introduction.....	18
Test Selection.....	19
Sample Data Entry.....	21
Review Entries	28
Start Analysis.....	29
Cleaning the Electrodes.....	30
The Analysis Cycle.....	31
On Screen Reporting.....	31
V-Printing Reports	
Optional Report Formats.....	33
Printing History Reports.....	34
VI-Flushing	
AutoFlush	36
Manual Flush.....	36
IR Night Flush	36
VII-Off Road	
Test Selection	37
Select a Customer	38
Entering Off Road Vehicle Info	40
Selecting Machine Info	41
VIII-Extended Metal Standardization	
Explanation.....	45
Standardization.....	46
VIV-Dual Temperature Viscometer	
Viscometer Only.....	54
Operation.....	55
Standardization.....	56
X-VIN Decoder Software	
Operation.....	60
XI-Addendums	
Addendum A (Particle Counter Operations & Requirements).....	67
Addendum B (Over Pressure – Sample Intake Assist).....	68

I. INTRODUCTION

OVERVIEW

This is the User Manual for the OSA4 Analyzer. The OSA4™ oil Analyzer is a tool for evaluating the condition of engines, transmissions, gearboxes and hydraulics. The Analyzer tests for wear debris and other contaminants in the oil. The Analyzer also tests the physical properties of the oil itself. By comparing test results to normal conditions, the OSA4™ Analyzer can recommend if any maintenance or repair actions are necessary.

The OSA4™ Analyzer is a tandem spectrometer that integrates an Optical Emissions Spectrometer (OES) and an Infrared Module. The OES burns a portion of the used oil sample and measures the concentration of sub-microscopic metals in solution. These metals are present due to component wear, normal and abnormal, inside the engine or transmission. The Infrared Module scans a portion of the used oil sample to measure the physical properties of the oil and look for contaminants.

An onboard computer controls both spectrometers and tabulates the results gathered from each. Information about the oil and the vehicle provided by the operator, along with the test results, are evaluated by the Analyzer's proprietary software. The software generates a report that includes the test results and a diagnostic statement. The diagnostic statement is a summary of the test results and an evaluation of the condition of the engine or transmission being tested. The diagnostic statement may also recommend maintenance for specific engine or transmission components.

This manual is about operating the OSA4 Analyzer. The introduction will acquaint you with the features of the Analyzer and bring your attention to safety concerns. The Getting Started section will instruct you on the simple tasks associated with operating the Analyzer and how to use the other items supplied with it. Standardizing the Analyzer is an important first step in getting comfortable with its operation. In the following sections you will be given details on how to properly analyze a sample of oil and produce useful reports.

SAFETY INFORMATION

To reduce the risk of injury, do not open the instrument enclosure or remove access panels. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING LABELS

Special labels are placed where hazards exist.



This symbol warns that dangerous voltages are near that present a risk of electrical shock or personal injury.



This symbol warns that hazards are near which are described in instructions accompanying the equipment.

SPECIFIC WARNINGS

Do Not Defeat the Spark Door Interlocks

Defeating Spark Door Interlocks may expose the user to UV Radiation that can cause permanent eye damage.

Defeating the Spark Door Interlocks may expose the user to voltages that are lethal.

Operate in a Well Ventilated Area

The Analyzer produces ozone when high voltage is arcing across the electrodes.

Do Not Introduce Flammable Fluids into the Analyzer

Never attempt to introduce fuels such as gasoline, kerosene, and diesel fuel into the Analyzer. Fuels may ignite and explode causing injury.

Only introduce used oil samples from diesel engines, gasoline engines, gearboxes, hydraulics and transmissions.

Key to Successful Oil Analysis:



Never attempt to introduce anti-freeze, water, brake fluid, or fuel into the Analyzer. These fluids will cause irreparable damage.

ANALYZER FEATURES

The basic features of the OSA4™ Analyzer are listed here. You should be familiar with these features, as you will need to interact with them routinely during the normal operation of the Analyzer.

The photo at the end of this section illustrates the location of each of the following features of the OSA4™ Oil Analyzer.

Spark Door

This door should be closed at all times unless performing routine maintenance.

Sipper Straw

The Oil Straw draws sample oil into the Analyzer where it is pumped through the flow system for analysis. This is a consumable item and has to be replaced for every sample.

Waste Bottle

Oil that has been analyzed and flushing solution that has been purged through the flow system drains into this container.

Flush Bottle

The Flush Bottle contains a flushing solution (CheckFlush) used to clean out the flow system and is used during the low standardization process. This bottle needs to be checked on a daily basis.

ON / OFF Switch – Reset Button

The power switch is an illuminated rocker switch located on a recessed bulkhead along the right side of the Analyzer.

DTV Flush Bracket

This bracket is included with units that have an optional Dual Temperature Viscometer. It allows for a larger flush bottle to be attached to the side of the OSA4.

Waste Port

This port can be set up by an OSA engineer to allow for larger waste containers. A special tube is inserted in the interior of waste door and this port becomes active. The port is equipped with a female 3/8-18 NPT.

Keyboard

Keyboard is used for entering information and operating the Analyzer.

Display


The flat panel LCD touchscreen displays operator keyed information and Analyzer status.

Printer (not shown)

Analysis reports are printed from a printer located near the Analyzer. Typically, the printer sits on the shelf of a cart supporting the Analyzer.

Modem/Network (not shown)

A computer modem connection to the Analyzer facilitates problem diagnosis and maintenance from remote customer service centers. A dedicated telephone line or a network IP address connected to the Analyzer via the modem/network connection on the back panel is a requirement at Analyzer placement sites.

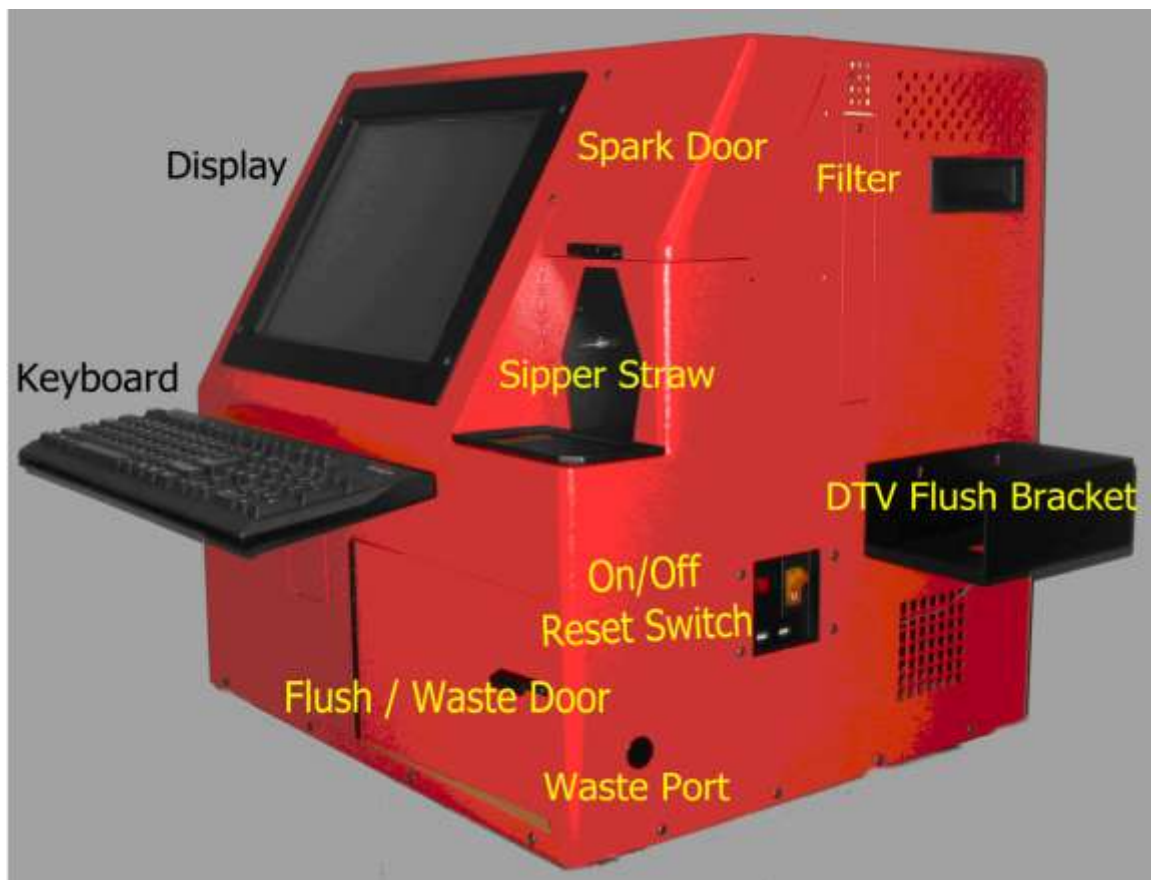

II. GETTING STARTED

ROUTINE TASKS

Emptying the Waste Bottle

The waste bottle collects the used sample oil and flushing solution that has been circulated through the flow system. There is a sensor to alert you to empty the waste bottle. The waste bottle is accessed behind the Flush / Waste Door. Check the waste bottle occasionally to be sure that the sensor is working properly.

Replacing the Flush Bottle

The Flush Bottle contains the fluid that cleans the instrument between samples and is used during low standardization. There is a sensor to alert you to a low level of flushing solution. The waste bottle is accessed behind the Flush / Waste Door. Check the flush bottle regularly and replace it when it gets low. If your unit is equipped with an optional DTV - the flush is located on the right side in the DTV Flush Bracket.

Key to Successful Oil Analysis:




Keep an adequate level of flushing solution in the flush bottle. An inadequate level of flush will cause cross-contamination between oil samples.

Maintaining the Electrodes

The software will prompt you when required adjustments are needed. If it is necessary to adjust the electrode gap then you must also standardize the Analyzer. Refer to the Standardization section of this manual for details.

The electrodes are on a stand inside the Spark Door. The upper and lower electrodes are positioned vertically – one above the other.

The gap is the distance between the upper and lower electrodes. The gap should be no more than 5/32 of an inch. The flat end of the gap tool (supplied with instrument) can be used as a “Go/No-Go” gauge for measuring the electrode gap. A 5/32 allen wrench is used to loosen the screw that holds the upper electrode and is included with the Analyzer’s supplies.

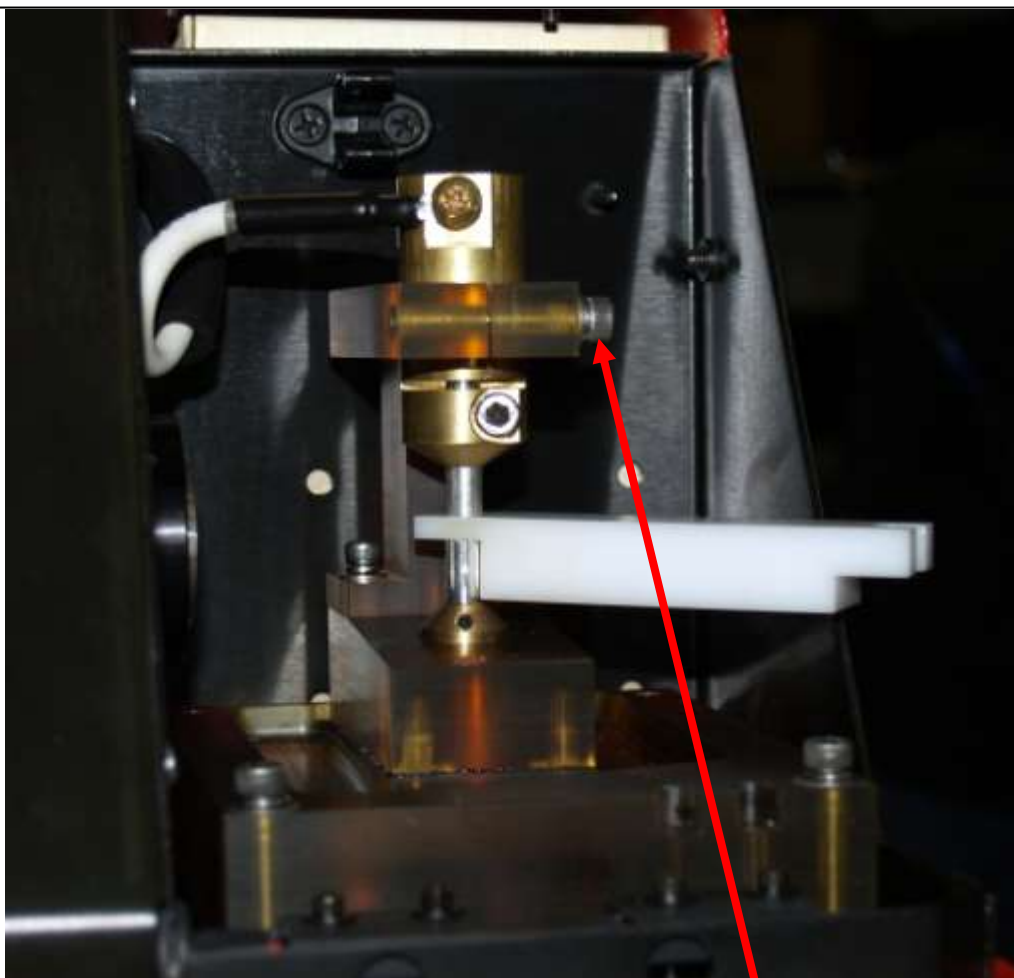


The flat end of the white electrode gap tool (shown above) is used as a “Go/No-Go” gauge for measuring the electrode gap. The gap should be set to the distance between the flat sides of the gap tool. As samples are run, the gap between electrodes will increase.

To reset the gap - loosen the upper electrode by turning the 5/32 socket-head cap screw. Let the upper electrode holder slide down till it is flush with the top of the white electrode gap tool. Retighten 5/32 socket head cap screw. Anytime the gap is changed, the unit must be re-standardized.

As described above, the lower electrode will slowly decrease in size with use, widening the gap between the electrodes. Any time a full standardization is required it is recommended to check the height of the lower electrode.

To check lower electrode height – place the grooved (U-shaped) end of the white electrode gap tool (shown below) around the bottom electrode. If the electrode falls below the height of the 'U' shaped tool, then it is time to change the electrode. .

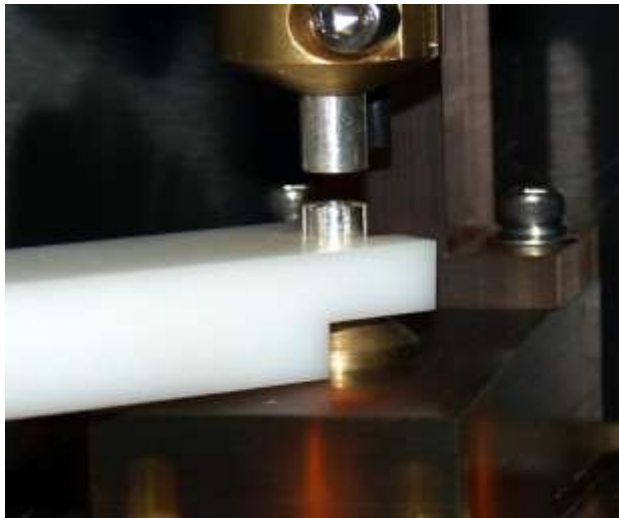


To change electrodes – Start by sliding the upper electrode straight up out of its holder. This is done by loosening the same screw as shown on page 9. After raising the upper electrode out of its holder, remove the lower electrode. The lower electrode has a .05 Allen screw holding it in place. Loosen the Allen screw, and remove the lower electrode by turning counter-clockwise. Anytime you change the bottom electrode, change the upper electrode as well. The upper electrode can be removed from its holder by loosening the screw in the upper holder. The upper electrode is reversible, so pull it out and if it is in good shape place it back in reversed and tighten screw.

Lower electrode Allen screw



Upper electrode screw

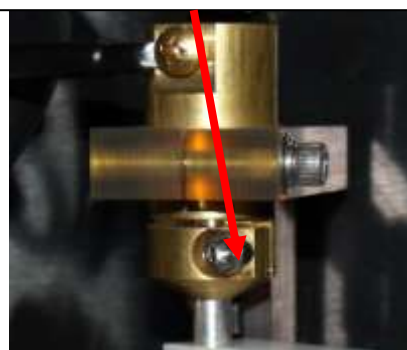

Replace bottom electrode by turning in new one clockwise. Place upper electrode holder back in slot and re-gap between the electrodes making sure to tighten down upper screw holder.

Anytime an upper or lower electrode are replaced- the unit must be Standardized.

WARNING

DO NOT OVER TIGHTEN SOCKET HEAD CAP SCREWS LOCATED ON ELECTRODE HOLDER
socket head cap screw should be finger tight plus ¼ turn with wrench only
over tightening of screw may cause stress/cracking to holder

Servicing the Printer

Re-supplying paper is usually all you need to do for the printer. Check the paper tray and add paper as necessary, following the instructions included with the printer. When the printer needs service, it will indicate with the Light Emitting Diode (LED).

The LED on the printer should stay steadily illuminated when not actively printing a report. The LED blinks on and off while it is actively printing. If the LED is not illuminated, if the LED blinks rapidly, or if the LED blinks for over 2 minutes without printing a report then the printer needs your attention.

Most printing problems are easily remedied. Make sure the printer has paper and is powered on. Turning the printer off and back on can clear up other problems.

Occasionally the toner cartridge and/or printer drum will need to be replaced. Patches of light printing on the report page are indications that the toner cartridge needs to be replaced. If the LED indicator light for a Paper Jam is blinking and you can't find a paper jam, that's an indication that the drum needs to be replaced. Please contact your customer service center for replacement toner cartridges or printer drums.

NECESSARY SUPPLIES

Test Standard (29087-00)

The High Standard solution is a colored base-oil that contains precisely controlled amounts of each of the metals that the Analyzer tests for. An analysis of the High Standard should yield around 50 parts per million of each wear metal.

CheckFlush Solution (29093-00)

The flush solution is a non-toxic, environmentally friendly oil solvent. The flush solution is used to purge the flow system, and run low standard.

Sample Bottles (29002-00)

Sample bottles are typically 1 to 5 ounces in capacity. The Basic Analyzer usually uses less than one ounce of oil for a complete analysis. The sample bottles are pre-cleaned and should not be re-used to avoid contamination.

Report Paper (29009-00)

Report paper is pre-printed having a logo on the front and an explanation of oil analysis results on the back. The explanations are helpful when interpreting oil analysis results.

Input Sheets (29020-00)

Input sheets are half-sheet sized pre-printed forms that are helpful to fill-out when taking oil samples from vehicles. When several samples are being processed it is important that the input sheets can be identified as to which sample bottle they pertain to. Input sheets are available with adhesive bar codes for this purpose.

Cleaning Supplies

- *Cleaning Swabs (29033-00)*
Only certain sized cotton swabs will fit properly through the upper electrode. Care should be taken so that the swab does not get stuck in the upper electrode.
- *Shop Rags or Paper Towels*
Shop rags or paper towels are used to wipe off the top electrodes and clean up any oil spills.

Sipper Straws (29822-00) Box of 350



Sipper Straws are a single use sample intake straw that are swapped out with each individual sample. The straw is removed from the box by holding the bend area and placed directly over the metal intake.

THE MAIN MENU

The main menu of the User Interface is the first screen that is displayed when the Analyzer is powered-up. From the main menu, all of the Analyzers functions can be accessed. The main menu is shown below. Page numbers for description of the main menu features are provided. Some of the items described here are elsewhere in the Users Manual [U.M.]

WHEN THE ANALYZER IS BOOTED FROM THE DESKTOP – THE USER ID AND PASSWORD ARE “1” AND “1”.

THIS MESSAGE BOX WILL APPEAR BRIEFLY AS THE UNIT WARMS UP

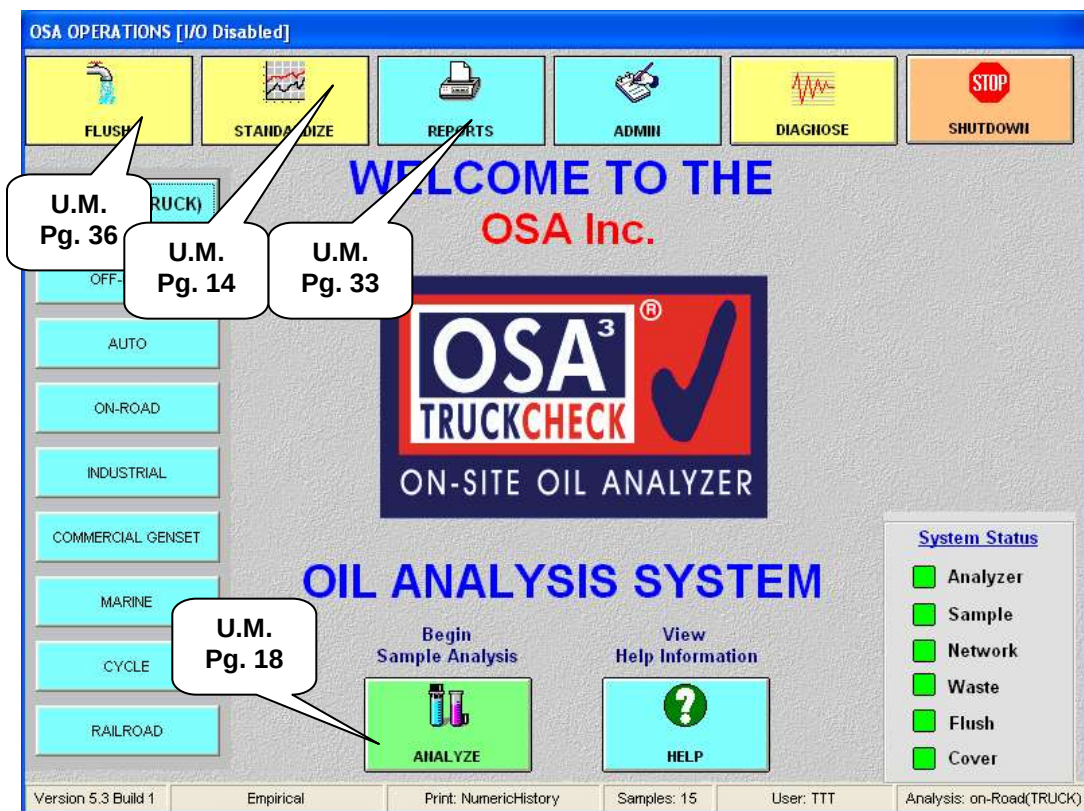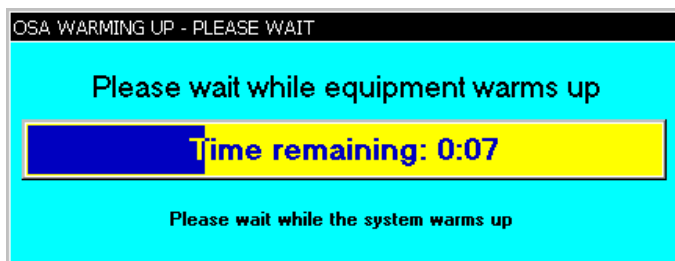

III. STANDARDIZATION

EXPLANATION

Occasionally, it is necessary to standardize the OSA4™ Analyzer in order to compensate for minor changes affecting the Analyzer's calibration.


You do not have to standardize the Analyzer unless 1) you have adjusted the Electrode Gap, 2) the Test Standard routine prompts you to, or 3) the message box tells you to at the beginning of a sample run.

You should run the Test Standard routine 3 days / 72 hours after a Full Standardization, or whenever you question the Analyzer's performance.

Prior to running the Test Standard routine, a Baseline Test should be performed.

CHECK BASELINE TEST

The Baseline Test is used to determine if there is contamination in the flow system or on the electrodes of the Analyzer. It should be performed at the beginning of each day, or any time you wish to confirm that the Auto Flush cycle has sufficiently cleaned the internal lines and electrodes after running a highly contaminated sample. To run this test, simply select the STANDARDIZE button from the Main Menu. The Standardize Options Screen will appear as shown below. Select Check Base Line from the list of options.

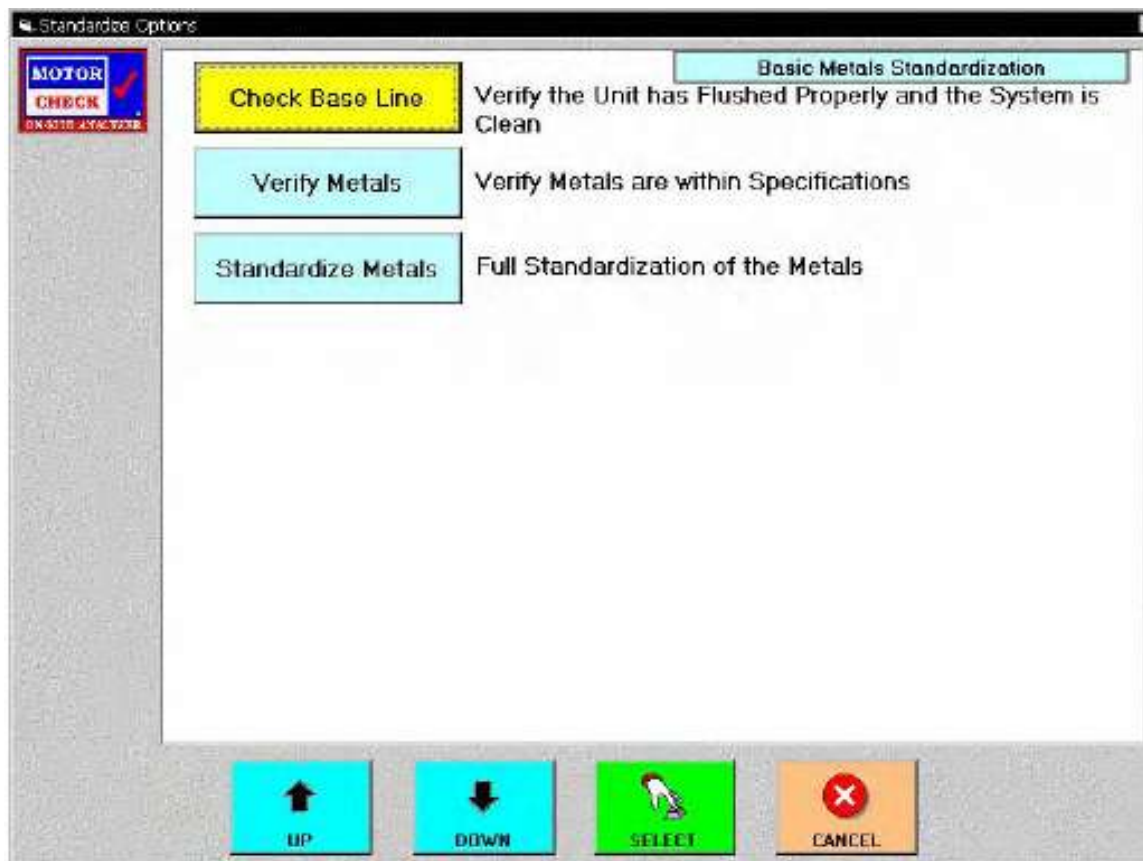

When the Baseline Test begins, you will be given instructions to clean the electrodes. Refer to [Cleaning the Electrodes](#) in the [How to Analyze an Oil Sample](#) section of this manual for a description of the proper technique. Follow the directions on the screen to perform the Baseline Test.

After cleaning the electrodes, press the OK key and the Analyzer will run the test. Press CANCEL if you want to return to the main menu.

At the end of the test, a message box will display informing you if there is contamination, or that the System is clean, OK to proceed. If there is contamination, then the Analyzer will give you instructions to flush, clean the electrodes, and try the test again.




Key to Successful Oil Analysis:


Clean the electrodes thoroughly prior to starting the Baseline test. A dirty electrode will cause the test to fail.

VERIFY METALS

The Verify Metals function allows you to check the Analyzer's standardization. To run this test, choose Verify Metals from the Standardize Options screen and press ENTER. When the test begins, you will be given instructions like those shown on the screen below. Refer to [Cleaning the Electrodes](#) in the [How to Analyze an Oil Sample](#) section of this manual for a description of the proper technique.

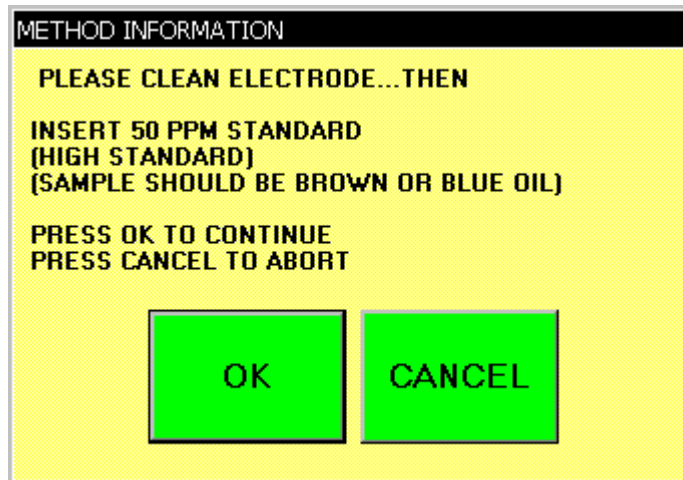


Press the OK key and the Analyzer will run the test, or press CANCEL to return to the main menu. At the end of the test a message box will display informing you if the test of the Analyzer is within specifications. If the Test Standard is not within specifications, then a message box will provide you with instructions to try the test again or to proceed to Standardization.

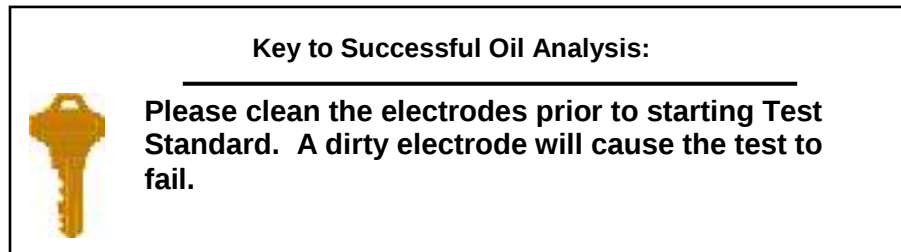

STANDARDIZE

To standardize the Analyzer, select Standardize from the Standardize Options screen. When the standardization process begins, you will be given instructions like those shown on the screen below. Press OK to continue or CANCEL to return to the main menu.

Standardization is comprised of two parts, Low Standardization and High Standardization. All the operator has to do is insert a clean sipper straw into the Test Standard fluid (Blue 50 ppm standard), connect to the silver sipper nozzle and follow the instructions. Carefully follow all on-screen instructions completely. The total process will take about 15 minutes to complete. Upon completion, the Analyzer will display a message stating whether or not the standardization was successful. If unsuccessful, the software will prompt you on what to do next.

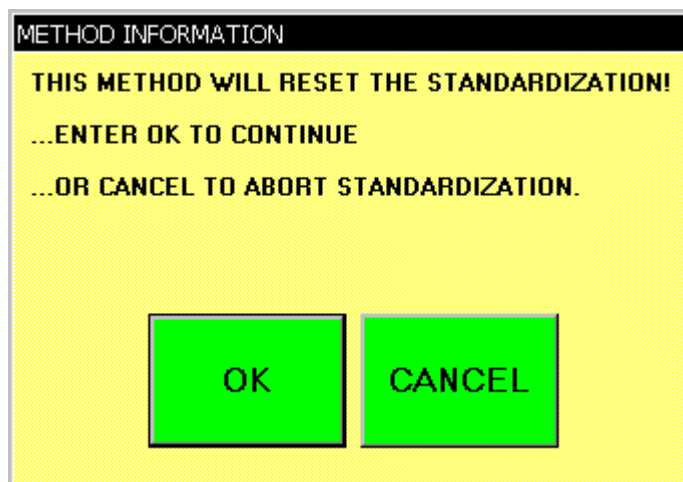

IV. HOW TO ANALYZE AN OIL SAMPLE

COLLECTING THE OIL SAMPLE & SAMPLE DATA


To analyze oil from an engine or transmission, you must first obtain a sample. There are two methods for sampling the oil. You can either catch a sample during a drain or you can pull a sample through the dipstick. Provisions for sampling have either been provided with the OSA4™ Analyzer or you may obtain sampling kits from your retailer.

Refer to the Training Manual or other supporting documents for detailed instructions.

SAMPLE INTRODUCTION



When you have a sample to analyze, remove the lid from the bottle, and shake the sample thoroughly. Select a sipper straw from the box attached to the right side of OSA by grabbing it at the bend of the straw where the ridges are located. Place the straw into the bottle - long side down - and slide the straw onto the silver sipper nozzle as shown below.



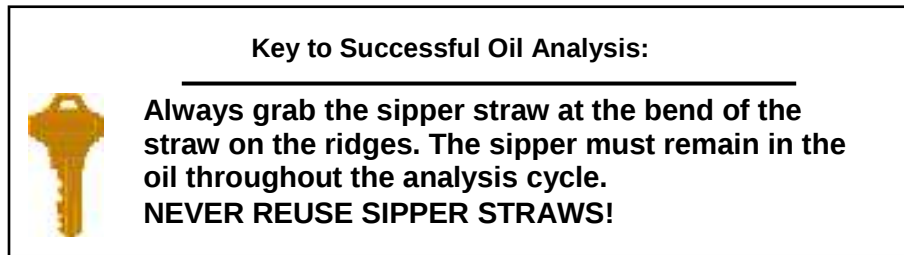


TEST SELECTION

The analysis of your oil depends on what type of sample it is. You must specify if the sample comes from a transmission, gasoline, diesel engine or power steering fluid. Press the green ANALYZE button from the main menu and 2 message boxes will appear stating Test Baseline status and Verify Metals Status.

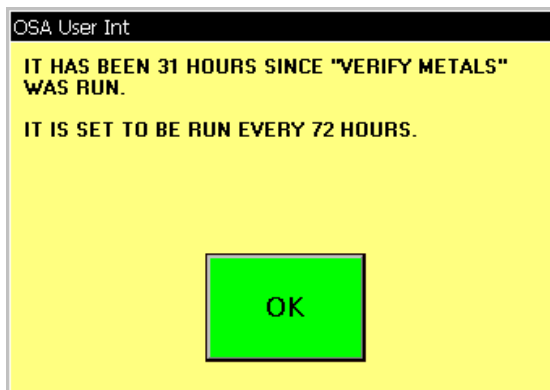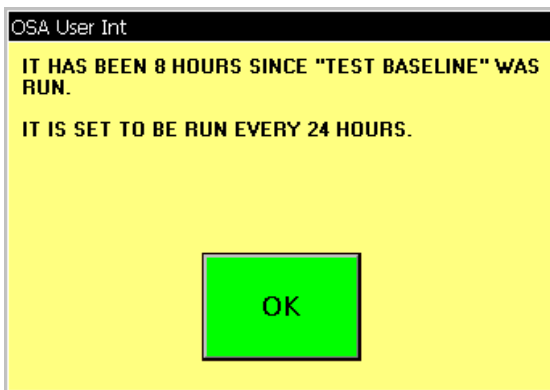

These messages keep track of time since last Test Baseline and last Verify Metals were run. If you exceed the time limit- a message will appear stating that you need to run the test(s). It will allow you to run 5 more samples before stopping Analysis. Select OK on each.

A Checklist will now be shown giving you buttons to select once you perform the listed tasks. Perform the tasks then select OK.

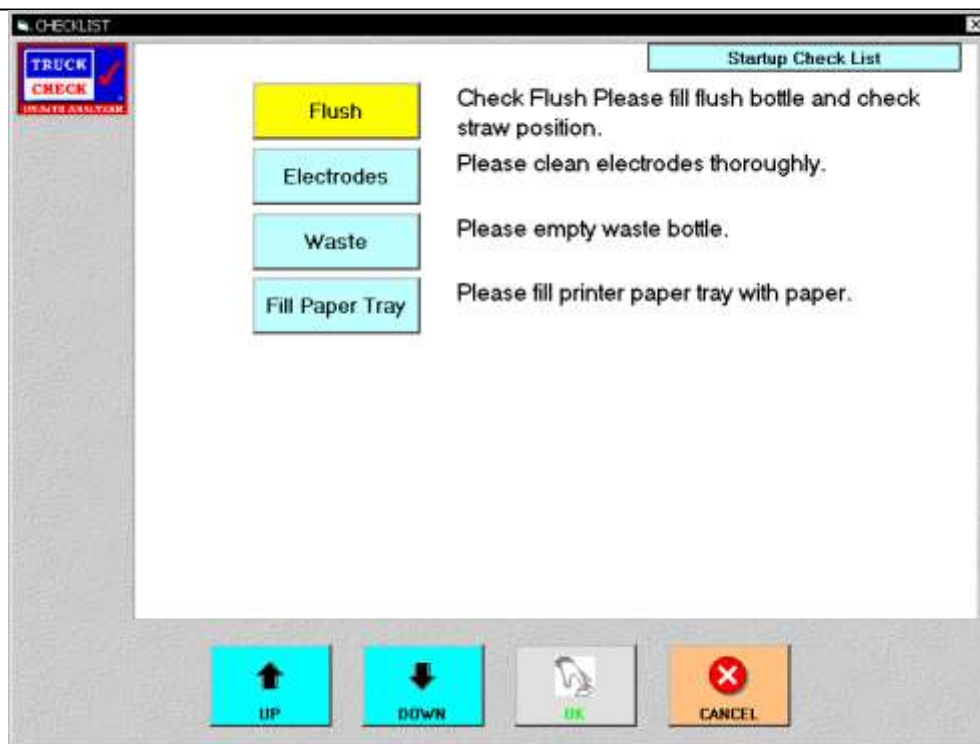

Select the GASOLINE key on the keypad to analyze a sample of crankcase oil from gasoline powered cars and light-duty trucks. Select the DIESEL key to analyze a sample of crankcase oil from a diesel powered car, medium- or heavy-duty truck. Select the TRANSMISSION key to analyze a sample of transmission fluid. Select the POWER STEERING FLUID key to analyze a sample of power steering fluid. The Re-Run Last Sample Button allows you analyze the last sample again without having to re-enter all of the sample information.

The Main Menu page (shown on page 13) is where the initial application is first selected. The available modes are –

ON-ROAD (which includes Bus, RV, and Trucks)

OFF-ROAD

AUTO

INDUSTRIAL

COMMERCIAL GENSET

MARINE


CYCLE

RAILROAD

The following example is in ON-ROAD Trucking Mode.



After making selection, a message box will appear giving last standardization information. Select OK – If you have exceeded allotted time- you will be asked to Standardize.

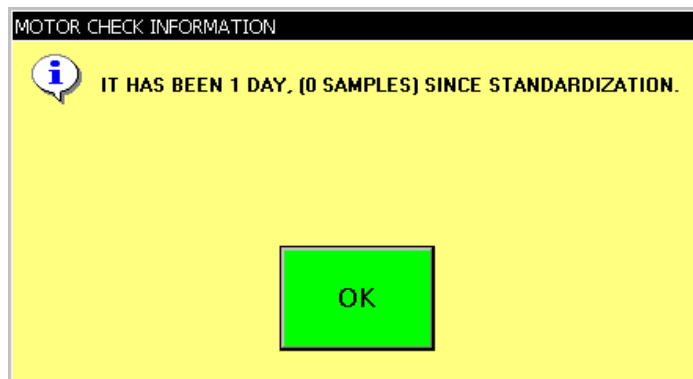

SAMPLE DATA ENTRY

Information about your sample of oil must be entered prior to starting the analysis. The information you provide is vitally important to the analysis. The more accurate the information, the better the analysis.

Sample data includes information about the customer, the vehicle, and the oil. The system keeps lists of your customers and their vehicles. These lists keep you from having to re-enter information.

The lists can also be sorted by Customer Name, Customer ID, or right and left justified VIN number.

SELECT A CUSTOMER

When selecting a customer, you have two options: Select a customer from the list, or add a new customer.

If the Customer ID you want is not displayed in the box, but it is in the customer list, then highlight the customer you want by using the UP and DOWN Arrow Keys, or entering the first letter(s) of the customer name and use the ENTER key to make your selection. Press OK to continue.

If the customer you want is not displayed in the list of customers, then you must add your customer name to the list. Press the New Customer button to add your customer.

Each option is discussed in detail below.

SELECT A CUSTOMER



Select a Customer from the List

LIST SORTED BY: Customer Name

ENTER CUSTOMER NAME:

Customer ID	Customer Name	Address	City	State	Zip Code	Phone	Fax
CHE001	ABC TRUCKING C	123 MAIN STR	ANYWHERE	GA	55555	555-555-1111	555
TRA001	DEF TRUCKING	567 NORTH L	PLEASANTVILLE	MA	44444	555-222-5555	555
IND001	INDUSTRIAL TRU	987 ELM WAY	NICEVILLE	FL	33333	555-111-2222	555



Listed Customer

Listed customers are the names of customers that have had their oil analyzed previously. Choosing from the list keeps you from having to enter the customer's information each time their oil is analyzed.

Using the UP and DOWN arrow keys, see if the customer you want is on the list.

If the customer name you want is on the list, then highlight the name, select it by pressing SELECT.

If the customer's name you want is not on the list, then press the NEW CUSTOMER key to enter a new customer.

If you want to edit the highlighted customer select the EDIT CUSTOMER key.

New Customer****Note - Never use quotation marks “ ” in Customer Name****

If a customer has not had their oil analyzed previously, their name is probably not on the list. The first time a customer has their oil analyzed you must enter all of their information. Once you have entered the customer's information, the Analyzer will keep it on the list for the next time. The new customer information screen is shown below.

Enter the customer's last name or enter a company name and press ENTER to move to next field.

Enter the customer's first name (if a last name was entered) or press OK to leave it blank.

The Analyzer's software will automatically assign a Customer ID. Press OK to continue. Enter the rest of the information using the Tab key to move through the fields.

When you are finished entering or selecting a customer name, Press OK to continue to the Vehicle Data Entry portion.

CUSTOMER INFORMATION



New Customer Information

Company/Last Name:
(Company or Last name) (First name)

Customer ID:

Street Address:

City: State:

Zip Code:

Phone:

Fax:

E-Mail:



ENTERING VEHICLE INFORMATION

Unit Information screens are shown below. The screens are different depending on which test you have selected. The screen below is for On-Road Trucking. On the Unit Information screen, you provide information about the vehicle. If the information about this vehicle has been previously entered, then the information is filled-in for you when you select the vehicle from the list. In this case, you simply have to enter in the current Miles / Hours / Kilometers on the Engine or Transmission – or Miles, etc. since the last overhaul. If the vehicle is not listed, then you must enter all the information manually.

VEHICLE UNIT INFORMATION

On-Road TRUCK Diesel Unit Information

Customer Name: LANDSTAR SYSTEMS, **Phone:**
Street Address: 13410 SUTTON PARK AVENUE **Fax:**
City, State, Zip: JACKSONVILLE, FL 32224

Select a Vehicle **VIN #** **Fleet Unit ID:**

Truck Make: GENERAL **Truck Year:**

Truck Model: GENERAL **Capacity Units:** ☒ Quarts ☐ Liters ☐ Gallons

Engine Make: GENERAL **Sump Capacity:** Quarts

Engine Model: GENERAL **Usage Miles:**

Hour On Oil:

Usage Units: ☒ Miles ☐ Hours ☐ Kilometers

Turbo: ☐ No ☒ Yes

CUSTOMER INFO **UP** **DOWN** **OIL INFO** **CANCEL**

Enter ID for this Vehicle **Such as VIN, Customer Unit Number, etc.**

Selecting Vehicle Information from a List

Each customer may have one or several vehicles. A Vehicle ID is a way of identifying a specific customer's vehicle. New customers will not have any vehicles listed and you will have to manually enter the vehicle information. After you select the desired Customer the 'Select a Vehicle' will flash red and all the known Vehicles will appear on the list. Existing customers will have a list of Vehicle IDs associated with their name.

Use the UP and DOWN arrow key to view the list of Vehicle IDs or simply enter the first several numbers or letters of the Vehicle ID. If the vehicle you want is on the list, then highlight the desired Vehicle ID and press SELECT. After selecting a vehicle from the list and pressing SELECT, the Unit Information screen is re-displayed with the vehicle information you selected.

Manually Entering Vehicle Information

On the Sample Data Entry screen, information about the vehicle is entered along with information about the oil. Enter the information as complete and accurate as possible. If you are not sure about some of the information, you may leave the entry as "UNKNOWN" but all fields must have an entry.

Depending on the type test selected (Gasoline, Diesel Engine, Gearbox, Hydraulic or Transmission) different information is requested in the Unit Information screen. Not all of the following information items will be requested on every analysis.

VEHICLE MAKE AND MODEL

Select the vehicle make and model from the drop-down list. Use the drop-down arrow key to view the list of vehicle makes. Scroll through the list using the arrow keys and select an item. Now select the vehicle model using the same keys and press down to continue. You can also select makes and models by entering the first letters or numbers of the type you want; for example press C to go to the beginning of the C makes.

If the item you want is not in the drop-down list, you must specify it as "UNKNOWN," or "General" or select CUSTOM and an extra field will appear for filling out custom entries.

ENGINE MAKE AND MODEL (DIESEL ENGINE ONLY)

Select the engine model from the drop-down box. If you do not know the model or your model is not on the list, you must specify unknown.

VEHICLE YEAR (DIESEL ENGINE ONLY)

Enter the vehicle year information in the appropriate box.

CAPACITY UNITS / SUMP CAPACITY

Enter in the appropriate units.

USAGE UNITS / VEHICLE MILES

Select the appropriate units using the arrow keys to designate whether the maintenance interval is measured in miles, hours, or kilometers, then enter the miles (or hours) that have accumulated on the engine.

Key to Successful Oil Analysis:

A re-built engine or transmission may have less miles/hours on it than the vehicle does. Where appropriate, enter Miles/Hours since last re-build.

ENGINE SIZE (Gasoline Only) AND TURBO CHARGING

Enter the engine size in liters, and specify whether or not the vehicle is turbocharged.

When the Unit Information Screen is complete, Select OIL INFO to continue.

OIL SAMPLE INFORMATION



Truck Diesel Engine Oil and Analysis Information

Customer Name: ABC TRUCKING COMPANY.
Street Address: 123 MAIN STREET
City, State, Zip: ANYWHERE, GA 55555
Phone Number: 555-555-1111
Fleet Unit ID: A345
Vehicle Make: FREIGHTLINER
Vehicle Model: FL 106
System Make: DETROIT DIESEL
System Model: SERIES 60

Fax Number:
Time on Unit: 354216
Unit ID: 569008

Bay # 21

Oil Brand: CHEVRON
Oil Type: RPM DELO
Oil Weight Selection: ☐ All Weights ☒ Common Weights ☐ Specific Weights
Oil Weight: 15W40

Operator/Driver Name: JIM
Date Taken: FEB-14-2003
Usage Units: ☒ Miles ☐ Hours ☐ Kilometers
Miles on Oil: 14256

Enter miles on oil Must be numeric

ENTERING OIL SAMPLE INFORMATION**Oil Brand, Type, and Weight**

Select the oil brand, type, and weight of your sample. In the Oil Weight Selection box you can scroll between selections to designate what type of weights will be displayed in the Oil Weight field. If you do not know the any of this information you may leave it as “unknown.”

Usage Units and Miles on Oil

Enter the number of miles (or hours) that have accumulated on the engine or transmission since the last oil change. If the unit has been run before, the miles or hours will be automatically generated from previous history.

User Sample ID

A User Sample ID is a way of uniquely identifying a sample. This ID may be a bar code that is affixed to the sample bottle and data entry sheet.

Operator Name

Enter the name of the vehicle's driver here. The information is useful for fleet owners who may have several drivers for each vehicle.

After completing the Oil Sample Information screen, press Analyze to continue.

CUSTOMER NOTES

REVIEW ENTRIES

The Analyzer checks the information you entered when you exit the data entry screens. If there are no data entry omissions, the Oil Analysis Activation Screen is displayed. Your sample, vehicle, and oil data will be shown on the screen. Review this information for accuracy.

If you need to make corrections, press the OIL INFO button. If the information is correct you can now press START to continue with the analysis.

OIL ANALYSIS ACTIVATION



Sample ID: 978
Truck Diesel Engine

Customer Name: ABC TRUCKING COMPANY,
Street Address: 123 MAIN STREET
City, State, Zip: ANYWHERE, GA 55555
Email address:
Phone Number: 555-555-1111
Fleet Unit ID: A345
Unit Make: FREIGHTLINER
Unit Model: FL 106
System Make: DETROIT DIESEL
System Model: SERIES 60
Oil Brand: CHEVRON
Oil Type: RPM DELO
Oil Weight: 15W40


Fax Number:
Sample date: FEB-14-2003
Time on Unit: 354216 M
Unit ID: 569008
Oil Time: 14256 M
User Sample: 21
Date Taken: FEB-14-2003

Press START to Begin Analysis



START ANALYSIS

When the analysis starts, you will be prompted to perform a few necessary tasks. A message box will be displayed like the one shown below. Follow the on-screen instructions.

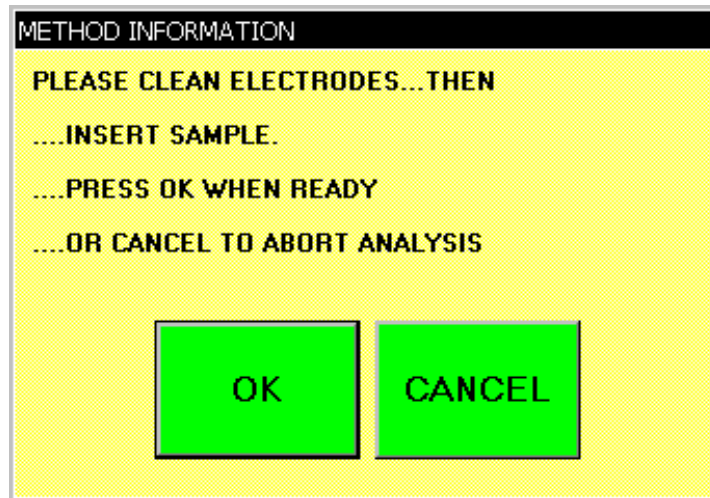

Customer Notes

CLEANING THE ELECTRODES

It is necessary to clean the electrodes prior to the analysis of every sample. Residue from the previous sample can affect your results. Use the proper cleaning technique that is illustrated below.

Close the spark box cover when you have finished cleaning the electrodes and press OK.



Use a cotton swab to clean the upper electrodes. First, wipe the outside of the upper electrode. Then, clean the inside of the upper electrode by inserting the swab down through the center of the electrode and turning clockwise.

THE ANALYSIS CYCLE

The analysis takes about 5 to 10 minutes to complete (based on the components in your Analyzer) after the data entry and manual tasks have been performed. The status bar indicates progress as the sample is processed. If you want to stop the analysis, press the STOP button. The stop process takes 15-30 seconds to complete.

ON-SCREEN REPORTING

When the analysis is complete, an analysis report may be briefly displayed on the screen. An example of the on-screen report is shown below. The report will include the results of the analytical tests along with a diagnostic statement. Severity codes will also be printed with the test results. Green indicates normal conditions.

After the results are displayed, the Analyzer will begin the Auto Flush process and ask you to perform the task of removing the sample. Remove the sample and press OK so that the Analyzer can reset and be ready for the next analysis.

Analysis Results for Sample: 00288

Wear Metal Data		
Aluminum	47	A
Chromium	5	N
Copper	235	A
Iron	179	N
Lead	1	N
Tin	1	N
Silicon	4	N
Potassium	1	N
Sodium	0	N

Physical Properties		
Water	< 0.1	N
Glycol	< 0.1	N
Soot	2.1	N
Fuel	5.8	A
Oxidation	10.9	N
V100C	12.3	N
Total Base	10.6	N

Diagnostic Statements:

ENGINE WEAR RATES HIGHER THAN TYPICAL FOR BREAK-IN/OVERHAUL PERIOD. POSSIBLE MINOR FUEL DILUTION OCCURRING. VISCOSITY HIGHER THAN TYPICAL FOR THE GIVEN OIL TYPE. CHECK FUEL SYSTEM. DRAIN OIL AND CHANGE FILTER IF NOT ALREADY DONE. RESAMPLE AT THE NEXT OIL DRAIN INTERVAL.

PRINT CANCEL

V. PRINTING REPORTS

OPTIONAL REPORT FORMATS

Depending on how the Analyzer has been configured, the Analyzer may automatically print a hardcopy of the analysis in one of the following formats.

DIAGNOSTIC REPORT

The Diagnostic Report is a simplified report designed for consumers. This numberless style report provides information on engine components wear and oil condition. This report is typically used when oil analysis is performed on cars and light duty trucks. Test results are reported as “normal”, “monitor”, and “inspect.” Reasons for abnormal test results are suggested and service actions are recommended.

NUMERIC REPORT

The Numeric Report is a standard laboratory style report with wear metal concentrations reported in parts-per-million and physical properties are quantified in their appropriate units. The results range from normal to severe. A diagnostics statement is included which suggests problem sources and recommended service actions. Typically, the numeric report is used when oil analysis is performed on heavy-duty trucks.

COMBINED REPORT

The Combined Report is a printout of both the Diagnostic Report and the Numeric Report. This selection is typically used when the Diagnostic Report is given to the customer and the Numeric Report is kept for reference.

TABULAR HISTORY

The Tabular History report is a laboratory style report. Like the Numeric Report, the Tabular History Report states Wear Metal concentrations in parts-per-billion and physical properties are quantified in their appropriate units. The Tabular History report includes the records of all the previous oil analysis results. The Tabular History report is useful to repeat customers who routinely have their oil analyzed on a daily or hourly basis.

PRINTING HISTORY REPORTS

To print the report for a sample that has just been analyzed, select the REPORTS button. A list of all the reports for the particular customer will be displayed.

SELECT A JIFFY LUBE SAMPLE



Select a Sample from the List

LIST SORTED BY: Customer Name

ENTER CUSTOMER NAME:

JIFFY LUBE SAMPLES						
VIN	Customer Name	Sample ID	Unit ID	Description	Make	Model
569008	ABC TRUCKIN	978	569008	DIESEL ENGI	FREIGHTLINE	FL 1
788845	DEF TRUCKIN	981	788845	DIESEL ENGI	INTERNATION	4000
458974D	INDUSTRIAL	980	458974D	DIESEL ENGI	FREIGHTLINE	C112



The Sort button on the right top can be used to change the sorting options from Customer Name, Sample ID, VIN right justified and VIN left Justified. Once the vehicle is found, select it and then the screen below is shown.

Historical Report Options



Report Options

Diagnostic Report

Displays/prints component diagnostics for vehicle (engine or transmission).

Numeric Report

Displays/prints analytical results for vehicle (engine or transmission).

Combined Report

Displays/prints diagnostics and analytical results report.

Tabular History

Displays/prints analysis history for vehicle.


UP


DOWN


SELECT


CANCEL

Select the style of report to be printed and a screen report will appear. You can then select PRINT or CANCEL.

An example of a report is shown below.

	Company: FIELD SERVICES INC.		City: THATCHER		WEST TEXAS PETERBILT		Phone: 806-373-5444	
	Address: 1109 MAIN STREET		State: AZ		8900 1-40 EAST		Fax: 79118	
	Phone:		Zip Code: 85008		AMARILLO TX			
	Email:		Fax:					
Truck Make: PETERBILT		Fleet Unit ID: 44W		VIN#: 880577		Test Date: 02/15/2010		
Truck Model: 359		Engine Make: CATERPILLAR		Truck Year: 1999		Equipment: Diesel Engine		
Sump Capacity: 35 Quarts		Engine Model: 3406B						

Date Taken: 02/15/2010		WEAR METALS (in Parts per Million)															V40 92 - 124			
		Chromium	Lead	Copper	Ti	Aluminum	Mo	Silicon	Iron	Sodium	Potassium	Vanadium	Chromium	Sulfur	Phosphorus	TBN	Nitrogen	Water	V100 12.5 - 16.5	
Sample ID: 14	Oil Brand: SHELL	8	<2	3	212	2	<2	10			32									
Oil Type: ROTELLA T	Oil Weight: 15W40	N	N	N	5	N	N	N			5									
Miles on Unit: 357412	Miles on Oil: 9334	SOURCE OF COPPER CAN INDICATE PENDING OIL COOLER FAILURE, POSSIBLE BUSHING WEAR, OR AFTERMARKET OIL ADDITIVE. HEAVY CONCENTRATION OF WATER PRESENT. SODIUM LEVEL (OIL ADDITIVE OR COOLANT) HIGHER THAN TYPICAL. LONG LIFE COOLANT OR GRT MAY BE PRESENT IN OIL. POTASSIUM LEVEL HIGHER THAN TYPICAL. ADVISE USE OF ADDITIONAL DIAGNOSTIC TOOLS TO DETERMINE COURSE OF CORRECTIVE ACTION. DRAIN OIL AND CHANGE FILTER IF NOT ALREADY DONE. COOLANT CONTAMINATION IN OIL POSSIBLE IF EGR EQUIPPED. CHECK EGR VALVE AND/OR EGR COOLER. ADDITIONAL SOURCES ARE BLOWN HEAD GASKET AND/OR CRACKED HEAD OR BLOCK. RESAMPLE AT 1/2 NORMAL INTERVAL TO CONFIRM.																		

VI. FLUSHING

AUTO FLUSH


The computer controls the Auto Flush. The computer evaluates the last sample's level of contamination and determines what type of flush to perform on the system. The user has no control over the duration of the Auto Flush.

MANUAL FLUSH

The Manual Flush allows the user to perform additional cleanings. This function gives the user additional tools to fight sample carry over and contamination. To perform a Manual Flush, press FLUSH from the main menu. The Flush screen, shown below, will offer you various selections. Select the flush you want and press SELECT. The system will execute the flush selected.

IR NIGHT FLUSH

The IR Night Flush should be selected each night when the unit will no longer be used. This flush is used to 'soak' the IR module cell windows and ensure they stay clean from soot buildup. Selecting this button starts a procedure that checks the amount of sooty samples run during the day. If there were any run, the instructions on the screen will prompt you through an automated process.

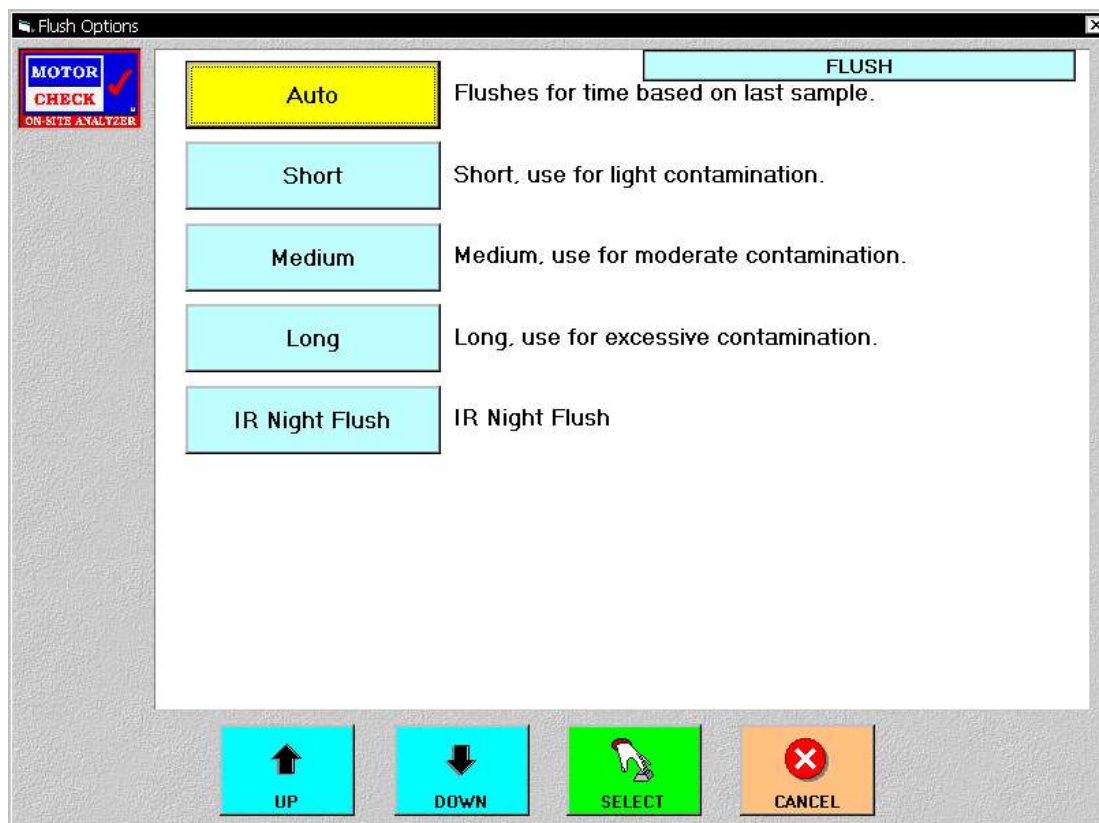


VII. OFF ROAD

Before running a sample, the Analysis mode must be changed from the current configuration, Truck, Auto, Marine, Cycle, to Off Road. Selecting the 'Admin' button at the Main Menu does this. Tab down to the Analysis Mode, select this button and simply change to Off Road.

TEST SELECTION IN OFF ROAD

The analysis of your oil depends on what type of sample it is. You must specify if the sample comes from a diesel or gasoline engine or from a transmission or gearbox. Press the ANALYZE button to bring up the Test Selection screen shown below.

Select the GASOLINE key on the keypad to analyze a sample of crankcase oil from gasoline-powered cars and light-duty trucks. Select the DIESEL key to analyze a sample of crankcase oil from a diesel powered medium - or heavy-duty engine. Select the TRANSMISSION key to analyze a sample of transmission fluid. Select the GEARBOX button to sample Gearbox fluid and select the HYDRAULIC button to sample Hydraulic Fluid. The 'Re-Run Last Sample Button' allows you to analyze the last sample again without having to re-enter all of the sample information.

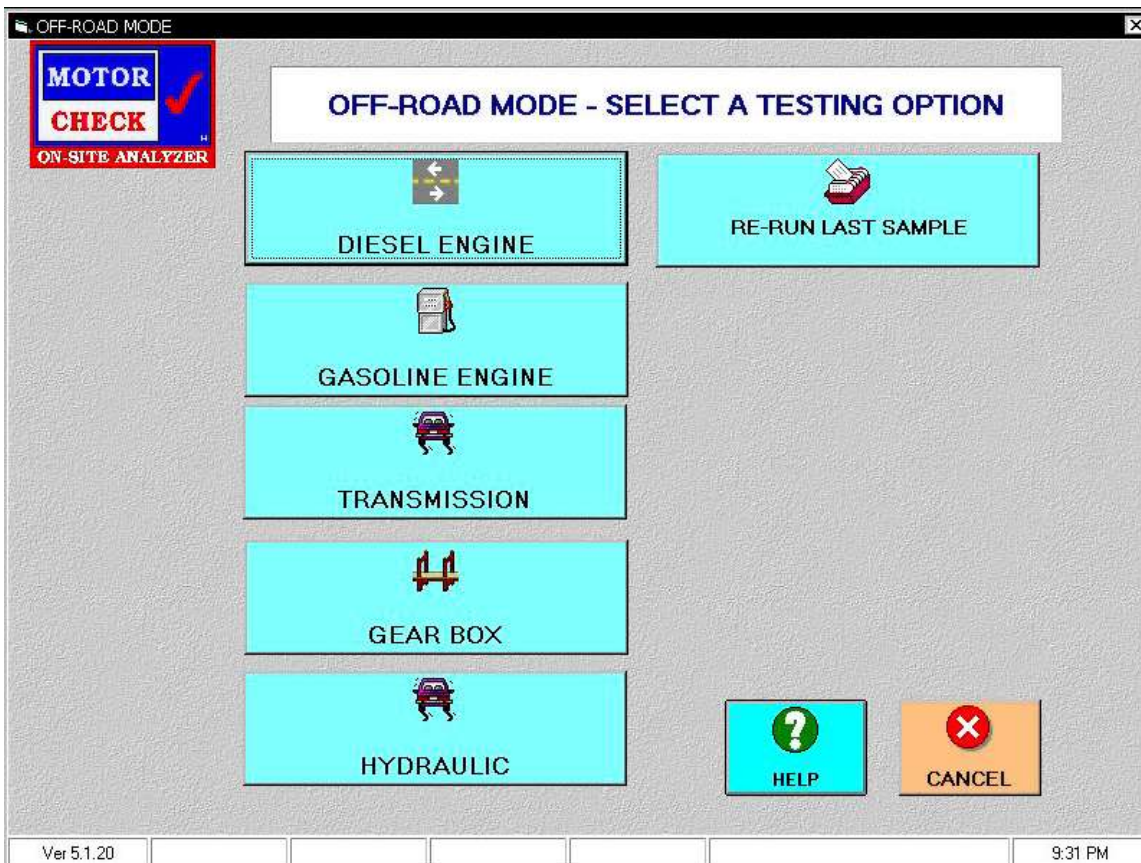

SELECT A CUSTOMER IN OFF HIGHWAY MODE

When selecting a customer, you have three options: use the default customer, select a customer from the list, or add a new customer.

If the Customer ID for the customer you want is already displayed in the box next to “Enter Customer ID”, then press OK to use the default customer name.

If the Customer ID you want is not displayed in the box, but it is in the customer list, then highlight the customer you want by using the UP and DOWN Arrow Keys and use the ENTER key to make your selection. Press OK to continue.

If the customer you want is not the default customer and is not displayed in the list of customers, then you must add your customer name to the list. Press the NEW CUSTOMER button to add your customer.

Each option is discussed in detail below.

Follow the instructions below for choosing a customer from the list or adding a new customer.

SELECT A CUSTOMER

MOTOR CHECK ON SITE ANALYZER

Select a Customer from the List

LIST SORTED BY: **Customer Name**

ENTER CUSTOMER NAME:

Customer ID	Customer Name	Address	City	State	Zip Code	Phone	Fax
CHE001	ABC TRUCKING CO	123 MAIN STR	ANYWHERE	GA	55555	555-555-1111	555
TRA001	DEF TRUCKING	567 NORTH L	PLEASANTVILLI	MA	44444	555-222-5555	555
IND001	INDUSTRIAL TRU	987 ELM WAY	NICEVILLE	FL	33333	555-111-2222	555

Navigation buttons: UP, DOWN, NEW CUSTOMER, EDIT CUSTOMER, SELECT, CANCEL

Listed Customer

Listed customers are the names of customers that have had their oil analyzed previously. Choosing from the list keeps you from having to enter the customer's information each time their oil is analyzed.

Using the UP and DOWN arrow keys, see if the customer you want is on the list.

If the customer name you want is on the list, then highlight the name, select it by pressing OK.

If the customer's name you want is not on the list, then press the NEW CUSTOMER key to enter a new customer.

New Customer

If a customer has not had their oil analyzed previously, their name is probably not on the list. The first time a customer has their oil analyzed you must enter all of their information. Once you have entered the customer's information, the Analyzer will keep it on the list for the next time. The new customer information screen is shown below.

Enter the customer's last name or enter a company name and press OK to move to next field.

Enter the customer's first name or press OK to leave it blank.

The Analyzer's software will automatically assign a Customer ID. Press OK to continue. Enter the rest of the information using the OK key to move through the fields

When you are finished entering or selecting a customer name, Press OK to continue.

ENTERING OFF ROAD VEHICLE UNIT INFORMATION

The Unit Information screen is shown below. The screen shown is for Diesel Unit Information. Depending on which selection you use (Diesel, Gasoline, Transmission or Gearbox) will determine the differences in the screen. On the Unit Information screen, you provide information about the vehicle. If the information about this vehicle has been previously entered, then the information is filled-in for you when you select the vehicle from the list. If the vehicle is not listed, then you must enter the information manually.

OFF-ROAD UNIT INFORMATION



Off-road Diesel Unit Information

Customer Name: XYZ MINE,
Street Address: 123 DESERT ROAD
City, State, Zip: MINEVILLE, AZ 12222

Phone: 555-888-9999
Fax:

Select a Machine

ID: 976542

Serial Number: X3456

Job Site: WEST

Engine Make: GROVE

Capacity Units: ☐ Quarts
☐ Liters
☒ Gallons

Engine Model: RT518

Sump Capacity: 38 Gallons

Location: FRONT

Usage Hours: 253

Description: CRANE

Turbo: ☒ No
☐ Yes

 CUSTOMER INFO

 UP

 DOWN

 OIL INFO

 CANCEL

Enter Hours on Component

Selecting Machine Information From A List

Each customer may have one or several machines. A Machine ID is a way of identifying a specific customer's machine. New customers will not have any machines listed (as shown below) and you will have to manually enter the vehicle information. Existing customers will have a list of Machine IDs associated with their name. An example screen is shown below. Once you select the customer, the ID button will flash red and give you a list of machines available.

Use the UP and DOWN arrow key to view the list of Machine IDs. If the name you want is on the list, then highlight the desired Machine ID and press Enter. If the Machine ID you want is not on the list then simply enter a machine ID in the ID box. After selecting a machine from the list the Unit Information screen is re-displayed with the machine information you selected. If your machine is not listed, then it is ready for you to manually enter the machine information.

SELECT A MACHINE UNIT



Select a Machine Unit from the list

ENTER MACHINE

SELECT DESIRED MACHINE						
rUnitID	Machine ID	Customer ID	Customer	Serial Number	Make	Model
165	976542	XYZ001	XYZ MINE.	X3456	GROVE	RT518





Manually Entering Machine Information

On the Sample Data Entry screen, information about the machine is entered along with information about the oil. Enter the information as complete and accurate as possible. If you are not sure about some of the information, you may leave the entry as “unknown”.

MACHINE MAKE AND MODEL

Select the vehicle make and model from the drop-down list. Scroll down to view the list of vehicle makes. Scroll through the list using the arrow keys and select an item using the SELECT key. Now select the vehicle model using the same keys and continue to the next field. The ‘Custom’ selection under make and model may be used to enter units that do not appear in the drop down lists.

COMPONENT UNIT INFORMATION

Enter the component Serial Number, the Job Site, and the total Hours on the component

USAGE UNITS

Select the appropriate units using the arrow keys to designate whether the sump capacity is measured in Quarts, Gallons, or Liters.

LOCATION / SUMP CAPACITY

Select the correct location of the component, then the sump capacity.

TURBO

Select yes or no using the space bar if the component is turbocharged.

OFF-ROAD UNIT INFORMATION



Off-road Diesel Unit Information

Customer Name: XYZ MINE, Phone: 555-888-9999
Street Address: 123 DESERT ROAD Fax:
City, State, Zip: MINEVILLE, AZ 12222

Select a Machine ID: 976542

Serial Number: X3456 Job Site: WEST

Engine Make: GROVE Capacity Units: ☐ Quarts
☐ Liters
☒ Gallons

Engine Model: RT518 Sump Capacity: 38 Gallons

Location: FRONT Usage Hours: 1405

Turbo: ☒ No
☐ Yes

Description: CRANE



Enter Hours on Component

When the Unit Information Screen is complete, press OIL INFO to continue.

Entering Oil Sample Information

OIL SAMPLE INFORMATION



Off-road Diesel Engine Oil and Analysis Information

Customer Name: XYZ MINE
Street Address: 123 DESERT ROAD
City, State, Zip: MINEVILLE, AZ 12222
Phone Number: 555-888-9999
Fleet Unit ID: X3456
Vehicle Make: GROVE
Vehicle Model: RT518

Fax Number:
Description: CRANE
Time on Unit: 215
Unit ID: 976542

Bay #

Oil Brand:

Oil Type:

Oil Weight Selection:
☒ All Weights
☐ Common Weights
☐ Specific Weights

Oil Weight:

Operator/Driver Name:

Date Taken:

Miles on Oil:

Enter Additional Special ID for sample Any text

Oil Brand, Type, and Weight

Select the oil brand, type, and weight of your sample. If you do not know the any of this information you may leave it as “unknown.”

Usage Units and Miles on Oil

Enter the number of hours that have accumulated on the component since the last oil change.

User Sample ID

A User Sample ID is a way of uniquely identifying a sample. This ID may be a bar code that is affixed to the sample bottle and data entry sheet.

Operator Name

Enter the name of the vehicle's driver here. The information is useful when there is more than one operator on the unit.

After completing the Oil Sample Information screen, press ANALYZE to continue.

REVIEW ENTRIES

The Analyzer checks the information you entered when you exit the data entry screens. If there are no data entry errors, the Oil Analysis Activation Screen is displayed. Your sample, vehicle, and oil data will be displayed on the screen. Review this information for correctness.

If you need to make corrections, press the OIL INFO button. If the information is correct you can now press START to continue with the analysis. Go to [How to Analyze a Sample](#) for complete information on running an Analysis.

VIII. Standardizing Extended Metals

EXPLANATION

Occasionally, it is necessary to standardize the extended metals of the OSA4™ Analyzer in order to compensate for minor changes affecting the Analyzer's calibration.

You do not have to standardize the Analyzer unless 1) you have adjusted the Electrode Gap, or 2) the Test Extended Metals Standard routine prompts you to, or 3) the message box tells you to at the beginning of a sample.

You should run the Test Extended Metals Standard routine 3 days / 72 hours after a Full Standardization, or whenever you question the Analyzer's performance.

Prior to running the Test Extended Metals Standard routine, a Baseline Test should be performed.

The 10 Basic Metals include – Iron (Fe), Chromium (Cr), Lead (Pb), Copper (Cu), Tin (Sn), Aluminum (Al), Molybdenum (Mo), Silicon (Si), Sodium (Na), and Potassium (K).

The Extended Metals package includes the 10 Basic Metals plus – Titanium (Ti), Manganese (Mn), Vanadium (V), Boron (B), Magnesium (Mg), Calcium (Ca), Barium (Ba), Phosphorous, Nickel, (Ni) and Zinc (Zn).

STANDARDIZATION

Select the Standardize button from the Main Menu.

Select **STANDARDIZE METALS** button as shown on the following screen.




Clean the electrodes, and place a clean straw into the (blue) **Test Standard Fluid** and connect to the silver sipper nozzle.

A message will appear asking the following, “Standardization of basic metals is not required at this time. Do you still wish to standardize basic metals ” Select the **YES** button to proceed.




Press OK , as shown on screen pictured below after cleaning electrodes and inserting Test Standard Fluid (blue).

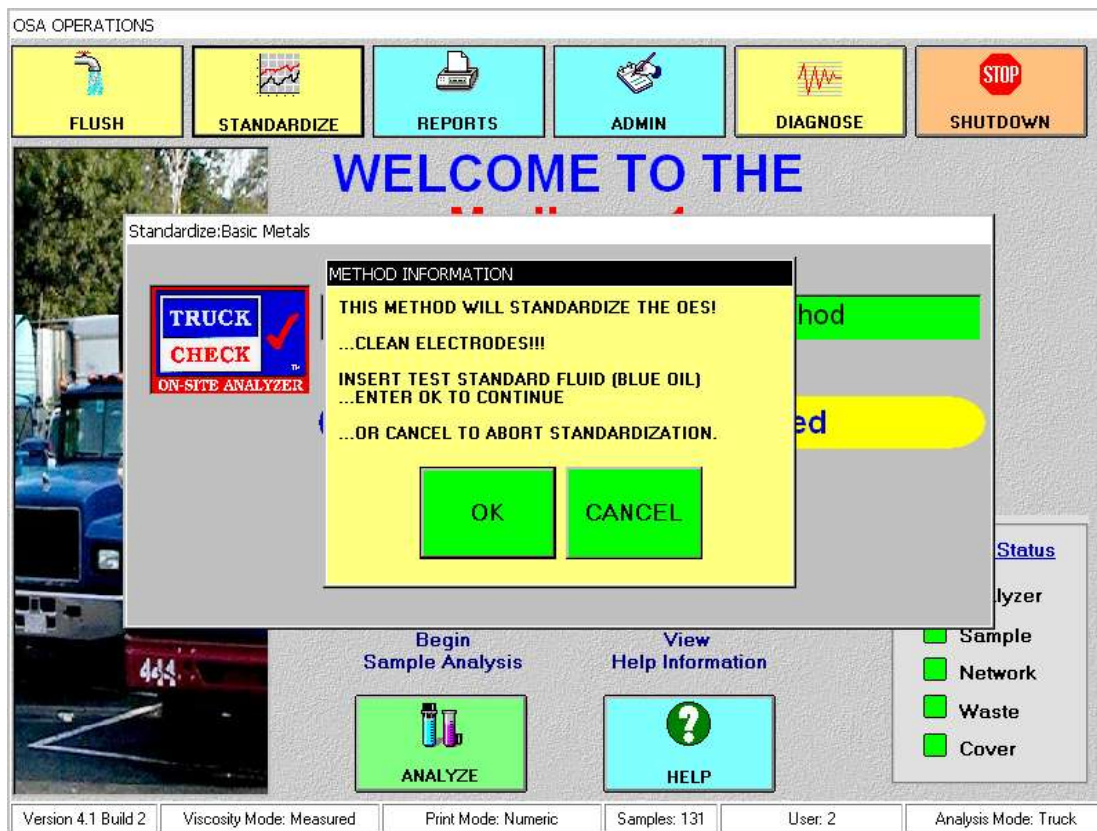

After 30% has elapsed on the status bar, a message will appear on screen asking to again clean the electrodes. Do so and press the **OK** button when finished.

This method will last 10-15 minutes

A message will then appear stating “Basic Metal Standardization Completed” (as shown in following picture). If you see otherwise, Select CANCEL and repeat previous extended metals standardization steps.

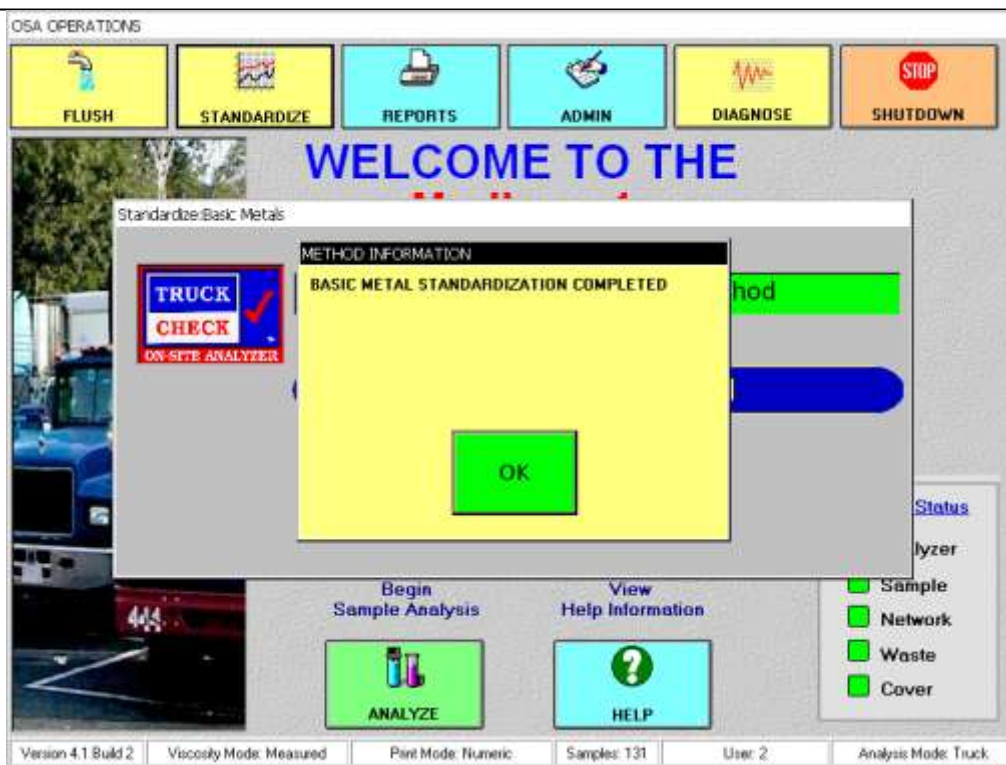


This now indicates that Basic Metal Standardization is completed. Press **OK** button to continue on to Extended Metal Standardization.

A message may appear asking the following, “Standardization of extended metals is not required at this time. Do you still wish to standardize extended metals ?” press **YES** button to continue.

Clean the electrodes thoroughly, and place a clean straw into the (yellow) Low Concentration Standard - and connect to the silver sipper nozzle.

Press the **OK** button when ready to continue (as shown in following picture)

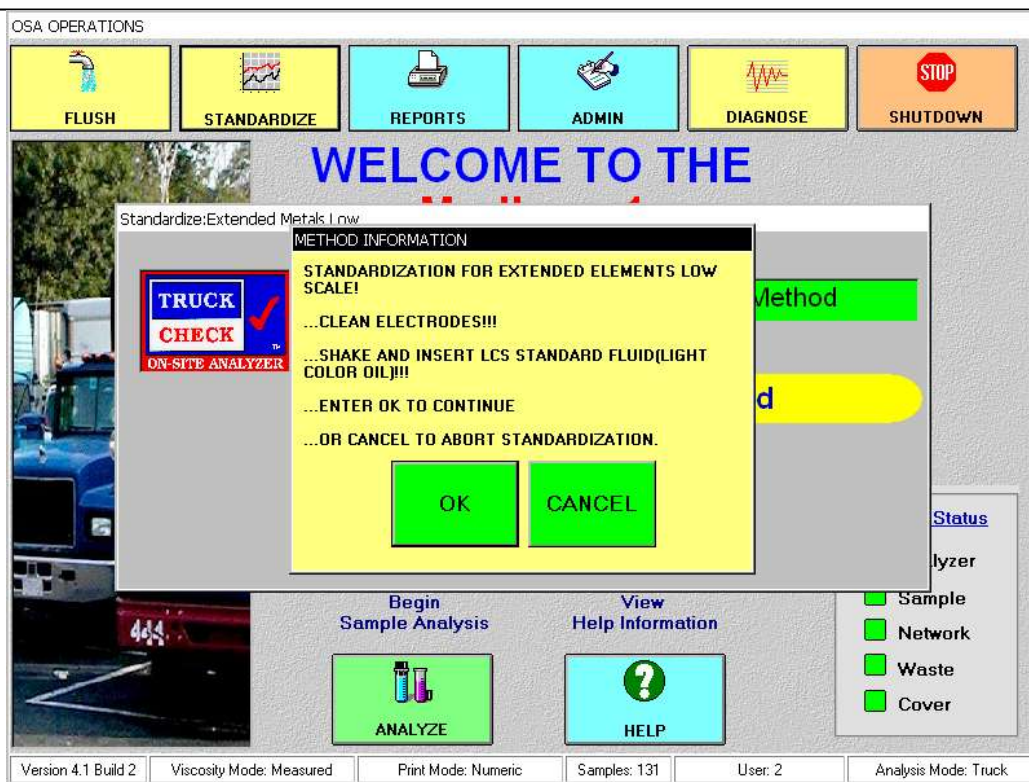


A message will appear on screen asking to clean the electrodes when the status bar is at 40%. Do so and select the **OK** button when finished.

This method will last 10-15 minutes.

A message will appear stating “**Extended Metals LCS Standardization Stand Completed**”.

If error message appears, press CANCEL and return to beginning steps for LCS Standardization.

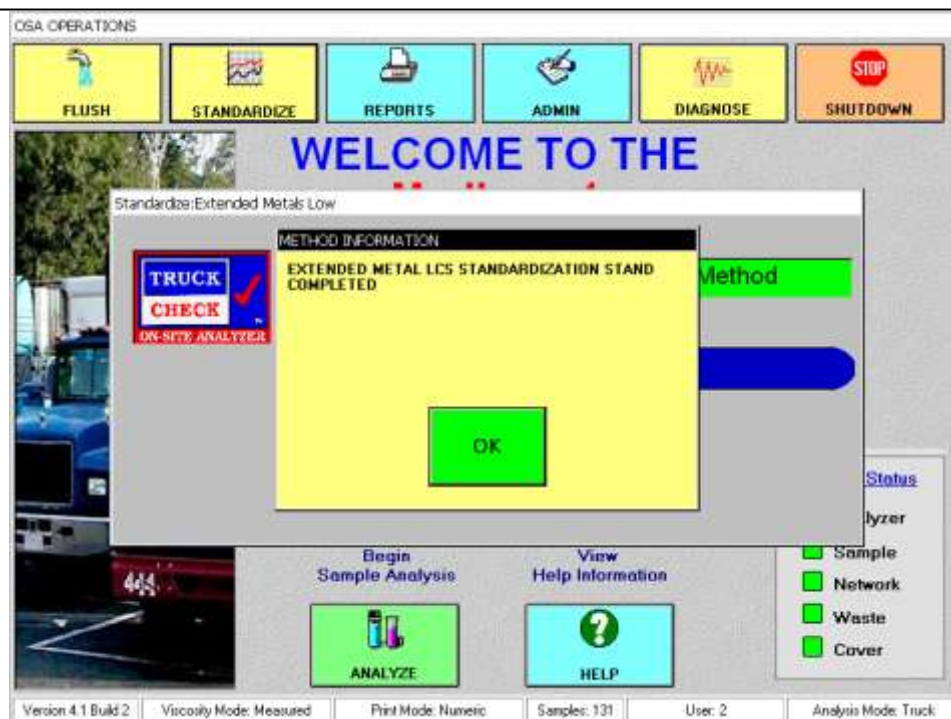


Extended metals Low Concentration Standard is now complete. Select the **OK** button to continue on to Extended metals High Concentration Standard. Clean the electrodes thoroughly, and place a clean straw into the (brown) High Concentration Standard - and connect to the silver sipper nozzle. Select OK when ready (as shown below).



This method will last approximately 10 minutes.

A message will appear stating “**Extended Metals HCS Standardization Completed**” (as shown below) If you see otherwise, CANCEL, and repeat previous steps for the HCS standardization.

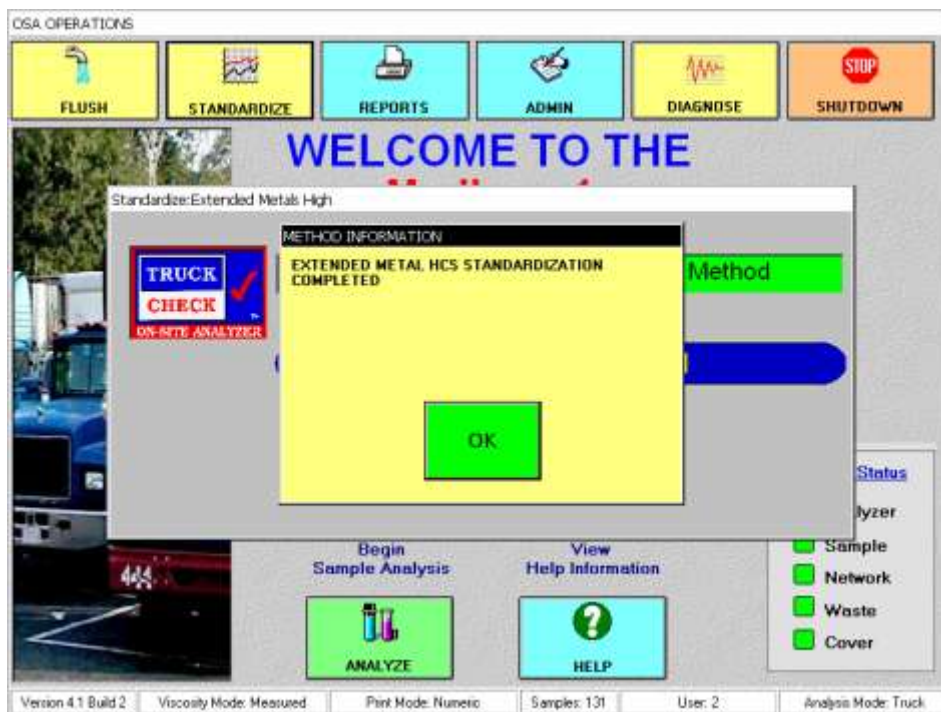

Extended metals High Concentration Standard is now finished. Select the **OK** button.

A message stating “Standard is Finished” will appear. Select the **OK** button to begin automatic flushing procedure.

Follow screen instructions and select **OK** on all flushing messages that appear.

**** Extended Metal Standardization is now complete ****

When running a sample, if you wish to show Extended Metals on the report, simply press **YES** when screen pops up stating “**Do you wish to show extended metals reports?**” If you wish to show only **Basic Metals** press **NO**.



VIV. Dual-Temperature Viscometer (DTV)


EXPLANATION

The Dual-Temperature Viscometer (DTV) is a fully integrated component for the OSA that generates a 100° Centigrade Viscosity, a 40° Centigrade Viscosity, and a Viscosity Index. This patented device works seamlessly in the background generating these measurements during the course of a normal OSA sample run.


If your OSA is equipped with a DTV, you must first ensure that the Viscometer has been enabled. Check bottom of screen and see that **Viscosity Mode: Measured** is shown. If not, select the ADMIN button.



Select the Viscosity Mode Button

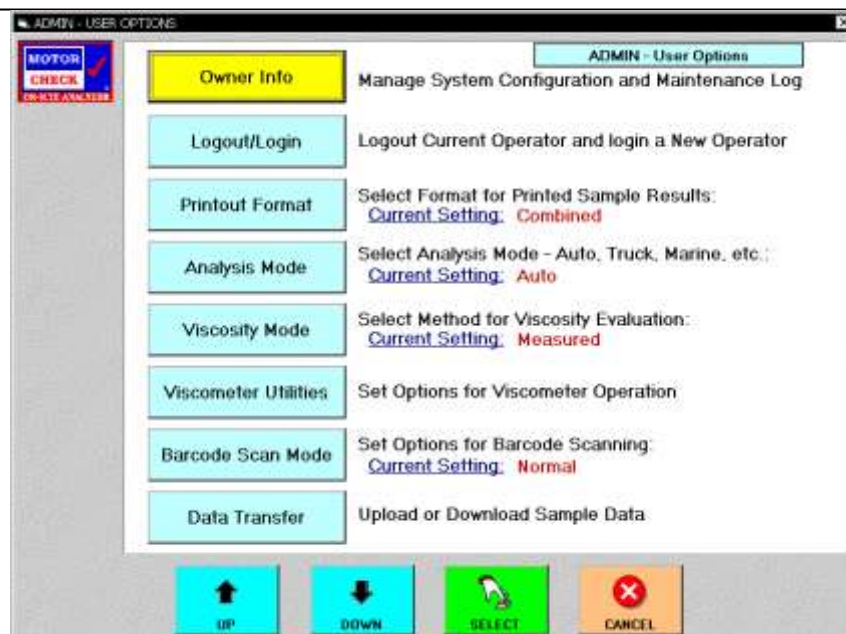


Then Select the Measured Button, the measured V40 Only, or Measured V100 Only Button. The Measured Button runs both V40 and V100 simultaneously. The V40 runs only a Viscosity at 40 C, and the V100 runs only a Viscosity at 100C. Press Cancel until you arrive back at the Main Menu.

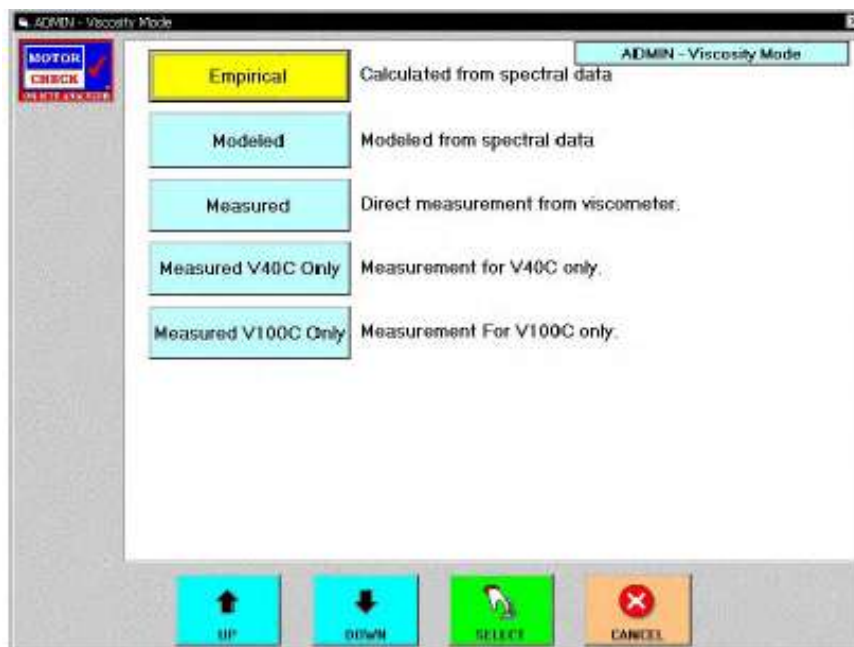

DTV VISCOMETER ONLY


If you purchased the DTV 'Visc Only' package- you will have the option to run a sample that only reports Viscometer readings from the DTV. Select Admin and then Viscosity Mode.

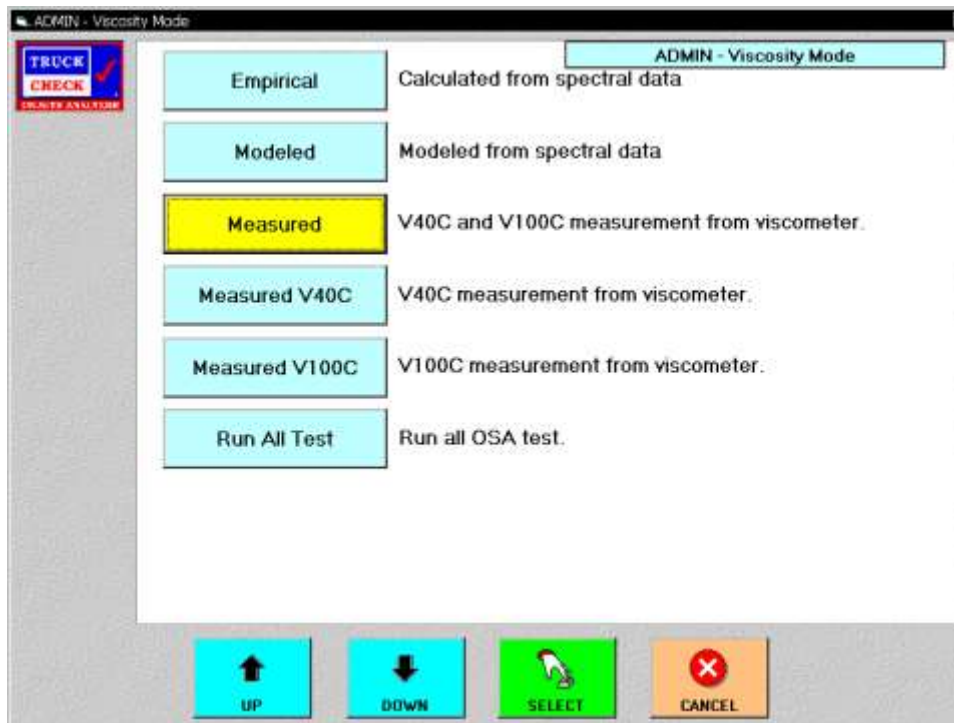

Selecting the 'Run all OSA Test' will change the OSA from Visc Only to All Tests. All Tests will report Elements, Physical Properties and Viscometer (Normal Sample). Toggling back and forth from this button puts you in Visc Only and All Tests Mode. Viewing the screen above – the unit is in 'Visc Only' mode – and you can select Measured (both V100 and V40), Measured V40C (V40C only) or Measured V100C (100C only). Once you make your selection – Select the Cancel button.

As shown below the OSA is now in Measured (Visc only) mode. The bottom of Main

Menu screen bar will always show you what mode your are in.

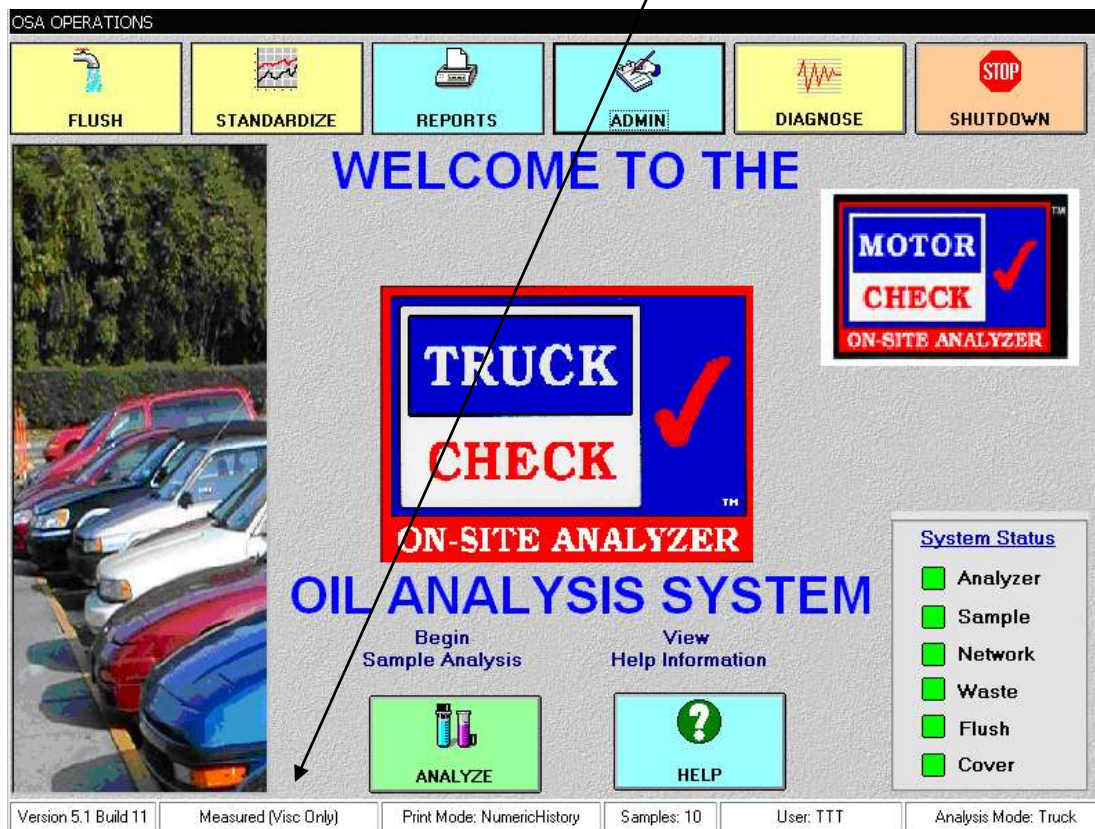

OPERATING THE DTV

Operation of an OSA with the DTV is the same method used in [How to Analyze a Sample](#). The time frame is longer because of the additional DTV component. Never reuse the 5 ounce sample bottles after the test is completed.

STANDARDIZING THE DTV

Once every 6 months the DTV will need to be standardized. Included with your OSA will be two viscosity standard bottles: Low Viscosity Standard (Pink Fluid) and High Viscosity Standard (Green Fluid). Pour these into separate 3 ounce sample bottles and label them accordingly. From the Main Menu Select ADMIN Button, then Viscometer Utilities Button.



Select the Visc Standardization Button



On the labels of your bottles of Viscosity Standard (Low and High) you will have measurements for Viscosity at 40° C and 100° C. As you move through the Viscosity standardization process you will need these measurement numbers to enter in the appropriate fields for standardization.



The first message as shown below will appear. Make sure that the number from your **Low Viscosity Standard at 40°C (on the pink fluid bottle label)** is entered into this field, then Press OK.

A screenshot of a software dialog box titled "Viscosity of Low Viscosity Standard @ 40 C". The dialog box has a standard Windows-style title bar with a close button (X). Inside the dialog, there is a text input field with the prompt "Input Low Standard Viscosity @ 40 C". To the right of the input field are two buttons: "OK" and "Cancel".

The message as shown below will appear. Make sure that the number from your **High Viscosity Standard at 40°C (on the pink fluid bottle label)** is entered into this field, then Press OK.




The message as shown below will appear. Make sure that the number from your **Low Viscosity Standard at 100°C (on the green fluid bottle label)** is entered into this field, then Press OK.



The message as shown below will appear. Make sure that the number from your **High Viscosity Standard at 100°C (on the green fluid bottle label)** is entered into this field, then Press OK.



Press OK and a message box as follows will appear.

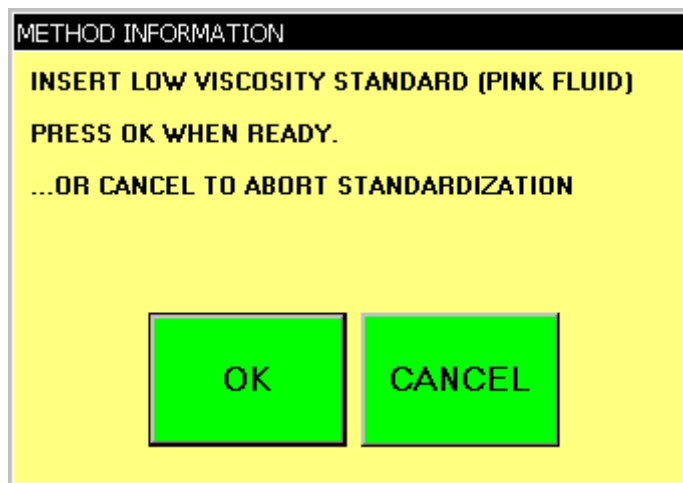

Place a clean straw into the Low Viscosity Standard (Pink Fluid) - and connect to the silver sipper nozzle and press OK.

Once this process has finished another message will come up asking you to insert the High Viscosity Standard (Green Fluid).


Pull the Low Viscosity Standard out from the sipper nozzle. Place a clean straw into the High Viscosity Standard (Green Fluid) - and connect to the silver sipper nozzle after this message appears.

The Viscosity Standardization process will be concluded after the High Viscosity Standard has finished. Once completed, you can remove the standard bottle from the sipper nozzle and continue running samples.


X- VIN DECODER SOFTWARE

The VIN decoder software is an application used in Gas Engine, Transmission, and Power Steering applications. The software uses a wireless barcode reader to capture the **Vehicle Identification Number** from the vehicles front window (GM) or driver door panel (most other manufacturers). The barcode reader has a range of approximately 90 feet but can also store the VIN within the reader if you go outside the range. The data is automatically transferred to the OSA once you enter the range area.

The Main Menu will appear as pictured below. Simple select 'Analyze' button to begin sampling process.

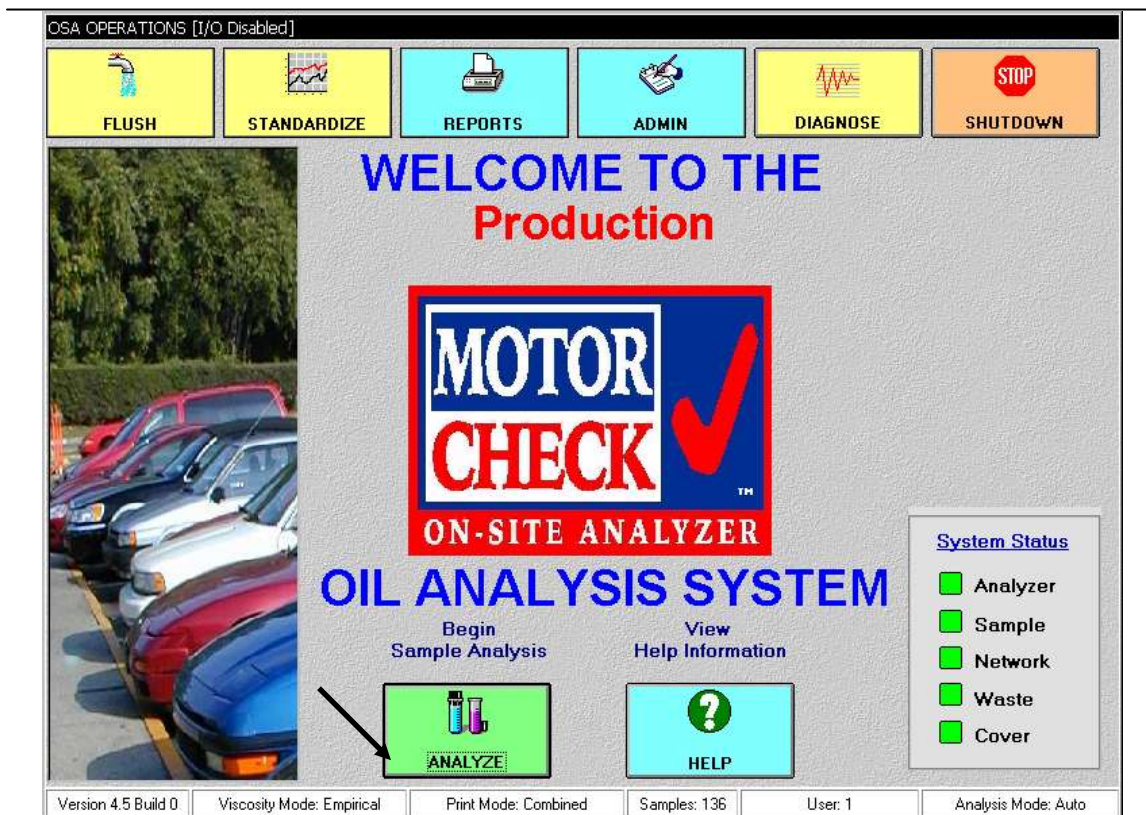

The screen below will appear. Select YES to run the VIN decoder software or NO to run the regular software.

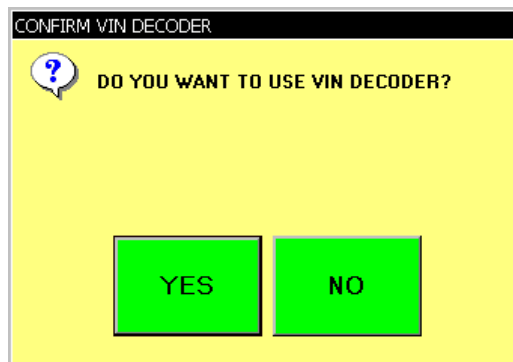

The Customer Info button is used to enter the information for the site that is running the samples. This is a one-time data entry function performed by the engineer setting up your unit.

When the screen below is shown, Scan the vehicle barcode or type in VIN manually. If you scan the VIN the Vehicle data will appear automatically. If you type in the VIN you will have to select the 'DECODE' button to show data. If you want to scan more than one VIN at a time, Select the Multiple Scan checkbox and the VIN's will be stored in the VIN LIST box. If you want the sample data to be automatically transferred via an xml file,

select the Transfer checkbox. Using this transfer setting requires high speed access and special ADMIN settings to be set by your OSA representative.

Automobile VIN

☐ Multiple Scan ☐ Transfer

VIN (Enter, or Scan Barcode)

DECIDE

VIN LIST CUSTOMER INFO [Green Button with Mouse Icon] CANCEL

Ver 4.5.6 12:25 PM

If you choose the Multiple Scan checkbox, and you have finished scanning your VIN barcode, they will all be listed in the VIN LIST box as shown on next page. Once you select a VIN from this list, it will be removed from the column.

Form1

CHOOSE A VIN FROM THE LIST

VEHICLES			
VIN	Date Scanned	Customer ID	OSA ID
1C3AL56R24N356459	11/1/2005 4:00:25 PM	1	mar12
1FMZU73E65UB47754	11/1/2005 4:00:32 PM	1	mar12
1LNHM81W85Y664995	11/1/2005 4:00:29 PM	1	mar12

UP DOWN SELECT CANCEL

Once you have scanned a single VIN or picked the appropriate VIN from the list, the screen below will appear.

AUTO MODE

MOTOR CHECK ON-SITE ANALYZER

Automobile VIN

☐ Multiple Scan ☐ Transfer

 2G2WR544351306393

VIN (Enter, or Scan Barcode) 

Make: Pontiac Engine Type: V6, 3.8L SFI, Supercharged

Model: Grand Prix

Year: 2005 Fuel Type: Gasoline


   

Ver 4.6.6 2:00 PM

The Vehicle Identification Number is decoded and fields are filled with Make, Model, Year, Engine Type, and Fuel Type.

Press OK to continue

 Choose the system type that you will be running.



Choose System Type

CHOOSE A SYSTEM TYPE

 ENGINE TEST	 POWER STEERING
 AUTO TRANSMISSION	 MANUAL TRANSMISSION


CANCEL

Enter Odometer mileage and Mileage on Oil and Select 'Enter'.

WALKUP SAMPLE INFORMATION

GASOLINE SAMPLE TEST

VIN#: **1C3AL56R24N356459**

Vehicle Make: Chrysler	Vehicle Year: 2004
Vehicle Model: Sebring	Oil Brand: CHEVRON
Engine Size: V6, 2.7L DOHC 24V	Oil Type: DELO 400
Odometer: 0	Mileage On Oil: 0

Fuel Type: ☒ Gasoline ☐ Diesel

Transmission Type: ☐ Automatic ☐ Manual (Standard)

Review Data, then Select Start to begin Analysis.

OIL ANALYSIS ACTIVATION



Sample ID: 137
Auto Gasoline Engine

Customer Name: VIN DECODER
Street Address: 398 CEDAR HILL ROAD
City, State, Zip: MARLBOROUGH, MA 01852
Email address: TCAI@ON-SITEANALYSIS.CI
Phone Number: 508-460-7778
Vehicle ID: 1C3AL56R24N356459
Unit Make: Chrysler
Unit Model: Sebring

Fax Number: 508-460-7779
Sample date: MAY-02-2005
Usage Miles: 123456 Miles
Unit ID: 1C3AL56R24N356459

Oil Brand: CHEVRON
Oil Type: DELO 400
Oil Weight: 15W40

Miles On Oil: 4500 Miles
USER SAMPLE ID: VIN DECODER
Date Taken: MAY-02-2005

Press START to Begin Analysis

The sample will run through and upon completion the message below will appear. Selecting YES will return you to the Main Menu where you will select 'Analyze' to run another sample for the same vehicle (Transmission or Power Steering). This avoids having to scan or enter the same VIN number again. If you want to run another vehicle – Select NO.

VIN DECODER

DO YOU WISH TO RUN ANOTHER SAMPLE WITH THIS VIN?

YES **NO**

Default Customer Info

Select the Default Customer Info button to fill in the data on the form below. This data will be shown on the report printout.

DEFAULT CUSTOMER FOR VIN DECODER

Customer Name: VIN DECODER

Customer Address: 398 CEDAR HILL ROAD

City: MARLBOROUGH

State: MA Zip Code: 01852

Customer Phone: 508-460-7778

Customer Fax: 508-460-7779

Customer Email: TCAI@ON-SITEANALYSIS.COM

OK CANCEL

A D D E N D U M A

for instruments equipped with a particle counter module

Sample Preparation Procedure for Particle Measurement

If the sample to be measured has been standing for any period of time, particle settlement and agglomeration will occur. It is essential that the agglomerates be broken up and the contaminant particles become dispersed evenly throughout the contents of the sample bottle in an ultrasonic bath. Energize the bath for 30 seconds or until no surfacing air bubbles are observed. Remove the sample bottle from the ultrasonic bath and gently turn the sample bottle over five times, taking care not to introduce air bubbles into the liquid prior to analyzing with the OSA Oil Analyzer, particle counter function. Reference sample preparation procedure outlined below.

- 1) Fill ultrasonic bath with 3 inches of water, turn on heater and energize for a minimum of two minutes (to degas the system).

WARNING

DO NOT ENERGIZE AN EMPTY ULTRASONIC BATH.
Energizing an empty ultrasonic bath may cause damage to the instrument

- 2) Vigorously shake the sample bottle by hand for 15 seconds.

NOTE

A minimum of 3 ounces of sample is required when using the particle counting function of the OSA Oil Analyzer

- 3) Place the sample bottle in an ultrasonic bath and energize the bath for 30 seconds or until no surfacing bubbles are observed.
- 4) Remove the sample bottle from the ultrasonic bath then gently turn the bottle over five times, taking care not to introduce air bubbles into the oil fluid.
- 5) Place the sample bottle under the sipper of the OSA and immediately start analysis.
Reference section IV-How to Analyze an Oil Sample (page 18) of this manual.

A D D E N D U M B

for instruments equipped sample bottle cap overpressure module

Over Pressure Sample Bottle Cap Module

When certain gear oil samples are to be measured, the analyzer will prompt the user to utilize the sample bottle over pressure cap module. When the instrument prompts, the user should install the sample bottle over pressure cap as instructed below.

- 1) Ensure that the inside of sample bottle cap is clean, wipe with clean rag if necessary
- 2) Install sample bottle cap onto sample bottle
 - a. Align the sample bottle and cap, then rotate bottle until cap is tight.

NOTE

Sample bottle cap MUST be on tight
A loose fit will result in an air leak preventing instrument from achieving proper air pressure within the sample bottle

- 3) Loosen straw fitting (no need to fully remove fitting) located in the center of the sample bottle pressure cap, then insert straw through center fitting and finger tighten the fitting.

NOTE

Do NOT over tighten fitting around straw.
Over tightening the straw input fitting may result in collapsing/damaging the straw causing an air leak preventing instrument from achieving proper air pressure within the sample bottle

- 4) start analysis.
Reference section IV-How to Analyze an Oil Sample (page 18) of this manual.
- 5) Follow all prompts in the order that they appear.

Ensure that the straw has been inserted over the analyzer's intake nozzle prior to activating the overpressure function.

When overpressure function is activated, contents of the sample container will be forced out through the straw.