

USER GUIDE

HD Media Box



HD Media Box is a HD media player which can read flash drive, external HDD and SD/MMC card, decode the content included, and then output via HDMI / AV on your TV or monitors. It can support most popular formats.

ONE

Product Introduction.....2
 Package contents.....2
 Features.....2
 Product specifications.....3
 Remote control guide.....4
 Connection ports.....5

TWO

Activating media player.....5
 Setting.....5
 Video Output Mode.....6
 Language.....6
 ScreenSaver.....7
 Audio Output Mode.....7
 Restore Default Setting.....7
 System information.....8

THREE

Getting started with the Media Player...
 Movie.....9
 Music.....10
 Picture.....11
 File.....12

FOUR

FAQ.....14

ONE

Product Introduction

Thank you for choosing our products. This media player supports a wide variety of video, audio, music, text and subtitle file formats and you will be able to view these files on your wide TV screen within the comfort of your living room. This user manual will guide you how to use this product.

Package content:



AV Cable



Adaptor



Remote control



Gift Box



User Guide

Features

- Full HD up to 1080P
- Playback wide range of video formats: RM / RMVB / MPEG / VOB / DAT / Divx / Xvid / MKV / MP4 / AVI / MOV / MPG / TS / TP / M2TS / AVI / WMV / FLV
- H.264 decode technology with 1080p resolution
- Supports HDMI & AV outputs
- SRT, SMI, SSA,,subtitle formats
- AC3/DTS/MP3/WMA/WAV/OGG/AAC/APE/FLAC audio with HDMI 1.3, SPDIF Coaxial and Audio L/R outputs
- Playback Resume & time setting (set the playback time)
- Multi-Languages OSD

Product specifications

Audio & Video Decoding		
Video	MPEG1	DAT (up to 720*576), MPG (up to 720*576),MPEG (up to 720*576)
	MPEG2	MPG(up to 1080p) MPEG(up to 1080p), VOB(up to 1080p), TS/TP(up to 1080p), M2TS(up to 1080p)
	MPEG4(Xvid)	MKV(up to 1080p), AVI(up to 1080p), MP4(up to 1080p), M2TS(up to 1080p)
	H.264	MKV(up to 1080p), AVI(up to 1080p) MP4(up to 1080p), MOV(up to 1080p) M2TS(up to 1080p), TS/TP(up to 1080p)
	WMV9/VC-1	M2TS(up to 1080p),WMV(up to 1080p)
	Real Video	RM/RMVB(up to 720p)
	MJPEG	AVI(up to 1080p)
	FLV	FLV(up to 1080p)
Audio	MP3/WMA/WAV/OGG/AAC/APE/FLAC/AC3/DTS	
Picture	JPG/BMP/PNG/GIF	
Subtitle	SRT/SMI/SSA	
Hardware Specifications		
Video Output	AV (PAL/NTSC) / HDMI (480P, 720P, 1080i, 1080P)	
Audio Output	Audio L/R/ HDMI (Stereo)/S/PDIF	
Hard Disk	FAT / FAT32 / NTFS /exFAT	
LED	HDMI / AV Output	
IR	Receive signals from Remote Control	
Size	120 x 90 x 25 mm	
USB OTG	2 * USB2.0 Host	
Memory Card	SD / MMC	
Power	DC 5V / 2A	

Remote Control Guide



POWER	Switch on/off the media player	SETUP	Go to Setup menu
MUTE	Set the media player as mute	TV-MODE	Show TV-mode
OSD	Show choices	MOVIE	Go to movie list
MUSIC	Go to music list	PHOTO	Go to picture list
FILE	Show all files	AV	Set the output as AV
HDMI	Set the output as HDMI	EQ	Adjust sound effect
SUB COLOR	The color for subtitle	VOL+	Volume up
VOL-	Volume down	OK	Confirm and enter
▲	Arrow key, UP	▼	Arrow key, Down
◀	Arrow key, Left	▶	Arrow key, Right
HOME	Go to main menu	RETURN	Go back
STOP	Stop display	PLAY/PAUSE	Play / Pause
4:3/16:9	Switch different aspect ratio	FRWD	Fast rewind
FFWD	Fast forward	PREV	Previous
NEXT	Next	REPEAT	Loop function
ROTATE	Rotate	ZOOM	Zoom function
SLIDESHOW	Show the subtitle or not	AUDIO	Rotate Picture
INFO	Show more information	GOTO	Choose the display time

Connection ports

Back View

HDMI (1080p) / AV (576p) Output



Front View

USB host, SD / MMC Memory card



TWO

Activating media player

 
Once you have properly set up the media player following the instructions on the Connection Diagram section, please turn on your TV to enter the main menu screen.

It is suggested that you plug your USB storage device before turning on your TV so that you can see the function icons such as "Movie" and "Music".

Switch the video source of your TV. Your TV comes with multiple video sources such as AV and HDMI. Please switch to the correct source. For instance, if you connect the media player to TV through AV Cable please switch the video source of the TV to "AV". You may do that with the buttons on your remote control or buttons on the television.

Setting

Use the arrow keys on the remote to select "Setting" and press "OK" to enter. You will see a list of items once you have entered the "Setting" page. The options include "Language", "Screen Saver", "Video Output Mode", "Audio Output Mode", "Restore Default Setting", "System Information"

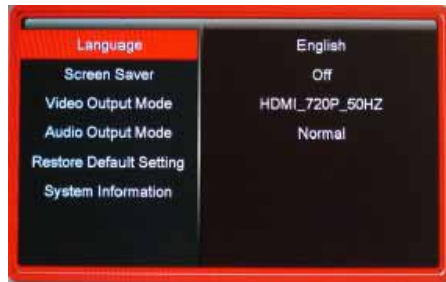

Video Output Mode

Once you are in the setting options page, please switch the video output standard for the media player. Please press "OK" on your remote to select "Video Output Mode", and press "OK" to view the different output, and then select your desired one by pressing direction keys.



 
Language

If you need to change your media player language input, please use the up and down arrow keys to select "Language." Once you are in language input, please view the different languages by pressing "OK" key on your remote, and then press direction keys on your remote to select your language. The player supports many different languages.




Screen Saver

If you need to choose a different screen saver time, please choose "Screen Saver" and press the "OK" key. You can now select the required language on the right of the screen.

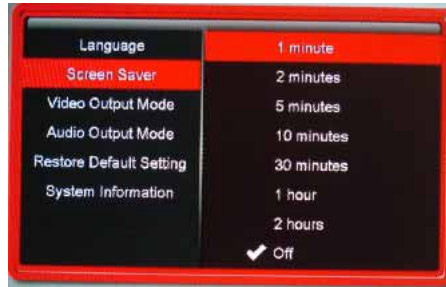

Audio Output Mode

 To select a different audio output mode, choose "Audio Output Mode" and press the "OK" key. You can now select your desired mode. The output list will be switched in the following order: Normal, SPDIF LPCM, SPDIF RAWDATA.

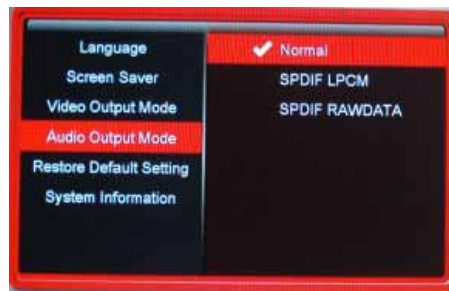

Note: If you choose SPDIF LPCM or SPDIF RAWDATA when connecting the media player to TV via HDMI / AV Cable, but didn't connect to Amplifier, there will be no voice, When connect to Amplifier via S/PDIF port , the voice will only come from Amplifier.

 
Restore Default Setting

You just need to choose "Restore Default Setting" and press the "OK" key. There will be a text prompt to ask if you want to restore to default setting, you can choose yes or no.



System Information

You can see the software information here.

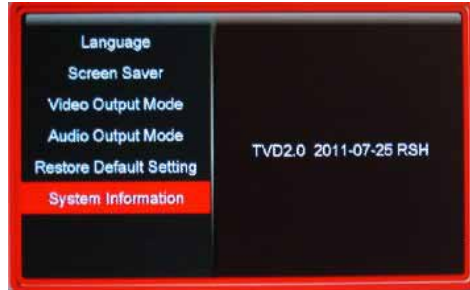

THREE

Getting started with the Media Player

On the main menu screen, you will see "File" "Music" "Movie" "Picture" and "Setting" icons. These icons display the categories available on the USB device/Smart Card you inserted for instance, if you click "Movie" icon to enter, you will access to the video files in your USB / SD storage device.



Movie

1. You should have your USB device or SD/MMC connected to the media player first in order to access the files;
2. Use the left and right arrow keys on the remote to select the "Movie" icon on the main screen and click "OK" to choose the movie which you want to play;
3. Delete / Copy Movie: After choosing the movie, press "OSD", you will see the following page, this function can copy movies between different external memory disks.



4. When the movies displaying, press the "OSD" key on your remote control in order to see the video options and then a list of options will be displayed in the following order: "Subenable" "Subtitle" "Colour" "Rimcolor" "Size" "Text Encoding" "Time Sync" "Offset"

- (1) "Subenable", choose to show subtitle or not.
- (2) "Subtitle", choose different subtitle;
- (3) "Color", change different color for subtitle;
- (4) "Rimcolor", show different effect for subtitle;
- (5) "Size", show subtitle size;
- (6) "Text Encoding", show encoding style;
- (7) "Time Sync", Adjust the time to make the subtitle's synchronization with movie.
- (8) "Offset", adjust the subtitle location

5. If you want to make the movie Repeat, Play/Pause, Stop, Rewind or Fast Forward you only need to press the function buttons on remote control to enable these functions.

6. Resume the video: This media player supports resume playback. This function enables you to resume the video you were watching from where you left off last time. Every time, you start watching your file, it will ask you whether you want to resume it.



Music

1. You must have your USB device or SD/MMC connected to the media player first in order to access the files.
2. Use the left and right arrow keys on the remote to select the "Music" icon on the main screen and click OK to access.



3. Once you enter the "Music" icon, you will see a page displaying the available inputs connected to your media player. Next you choose your input device by pressing "OK "key on your remote which will display a page listing the folders and/or music files in your selected device.



4. Delete / Copy Music: After choosing the music, press OSD, this function can copy music between different external memory disks.
5. In order to select the "Audio Options" please press the OSD key on your remote, it will immediately display a list of all audio setting options. Then you just need to press the left and right arrows keys on your remote to choose the option need. The audio options will be listed in the following order: "EQ Mode", "Lyric Focus Color", "Lyric Unfocus Color" and "Lyric Play Mode"

- (1) "EQ Mode" You can choose "normal" "DBB" "POP" "Rock" "Classic" "Jazz" "Vocal" "Dance" "Soft" ;
- (2) "Lyric Focus Color" & "Lyric Unfocus Color", choose different color for lyric.
- (3) "Lyric Play Mode", you can choose "Line Roll" or "Kalaok"; by pressing "Repeat" to loop the music

Picture

1. You must have your USB device or SD/MMC connected to the media player first in order to access the files.
2. Use the left and right arrow keys on the remote to select the "Picture" icon on the main menu screen and click the "OK" key.



3. Once you have entered the "Picture" icon you will see a page displaying the available input devices connected to your media player. Next you choose your input device by pressing "OK" key on your remote which will display a page listing the folders and/or picture files in your selected device.



4. After chose the picture, press OK to display, then you can press the OSD key on your remote to display a list of picture options. You have the options: "Switch Mode" "Play Interval" "Background Music".

(1) For "Switch Mode", Please press the up and down keys to view all different modes of switching your pictures, and then select one by pressing the "OK" key on your remote. The types of modes include: "Default" "Persian blinds H" "Persian blind V" "Slide up" "Slide down" "Slide left" "Slide right" "Stretch up" "Stretch down" "Stretch left" "Stretch right" "Mosaic" "Zoom in" "Zoom out"

(2) For "Play Interval", Please press the up and down keys to view the interval of switching your pictures, and then select one by pressing the "OK" key on your remote. You have the following interval choices: 1s, 3s, 5s, 10s and 30s.

(3) For "Background Music", press up and down keys to choose background music on or off.

File

1. Use the arrow keys to select "File" on the main menu, and press "OK" key to enter.



2. After entering, use the arrow keys to select the required input device. Press "OK" key to enter.



3. After choosing the device, you will see all files show here.



FAQ

Q1: The media player unit does not function, what should I do?

A: It could be that the unit is loading data from the USB / SD/ MMC storage device and it may take a while. However, if you are sure that the unit does not function, please try to unplug the power adaptor and plug it again.

Q2: There is no picture on the screen, what to do?

A: Please check the followings:

1. Please check if the power adaptor is properly connected;
2. Please make sure if the AV or HDMI cable is connected appropriately;
3. Remove the SD/MMC memory card or USB device and then plug in again after the unit turned on normally;
4. If you connect media player to TV with AV Cable, please set TV source(output) as TV/PAL/NTSC(according to the type of TV), press AV button on remote control to set the media player output as AV;
5. If you connect media player to TV with HDMI Cable, please set TV source(output) as HDMI, press HDMI button on remote control to set the media player output as HDMI;
6. If nothing still shows on TV, please connect your local distributor.

Q3: Why can't I play my movie file?

A: Please double check the movie formats supported by this media player and then make sure the media player functions normally. If the movie format you wish to play is supported by this media player, please try to reboot the unit. If it still does not work. It is possible the format is not supported by this media player.

Q4: Why can't I adjust subtitle?

A: Please keep in mind that some video or movies you download from internet come with subtitles, which means once you have downloaded the movie, the subtitles are there already. In that case, you cannot use the subtitle functions of this media player to make any change for the subtitles of these movies.

End-user Agreement

Please read this agreement carefully before using the product. Please ensure following points:

- (1). Do not dismantle the product for improper purposes;
- (2). Do not read and refresh the firmware of the product by improper means;
- (3). Do not conduct inverse engineering and disassembling for related software and codes of the product.

How to use this user Manual:

Please read this user manual carefully before using the product. The content of the manual as well as the

hardware and software of the product have been processed with intensive care. No responsibility is assumed for any direct or indirect losses arising from hardware damage, program damage, and file loss or system breakdown due to improper operations. As you have carefully read this agreement. It is ensured that the terms and conditions have been fully understood and will be strictly followed.

Precautions:

- (1). Do not expose the product to rains or damp environments to prevent fire or electric shock;
- (2). Do not expose the product to moisture, dripping or splashing in order to reduce the danger of fire, electric shock or product damage.

Safety Instructions

- (1). Use the original adapter for the product, and do not share an adapter with any other devices;
- (2). Do not place the power cord and plug of the adaptor near heat sources;
- (3). Do not dismantle and repair the adapter and its power cord
- (4). Do not open the enclosure of the product to ensure your safety. Please ask trained professionals to conduct maintenance if necessary.

Maintenance Tips

- (1) The product is of complicated and sophisticated structure, so only trained professionals are allowed to open the product to prevent damage from happening;
- (2) Do not dismantle components of the product on your own. The warranty mark will be invalid automatically if you dismantle and repair the product on your own;
- (3) Please contact our local warranty department to arrange for maintenance if necessary. To replace devices or accessories, please select the original ones designated by the manufacturer.

WARNING

This User's Manual is for specific product, and all its contents are processed with due care but are not ensured fully correct. We assume no responsibility for any loss arising from use of this manual. The right to interpret all contents of this User's Guide belongs to the company. The manual is subject to change with notice. This Manual is not authorized to any party and any reproduction or copy, in part or whole, of the manual in any way is permitted.