


E350 Morphing Terrarium

www.synthtech.com/euro/e350

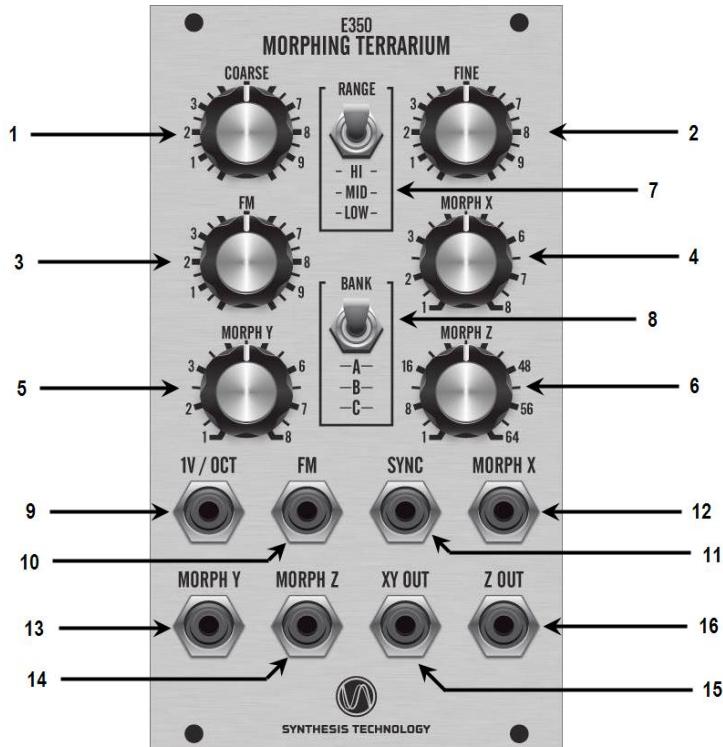


What is the E350?

The Synthesis Technology E350 is a 2-output wavetable VCO. There are 3 banks of 64 wavetables. Each bank is arranged like a chessboard: there are 8 rows (the 'X' direction) and 8 columns (the 'Y' direction). Waves in a row tend to be alike, or will progress from 'dark' to 'bright' in timbre. The E350 has independent controls to index/select where in this array the DSP 'scans' the data to generate these 2 outputs. The DSP has sophisticated algorithms that smooth the 2 outputs into over 24,000 unique waves.

Connecting to the power supply

The E350 can use either a MOTM 4-pin, MTA-156 style connector (+-15V) or a 16-pin Euro style (+-12V) connector. See the photos below. The Euro ribbon cable has a red stripe to indicate -12V. The supplied Euro power cable is keyed so that when inserted in the E350, the red stripe is 'down' (towards the jacks) and by the white lettering on the pc board.

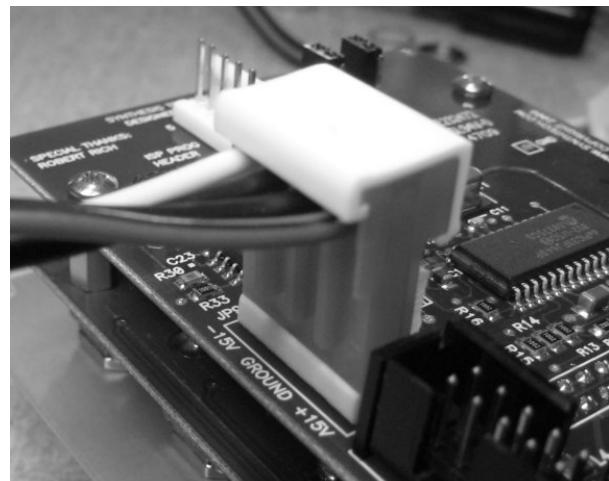

Controls and Jacks

- 1 - COARSE frequency control covers ~ 8 octaves
- 2 - FINE frequency control covers ~ 0.5 octaves
- 3 - FM amount. This is an attenuator for whatever is plugged into the FM jack (#10). The response is exponential.
- 4 - MORPH X. This control sets the initial starting point for the wavetable XY OUT, as indexed in the current 'row'.
- 5 - MORPH Y. This control sets the initial starting point for the wavetable XY OUT, as indexed in the current 'column'.
- 6 - MORPH Z. This control sets the initial starting point for the wavetable Z OUT. It scans through all 64 waves in the selected bank. This is useful to 'audition' all of the waves in the selected bank.
- 7 - RANGE switch. Selects 3 different frequency ranges for the E350. The total range is 1 cycle in 13 minutes to 10KHz.
- 8 - BANK switch. Selects 3 different sets of 64 waves. Bank A has mostly sine waves in different harmonic series and includes a few Hammond drawbars sets. Bank B is a wide assortment and includes male/female vocal formants. Bank C is specifically designed for LFO/modulation waveforms, but can also be used in the audio range. For a complete description, see the User Manual.
- 9 - 1V/OCT input. This sets the pitch tracking of the E350. There is factory trimmer for this setting located beside the FINE pot on the first pc board.
- 10 - FM input. Can be DC to 8KHz, and is attenuated by the FM panel control.
- 11 - SYNC. A positive voltage exceeding 0.25V will place the E350 into hard sync (both outputs reset to -5). In normal operation, another VCO is used to 'drive' sync.
- 12 - MORPH X. This voltage is added to the panel control to index the XY OUT wave along a 'row'.
- 13 - MORPH Y. This voltage is added to the panel control to index the XY OUT wave up/down a 'column'.
- 14 - MORPH Z. This voltage is added to the panel control to index the Z OUT wave for all 64 wavetables in the selected bank. It starts at Row 1, Column 1 (wavetable 1) and goes to Row 8 Column 8 (wavetable 64).
- 15 - XY OUT. This output (10V pk-pk) is a DC-coupled wave that is the result of all the MORPH X and MORPH Y settings.
- 16 - Z OUT. This output (10V pk-pk) is a DC-coupled wave that is the result of the MORPH Z settings.

General Info


Inputs: -5V to +5V, DC to 8KHz.

Outputs: -5V to +5V, DC to 10KHz


Power: +12V@55ma, -12V @25ma. For MOTM use: +15V @45ma, -15V@ 15ma.


Jumper options: JP7 – Morphing Wavetables operation (OFF) Phase Shift Mode (ON)
JP8 - Interpolation Enabled (OFF) Interpolation Disabled (ON)

E350 Signal Flow (Normal Mode)

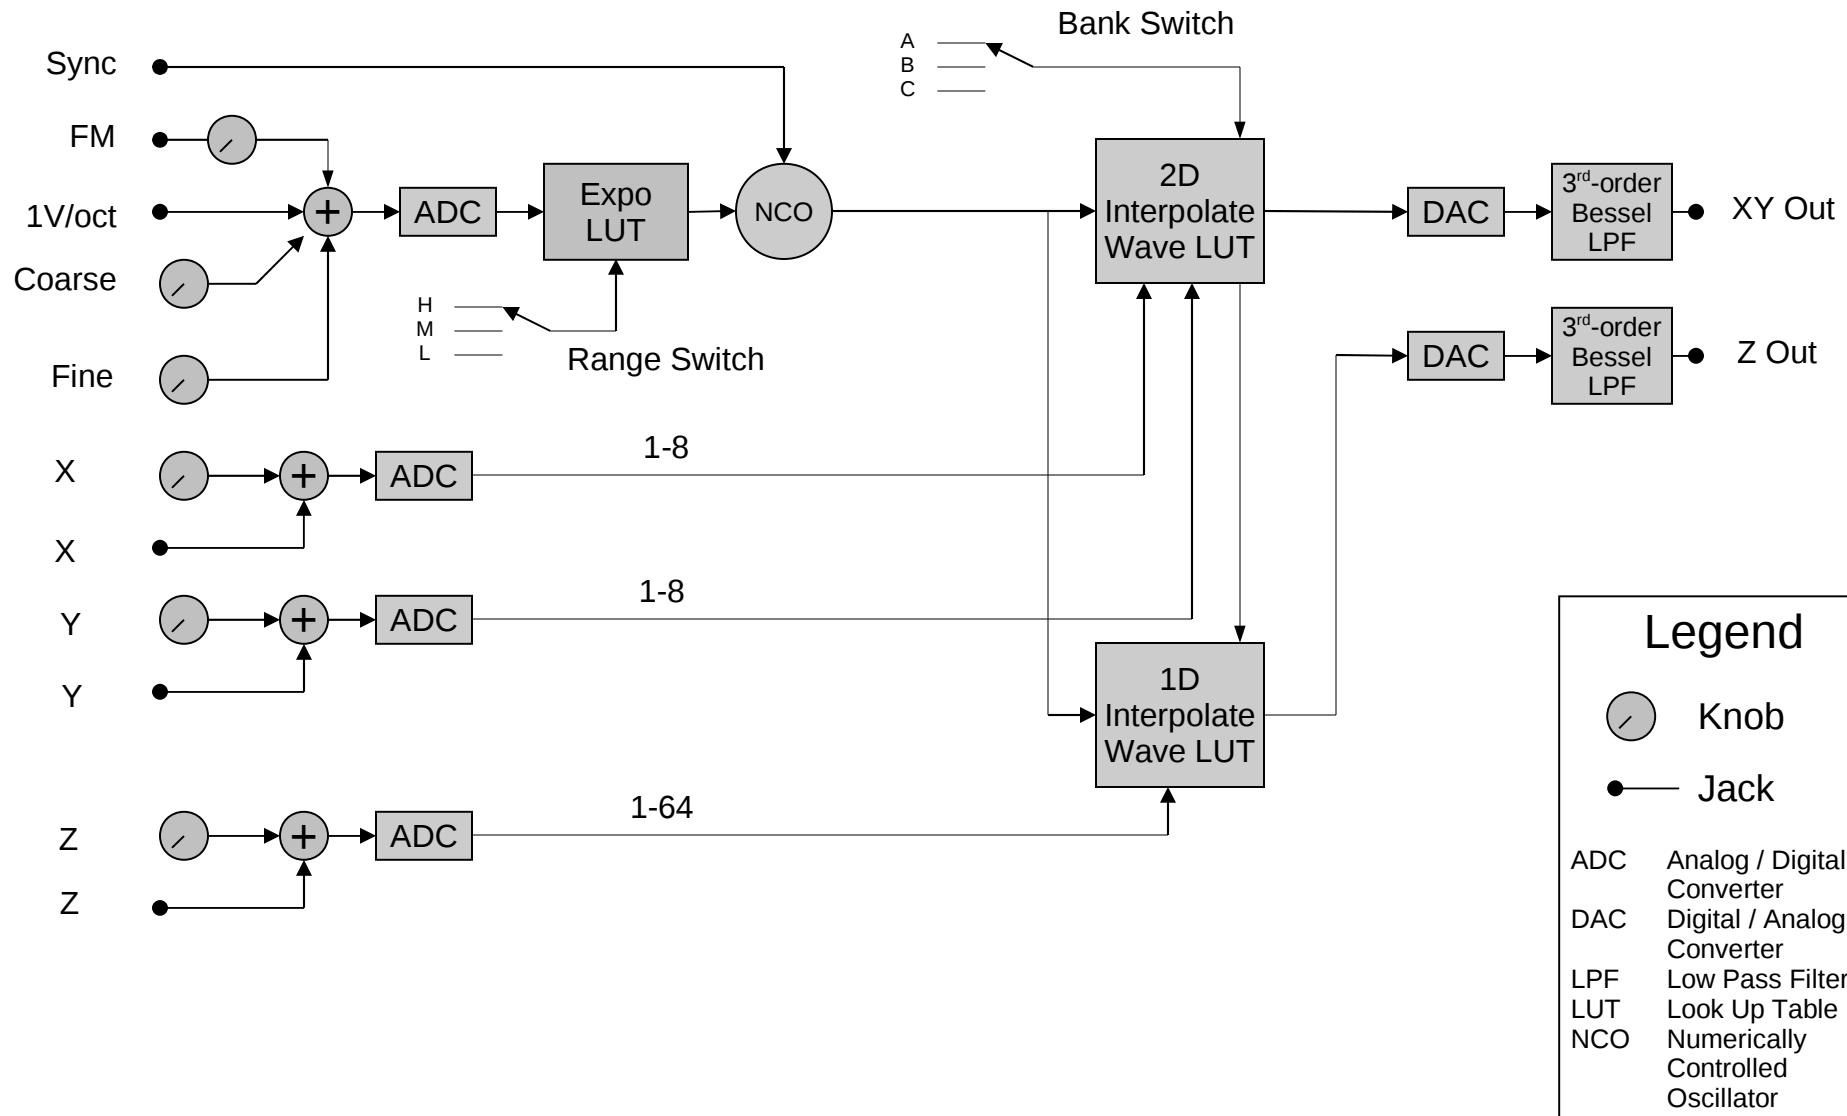


E350 Signal Flow (Phase Mode)

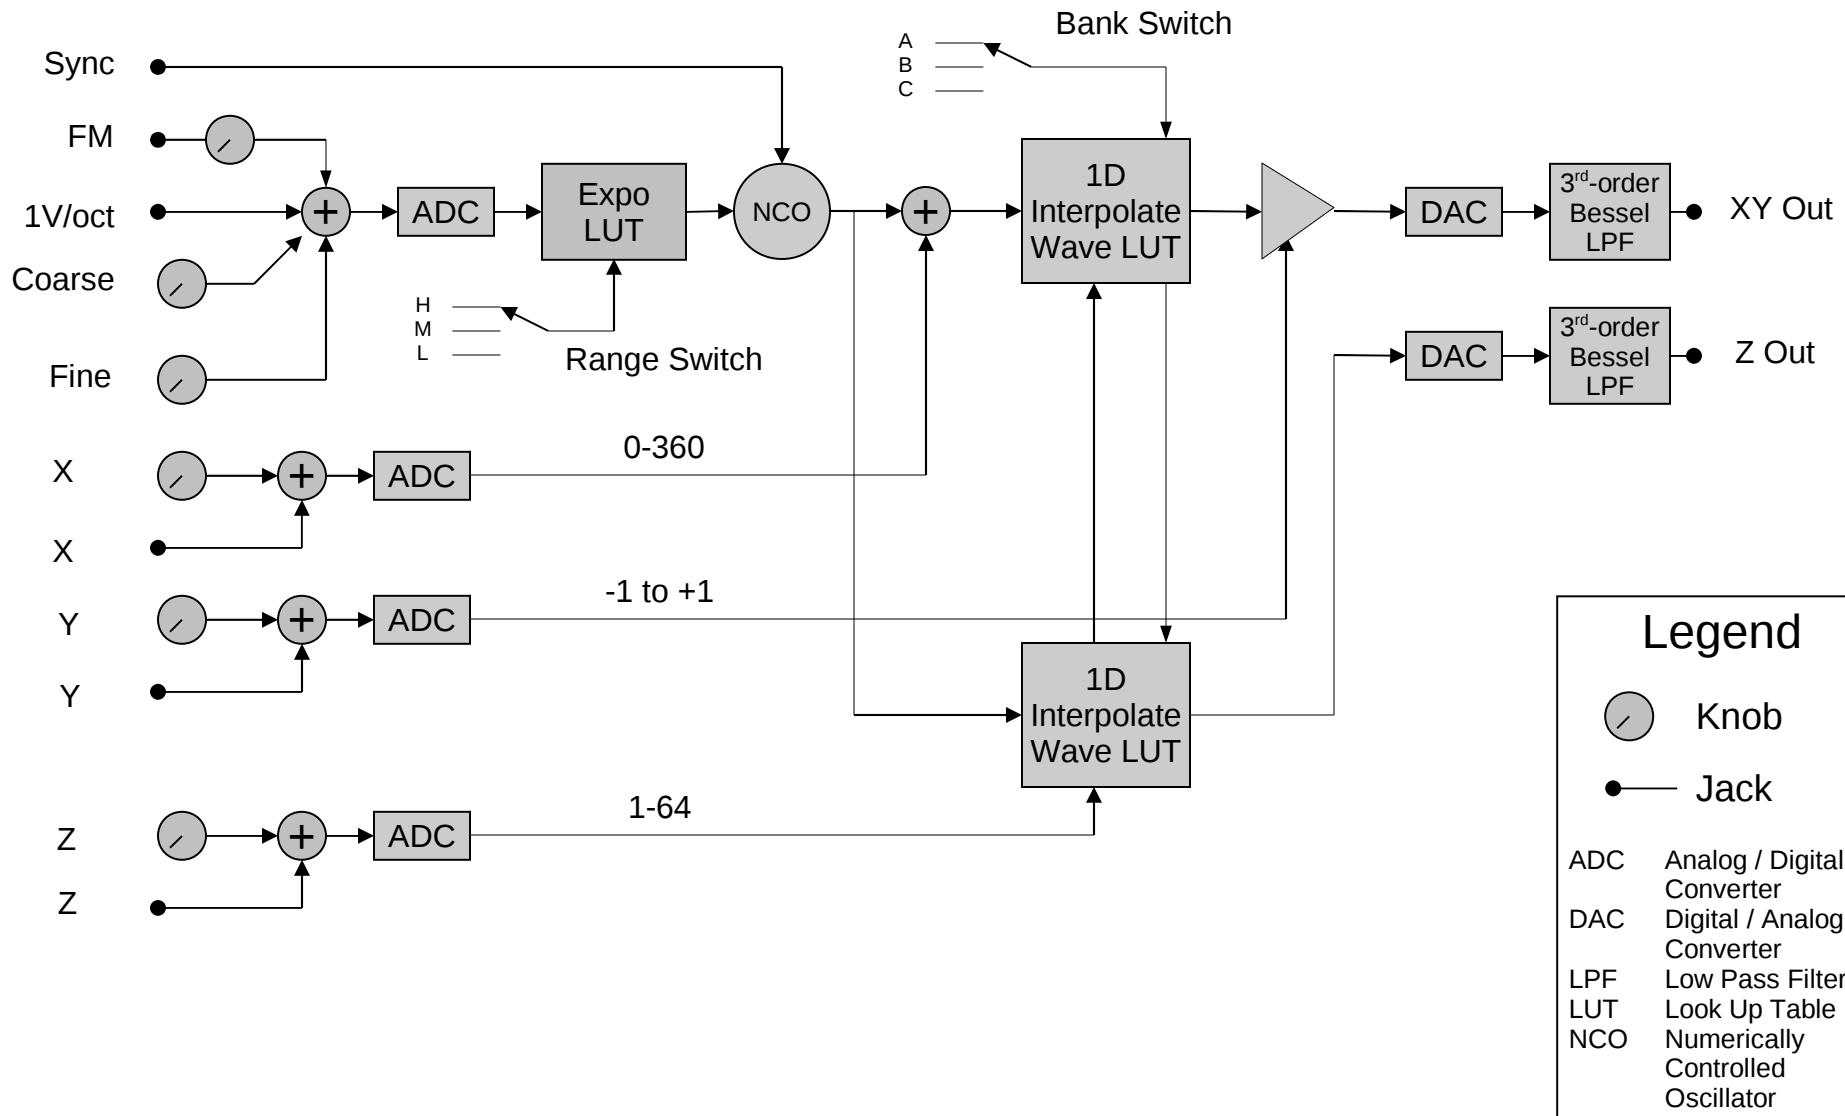

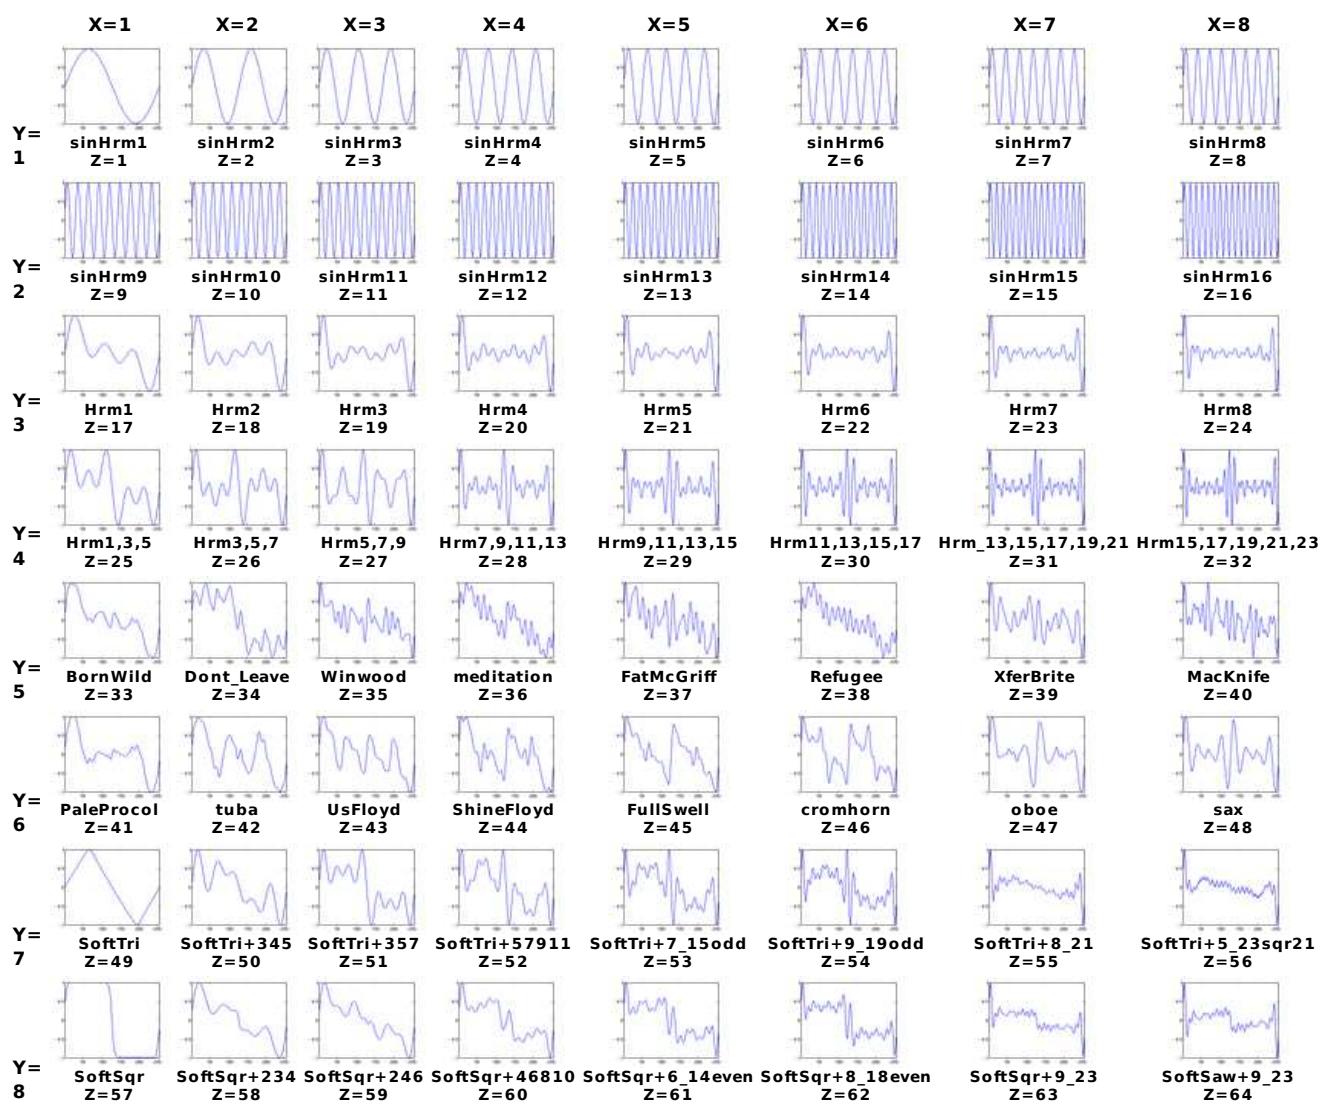Bank A

Bank B

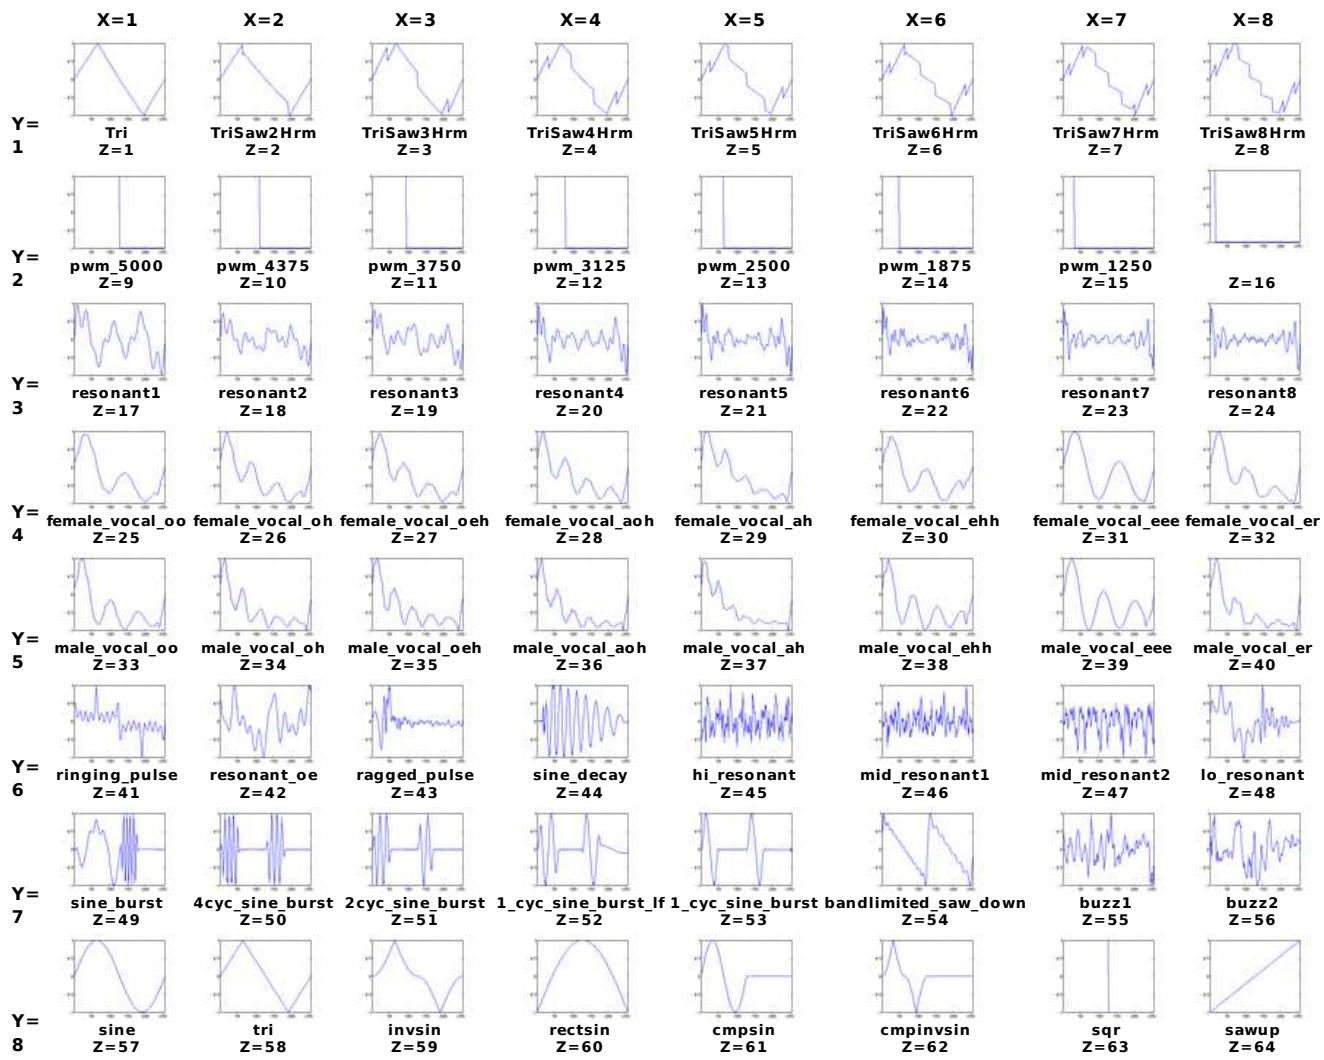

Bank C