




# How to use your new Freezer

Model MTZ55139FF MTZ55176FF

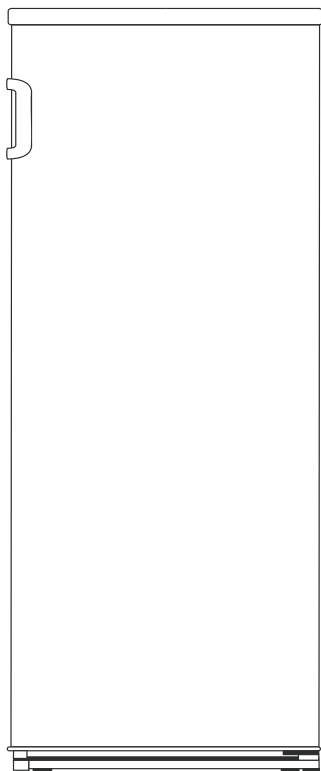

## Contents

Safety and warning information _____	2	Cleaning and Care _____	7
Control panel _____	4	What to do if... _____	8
First use and Installation _____	5	Description of the appliance _____	9
Daily use _____	5	Reversing the door _____	10
Helpful hints and tips _____	6	Disposal of the appliance _____	11



This appliance is in accordance with the following EU guidelines:  
2006/95/EC and 2004/108/EC and 2009/125/EC and EC.643/2009.



## Safety and warning information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

### Children and vulnerable people safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging well away from children. There is risk of suffocation.
- If you are discarding the appliance pull the plug out of the socket, cut the connection

cable (as close to the appliance as you can) and remove the door to prevent playing children from suffering an electric shock or from closing themselves inside it. If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

### General safety



Caution! Keep ventilation openings clear of obstruction.

- The appliance is intended for keeping foodstuff and/or beverages in a normal household as explained in this instruction booklet.
- Do not use a mechanical device or any artificial means to speed up the thawing process.
- Do not use other electrical appliances (such as icecream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacturer.
- Do not damage the refrigerant circuit. The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.



### Caution: risk of fire!

During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.

-avoid open flames and sources of ignition.  
-thoroughly ventilate the room in which the appliance is situated.

- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a shortcircuit, fire and/or electric shock.



**Warning!** Any electrical component (power cord, plug, compressor) must be replaced by certified service agent or qualified service personnel.

1. Power cord must not be lengthened.
2. Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the mains plug of the appliance.
4. Do not pull the mains cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. The appliance is only applied with power supply of single phase alternating current of 220V-240V/50Hz. If fluctuation of voltage in district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the appliance. The appliance must employ a special power socket instead of common one with other electric appliance. Its plug must match the socket with ground wire.

- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

### Daily use

- Do not store flammable gases or liquids in the appliance. There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.

- Do not place food products directly against the air outlet on the rear wall.<sup>1)</sup> Frozen food must not be re-frozen once it has been thawed out.<sup>2)</sup>
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.<sup>2)</sup>
- The appliance manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.<sup>2)</sup>
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.

### Warning!

#### Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

### Installation

#### Important!

For electrical connection carefully, follow the instructions given in this manual.

- Unpack the appliance and check it is not damaged in any way. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.

- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back of the product should not be against a wall to allow sufficient ventilation and prevent the risk of fire.

Follow the instructions relevant to installation.

 
- The appliance must not be located close to radiators or cookers.

Make sure that the mains plug is accessible after the installation of the appliance.

### Service

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
  - 1) If the appliance is Frost Free.
  - 2) If the appliance contains freezer compartment.

## Control panel



The control panel that controls the temperature inside the freezer compartment is located inside the freezer.

- : Cancel audible alarm button.
- : Alarm : High temperature warning neon.
- : Power : Electrical power indicator.
- : Super : Super Freeze indicator.
- : Super Freeze : Super Freeze button.

### SUPER FREEZE (Button)

If you need the temperature inside the freezer to drop quickly, please press this button and indicator of super will be on. The unit runs in **Super Freezer**.

If you need the appliance to stop the mode of **Super Freeze**, press the Super Freeze button again, the Super Freeze indicator will go out.

**Attention!** At super freeze mode, the freezer will automatically quit super freeze mode after 24 hours, the super indicator will shut off simultaneously.

### ALARM FOR FREEZER

If the electrical supply has been off for any reason, for a long period, and the inside temperature has warmed up to higher than  $-10^{\circ}\text{C}$  the alarm will operate.

When temperature  $\geq -10^{\circ}\text{C}$ , the indicator light begins to flash, and at the same time, the alarm sounds 3 times every 10 seconds. After 2 minutes the alarm will automatically stop but the High Temperature alarm indicator will be on but will stop flashing.

When temperature falls below  $-10^{\circ}\text{C}$ , High Temperature alarm indicator will go out.

(button)

To turn the audible alarm off press and the alarm sound will stop but the High Temperature indicator will stay lit but will stop flashing.

### Starting up and temperature regulation

Insert the plug of the connection lead into the plug socket with protective earth contact.

#### Setting Cold means:

Highest temperature, warmest setting.

#### Setting Colder means:

Lowest temperature, coldest setting.

**Caution:!** Please avoid turning the temperature control knob passed the position for "Cold" or "Colder".

**Important!** -Normally we advise you select setting of Mid, if you want the temperature warmer or colder please turn the knob to lower or higher setting accordingly. When you turn the knob to lower which can lead to the more energy-saving. Otherwise, it would result the high energy-consuming.

**Important!** -High ambient temperatures (e.g. on hot summer days) and a cold setting on the temperature regulator (position Colder) can cause the compressor to run continuously!

**Reason:** when the ambient temperature is high, the compressor must run continuously to maintain the low temperature in the appliance.

## First use and Installation

### Cleaning before use

- Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

**Important!** Do not use detergents or abrasive powders, as these will damage the finish.

### Installation Positioning



**Warning!** Before installing, read the instruction carefully for your safety and correct operation of the appliance.

- Position the appliance away from sources of heat such as stoves, radiators, direct sunlight etc.
- Maximum performance and safety are guaranteed by maintaining the correct indoor temperature for the class of unit concerned, as specified on the rating plate.
- This application perform well from N to ST. The Appliance may not work properly if it is left for a longer period at a temperature above or below the indicated range.

**Important!** There is a need of good ventilation around the fridge for easy dissipation of heat, high efficiency of refrigeration and low power consumption. For this purpose, sufficient clear space should be available around the fridge. It is advisable for there to be 75mm separating the back of the fridge to the wall, at least

100mm of space at its two sides,height of over 100mm from its top and a clear space upfront to allow the doors to open 160°.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Appliances must not be exposed to rain. Sufficient air must be allowed to circulate in the lower rear section of appliances, as poor air circulation can affect performance. Built-in appliances should be positioned away from heat sources such as heaters and direct sunlight.

### Leveling

- The appliance should be level in order to eliminate vibration. To make the appliance level, it should be upright and both front feet should be in firm contact with the floor. You can also adjust the level by screwing out the appropriate adjustable foot at the front (use your fingers or a suitable spanner).

### Electrical connection

**Caution!** Any electrical work required to install this appliance should be carried out by a qualified or competent person.

**Warning!** This appliance must be earthed. The manufacture declines any liability should these safety measures not be observe.

## Daily use

### Accessories 1)

#### Shelves

- The shelves are suitable for storing food.
- To remove the shelf :lift up at the front and pull out.

- To put the shelf back:simply push in as far as it will go.

#### Freezer Drawer

- The drawer is suitable for storing frozen food.

## Ice-cube production

This appliance is equipped with one or

- more trays for the production of ice-cubes.

## Freezing fresh food 2)

The freezer compartment is suitable for

- freezing fresh food and storing frozen and deep-frozen food for a long time.

The maximum amount of food that can be

- frozen in 24 hours is specified on the rating plate, a label located on the inside of the appliance.

The freezing process lasts 24 hours:

- during this period do not add other food to be frozen.

## Storing frozen food 2)

When first starting-up or after a period out

- of use. Before putting food in the freezer allow the freezer to run for at least 2 hours on the 'Colder' setting.

### Important!

In the event of accidental defrosting, for example if the power has been off for longer than the time shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooking).

## Thawing 2)

Deep-frozen or frozen food, prior to be

- used, can be thawed in a refrigerator compartment, or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still

- frozen, directly from the freezer. In this case, cooking will take longer.

### Important!

In order to make the most of the volume in your freezer storage compartment the user can remove one or more of the shelves or drawers from the appliance, according to your daily use.

In order to save energy do not remove the bottom freezer drawer. 3)

1) If the appliance contains related accessories and function.

2) If the appliance contains freezer compartment.

3) If the appliance is Frost Free.

## Helpful hints and tips

### Noises during Operation

The following noises are characteristic of refrigeration appliances:

**Clicks** Whenever the compressor switches on or off, a click can be heard.

**Humming** As soon as the compressor is in operation, you can hear it humming.

**Bubbling** When refrigerant flows into thin tubes, you can hear bubbling or splashing noises.

**Splashing** Even after the compressor has been switched off, this noise can be heard for a short time.

### Energy saving tips

- Do not install the appliance near cookers, radiators or other sources of warmth.

- Do not open the door too often or leave the door open any longer than necessary.
- Do not set temperature colder than necessary.
- Make sure the sides and rear of the cabinet are some distance from the walls or other cabinet, follow the instructions relevant to the installation instructions.
- If sketch map shows the right combination of the drawers, crisper and shelves, do not adjust the combination, it would result in more energy-consuming.

### Hints for fresh food refrigeration

To obtain the best performances:

- Do not store warm foods or evaporating liquids in the appliance.
- Do cover or wrap the food, particularly if it

has a strong flavor.

- Position food so that air can circulate freely around.

### Hints for freezing

To help you make the most of the freezing process there are some important hints:

- The maximum quantity of food which can be frozen in 24 hours. Is shown on the rating plate.
- The freezing process takes 24 hours.no further food to be frozen should be added during the period.
- Only freeze top quality, fresh and thoroughly cleaned foodstuffs.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required
- Wrap up the food in aluminum foil or polythene and make sure that packages are airtight;
- Do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter.
- Lean foods store better and longer than fatty ones; salt reduces the storage life of food.

- Ice cubes, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt.
- It is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

### Hints for storage of frozen food:

To obtain the best performance from this appliance you should:

- Make sure that the commercially frozen foodstuffs were stored by the retailer
- Be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time
- Do not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, foods deteriorate rapidly and can not be re-frozen.
- Do not exceed the storage period indicated by the food manufacture.

## Cleaning and Care

### Cleaning and Care

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.

The appliance should be cleaned and maintained at least every two months.



**Warning!** Danger of electrical shock!

- The appliance should not be connected to the mains during cleaning. Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse.

### Important!

- Remove the food from the appliance before cleaning. Store them in a cool place, well covered.
- Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components.

- Hot vapors can lead to the damage of plastic parts.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.Do not allow such substances to come into contact with appliance parts.
- Do not use any abrasive cleansers.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dish washing detergents may also be used.
- After cleaning wipe with fresh water and clean dish cloth.
- Check the water drain hole on the rear wall of the refrigerator compartment.
- Clear a blocked drain hole with the aid of something like soft green peg, be careful not to make any damage to the cabinet by sharp things.

- After everything is dry place appliance back into service.

### Defrosting

- The compartment of this appliance is “frost free”.
- This means that there is no buildup of frost when it is running, neither on the internal walls nor on the foods.
- The absence of frost is due to the continuous circulation of cold air inside the compartment, driven by an automatically controlled fan.

### Go out of use for a long time

- Remove all refrigerated packages.
- Remove the mains plug or switch off or disconnect the electricity supply.
- Clean thoroughly (see section: Cleaning and Care)
- Leave the door open to avoid the build up of odors.

## What to do if...



**Warning!** Before trouble shooting, disconnect the power supply. Only a qualified electrician of competent person must carry out the trouble shooting that is not in the manual.

**Important!** There are some sounds during normal use (compressor, refrigerant circulation)

### Important!

Repairs to refrigerators/freezers may only be performed by competent service engineers. Improper repairs can give rise to significant hazards for the user. If your appliance needs repairing, please telephone

**0845 050 8536**

Problem	Possible cause	Solution
Appliance does not work.	Appliance is not switched on.	Switch on the appliance.
	Mains plug is not plugged in or is loose.	Insert mains plug.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Socket is defective.	Mains malfunctions are to be corrected by an electrician.
Appliance is too cold.	Temperature is set too cold.	Turn the temperature regulator to a warmer setting temporarily.
The food is too warm.	Temperature is not properly adjusted.	Please look in the “initial Start Up” section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the “installation location” section.




Heavy build-up of frost, possibly also on the door seal.	Door seal is not air-tight (possibly after reversing the door).	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises.	Appliance is not level.	Readjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
The compressor does not start immediately after changing the temperature setting.	This is normal, no error has occurred.	The compressor starts after a period of time.

## Description of the appliance

### View of the appliance

1. Control panel
2. Flap
3. Upper drawers
4. Ice tray (inside)
5. Drawers
6. Lower drawer
7. Adjustable feet
8. Door
9. Shelves

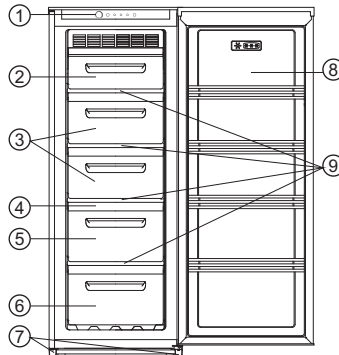


**Note:** Due to unceasing modification of our products your refrigerator may be slightly different from this Instruction Manual, but its functions and using methods remain the same.

## Reversing the door

 The side at which the door opens can be changed from the right side (as supplied) to the left side, if the installation site requires.

Tools you will need:

1. 8mm socket driver and 10mm socket driver



2. cross-shaped screwdriver



3. Putty knife or thin-blade screwdriver




4. Monkey wrench




Before you start lay the refrigerator on it's back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the cooling pipes at the rear of the refrigerator.


1. Remove the four blanking plates from the top of the freezer with a flat bladed screwdriver. Remove the screws underneath with a Phillips screwdriver.

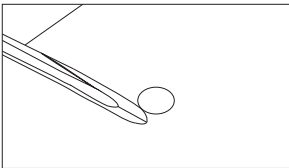


2. Use the 8mm socket or spanner to remove the three bolts above the door hinge. Lift off the bracket. Remove the freezer door.

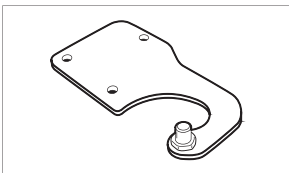


3. Remove the pin from the bracket and replace it into the same hole from the other side.

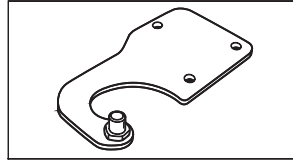


4. Remove the hinge insert plate from the bottom of the freezer door. Replace the plate on the opposite side.

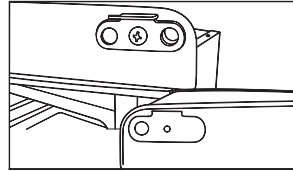


5. Tilt the freezer back, no more than 45°, to access the bottom hinge and feet. Remove the feet and the bolts securing the right hand hinge plate and left hand fixing plate.

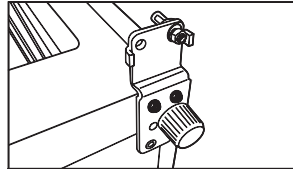

6. Remove the pin from the position 1 and replace it in position 2. Place the hinge on the opposite side of the cabinet, secure it with three bolts, screw the foot into position.

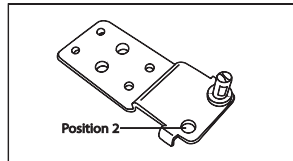


7. Place the fixing plate on the opposite side of the appliance, secure it with three bolts, and screw the foot into position.

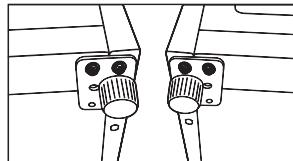


8.If the door seal does not fit against the cabinet,on any side,warm the seal with hot water and tease it into position.This can be done using a hair dryer but care must be taken not to overheat the seal or burn your hands.

Check the door is aligned horizontally and vertically and that the seal is closed on all sides before tightening hinge bolts.Replace the lid and screws.

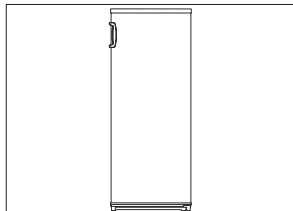

#### Door handle reversal (optional)

Remove the handle covers and screws which fix the handle on the right side of door, then remove the handle and rotate 180 degree, position on the left side, fix it by screws and cover the handle cover.

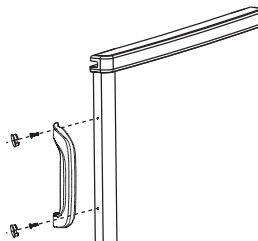

#### Warning!

Reposition, level the appliance, wait for at least two hours and then connect it to the power socket. In case you do not want to carry out the above mentioned operations, contact the Service Centre: 0845 050 8536 Reversing the hinges is not covered by the warranty and can be carried out but it will be at your cost. After reversing the opening direction of the door check that all the screws are properly tightened and that the magnetic seal meets the cabinet all the way around.

## Disposal of the appliance

It is prohibited to dispose of this appliance in domestic household waste.


#### Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose the packaging in a suitable collector container to recycle it.

#### Before disposal of appliance.

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

Technical Characteristics			
		MTZ55139FF	MTZ55176FF
Energy Class		A+	A+
Net Volume (Litres)		139	176
Freezing Capacity (24 hrs)		12kg	15kg
Power Off Rising Time		10 hours	10 hours
Freezer Star Rating		4	4

	<b>Correct Disposal of this product</b>
	<p>This symbol on the product or in its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.</p>

*Fridgemaster*<sup>®</sup>

**FRIDGEMASTER**  
Unit D, Global Avenue  
Millshaw  
Leeds  
LS11 8PR  
Tel: +44 (0) 113 395 6930  
Fax: +44 (0) 113 270 8599

For further information please contact  
the Fridgemaster Technical Helpline on:

**0845 0508536**

Email: [Fridgemaster@0800repair.com](mailto:Fridgemaster@0800repair.com)