



English



USER'S MANUAL







* Picture of the AYCT-102 (not always included, check the specifications on the packaging)

- A: Indicator (power and connection status)
- B: Search mode button
- $\pmb{C}: Child \ protection$
- D: Hinged cover





[1] Insert the plug portion in a mains socket. The indicator remains lit as long as there is power at the mains socket.

 The switched socket is normally off. The switched socket can only be switched on once it has been linked to a transmitter!



[2] Connect the lamp, pond pump (or other suitable equipment) to the switched socket.

This product is suitable for devices with a power consumption of <u>maximum 3500 Watts</u>!





[3] Press the search mode button briefly. The indicator begins to flash.

The search mode is activated for 15 seconds. If necessary, repeat [3] to activate the search mode again!



[4] Press the desired 'on' button on the remote control (or send an 'on' signal from another type of transmitter). The indicator on the switched socket stops flashing as soon as the connection is made.







[5] To confirm, the built-in switch switches on and off two times. The code of the transmitter is stored in the memory of the mains socket switch and the product is ready for use.

A maximum of 6 different transmitter codes can be stored simultaneously!



Remarks

🗥 Reminders

- · This product must be used in combination with at least one COCO transmitter.
- The product is a switch/receiver: remotely controls lighting (or other suitable equipment), without complex wiring.
- This product is equipped with child protection. This may make it slightly more difficult to insert plugs. If so, push the plug firmly and directly into the switched socket.
- The hinged cover protects this product against splashed water. Make sure the rubber seal does not become damaged and that the cover is closed when no devices are connected.
- To prevent interference between devices, avoid placing multiple products close to each other. The minimum distance between units should be approx. 50 cm.
- The wireless system can be indefinitely expanded with other COCO remote controls and/or receivers.
- Your COCO transmitter may have a special 'group' button with which multiple receivers can be switched on and off simultaneously. Repeat [3 - 4] and press the 'group' on button of the transmitter in step [4].
- During a power failure, or when the mains socket switch is removed from the socket, the codes remain in the memory.
- To delete the set codes (clearing the memory): (1) Hold in the search mode button. (2) The indicator begins flashing after approx. 7 seconds. (3) Release the search mode button. (4) Press the search mode button again. (5) To confirm, the built-in switch switches on and off two times.
- · If the product does not work:
 - Reset the memory (see previous line) and set the code in the transmitter again (repeat [3 4]).
 - Check whether the indicator is lit; if not, there may not be any power at the mains socket.
 - Make sure the connected device is switched on.

A Safety instructions

- This product is splashproof and meets the requirements of protection class IP44. This means that the
 product provides protection against splashed water and may be used outdoors.
- Wa ming: Even if the product is switched off, voltage may still be present at the switched socket!



- Never use COCO products for life support systems or other applications in which equipment
 malfunctions can have life-threatening consequences.
- Do not connect any lights or other devices that consume more than 3500 Watts. Connecting incorrect equipment can cause defects, a short circuit and fire.
- Do not attempt to repair this product. If the product is damaged or if you are in doubt about the proper operation, take the product back to the place of purchase.
- · Clean the device with a dry cloth.

⚠ Wireless

- This product works using a radio signal that passes through walls, windows and doors. The range is
 maximum 75 metres in the open air. The range indoors is strongly influenced by local conditions such
 as concrete, glass and metals. On average, the indoor range is approximately 30 metres.
- New double glass often includes a thin metallic layer. This type of glazing ("HR glass") allows most
 visible light to pass through but has a negative impact on radio signals. If there is HR glass between the
 transmitter and receiver, you should expect a significant reduction of the range of the wireless signal.
- This product operates at a frequency of 433.92 MHz. It complies with the essential requirements and
 other conditions of R&TTE Directive 1999/5/EC and can be used in all EU countries.
- There may be restrictions on the use of this device outside the EU. If this device is used outside the EU, check whether the device complies with the local directives.

Œ

This product complies with the essential requirements and other relevant provisions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.coco-technology.com.





If possible, submit this product for recycling after use. Do not dispose of the product with household trash.

Warranty and copyright

This device is covered by a 2-year warranty that begins on the day of purchase. Visit www.cocotechnology.com/warranty for additional information. Reprinting of (portions of) this manual without permission from Pan-Trade International B.V. is expressly prohibited.





PAN-TRADE INTERNATIONAL B.V.

P.O. BOX 126 4760 AC ZEVENBERGEN THE NETHERLANDS www.coco-technology.com

Declaration of Conformity

Pan-Trade International BV declares that the COCO product, model:

type designation AGDR-3500 GARDEN MAINS SOCKET SWITCH 'HEAVY DUTY' item number 74038

is in compliance with the essential requirements and other relevant provisions of directives R&TTE 1999/5/EC, EMC 2004/108/EC and LVD 2006/95/EC and is compatible with the standards EN 300 220-1/3, EN 55015, EN 301 489-1/3 and EN 60950.

Manufacturer / Authorised representative,

M.A. Hoekstra, managing director Zevenbergen, 2008-01-30