

EB-215

12" Electric Brush

This powerbrush, with metal brush roll, is to be used to vacuum wall to wall carpeting, handmade carpets, fine rugs, and other flooring.

This powerbrush must be used with the top and lower wands.



Features include:

- Foot Pedal--provides easy on/off operation. Just step on the foot pedal to switch the brush on and off.
- Status Window--allows you to easily identify clogs and troubleshoot performance.
- Flat Belt--A flat belt drive for quick changes
- Metal Brushroll & 12" Cleaning Path--provide solid performance and maneuverability.



REMEMBER: As with all electric appliances, risk of shock is possible. Do not remove brush, pull wands out, or attempt maintenance while power is on.

Wands



1. (BW-215) Bottom Wand

- Short stub wand connects to the brush.

2. (W-315T) Telescopic Top Wand

- Telescopic top wand connects to lower wand when operating the floor brush
- Cord management--keeps cords out of the way and allows you to disengage the hose handle from the electric brush.
- Telescopic Top Wand--extends for added length. Allows you to adjust to the length necessary for your cleaning comfort.

EB-215 Companion Electric Brush Instructions

Installation

1. Read important safety instructions before installing powerhead.
2. Ensure vacuum cleaner is disconnected from power supply before installing powerhead.
3. Connect extension wands from vacuum into powerhead's neck.
4. Place cable in given cord management guides on the wands.

Storage

1. Ensure vacuum cleaner is disconnected before unplugging powerhead.
2. Unplug cord from hose and remove from clips on wands.
3. Remove powerhead from wands and store powerhead in a safe place.
4. Always keep cord neatly coiled when not in use.


Changing Belt

1. Disconnect vacuum cleaner from power supply.
2. Remove screws from bottom of powerhead.
3. Remove base plate from powerhead.
4. Remove brush roll.
5. Replace old belt with new belt.
6. Insert brush roll back into correct spot.
7. Replace base plate and put screw back in.

Changing Brush Roll

1. Disconnect powerhead from electrical supply.
2. Remove screws from bottom of powerhead.
3. Remove base plate from powerhead.
4. Replace old brush roll with new brush roll.
5. Insert brush roll back into correct spot.
6. Replace base plate and put screw back in.

Telescopic TopWand Instructions

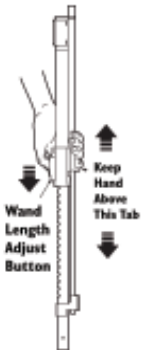

Telescoping Top Wand

The wand length is adjustable and requires no assembly. To adjust, simply push down on the wand adjust button and slide the upper wand to the desired height.