Editing a Project

This chapter is divided into two sections. The first deals with options included within the master. In this section you learn how to:

- open a section,
- navigate in a section,
- select and exclude text,
- use the Choices function,
- change views and preview your documents, and
- use the Notes window.

The second section of this chapter deals with user-added material. In this section you learn how to:

- edit a paragraph,
- switch from edited back to master text,
- add and delete paragraphs,
- add tables,
- add, edit, and delete choice groups,
- copy and paste paragraphs,
- import from the clipboard, and
- demote and promote paragraphs.

Overview

Because the master database in SpecLink is very extensive and is expanded and updated quarterly, you must select what you need and edit it for individual projects. Unlike word-processing specification strategies, with SpecLink you edit by selecting paragraphs for inclusion in the project rather than by deleting text. This inclusive process means that master text is always available, even when old projects are copied as the basis for a new one. Making copies of existing projects for subsequent modification is therefore a much safer and more productive way of producing documents than using documents generated by conventional word processing, where master text is deleted.

In addition to selecting paragraphs, you edit in SpecLink by selecting from among choices embedded in many paragraphs. You can also modify the master text by simply clicking in a paragraph and editing as you would on a word processor. You can also add paragraphs, articles, or whole sections using tools such as Copy/Paste and Import from Clipboard.

Finally, you can add a note to any paragraph, including paragraphs you have added. This chapter explains the editing functions of SpecLink in detail.

Viewing a Section

To view a section, click on its title in the Tree panel. The section appears in the adjacent Document panel.

NOTE: If you cannot see the Document panel, from the View menu, choose Document Panel.

Depending on the resolution of your computer screen, you may want to close the Tree panel while you are editing a specific section. To do so, from the View menu, choose Tree Panel.

NOTE: The section opens to the level indicated by the depressed "Show Level" button. For maximum opening speed, especially if you are looking at the initial notes in each section, first click on the *Show Level 1* button on the Project Window toolbar to collapse the text.

For fastest editing speed, use the document check-out feature described in Chapter 9.

Opening Multiple Sections

Opening multiple sections is particularly helpful when you are working with Links. You can have more than one section open at a time, and even open the same section more than once to look at the beginning and the end at the same time. To open a new section in the current project, from the Window menu choose New Window, then view the section you want.

As in all Windows-based applications, windows can be moved, resized, minimized, and maximized. This applies to each section window that is opened. Sections can be cascaded, moved, pulled up one at a time, pushed mostly off the screen, and minimized. To make a minimized section current, from the bottom of the Window menu, choose the name of the window you want.

In addition to cascading, two special types of "tiling" are available: *Tile Horizontally* and *Tile Vertically*. When it is necessary to review two or more sections simultaneously, tiling is very useful. When you choose a Tile command, all the open sections are tiled, so minimize any sections you don't wish to tile, then select the method of tiling desired. You also will probably want to close the Tree Panel to maximize the amount of text visible in the Document Panel of each section.

Keep the following hints about multiple windows in mind:

- If you use the Restore button 🖻 to reduce the size of the main window, you can see several windows on the screen at the same time. Alternatively, you can use the Window menu to switch between open windows.
- If your current window is less than full screen size, a new window automatically "cascades" (lays over the previous window so some of the previous window is visible). Instead of cascading windows, you can use the Window menu to tile them either horizontally or vertically.
- Tiled and cascaded windows can be moved, viewed one at a time, or hidden. The title of each opened window appears on the Windows menu; if you have hidden a window, select the hidden window from the list on the Windows menu.
- You can use the mouse to resize a window by dragging an edge. You can also use the Windows size control buttons to minimize, maximize, restore, and close windows.

The Document Panel

When you click on a section title in the Tree panel, the section content appears in the Document panel. In addition to the section content area, the Document panel includes a toolbar, a horizontal ruler for formatting, status columns, and horizontal and vertical scroll

bars for moving within the section. These areas of the Document panel are described in detail in Chapter 3.

NOTE: For faster editing, on the Document menu, point to Check Out | Check In, and then choose Check Out Document. A copy of the section will be copied to a temporary location on your local drive and links to other sections will be suspended, speeding up the editing process. When you are finished editing, you check the section back in. See Chapter 9 for details.

The section content portion of the Document panel is where the specification text appears. Each paragraph is one field in a database record, sequentially numbered as shown in the sequence number status column (#) to the left of the text.



Document panel

The text is organized in hierarchical, or "outline" form, with the hierarchy for each paragraph displayed on the die icon in the paragraph level status column (LVL). Relative hierarchy is also indicated by the amount of indentation from the left margin. As you select text, the default style for that level is applied automatically. This includes the appropriate paragraph numbering, provided that Auto Numbering is toggled on (View menu...Display Layout, or View toolbar).

The status of each paragraph is displayed, indicating whether it prints in the final document or not. Selected, active text is indicated by a change in the color of the text and in the

background color of the status columns. At inactive paragraphs, the text is light gray and the status column background color is also light gray. At active paragraphs (selected text that will be included in the printed document), the text is black (except for embedded choices) and the background of the status columns is dark gray. In addition, the status box for each active paragraph shows a checkmark, a green background, or both. See the "Status Boxes" section of Chapter 3 for details. If there is any doubt about whether text is active or inactive, click on the Compact View button on the View Toolbar. Only selected, active text that will print appears in this view. Return to Master View to continue editing.

Embedded choices are shown in color. Blue text indicates a multiple choice option, red indicates a fill-in, and green indicates a global choice that is established in the Summary Info dialog box. Unused optional multiple choices are indicated by the following combination of symbols, which do not print: [<>]. Fill-ins are enclosed by square brackets [] that do not print. To open any embedded choice, click once anywhere within the blue-colored choice area. To insert text in a fill-in, click once anywhere between the brackets to block the underlined area, then enter your text or use Ctrl+V to paste in text from the clipboard.

Navigating in a Section

When editing, the following methods can be used to navigate the section.

Scrolling

You can use the vertical scroll bar to navigate through the section. If you want to scroll a paragraph at a time, click on the up or down buttons on the scroll bar. Click on the bar in the direction you want to go, to move one "page" at a time. To scroll in leaps and bounds, drag the scroll thumb on the scroll bar.

NOTE: If you have a scroll button on your mouse you can also use the scroll button to scroll through the tree and document panels.

Keyboard Options

You can use the arrow keys on the keyboard to scroll line by line through the section. Using Page Up and Page Down will move you faster through the Document Panel.

Move To Buttons

The Move To Buttons are a more exact way to navigate than scrolling. For example, if your

cursor is in Part 1 General you can click the *Next Paragraph at Current Level* button to move directly to Part 2 Products or the next level 1 folder. You can also move to the previous paragraph at current level, to the first paragraph, or to the last paragraph in the section.



Move To buttons

Use Collapse/Expand to Speed Navigation

In addition to using the Move To buttons to jump from one level to the next, you can also use the Show Level buttons to aid in navigation. The Show Level buttons allow you to change the number of visible levels quickly. Click on the lowest level you want to have visible.



Show Level buttons

For example, suppose you are in PART 3 reviewing the field testing provisions and wish to skip to PART 1 to see what is said about testing under Quality Assurance. "Collapse" the section to level 1, move the cursor to PART 1, "expand" to level 2, move the cursor to Quality Assurance, and then "show all levels". Now you can scroll through the Quality Assurance provisions.

Bookmarks - Mark This Place

Bookmarks are useful for jumping back quickly to a specific location within any section. Click on the paragraph you want to mark, and then choose Mark Place from the Document menu, or use the button on the Edit toolbar. At any later time, choose the Return to Mark command to return to your marked paragraph.

NOTE: The existing bookmark is replaced when you bookmark a different paragraph, or move to a different section; only one bookmark can exist in a section at one time.

This variety of navigational tools should help make you more productive and efficient as you produce your specifications.

Selecting and Excluding Text

Now that you understand the Document Panel and are armed with several navigational tools, this section describes selection concepts. In addition, this section includes step-by-step instructions for selecting and excluding text.

Remember that with SpecLink, you select the text you want to include in your specification documents. Because the master provides you with many options, you have to specifically select the text you want. On occasion, you may want to specifically exclude system-selected paragraphs.

Selecting Text

- 1. Navigate through the section using the tools most comfortable to you
- 2. When you find a paragraph you want in your specification, if the status box is green the text is already selected and you do not need to click in the status box.

If the status box is gray, a yellow triangle, or a red stop sign, select the paragraph by clicking once in the status box to the left of the text cell, which puts a checkmark in the box.

When the text in the cell changes to black and the background of the status columns turns dark gray, the text is active and is included in the document you print. If the text remains gray and the status columns remain light gray, check the parentage of the selected paragraph.

3. Continue selecting the text you want for your project.

When you are selecting text, the notes displayed in the Notes panels can provide information to help you make better decisions. See the "Using the Notes Function" in this chapter for details.

Excluding Text

One of the productivity features of SpecLink is the system's automatic selection of additional paragraphs based on those you choose. The system either "highlights" (yellow triangle) or "includes" (green square) paragraphs relevant to those you select.

Text in a highlighted paragraph remains gray and does not print, giving you the opportunity to make a decision about that paragraph. An included paragraph changes to black text if the parentage is intact. You can override a system-included paragraph, but you should be cautious about doing so.

To exclude a system-included (green square) paragraph:

Click in the status box to the left of the text cell until an X appears. The status box now indicates that the paragraph is excluded, and the text becomes gray.

		2.03 5	TEEL	FRAMES]
		A	Ge	neral:	
🔛 🕺			1.	Comply with the requirements of grade specified for corresponding door , except:	
<u>.</u>				ANSI A250.8 Level 1 Doors: 16 gage frames.	
.	\mathbf{V}			 ANSI A250.8 Level 3 Doors: 14 gage frames. 	
<u></u>				ANSI A250.8 Level 4 Doors: 12 gage frames.	
	$\overline{\mathbf{A}}$			b. Frames for Wood Doors: Comply with frame requirements specified in ANSI A250.8 for Level 1, 18 gage	
× N	\checkmark			Frames for Sound-Rated Wood Doors: Comply with frame requirements specified in ANSI A250.8 for Level 1, 16 gage	
🔛 <mark>N</mark>			2.	Finish: Same as for door.	User
	×			Provide mortar guard boxes for hardware cut-outs in frames to be installed in masonry or to be grouted.	Excluded
			З.	Frames in Masonry Walls: Size to suit masonry coursing with head member 4 inches high	Text
			Э.	to fill opening without cutting masonry units.	
	$\mathbf{\nabla}$		4.	Frames Wider than 48 Inches: Reinforce with steel channel fitted tightly into frame head, flush with top.	

User Excluded Text

Note: It is not necessary to exclude text to keep it from printing. Black text is the only text included in the printed documents. If the text is gray, it will not print and does not need to be excluded.

Parent/Child

The hierarchical arrangements of specifications lend themselves to the concept of parentage. A parent at text Level 1 may have several children at Level 2, a Level 2 parent may have several Level 3 children, and so on.

SpecLink requires this parentage to be maintained in order to include lower level text. Therefore, if you select a Level 3 paragraph and the text remains gray, it is because the text is "orphaned." You must select the parent text to make certain the selected Level 3 text is included in the printed document.

The Color Scheme Is More Than Just Aesthetics

The colors of the various parts of the windows and the status indicators are designed for quick recognition - learn what they mean and you can work faster.

Gray and Black

When you start a section, paragraph text is **gray**. When a paragraph has been selected and becomes active, the active text changes to **black**. The background color of the status columns changes from **light gray** to **dark gray** when the text is selected and active.

NOTE: Only black text and associated embedded choices print, regardless of the status box indicators.

Use the gray and black text and the color of the status columns to speed evaluation. The software links automatically include text based on previous decisions. Your first priority is to make sure the automatic inclusions are appropriate for the project, so scan all black text with green status boxes first and make whatever changes are necessary.

Gray text is optional, to be included only if required for the project. However, a selected paragraph may continue to be inactive (gray text) because its "parent" paragraph has not been selected.

NOTE: If the background of the document panel is gray, this means the section is in use by another user, and you will be unable to edit that section. To identify the other user, see the parentheses in the Tree panel.

Paragraphs that have been selected by links may sometimes be found in articles that are optional. So, scan the gray text for paragraphs with a **green square** status box (indicating a strong need), then for those with a **yellow triangle** status box (indicating a

possible need). Then select the "parent" text to include both it and the linked paragraphs below it, if appropriate. See the "Parent/Child" section in this chapter for details.

Software links can also exclude paragraphs. In most cases, these are truly mutually exclusive options. In some cases, however, more than one of the options may be appropriate, provided the specification is edited to indicate where each option is applicable.

Scan the **red stop sign** status boxes \bigcirc to be sure that exclusions are appropriate for your project. You can override any software exclusion (red stop signs) by clicking on the status box to select a paragraph.

Blue

Blue is used in the Document Panel text to identify embedded multiple choices. Blue icons are used in the Notes (N) and Origin (O) status columns to indicate user-added and user-

modified text and notes. In the Notes column a blue notebook icon on the right indicates a user added note. In the Origin column, there are two different blue icons as follows:



a white sheet of paper with blue text indicates a user-added paragraph

a blue rectangle across the bottom half of the column indicates a usermodified master paragraph

SpecLink also changes the background of the Status (S) column of the current paragraph to a dark blue, indicating cursor location in the Document Panel.

Non-proprietary (BSD) sections are blue in the project Tree Panel.

Green

Green text in the Document Panel indicates an embedded global option that can be changed globally at the Summary Info dialog box (which is accessed from the File menu), or individually by typing over them in the paragraph. Global options include replaceable terms such as MasterFormat version, Design-Builder and units of measure. Green is also used to indicate "Yes" links (selecting text) in both the paragraph status box and in the Links window.

User added or copied master sections appear in a green font in the project Tree Panel.

Red

Red is used in the Document Panel to denote a user fill-in. Red is also used to indicate "No" links (excluding text) in both the paragraph status and in the Links window.

Yellow

In the Notes (N) column a yellow notebook on the left indicates the presence of a master

note (N). In the Origin (O) column a yellow rectangle across the top () indicates that the master version of a user-modified master paragraph is currently displaying. Yellow is also used to indicate "Maybe" links (potentially relevant text) in both the paragraph status box and in the Links window.

Magenta

When a project is opened using the option to not update, sections that have been updated in the new master display magenta titles in the Tree panel, so that you can see the changes that would be made if you were to accept the updates.

Rust

When a project is opened using the option to not update, paragraphs that have been updated in the new master are marked by a rust color in the background of the Status (S) column in the Document panel, so that you can see the changes that would be made if you were to accept the updates. The updated paragraphs can be viewed by opening the Tools menu and clicking on *View Updated Master Paragraph*.

Choices Function

Many paragraphs in the master database include embedded choices, which are identified by red, green, or blue text. Fill-ins, usually in red, also have brackets that do not print.

Blue embedded choices are multiple choices. The options for the multiple choice may be a single number, word, phrase, a fill-in, or an option to print nothing where the choice is located. One of the options is the default value – the one currently being displayed – and it may or may not be appropriate for your project. Therefore, it is important to look at the other options available in any selected paragraph that includes an embedded choice.

To view the choice options for an embedded multiple choice (marked by blue text), click once anywhere within the embedded choice to "pop up" the choice options. The types of choices are described below.

NOTE: To open the choice list on a single character choice (such as a number 7), drag across the single character to highlight it. Do not include the space before or after the character. When you release the mouse button, the choice list will open.

If a fill-in has blue brackets instead of red, it is part of a multiple choice. To view the other choices, double-click between the blue brackets.

Exclusive Multiple Choice

Exclusive multiple choices include two or more options, *one of which must be selected*, *but only one*. They sometimes include a "None - N/A" option, which effectively allows all choices to be omitted. When a "None - N/A" option is selected, it appears in the paragraph as [<>] but does not print.

	:			Develop required camber for members.	Choi	ces
	. I 📕		2.03 F	INISH		Provide minimum 1.3 oz/sq ft galvanized coating.
0109	1 N		A		0	Provide minimum [] oz/sg ft galvanized coating.
0110				Shop prime structural steel members. Do not p welded, in contact with concrete, or high streng	0	None - N/A
0111	:			Leave structural steel members un-primed.		Close
0112		V	В	 Galvanize structural steel members to comply w oz/sq ft galvanized coating. 	ith A	STM A 123/A 123M. Provide minimum 1.3

Exclusive Multiple Choice Group

Inclusive Multiple Choice

Inclusive multiple choices include two or more options, *one or more of which must be selected*. These options are automatically punctuated and joined with the word "and" or "or" as appropriate. They sometimes include a "None - N/A" option, which effectively allows all choices to be omitted.



Inclusive Multiple Choice Group

Fill in the Blank

For blanks, the user must enter a word, phrase, or number to make the text complete. These are shown in the text as [_____]. Fill-ins can stand alone, as the only option, or they can occur as one of the options in multiple choice groups. Stand-alone fill-ins appear with red brackets. Those that are an option in a multiple-choice group appear with blue brackets.



Fill in the Blank as option in Exclusive Multiple Choice list, and as fill-in in text

To enter text in a fill in the blank, click anywhere within the brackets to block the underline, then type or paste text from the clipboard. The brackets continue to show, to denote the presence of the fill-in, but they do not print. For a fill-in that is part of a multiple choice list, you must first select the choice, then click on text outside of the choice list, and then click within the brackets to block the underline.

If you do not want to use the fill-in, type None - N/A in the fill-in. When you print the section, the fill-in will not print and the spaces around it will be closed properly. For example, if the fill-in is between two words and you type None - N/A in the fill-in, when it prints there will only be one space between the two words. If you deleted the underline instead, two spaces would print between the words. None - N/A is case-sensitive, so be sure you capitalize the correct letters, and also be sure to put a space on either side of the hyphen.

NOTE: Once you choose a fill-in as your choice and you subsequently need to view the other choice options, double click within the fill-in to pop up the list of choices.

Global Choices (in green)

Global choices appear in green. They reflect choices made in the Summary Info dialog box. They include Master Format Version, Unit of Measure display, printing of Edition dates and Specific Terms. See Chapter 4 for more information on Global Choices. Note that the Section Title in the Related Sections is sort of a hybrid global choice. The Section Title display changes based on your MasterFormat hierarchy selection, but it is blue to allow you the option of inserting your own Section Title.

0019 🔢	B. Section 07 2100 (07212) - Thermal Insulation: Acoustic insulation.
0020 🚺	Section 07 9005 (07900) - Joint Sealers: Acoustic sealant.
0021 🔳	Section 09 2216 (09111) - Non-Structural Metal Framing.
0022 📑 📕	1.03 REFERENCES
0023 🔳 📕	AISI SG-971 - Specification for the Design of Cold-Formed Steel Structural Member 2000 Supplement.
0024 🔢	 ANSI A108.11 - American National Standard for Interior Installation of Cementitious Units; 1999.

Global Choice Examples

Making Choices

To view available choice options in a paragraph:

1. Click once anywhere within the blue text to open the choice box that displays the list of options available. The default is initially selected.

After the list of options is displayed, the current option can be changed. Each option has a selection box or circle to the left: O for exclusive options, \Box for inclusive options.

- 2. Click on the selection box/circle for the desired option(s).
- 3. To execute the change, click the Close button or click anywhere else in the Document Panel.

4. To enter text in a fill in the blank, click once between the brackets to block the underscore, then type (or use Ctrl+V to paste from the clipboard) to replace the underscore with your entry. The square brackets remain visible to mark the location of a fill-in, but they do not print in the final document.

NOTE: Clicking once between the brackets automatically blocks the entire fill-in, so that what you type replaces the underline.

Changing Views and Previewing

As you select and exclude text, it is sometimes helpful to change your view of the project. The View options provide three different ways to "look at" your project in the Document Panel.

Master View

In the Document panel, Master View shows all text regardless of status. This is the default view, which is generally the most useful.

Expert View

In the Document panel, Expert View hides all paragraphs that have been excluded by the user or by links and shows all other text. Expert View is useful when you want to concentrate on possibilities and eliminate distractions. Because all excluded information is hidden, you work only with information that has potential for your project.

Compact View

In the Document panel, Compact View hides all paragraphs that are not active. It shows only the text that prints in the final document. Compact View is useful to get a "snapshot" of exactly what is included in your final documents before previewing or printing sections.

Using the View Options

Choose the desired view option from the View menu or click the appropriate button on the View toolbar.



View commands on View menu

The following three views are of the same section in the Document panel. Notice the differences in the material presented based in each view.



Master View in Document Panel: All paragraphs—selected, excluded, and available—appear.



Expert View in Document Panel: Excluded paragraphs (and their children) are hidden.

140 SpecLink User Manual

🗙 BSD SpecLink + - [Model Br	anch Bank Building (051200 Structural Steel Framing [BSD])]			
🔀 Eile Edit View Tree Docu	ment Tools Window Help			
	◎ Ē ゐ 遂 ↔ X 후 역 옛 ♥ ♥ 봄 ★ ↗ ৹ ↔			
🗈 🔁 🔁 🎆 Expand 1 Lev	rel ▼ 🗊 🛅 ½ ½ ½ 🦓 🤐 K 🖌 🕨 🗎			
Level 0 Arial	▼ 10 ▼ B <i>I</i> <u>U</u> ≡ ≡ ≡ ≡ ‡ ‡ ‡ ‡ ⊞ • M •			
# LVL N O S				
0000	Structural Steel Framing			
0001 💽 🛛 🐺 PART	1 GENERAL			
0002 📑 🖥 🛛 🔽 1.01 S	ECTION INCLUDES			
0003 🔢 🛛 🔽 🗛	Structural steel framing members, support members.			
	. Grouting under base plates.			
0006 🔝 🕺 🛛 🔽 1.02 F	RELATED SECTIONS			
0007 🔢 🔽 A	. Section 05 2100 - Steel Joist Framing.			
0008 🔢 🔽 🗸 🛛 🛛				
	REFERENCES			
0017 🔳 📕 🦰	AISC M016 - ASD Manual of Steel Construction; American Institute of Steel Construction, Inc.; 1989, Ninth Edition.			
0018 🔳 📕 🗖	 AISC S303 - Code of Standard Practice for Steel Buildings and Bridges; American Institute of Steel Construction, Inc.; 2000. 			
0019 🔢 🛛 📕 C	AISC S348 - Specification for Structural Joints Using ASTM A325 or A490 Bolts; 2000.			
0020 🔢 🛛 📕 D	ASTM A 36/A 36M - Standard Specification for Carbon Structural Steel; 2001.			
0021 🔢 📕 🗖	ASTM A 53/A 53M - Standard Specification for Pipe, Steel, Black and Hot-Dipped, Zinc-Coated, Welded and Seamless; 2002.			
0024 🔳 📕 🗖 ^{F.}	ASTM A 153/A 153M - Standard Specification for Zinc Coating (Hot-Dip) on Iron and Steel Hardware; 2002.			
0026 🔳 📕 🗖	. ASTM A 307 - Standard Specification for Carbon Steel Bolts and Studs, 60 000 PSI Tensile Strength; 2002.			
0027 🔢 🛛 🗖 📢	ASTM A 325 - Standard Specification for Structural Bolts_Steel_Heat Treated_120/105 ksi			
heet contains 149 Paragraphs	CAPS NUM INS 11:51			

Compact View in Document Panel: Only active, selected paragraphs appear.

You must be in Master View, showing all levels of text in order to perform most paragraph editing. If you are in Compact View, Expert View, and/or showing only 1, 2, or 3 levels of text when you try to perform one of the kinds of edits that are not permitted, you will get the following message:



You must be in Master View message

Click Yes. SpecLink will turn on Master View and All Levels and present the following message:

BSD SpecLink+	×
The view has been changed. Please try the command	again.
()	

View Changed message

Click OK, and then attempt the edit again.

Using Preview

To see what the final specification will look like when it prints, use the Preview function. From the File menu choose Print Preview. You can also choose the Print Preview button from the Standard Toolbar. The section appears on your screen as it would if printed.



Print Preview

If the text is not readable at your screen resolution, you can "zoom" into the document by clicking anywhere within it. See Chapter 8 for more details about Print Preview.



Preview Window in "Zoom" Mode

NOTE: You can insert manual Page Breaks. Close the Preview Window using the button that says Close. Then click to place your cursor in the paragraph that you want to have at the top of the page, and from the *Document* menu choose *Insert Page Break*. A dark line will appear above the paragraph, representing the page break. For the page break to work, the paragraph must be active and not have NP or NS tags. To remove the page break, click in the paragraph that has the dark line above it, and from the *Document* menu choose *Remove Page Break*.

Using the Notes Panels

Notes can help you make decisions about what to include in your project. By default, the Project and Master Notes panels display below the Tree panel.



Notes Panels displaying notes on the current paragraph (Gypsum Board Assemblies title)

The panels can be resized by dragging the gray dividers with your mouse. They can also be toggled on and off by choosing them from the View menu, or by clicking the following buttons on the toolbar:



Toggle display of Master Notes

Toggle display of Project Notes

When a section is open, Notes attached to particular paragraphs appear in the Notes panels when the relevant paragraph has focus and the Notes panels are open. Paragraphs that have Notes are marked with the following icons in the "N" (Notes) status column:



A yellow notepad on the left indicates that the paragraph has a Master note.

A blue icon on the right indicates that the paragraph has a Project note.

Both icons indicate that the paragraph has both a Master and a Project note.



You cannot modify master notes, but you can add your own project notes to any paragraph. Click in the Project notes panel, then type or paste from the Windows clipboard.

NOTE: For paragraphs that do not already have a master note, you can display graphics in the Master Notes panel. See Adding Pictures to Notes in Chapter 10 for more information.

The Value of Notes

Project notes are a valuable way to communicate the decision-making process throughout the creation of a project. For example, if one person is editing the specifications and another is reviewing them, the editor can enter notes to indicate what the underlying assumptions were. This way the reviewer can more quickly determine whether the section was edited properly for the project.

Using Notes To Decide Which Sections To Include

Click on a section title in the Tree Panel and a note will display in the Master Notes panel. (If the Master Notes panel is not open, click the Master Notes button on the View Toolbar.) The Master Note describes the section content. To read the note better, you can resize the Master Notes panel, and/or turn off the Project Notes and Document panels. To see the content description for another section, click on the title of that section in the Tree Panel.

Hyperlinks within Master Notes

Hyperlinks to Manufacturers: Hyperlinks are provided to the websites of the manufacturers listed in SpecLink's master database. The hyperlinks are located in the master note for each manufacturer paragraph. When a spec is complete, the Manufacturer Listing requirements report can be printed. This report lists by section and by product every acceptable manufacturer listed in the specs. In addition, some manufacturer listings include a paid "infomercial," or advertisement, in the notes window, with additional information about that manufacturer's products and multiple hyperlinks to various locations with relevant information.

Reference Standards on Demand: BSD has entered into an agreement with another organization – IHS, Inc. – which is in the business of gathering information from disparate sources and making it available to various industries, including the construction industry. Under our agreement with IHS, we have provided links to all documents that are available through their IHS Standards Store. To access the hyperlink for a particular standard, find the citation in Part 1 of the section or any place where the standard is referenced, open the master notes panel, and then click on the hyperlink. In a few cases, the document itself is available online at no cost. In most cases, however, at least a synopsis of the standard is available, and the document itself can be purchased online. Once purchased, most

documents can be viewed or downloaded immediately. A minority of the reference standards will have to be shipped.

Using Notes Within a Section

You can add project notes to any paragraph. However, you cannot delete a note from the master database. You can edit a master note by first blocking it and copying to the Windows clipboard, then pasting it in the Project Notes panel for the same paragraph. You can also highlight and then drag and drop a note from the Master Note Panel into the Project Note Panel.

- To add a note to a paragraph, click in the paragraph and then click in the Project Notes panel. Type your text, or paste from the clipboard.
- To modify an existing project note, place your cursor in the note in the Project Notes panel where you want to modify it, then add or delete text as desired.

NOTE: You can use Ctrl+C and Ctrl+V to copy and paste to the Project Notes panel.

When you move the cursor to a different paragraph, all your modifications are automatically saved. If you have added a new project note, the Notes (N) column will indicate the change.

Editing Paragraphs

SpecLink provides several tools for editing paragraphs that are very similar to word processing. You can add, modify, or delete text in any paragraph. You can promote and demote paragraphs, you can copy and paste paragraphs, and you can import text from the Windows Clipboard. Each of these editing tools is described in its own section in this chapter.

NOTE: For faster editing, use the Section Check Out feature described in Chapter 9.

Editing a Paragraph

When you first view a master section, the Paragraph Origin "O" column is blank indicating that the paragraphs are master paragraphs and have not been edited. When you edit a paragraph, you are not modifying the BSD master. Instead, your edits are saved in a copy of the paragraph that is in your project overlay. Your edits will print instead of the BSD master. When a master paragraph has been edited in this fashion, a blue rectangle will appear across the bottom of the "O" column.

To edit a master paragraph:

- 1. In the Document Panel, position the cursor on the paragraph you want to modify by clicking at the point you want to edit.
- 2. Type and/or delete text as desired, or paste text from the clipboard.
- 3. When you have finished editing your text, click outside the paragraph to save the edits.

A blue rectangle appears across the bottom of the "O" (Origin) column 🔤 to indicate that the text has been edited.

NOTE: To undo your edits, you must choose Undo before you click outside the paragraph. If you have already clicked outside the paragraph, use the steps below to restore the master version.

Switching Between Master Text and Paragraph Text

Because the master text is never edited, you can switch back to the master text at any time after you have edited a paragraph.

- 1. In the Document Panel, position the cursor on the edited paragraph you want to restore to the master text (it will have a blue rectangle across the bottom of the "O" column).
- 2. From the Document menu, choose Restore Paragraph from Master.

The original master text is restored, and a yellow rectangle appears across the top of

the "O" column , indicating this is master text for which a user-edited version is available.

3. To return to the paragraph you edited, from the Document menu, choose Restore Paragraph From Project.

Your edited project text reappears along with the blue rectangle across the bottom of the "O" (Origin) column, indicating this is an edited version of the master text.

Deleting Edits

If you accidentally edit a paragraph, or no longer need the project version of a paragraph, rather than restoring from the master (as described above) and leaving the yellow rectangle in the O column, use the following steps to remove user modifications from a paragraph:

- In the Document panel, position the cursor on the edited paragraph (it will have a blue or yellow rectangle in the "O" (Origin) column).
- 2. From the Document menu, choose Remove Paragraph.

The Confirm Delete message opens.

Confirm D	Delete
?	This action cannot be undone. Are you sure you want to delete user modifications to the current paragraph?
	<u>Yes</u> <u>N</u> o

Confirm Delete message

3. If you are certain that you want to delete your modifications, choose Yes. Otherwise, choose No since you will not be able to Undo this deletion.

If you choose Yes, the master version of the paragraph will be displayed and the "O" column will return to a blank state.

Adding and Deleting Paragraphs

To further customize your specification project, you can add and delete paragraphs.

NOTE: You can delete user-added paragraphs only.

Adding a New Paragraph

There are a few ways to make a new paragraph:

- To add a new paragraph after the current paragraph, click at the end of the paragraph and press Enter.
- To add a new paragraph above the current paragraph, click at the beginning of the paragraph and press Enter.
- Also to add a new paragraph above the current paragraph, click anywhere within the paragraph, and using your right mouse button menu click on Add Paragraph or from the Document menu choose Add Paragraph or click the Add Paragraph button on the toolbar.

After using any of these methods, a blank paragraph will appear. The new paragraph will be the same level as the paragraph you clicked on prior to creating it. It will have its own

status box and a white and blue square in the Origin column 🕮, indicating that it is a useradded paragraph.

Click in the blank paragraph and type in your text, or use the Paste function to paste text from the clipboard. To save the new paragraph, click in a different paragraph.

NOTE: If the format of the paragraph is not correct, see the next section on changing the level of paragraphs.

By default, new paragraphs are selected automatically, which is indicated by a checkmark in the status column. If the new paragraph should not be selected, deselect it. If you would prefer that new paragraphs not be selected automatically, you can turn this feature off in the Tools menu.

Changing the Level Of Paragraphs

Changing the level of a paragraph changes how the paragraph will be formatted. With the default formatting, level 1 paragraphs print in bold type, all caps, and are not numbered. Level 2 paragraphs print in bold type, all caps, and are numbered 1.01, 1.02, 1.03, and so on. If the format of the paragraph is not correct, you may need to promote or demote it.

NOTE: Details on the default formatting and how to change it are covered in Chapter 8 "Printing."

You can also change the level of a paragraph to create a branch of user-added paragraphs. In a branch, the parent paragraph acts as a title to the subparagraphs so that if you deselect the parent, none of the children will print even if you leave their status boxes selected. Creating branches in appropriate places makes editing faster and more logical.

You can change the level of any paragraph, master or user-added, provided the change does not cause a 'break in levels.' An example of a break in levels would be a level 2 paragraph directly followed by a level 4 paragraph. There must be a level 3 paragraph before the level 4. If a level change would cause a break in levels, the following message will appear when you attempt the change:

BSD SpecLink+				
٩	Demoting would create a break in level hierarchy. Demote not completed			
	OK			

Break in Level Hierarchy message box

To change the level of a paragraph, click in the paragraph you want to change and then choose the appropriate command from the Document menu, or use the appropriate button on the toolbar.

There are four commands for changing paragraph levels:

🔳 Demote

Demote causes the current paragraph (the paragraph with the dark blue background in its status columns) to become one level lower. For example, demoting a level 3 paragraph would make it level 4.

If the level 3 paragraph had any subparagraphs, those paragraphs would remain at their original levels, and would no longer be subparagraphs to the demoted paragraph.

NOTE: Demoting a parent paragraph is useful when trying to delete or copy just the parent paragraph. If a paragraph has any subparagraphs, those paragraphs are copied or deleted when the parent is copied or deleted.

Demote Branch

Demote Branch causes the current paragraph to become one level lower just like the Demote command. However, if the current paragraph has any subparagraphs, those paragraphs will also be demoted one level.

For example, if a level 3 paragraph has a level 4 subparagraph, the level 3 paragraph will become level 4, and the level 4 paragraph will become level 5. If the original level 4 paragraph had a level 5 subparagraph, the level 5 paragraph would become level 6.

💷 Promote

Promote causes the current paragraph to become one level higher. For example, promoting a level 3 paragraph would make it level 2.

If the level 3 paragraph is directly followed by another level 3 paragraph, the newly promoted level 2 paragraph will become the parent of the level 3 paragraph.

If the level 3 paragraph is directly followed by a level 4 paragraph, you will not be able to promote the level 3 paragraph since it would cause a break in levels. Use Promote Branch instead.

💷 Promote Branch

Promote Branch causes the current paragraph to become one level higher just like the Promote command. However, if the current paragraph has any subparagraphs, those paragraphs will also be promoted one level.

For example, if a level 3 paragraph is directly followed by a level 4 paragraph, the level 3 paragraph will become a level 2 paragraph and the level 4 paragraph will become a level 3 paragraph. If the original level 4 paragraph had a level 5 subparagraph, the level 5 subparagraph would become a level 4 paragraph.

Also, if there are any level 3 paragraphs between the newly promoted level 2 paragraph and the next level 2 paragraph, those paragraphs are now part of the new level 2 paragraph's branch.

Deleting a Paragraph

NOTE: You can delete user-added paragraphs only. Master paragraphs cannot be deleted, only excluded.

To delete a user-added paragraph:

1. In the Document Panel, position the cursor on the user-added (new or copied) paragraph you want to delete (there will be a white and blue square in the "O" column).

NOTE: Make sure the cursor is blinking in the paragraph. If any text is blocked (selected) the next step will only delete the blocked text and not the entire paragraph.

2. Using your right mouse button, selection Delete or from the Edit menu choose Delete,

or click the *Delete paragraphs or selected text* button on the toolbar . , or select Remove Paragraph from the Document menu.

NOTE: The Delete key on your keyboard cannot be used for this step - it will only delete the character to the right of the cursor.

3. You are prompted to confirm the deletion.

If the paragraph has no master subparagraphs or if it has user-added subparagraphs, the following message will appear:

Confirm Delete				
?	This action cannot be undone. Are you sure you want to delete selected paragraph(s)?			
	<u>Y</u> es <u>N</u> o			

Confirm Delete message

Before clicking Yes, make sure you do want to delete the paragraph along with any useradded subparagraphs it may have. If you choose Yes, there is no way to get the paragraph(s) back without recreating them or copying them from another project.

If you are certain that you want to delete the paragraph and any user-added subparagraphs, click Yes. The paragraph will be deleted. If the paragraph had any user-added subparagraphs, they will also be deleted.

If you are in any way unsure that you want to delete the paragraph or any user-added subparagraphs, click *No*. The paragraph(s) will not be deleted. If you want to delete the parent paragraph, but not the subparagraphs, either promote the first subparagraph, or demote the parent paragraph.

NOTE: If the paragraph has subparagraphs that are master paragraphs, the following message will appear:				
BSD SpecLink+	×			
The current selection includes one or more Master Paragraphs that cannot be deleted. Unable to dele	te.			
Unable to Delete message				
In order to delete the parent paragraph, demote it so that it is no longer th parent of any master paragraphs.	Ie			

Copying and Pasting

Anyone who has used a word processor knows the value of Copy and Paste. SpecLink takes copy and paste further, taking advantage of the hierarchical nature of the standard specification format and the built-in links.

When you copy a paragraph and paste it into a different location, either in the same section or in a different section, in addition to the paragraph text, you get:

- all subparagraphs, down to the end of the hierarchical "branch"
- all the choice options
- all links to targets (outside links to targets in the copied branch are not copied to the pasted copy)

If you only want to copy the text in a paragraph and not the items listed above, drag across the text to highlight it before Copying. If you want to copy the text and all the items listed above, click in the paragraph so your cursor is blinking before Copying.

If you want to copy the parent of a branch including choices and target links, but not its subparagraphs, first demote the parent so that it no longer has subparagraphs, then click in the paragraph so your cursor is blinking, and then Copy.

Using Copy and Paste

You can copy a paragraph by positioning the cursor on the paragraph you want to copy, then performing the following steps:

- 1. Using the right mouse button click on Copy. Or from the Edit menu, choose Copy. You can also choose the Copy button from the Standard Toolbar, use the key combination Ctrl+C, or use the right mouse button menu.
- 2. Position the cursor in the paragraph that is below where you want to paste the copied paragraph.
- 3. Using the right mouse button click on Paste or from the Edit menu, choose Paste. You can also click on the Paste button from the Standard Toolbar, use the key combination Ctrl+V, or use the right mouse button menu.

Notice the white and blue square in the Origin column indicating this is a user-added paragraph.

You can copy any branch within a section. Position the cursor on the paragraph at the top of the branch and choose Copy. Then click on the paragraph that is below where you want to paste the copied text and choose Paste.

The pasted branch pushes down the original paragraph at the pasted location. The paragraph at the top of the pasted branch is given the level of the paragraph at which it was pasted. If this inherited level is incorrect, you can adjust it. See the "Demoting and Promoting Paragraphs" section in this chapter for details.

Copy and Paste between Sections

You can copy paragraphs and branches from one section to another. Here's how:

1. From the Window menu, choose New Window.

A second window of the project opens, covering the first window.

- 2. In the new window, display the second section you want to work in.
- 3. From the Window menu choose one of the Tile or Cascade options to arrange the windows on your screen.

NOTE: To better see the text you are working with you may want to close the Tree panel. When you choose the option to turn off the Tree panel, it will close in the window that has the more brightly colored title bar. To close the Tree panel in the other window, first click in the window so that its title bar indicates that it is the current window.

- 4. Click in the paragraph or the parent of the branch that you want to copy.
- 5. Using the right mouse button click on Copy or from the Edit menu, choose Copy. You can also choose the Copy button from the Standard Toolbar, use the key combination Ctrl+C, or use the right mouse button menu.
- 6. Click in the other section to place your cursor anywhere in the paragraph that is below where you want to paste the copied paragraph(s).
- 7. Using the right mouse button click on Paste or from the Edit menu, choose Paste. You can also choose the Paste button from the Standard Toolbar, use the key combination Ctrl+V, or use the right mouse button menu. The pasted text "pushes down" the paragraph originally at that location.

NOTE: To copy an entire section from one project to another, see Import From Project in Chapter 4 "Starting a New Project."

Importing from a Word Processor

You can take previous work from a word processor and import it into SpecLink. Use Paste or Import From Clipboard to copy and paste any number of paragraphs from a word processor to SpecLink. To import an entire section, save the word processing document in RTF format, and use Add New Section From RTF File (available on the Document menu under Sections). For more information on Add New Section from RTF File, see the Adding New Sections part of Chapter 4.

Importing or pasting from the Windows Clipboard treats new paragraphs according to two settings in the Tools menu:

Auto-Select New Paragraphs	This command is a toggle. When checked (default setting), new paragraphs will automatically be selected by a checkmark.	
Look for Choice Fields in Import	This command is a toggle. If toggled on, when using <i>Import From</i> <i>Clipboard</i> or <i>Add New Section From RTF File</i> , brackets and greater than and less than signs will be used to create new choices in the imported text. For a list of choice formats, see the <i>Adding New</i> <i>Sections</i> part of Chapter 4.	

The following topics should also be considered when importing:

Paragraphs

Each paragraph in the original text is pasted consecutively into a separate new paragraph cell. Hard returns (WordPerfect), paragraph marks (Word), hard line breaks (Word Perfect), and manual line breaks (Word) are used to determine the end of a paragraph. If you are uncertain about where paragraphs end, turn on whatever function is used in your word processor to display the paragraph marks or codes and view them.

If you are using line breaks in the word processing document in order to keep paragraphs from being numbered, after you import the text, use No AutoNumber from the Document menu to keep those paragraphs from being numbered in SpecLink.

Blank paragraphs in specification text are discarded; blank lines within notes are maintained.

Notes

Lines beginning with 10 or more asterisks will be recognized as the boundary beginning or ending text that should be treated as a Note to the following paragraph. To import a note on a paragraph, it should be formatted like this:

```
*********
This is the project note for Paragraph One
*********
Paragraph One
```

Paragraph Numbering

Paragraph numbering is removed in the import process so that the new section will be numbered consistently with all the other sections in your project. See *Customize Styles* for how to change the numbering styles.

SpecLink identifies a number as up to five characters at the beginning of a paragraph, followed by a tab. Numbers followed by spaces will import. Numbers (and words) of five characters or less at the beginning of a paragraph, followed by a tab, will not import.

NOTE: If you have a word of five characters or less at the beginning of a paragraph followed by a tab, the word will not import. This may happen if you are importing tables or definitions.

Levels

Paragraphs beginning with the word "Part" and one of the words "General," "Products," or "Execution" will import at Level 1. The test is not case-sensitive.

Other paragraph levels are determined by the amount of space between the left margin and the first printable character on the line (not including numbering), whether tabs, left indents, or multiple spaces, create the space. If the amount of space indicates that a paragraph is indented two or more levels below its parent, the paragraph will import at one level below its parent.

Other Characters

Imported text from the Clipboard is ASCII text. Besides letters and numbers, and tabs and carriage returns, the only characters that are imported are those in the standard ASCII character set, which correspond to a standard keyboard.

Using Import from Clipboard

To import text into an existing section, use the following steps:

- 1. In your word processor, look over the text you are importing paying special attention to tables, special characters, and choices as described above.
- Copy the text you want to import. You can do this by dragging across the text with your mouse to highlight (or select, or block) the text, and then use the word processor's Copy function to copy the text to the Clipboard.

NOTE: You can use the key combination Ctrl+C to copy text to the Clipboard.

- 3. In SpecLink, open the project and section into which you want to import the text.
- 4. Put the cursor anywhere in the paragraph that is below where you want to paste the text.
- 5. Using your right mouse button click on Paste or from the Tools menu, choose Import from Clipboard. (Or choose any Paste command.)

The text from the Clipboard is imported as described above, with white and blue square icons in the Source status column indicating that these are user added paragraphs.

Adding Tables

To further customize your specification project, you can add tables in SpecLink, either by copying from Word, or by typing directly into SpecLink.

Copying a Table from Word to SpecLink

Tables can not be imported into SpecLink as SpecLink tables. They can be imported as tabbed text, which will appear as a table, if none of the text needs to wrap to another line. To copy a table from a Word document into SpecLink, do the following: (If you need columns with text that wrap, or you need printed borders, see the topic below *Inserting a Table in SpecLink Directly*.)

NOTE: Be certain the margin settings in SpecLink are the same or wider than the document in Word. Otherwise, the table will not fit properly and line breaks will occur at inappropriate locations.

- 1. In the SpecLink Tools menu, verify that Auto-Select New Paragraphs and Look For Choice Fields in Import are turned off or on as you want them. See the descriptions of these options earlier in this chapter for more information.
- 2. Select the table in Word.
- 3. From the Table menu, choose Convert, and then choose Table to Text.
- 4. Use the option to separate with tabs.
- 5. Once complete, select all the text in the table, and Copy (from the Edit menu, or the toolbar, or use Ctrl+C).
- 6. Open the appropriate section in SpecLink and place the cursor in the paragraph that is below where you want the table, then from the Tools menu, choose Paste or Import from Clipboard.

The paragraphs are added above the paragraph you clicked on.

7. Add tabs where needed in the ruler above the Document Panel.

If the text does not line up in columns, click to place your cursor where more space is needed and press tab on your keyboard. Continue doing this until all the columns line up. It is best to line up the columns from left to right.

8. Tab stops can be changed by highlighting all of the paragraphs and then clicking on View and then Tabs. (See below for more information on the Tabs Dialog box.)

- 9. If you do not want the rows of the table to be numbered, drag across all the text in the table to highlight it, and then from the Document menu choose No AutoNumber.
- 10. To add a page break before the table, click in the paragraph that you want to have at the top of the page, and from the *Document* menu choose *Insert Page Break*.

A dark line will appear above the paragraph, representing the page break. The paragraph mush be active and not be tagged NS or NP in order for the page break to work.

NOTE: To remove a page break, click in the paragraph that has the dark line above it and from the *Document* menu choose *Remove Page Break*.

Eliminating Paragraph Numbers for a Table

To suspend SpecLink's automatic paragraph numbering for imported tables, block the paragraphs in the table, and from the Document menu or right mouse button menu, choose *No AutoNumber*.

Inserting a Table in SpecLink Directly

Inserting a table directly into SpecLink will allow you to incorporate text that wraps within a cell. Borders on inserted tables can also be printed, if desired. If you want to create a table in SpecLink itself, do the following:

- 1. Click on the paragraph that will be below the new table.
- 2. Click on the Table menu and choose Insert Table.

The Insert Table dialog box opens.

Ē	a Insert Table	×
	Table Configuration	
	Number of Columns	
	Number of Rows 3	
	<u>O</u> K <u>C</u> ancel	

3. Input the number of columns and rows desired for this table and then click on OK.

¹⁵⁸ SpecLink User Manual

Note that you may want to create one or more extra columns in the table since it is possible to delete columns but it is not possible to add them once a table has been created.

NOTE: The maximum number of rows in a table is 29. The maximum number of columns is 14. Do not set a column width of less than $\frac{1}{2}$.

The table is inserted into the section at the same level as and above the paragraph you originally highlighted. The left edge of the table will be at the left indent of the assigned level. To further indent the text of a table allow an extra column; to reduce the indent of the text put the table at a higher level or promote it after creating it. The initial width of columns will be the width between the left indent and the right indent divided by the number of columns. A table will never be wider than the margin created by the right indent.

4. To make adjustments, use the other commands on the Table menu:

- Insert Row Below Use this command to insert an additional row into the table below the current row.
- Configure Column- Use this command to change the width and column alignment of the current column. Note that you can also use the alignment buttons on the text panel toolbar to change the alignment of a single table cell.
- Set Border... Use this command to add or remove a border for the table. (Note that for a border to print, you must also select Print Table Borders in the Report Setup Dialog Box.)
- Delete Current Row Use this command to delete the current row.
- Delete Current Column Use this command to delete the current column.

Deleting a Table

A table is treated as a single paragraph by the software. To delete a table, simply click anywhere within the table and then click on the X in the Toolbar, use your Right Mouse Button and select Delete or choose Remove Paragraph from the Document menu.

NOTE: Beware that you don't remove an entire table when you are intending to only remove a row or a column.

Applying Tabs to Paragraphs

On the View menu is a selection called Tabs. The Tabs dialog box allows you to use tabs within a selected area of your section. This feature can be used when you want columns to

be aligned but do not need to create a table. This feature is not available when you are in a table.

NOTE: Tabs may not be applied to Level 0 or Level 1 paragraphs.

Using the Tabs Dialog Box

Use the Tabs Dialog box to align text in a columnar format. The dialog box allows you to set and clear tabs as left, centered or right justified. The tabs set or cleared in the Tab Dialog box are applied to all paragraphs that are selected at the time that the Tabs Dialog box is opened. Tab stops for the currently highlighted paragraph are indicated in the ruler bar above the text panel using angle marks.

- Within your document, select the paragraph or group of paragraphs that are to have the tabs applied. To select one paragraph, simply click anywhere on that paragraph. To select a group, click on the first one and then drag your mouse over the remaining paragraphs. When selected, they will have a black background in the document panel.
- 2. While the paragraphs are selected, click on the View menu and select Tabs.

Tabs					
Tab stop position:	Defa	ult tab stops:			
	0.5				
	_				
, ⊢Alignment					
● Left	C C <u>e</u> nter	C <u>R</u> ight			
Set	Clear	Clear <u>A</u> ll			
	ок (Cancel			
	<u> </u>				

- To set a tab, click on the Tab stop position field and input the width of the first tab stop in inches. Note that the first tab stop will be measured from the left margin of the document.
- 4. If the alignment is to be Left, leave the Left alignment set. Click on Center or Right to change the alignment from Left.
- 5. Click on the Set button.

- 6. To add additional tab stops, click on the Tab stop position and enter another number.
- If you need to change the position for an existing tab, click on it and then click the Clear button. Re-add the Tab stop position as desired. Use the Clear All command to clear all tabs settings.
- 8. When finished, click on OK to implement the tabs within the selected paragraphs.

NOTE: Note that the Tables capability is sometimes a more effective way to arrange multiple data columns.

User-Added Choices

In user-added and copied paragraphs, you can add embedded choice options like those in master paragraphs. Building choice options is a bit more time-consuming than simply adding the text that is needed for a particular project, so this feature is principally useful for adding options within an office master project.

NOTE: Choices can be added only to user-added or copied paragraphs.

Adding Choices To a Paragraph

You can add choices to any user-added or copied paragraph. It is usually easier to add the choice after you have entered all the text and punctuation in the paragraph that will not be part of the choice. To add choices to a paragraph:

- 1. Copy an existing master paragraph or add a new paragraph.
- 2. In the new paragraph, type any (additional) text that should always be in the paragraph, regardless of the selected choice.
- 3. Add any punctuation that should precede or follow the choice. If the choice will be between two existing words, put two spaces between the existing words. If the choice will be the end of the paragraph, add the punctuation for the end of the paragraph.

NOTE: If the punctuation should change according to what is selected in the choice, then do not type that punctuation in the paragraph. In the paragraph type anything that would follow the punctuation. You will include the punctuation in the choice options below.

- Click to place your cursor where the choice should be located.
- 5. On the Document menu, point to Choices, and then choose Add Choice.

The Add Choice dialog box opens.

🖷, Add Choice	×
Choice Group Type:	
<select choice="" group="" type=""></select>	Insert
Choice Options:	
	Up
	Down
	Add
	Remove
Current Option:	🗖 UOM
	MFV
	Cancel

Add Choice dialog box

6. Click the pull-down arrow at the end of the Choice Group Type field. The pull-down list shows the same types as those that appear in master paragraphs, plus the special "global" types for replaceable terms (Architect, Owner, Contractor, etc.) and units of measure.

NOTE: Optional types automatically insert the choice "None - N/A" into the option list. Choice types also can be combined. For example, an entire choice group can be exclusive multiple choice, but individual choice options can be fill-in-the blank or unit of measure.

7. Select the desired choice type, and click Insert.

The choice type selected appears in the Choice Group Type box and the cursor appears in the Current Option box. If you selected an optional choice type, the words None - N/A" appear in the Choice Options box.

🖷 Add Choice	×
Choice Group Type: Exclusive Multiple Choice, Optional	Insert
Choice Options:	1
	Up Down
	Add Remove
Current Option:	🗖 ООМ
	☐ MFV
ОК	Cancel

Add Choice Dialog Box with Optional Choice Type

8. Enter the text of the first choice option in the Current Option box, then click Add.

The choice option just entered appears in the Choice Options box.

- 9. To add another choice option, enter text in the current option field and click Add. Continue in this manner until all your desired choice options have been entered.
- 10. Change the order of the choice options by clicking on a choice option and then clicking the Up or Down button.
- 11. Edit a choice option by clicking on the choice option and then editing the text in the Current Option field. Click the Add button when you are done editing.
- 12. When the choice group is complete, click OK.

The new choice group appears in the paragraph at the location selected, with the first option as the default. If you click once within the colored choice text, the choice list pops up just as it does in master paragraphs. You can change the default option by clicking on the appropriate choice, then pressing Close.

Hints About Adding Choices

You can combine types of choices.

To include a fill-in as a choice option in any of the multiple choice group types, click in the Current Option field and type [____]. Be sure you use opening and closing brackets at the beginning and end (You do not use the Shift key to type the brackets.) Between the brackets type as many underlines as you wish. When it is later filled in with text it will grow or shrink as necessary.

To add None - N/A as a choice option, click in the Current Option field and type None - N/A. It is case-sensitive so be sure to capitalize the correct letters. Also be sure to type spaces before and after the hyphen.

To include a unit of measure as a choice option value, click the UOM box. Three fields appear. Enter the English and Metric versions of the unit of measurement text in the first two boxes, then click Add. The English (Metric) options fills in automatically. The unit of measure that will display in the specification will correspond to the selected Unit Of Measure choice in the Summary Information dialog box.

💐 Add Choice		×
Choice Group T	уре:	
Exclusive M	ultiple Choice, Optional	Insert
Choice Options:		
Miscellaneous Treated wood 2 x 4 wood blo None - N/A	blocking	Up Down
		Add Remove
English:	2 x 4 wood blocking	🔽 ООМ
Metric:	50 x 100 wood blocking	🗖 MFV
English(Metric):	2 x 4 wood blocking (50 x 100 wood bloc	
	OK	Cancel

Add Choice Dialog Box with UOM Option in Optional Multiple Choice Group

To create a section number as a MasterFormat Version Choice, choose MasterFormat Version Format as the Choice Group Type. Three fields appear. Enter the MF04 and MF95 versions of the section number in the first two boxes, then click Add. The MF04 (MF95) option fills in automatically. The section number that will display in the specification will correspond to the selected MasterFormat Version choice in the Summary Information dialog box.

NOTE: When adding a MF04 Choice, always use the 00 0000 format, rather than 00 00 00 or 000000. That way, you can change the MF04 section display in the Summary Info Dialog Box to whichever MF04 section format you choose.

Clicking the MFV checkbox on the bottom right allows you to include both MF versions within another Choice Group Type.

💐 Add Choice			×
Choice Group 1	Гуре:		
MasterForm	at Version Format		Insert
Choice Options	:		
07 2100			
			Up
			Down
			Add
			Remove
MF04:	07 2100		🗖 ИОМ
MF95:	07212		MFV MFV
MF04 (MF95):	07 2100 (07212)		Í
		OK	Cancel

Add Choice Dialog Box with MasterFormat Version Format Choice Group

💐 Edit Choice			×
Choice Group 1	ype:		
Exclusive M	ultiple Choice, Required	l	Insert
Choice Options	:		
Thermal Insula	tion		
]		Up
			Down
			Add
			Remove
MF04:	Thermal Insulation		п иом
MF95:	Board and Batt Insulation		MEV
MF04 (MF95):	Thermal Insulation		-
	Theme his addion		
		OK	Cancel

Edit Choice Dialog Box with MasterFormat Version as a Choice Option in an Exclusive Multiple Choice

Using the MFV option with an Exclusive Multiple Choice allows the option of a fill-in the blank so the specifier can input an alternate section name.

Replaceable terms such as Architect or Owner cannot be combined with other choice types. You must insert them directly into the paragraph as a Choice Group.

Editing an Existing Set of Choices

You may edit choice groups in user-added or copied paragraphs only. This means that if you wish to modify the choices available in a master paragraph, you must first copy the paragraph and paste it into the project.

NOTE: If there are links to the original paragraph, you may wish to manually exclude the original paragraph and create new links to your replacement paragraph.

- 1. Position the cursor on the colored text denoting an embedded choice group.
- 2. On the Document menu, point to Choices, and then choose Edit Choice, or click the Edit Choice button on the Edit toolbar.

🖷, Edit Choice	X
Choice Group Type:	
Exclusive Multiple Choice, Required	Insert
Choice Options: Fabricator's standard	
SSPC-Paint 15	1
JJ	Up
	Down
	Add
	Remove
Current Option:	П ПОМ
·	MEV
ОК	Cancel

Edit Choice Dialog Box

- Click on the choice option you want to edit and make the desired changes in the Current Option text box, then click Add.
- 4. Click on any other choice option you want to edit and proceed as above. If you want to add a new choice option, click in the Current Option field, enter the new text, then click Add. To delete a choice option, click on the option and click Remove.
- 5. To change the order of the choice options (choices are often listed with the most common choice first or in alphanumerical order), click on a choice option and click the Up or Down buttons.
- 6. When your changes have been completed, click OK.

NOTE: You cannot change the choice group type. If that is necessary, delete the choice group and build a new one in the same location.

Removing a Choice Group

You may remove choice groups in user-added or copied paragraphs only. This means that if you wish to remove a set of choices available in a master paragraph, you must first copy the paragraph and paste it into the project.

NOTE: If there are links to the original paragraph, you may wish to manually exclude the original paragraph and create new links to your replacement paragraph.

- 1. Position the cursor on the colored text denoting an embedded choice group.
- 2. From the Document Menu, select Choices and then Remove Choice, or press the Remove Choice icon on the Edit Toolbar.
- 3. You are prompted to verify that you wish to remove the choice group. When you click OK, the choice group is removed.

NOTE: Be certain you want to delete the choice group before clicking OK, because it is not possible to UNDO this process.