
Thank you for choosing the F105 phone, use your phone in the best condition, please read this manual carefully.

Table of Contents

1. Safety and precautions 4

2. Phone Registration 4

3. Mobile phones appearance..... 8

4. Cell phone..... 9

5. Use 10

6. A brief description of the phone..... 13

7. Basic operation. 15

8. Using a menu function 19

Dialer 19

messaging 19

Contacts..... 21

WAP 23

Music Player 23

User profiles 24

Photos 24

My Files 24

Camera 25

Video Recorder 26

Video player..... 27

FM Radio 27

History..... 27

Alarm..... 28

King Movie	28
Calendar	28
Calculator	28
Settings	28
Converter.	29
Clock.....	30
Bluetooth.....	30
Timer.....	31
World Clock	31
To Do List.....	31
Stopwatch.	31
BMI.....	31
Torch	31
Sounder Recorder	32
Sudoku	32
e-Book	32
Angry Birds.....	32
Fruit Ninja	32
Skybuddy	33
Yahoo	33
Facebook.....	33
Twitter.....	33
MSN	33
EMU games	33
9. Input method instructions.	33
10. Appendix i	34
11. Accessories	34

12 Service Center List.....	36
-----------------------------	----

Disclaimer: The Company reserves no right to prior notice to improve the product, reserves the final interpretation of the performance of the company's products. The Company is committed to improve the quality of products, has introduced an updated version of the instructions contained in the product's features, specifications or design is slightly different, please refer to your phone, these changes afraid not notice, please forgive me

1. Safety and precautions

In order to reduce personal injury, electric shock, fire hazard and damage to the equipment, please read the following rules and comply with these rules, to prevent dangerous and illegal.

Battery:

Do not short circuit batteries. If the metal object and the battery is exposed electrode contacts, it may short circuit, resulting in property damage, personal injury or burns. To prevent accidental leakage, should be properly placed on a charged battery, paying particular attention on the battery in your pocket, wallet or other with metal objects package.

Waterproof:

The phone is not water, keep it dry.

Attention to traffic safety

Strict compliance with your car all the laws and regulations on the use of mobile phones. If you use the phone while driving, please observe the following rules: concentrate on driving, pay attention to the road ; If the phone has a speakerphone, a hands-free calls; if driving conditions are bad, please stop, then make or receive calls.

Take the aircraft should be shut down

Mobile phones can cause interference in aircraft is illegal, please turn off the mobile phone before boarding an aircraft.

Should be shut down near the site of the explosion
Comply with the relevant restrictions on use of mobile phones, do not place during the blasting operation.
In place of the word "Turn off your mobile phone"
Please turn off the phone.

Shutdown in the vicinity of dangerous goods
Place at the gas station and close to the fuel and chemical agents and other dangerous items, please turn off your mobile phone.
In place of the word "Turn off your mobile phone"
Please turn off the phone.

Should shut down in the hospital

Do not use the phone near the weak signal or high-precision electronic devices. Phone radio wave interference may be caused by the misuse of these electronic devices, and other issues. Need special attention especially in the vicinity of the following equipment: hearing aids, pacemakers and other medical electronic equipment, fire detectors and mobile phones on pacemakers, medical electronic equipment, automatic doors and other automatic control devices. Impact on the equipment, please consult the device manufacturer or local distributor.

Accessories and batteries

Use only the specified accessories for this phone and battery. Battery can be dangerous. Please use the specified charger to charge the battery.

Emergency call

Make sure that the mobile phone is switched on and in the service area, enter the emergency number, then press the call key. Remember to provide all information as accurately as possible, please do not end the call hang up the phone without permission.

Phone is lost processing

If your phone is lost or stolen, please notify the telecommunications sector, or outlets, in order to disable the SIM card. This will use your economic losses from the others to take the call.

When you contact the telecommunications sector or sales points, they need to know your phone's IMEI number (printed on the label of the phone back on, remove the battery can be found). The number copied to stay and keep for future.

Safer use of mobile phones, to take preventive measures, such as: set up the mobile phone SIM card PIN code, PIN code prevents others to use your SIM card is unauthorized.

Avoid for children

Place the phone, battery and charger on the children in hard to reach places, so as not to children as toys, resulting in personal injury.

Phone safety

Maintenance of the phone, to avoid phone contact:



Any liquid

Not to contact with water, rain, high humidity, sweat or other moisture.



Extreme heat or cold

Avoid temperatures below -10 ° C / 14 ° F or above 45 ° C / 113 ° F



Microwave

Do not use microwave ovens to dry the phone.



Do not exposure to dust, dirt, sand, food or

other inappropriate material.



Cleaning methods

Only use a soft, dry cloth to clean the phone. Do not use alcohol or other cleaning methods.



Ground

Do not dropped the phone.

Description: The user manual is based on the use of the operating mode of the Chinese Simplified & c. In the English mode of operation is different.

Warning: The factory does not comply with the above suggestions or improper use of mobile phones will not accept any responsibility.

2. Phone Registration

In order to register the details of the customer, the software embedded in the phone has the facility to send an sms automatically to MIRC Electronics Ltd upon insertion of the SIM card. It is in the interest of the user to register its details with the company for any future services, as may be needed. The user agrees to pay the SMS charges in respect of the automated SMS sent to the company upon insertion of the SIM card.

3. mobile phones appearance

This mobile phone for multimedia and dual card dual standby candy bar phone. The color screen display, touch screen, built-in vibration motor, and a charge / headset, data transfer jack. Icon in the user manual is only a reference for functional

description may be slightly different with the actual situation, please phone shall prevail. Part of menu referred to in this user manual may be because the conditions are not met will be the telephone automatically hidden.

4. cell phone Specifications at a Glance

Specifications / Model F105

The size 112x55.6x8 mm

Volume of about 112 cm³

The main screen displays 3.5 HVGA (320 * 480)

Dual card dual standby support

Type of SIM card * Standard Card

Using the system * GSM 900/DCS 1800

dual-band

Depending on the type of phone book capacity *

SIM card;

Phone 2000

Camera / camera / web camera 1.3 million pixels

Speakerphone support

WAP / GPRS * Support

MP3 / recording support

MMS / STK * Support

Vibration motor / backlight / 64 polyphonic

ringtone support

Call transfer / Call Barring * Support

Call waiting * Support

Calling Number Display * Support

Call costs / fixed dialing * Support
Alarm clock / calendar support
Automatic redial * Support
USB data interface / memory card support (T-flash card)
File browsing system support

Note: * indicates that the corresponding functions or services that need network or SIM card support.

5 Use the preparatory work before

Install your SIM card

Before installing the SIM card, first shut down. SIM card is installed in the back of the phone, the installation steps are as follows:

- 1, will the phone go to the back to remove the back cover and battery.
- 2, the metal contacts of the SIM card down, and the SIM card missing angle upward gently Sai Ruka slot gap, push down the SIM card until you can not be promoted.
- 3, insert the battery the top to the fixed slot of the phone and press down the battery, and then along the fuselage to fasten the back cover until it locks.

PIN1 code

To enter the SIM card personal identification number. If your phone is PIN code protection features to boot, the screen will display "Enter PIN".

From the network operator to obtain a SIM card at the same time, you will get this PIN1 code, usually four digits. In the process to enter the PIN1 code, the screen will be "*" instead of the contents of the input.

PIN2 code

The special features of the billing notifications, use the network to provide the required personal identification number.

<WARNING>: three times in a row to enter the wrong PIN1 code, SIM card will be locked, please contact the network operator to seek to assist in decoding. Own attempts to decode the SIM card may result in permanent failure.

To charge your battery

The use of mobile phones is a reusable lithium-ion rechargeable batteries.

Note: The factory battery is a state of semi-electric charging recommend the use of 4 hours fully charged, the battery no memory effect, charging the former do not need to discharge the battery is not used up the charge will not affect battery life, we recommend your normal phone to the battery is not enough (hint) to charge the phone as soon as possible to prevent the battery in the overdischarge state.

■ the process of charging the battery a slight fever is normal, your phone will automatically protect the battery temperature rises to control the temperature.

■ If open warning tone, the phone sounds an alarm tone when the battery is running out, and displayed on the screen "low battery" message, the phone will automatically shut down when the battery is completely empty.

■ Remove the battery, be sure to shut down, or possible loss of data stored in the phone, and may affect the phone service life.

1100mAh Li-on battey will provide 6hours talktime.

Note: The battery is the actual use of time due to the mode of operation, network setup and call settings, Bluetooth, open / close the different vary.

Note:

Mobile phone battery runs out, we recommend you charge it in time.

Timely charge within two days, when you re-charge, the phone may slow charge mode, no display, about 15 minutes after the phone screen will display the charging icon indicated.

(2) To ensure the safety, Do not attempt to change the battery of spare parts, do not open the battery case.

We recommend that you use only the ONIDA original battery, so as not to cause damage to your phone.

(4) The phone allows charging temperature range of 0

□ ~ 40 □ Do not charge too high or too low temperatures.

Warning: Use only batteries, chargers and related accessories of this particular model of phone. When

you disconnect the power cord of any accessory, please pull the plug and not the cord. The purchase of related accessories, please consult your dealer

6. a brief description of the phone

Communication control

Call button used to initiate the call (when the number has been entered in the phone book state), can also be used to answer a call. Press this key in standby mode, press to display the recent call log.

The hold button is used to terminate the call (the call, the call state), or to exit the menu to return to the standby state.



Switch key

The top of the phone has a soft key, press and hold the

button for two seconds or so, you can do to turn on or off.

Camera key

Phone the right soft key in standby mode, press the key directly into the camera interface.

Keypad Lock

Enable the keyboard lock feature to prevent accidental key press. In standby mode, use the stylus along the screen and the direction of the arrow slide to unlock. When the keypad is locked, no need to unlock the normal answer / reject incoming calls.

Alert.

My phone's built-in vibration motor and buzzer, can provide the following incoming call alert modes: ringing, vibration, vibration rings, all quiet .Term description

☐ **Domestic telephone** ☐

Please enter the phone area code, then enter the phone number you want to allocate to.

☐ **International call** ☐

☒ Dial-up interface, press "*" key twice, until the "+" button, then enter the area code, area code and phone number.

☐ **Emergency telephone** ☐

With or without a SIM card (Subscriber Identity Module card), can be input to an emergency call to call for help.


☐ **IMEI** ☐

International mobile phone ID. Turn off the phone and remove the battery, you can see this number bar code

label in the back of the phone. This number is also stored in the phone, turned on in standby mode, enter "* # 06 #" to show up. The world no matter what brand of mobile phone must be printed on this ID, and all the phone's IMEI number is the only global, not with other phones to repeat.

7. basic operation of the mobile phone

Battery Installation

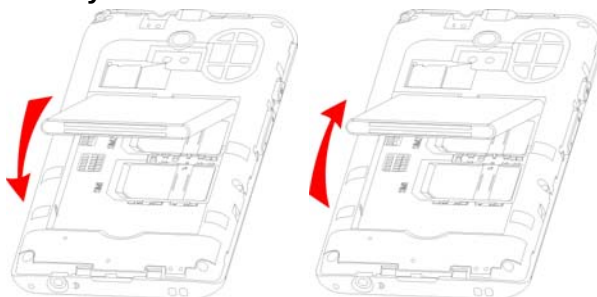

(Install Battery)

(Takeout Battery)

Startup and shutdown

Boot, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If your phone displays to enter the PUK code text, your SIM is locked, please consult your network service provider.

To open the phone's power supply, please press the switch machine / end key. If you open your PIN or phone password, follow the prompts, enter 4-8


SIM card PIN code or cell phone password.

If you do not insert the SIM card, your phone

displays SIM card inserted text. At this point, all the functions related to the SIM card can not use the phone only to make an emergency call number.

To turn off the power of the mobile phone turned on, press and hold the switch machine / end key to turn off the phone.

SIM card installation

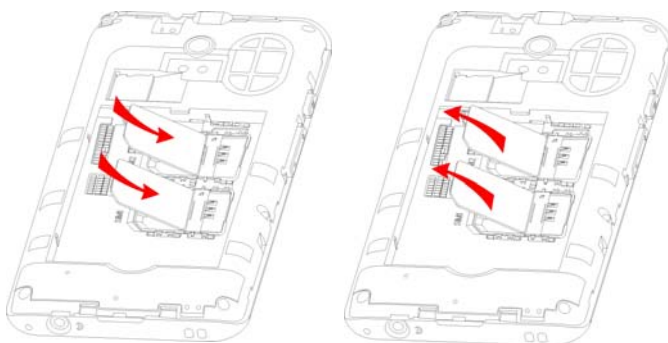


(Insert SIM)

(Takeout SIM)

T-flash card installation

The phone supports T-flash card (which may be sold separately), T-flash card for mobile phone multimedia memory card to increase memory. This card is relatively small, when installing or removing the need to be careful, cautious, to avoid damage.

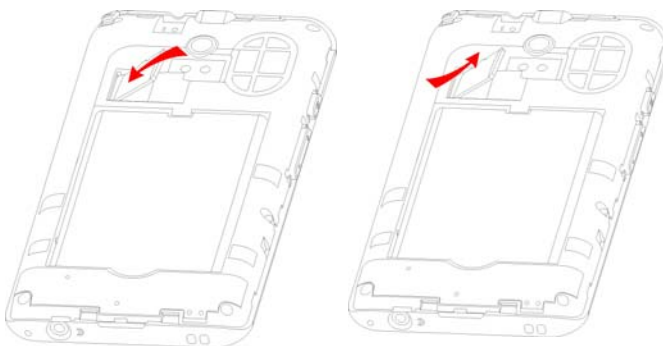

(Insert Memory Card)

(Take Memory Card)

Note: Remind users to carry cell phones when you need to buy a memory card and cabinets trial mobile phone and will buy T-Flash card is compatible or match, and then choose to buy.

Call

In the dial-up interface, twice click on the * key to enter the '+' sign. International calls with "+" instead of "00", click on the number keys to enter the full number for outgoing calls, press the call key.

When the call is connected, the screen can see the call timer. If the call is not established, the possible reasons:

- ☐ "line is busy, the called party is busy or network free line, if you set the automatic redial function, the phone will automatically redial.
- ☐ "denied" that the call is not allowed, for example, set the call barring function.

If the dialed number has been stored, then this phone number corresponding to the name will be displayed

on the screen.

To end the call, press the hold button "Cancel".

Answer the call

- ☐ To answer a call, press the left soft key Call button
- ☐ To reject a call, press the hold button.

If you have opened the Caller ID service, the called number will be displayed on the screen.

Way to end the call with the above is basically the same.

Headset mode: When you plug in the headphones, you can use the headset button to answer a call; you use a headset mode, if you are uncomfortable button, you can set Auto Answer to on, and make sure the headset is plugged in, The phone automatically switched on after 5 seconds of ringing or vibration.

Call ext.

Dial the extension, according to your needs input P (pause) or W (wait). Continue to click on the * key to switch to enter the desired symbol.

You can be the following order of keystrokes:

Area Code switchboard number P or W extension dialing keys

Connect the voice mail

This phone allows you to forward incoming calls to voicemail, and then receive a voice mail notification (voicemail center number must be pre-set, and this service requires network support).

8. Using a menu function

Dialer

You can select this feature into the dialer interface. In the dial-up interface, you can click on the contact numbers of the digital input of the analog keyboard, and then click to dial key to dial the number; or click the information button to edit the message sent to that number; or click on the '+' to add the input number to a telephone book.

Messaging

The messaging function is a network service, you may need to first application for network operators to send and receive SMS or MMS. The phone supports the sending ordinary text messaging, enhanced messaging, and MMS (multimedia information that contains pictures, sounds and text, referred to as MMS). SMS (or MMS) is first sent to the network SMS (or MMS) centers, and network to further the purpose of users to send. If the destination user do not turned on or not receive, the network will temporarily save this information, shelf life is the decision by sending the user's settings and service operators. If the recipient user's mobile phone has MMS, MMS center for the MMS to create a temporary mailbox store on a dedicated server, and notify the user access to read a text message. Such as the alarm sound (if the reports

and send the return of the SMS or MMS settings for access to the Internet to read the user 48 hours, the MMS and the temporary mailbox will be deleted. If the other party has received the SMS or MMS, the phone will beep sounds).

Write Message

Message

You can use this menu New SMS.

MMS

This menu New MMS. Editing required to fill in the recipient, cc, bcc, subject and content of other items.

Inbox The inbox can be saved to receive SMS or MMS.

☐ **Draft box** ☐ Drafts select the stored memory when sending SMS or MMS.

Outbox ☐ Storage failed to send SMS or MMS
sent out ☐ Stored sent SMS or MMS.

Templates ☐ Phone built-in SMS templates can be used to create new information.

☐ **Voice mail**☐: The phone supports voice mail, when others call you, the other in your voice mail to your message, your phone will receive an message notice, and you can go to the answer to your message.

Cell Broadcast ☐ The store receives the broadcast message.

☐ **settings**☐

SMS

Mode is set in the SMS settings, the status is set, the default storage location.

Note: The service center number, please contact your network provider to get a short message service center number.

MMS

Set the relevant parameters for sending and receiving of multimedia information

Page setting: MMS playback time, text set

Sending options: MMS sending network to receive network settings

Cell Broadcast

Set the broadcast receiver, the channel phase parameters.

Note: cell broadcast and voice mail services are operators, please contact your carrier.

Voice mail

Set the voice mailbox number.

Memory state

View the state of mobile phone and SIM card information is stored.

Contacts

The unit can store up to 2000 phone number, SIM card can store the number of phone numbers depending on the SIM card storage capacity. Phone number stored on the phone and SIM card can be used as a unified phonebook search.

Interface in the phone book, select a phone record, click on the bottom left of the screen 'option', you can do the following:

View: See some of the information of the telephone records.

Dial-up: select card 1 or card 2 dial the selected number

Send to: select MMS or SMS phone records.

Memory information: view the storage status of the phone, SIM card and the blacklist.

In the phone book menu interface, click on the top of the screen left and right arrow keys to enter the classification of various classification: card 1, card 2, groups, blacklist, etc..

WAP

Your phone supports the Wireless Application Protocol (WAP)-based services. You can access the services that are supported by your network operator. The service menu allows you to get information about news, weather forecasts, and flights information.

Note: The GPRS service requires network support, must be opened and the GPRS network coverage area in order to use GPRS service.

Music Player

Select music player into the mp3 player interface. The music player interface, the function icon on the bottom of the screen corresponding to rewind / previous track, play / pause, and rewind. When playing music, you can phone the left side of the volume control keys to adjust the playback volume.

Player interface, click 'Options' do the following:

- ☐ **Play / Pause:** choose to play / pause the current track.
- ☐ **Stop:** to stop the current track.
- ☐ **Repeat:** select a repeat play song function can be set to the song playback.
- ☐ **Shuffle:** select "On", the order by list of songs to play songs.
- ☐ **Equalizer:** Set a different sound.
- ☐ **Lyrics:** choose whether to display the lyrics.
- ☐ **Song information:** View message for the currently

playing song.

🔍 **Details:** View of the songs playing time and file size.

User Profiles

8 profiles are: the general pattern, the pattern of meeting, outdoor mode, silent mode, personal mode, headset mode, the Bluetooth mode, power saving mode. You can choose any such information or customize your own personal data, by adjusting the phone.

Photos

You can view this feature to save photos in the phone or memory card.

My Files

In the menu, there are multiple folders for you to manage and dominate. Any transmission, copy, move to save the files in each folder. Note: Some of the folders in the menu are hidden in the factory default state, user-related file formats stored in the phone under the root directory, the system will automatically show up, then move the files to corresponding folder can be .

Music☐MP3

Video☐MP4\3GP\RMVB\AVI

King Movie☐KMV

eBook □ E-book

Also House cat, blowing skirt, and proprietary information to support the number of queries in T-card, do not delete!

Camera

The camera function is to play the part of your artistic talents, the functional integrity of the manual settings allow you to fully enjoy the fun of digital photography, high-quality camera and a rich feature set to ensure that your ideas perfect show.

In the audio-visual tool, select the camera into the camera function:

In the viewfinder interface, the icon corresponding at the bottom of the screen are: set, electronic photo album, camera, switch to the camera and return to function.

Click the Settings icon, you can set the following parameters:

- **Photo Size:** set the photo size
- **Photo Quality:** Set the quality of the photo
- 🔍 **Night:** Set the phone's camera mode.
- 🔍 **Effects:** Set the function of photo effects.
- 🔍 **Continuous:** You can set the number of sheets of photographs.
- 🔍 **Timer:** Set the self-timer.
- 🔍 **White Balance:** Sets the white balance function of the mobile phone camera.

-
- 🔍 **Banding:** Depending on the shooting conditions, respectively, set to 50Hz, 60Hz.
 - 🔍 **Sound:** beep when turned on or off shooting.
 - 🔍 **EV:** different exposure settings according to your need.
 - 🔍 **Flash Light:** to open or close the fill light.
 - 🔍 **Storage:** Select the photo storage location: phone or memory card.

Video Recorder

Into the video interface, go to options, you can choose video settings, set the special mode, effect settings, white balance settings, and to avoid flicker, video sound, the file size limit, time limit, the backlight operation

Video settings: camera white balance, exposure compensation, night shoot mode, to avoid flicker set.

Video settings: video quality test.

Effects settings: select Normal, Mono, Sepia, Negative, Sepia blue and Gray inversion settings.

Note: Enter screen video preview screen, the left and right keys to move to electronic album / camera switch. Other settings with the camera radio Recorder

You can use this feature to record audio files. Note:
The recording time determined by the remaining
memory capacity of mobile phones.

Video player

Select the video player into mp4 player interface.
Video player interface, the function icon on the bottom
of the screen corresponding to the previous one, play /
pause and the next one. Play the video, you can phone
the left side of the volume control keys to adjust the
playback volume.

In the playback interface, click 'Options' can be the
following: stop, full-screen, send, delete, for more
information

FM Radio

You can use this feature to listen to the radio. The radio
interface, according to mobile phone left side of the
volume control keys to adjust the volume or the volume
control icon you can click on the player interface to
adjust the volume. In the playback interface, the
function corresponding to the three icons in the bottom
of the screen are as follows: Manual FM (-), stop / play,
manual FM (+).

History

This feature allows you can view recent call history of
the SIM card: dialed, missed calls, received calls.

Alarm

6 alarm system has been set off by default, according to the need to open one or all open. Each alarm can be set independently of the ring time and ring dates.

King Movie

This feature provides a number of types of movies. To enter the menu, please update the list. Note: The movie saved in memory King Movie file folder. (You can enter the following URL

http://www.onida.com/mobile-phone/download_KMV_Converter)

Note: such as KMV format video stored in the memory card, the film king list is empty, update the list.

Calendar

You can view the function of the calendar, edit the date of the trip and each date of travel, and other operations. Calendar menu in the calendar interface, click the bottom left of the screen 'option' view, add the operation of events, view the list of events to a specific date.

Calculator

A basic calculator is provided.

Settings

General Settings

[Personal settings]: Set the idle screen, display the main menu interface, as well as language-related features.

[Date / Time]: Select your time zone; set time, date and date format settings

[Scheduled Power on /off] Turned on or off the timer switch machine function or standby screen press the hold button to open the slide shut down.

[Details]: Check the ID of the current cell phone store information

[Security Settings]: Turn on or off the PIM code and the phone lock, SIM card lock. Note: The mobile phone factory default password is "0000", please remember your new password after password change.

[Restore settings]: Modify to enter the password of the Security Center. Note: The factory default password is "0000".

Phone Settings

Set the current SIM card and call settings. Note: The calls set up call groups, call transfer, call restrictions, require network support.

Connection Settings

GPRS data and MMS settings.

Converter

The phone provides a number of different unit

conversion, including currency, energy, speed, mass, area, volume, power, time, pressure, length, temperature.

Clock

You can set the current time.

Bluetooth

Bluetooth interface, the operation of the following options:

- ☐ On / Off: Set Bluetooth Status: open or closed.
- ☐ Paired devices: the record of the paired device list.
- ☐ Search devices: Search new device.
- ☐ Settings: set the machine's v name. visibility device.

Timer

The phone's built-countdown function. Set a time, you can click on the icon located in the center of the bottom of the screen starts to count down the time to post, the phone will automatically prompt.

World Clock

You can browse through the function of the major cities of each time zone time.

To Do List

A text editor, you can edit the text in the top, write down the things you want to remember.

Stopwatch

Stopwatch is a simple timing tool.

BMI

Access to personal body mass index.

Torch

Click the middle key to open the touch flashlight, flashlight open again touch, flashlights off.

Sounder Recorder

You can use this feature to record audio files.

Note: The recording time determined by the remaining memory capacity of mobile phones.

Sudoku

You can use this feature four hybrid operation, the number of fill in the appropriate box.

e-Book

You can read through this feature. Txt format text documents. Connected to the computer via a USB cable, TXT format text documents into the phone or the T-FLASH card, e-books folder. Note: txt format text documents to be put in the document management / mobile phone, memory card / eBook "menu before this reader, reading.

Angry Birds

Phone's built additional dynamic game features

Fruit Ninja

Phone's built additional dynamic game features

Note: For both the games customer need to download the game file name mythroad_mst from our site <http://www.onida.com/mobile-phone/> & copy file to memory card.

Skybuddy

There are Facetalk, Gemstones, Twitter, Facebook, MSN, Yahoo.

Yahoo

It provides a series of internet services.

Facebook

Facebook Is a social network service website

Twitter

Is a social networking and micro-blogging service Web site. It uses the wireless network, wired network, communications technology, instant messaging, is a typical micro-blog application.

MSN

It provides dial-up internet access and value-added information, chat rooms and other services.

EMU games

The phone's built-game features.

9. Input method instructions.

The phone is, English, English dual-use mobile phones, not only the menu interface display can also write in English short message. This machine provides a convenient input method, you can also write, edit,

English communication recorded. Switch the input method in the editing interface, click the top right of the screen input method icon; click on the simulated keyboard the lower left '? ! 'Key to enter the punctuation interface.

10. Appendix is a common fault diagnosis

The following is a list of possible causes of some common glitches and exclusion measures. If the following measures do not solve the problem, please contact an authorized service center, thank you.

Not turn

Check the battery is installed correctly, please correct installed batteries.

Check whether the battery power is low, the replacement of the battery or charger.

Ever three consecutive enter the wrong PIN, this operation causes the phone is locked, you should enter the network service provider for the PUK code (PUK code, please consult your network service provider).

SIM card is invalid

When the phone "SIM card invalid" prompt, you can try the following:

Shutdown and then reboot and whether it can be resolved.

If your SIM card is a prepaid card, whether the amount of the card.

Please contact your network service provider to confirm whether due to other causes were refusal to register the network.

Signal is weak or even screen displays no network

You may be in a weak reception area of the signal to leave the area, such as tunnels or basement, retry.

If you are in the room, try a slight turn the phone or close the window.

Poor call quality

Phone signal strength is weak, try the above, the proposed method to solve

Low battery can replace the new battery or charger.

Use the phone to increase the volume keys to adjust the microphone volume.

Can not dial the phone

Make sure the phone number is entered correctly and press the call key.

May be set in the phone Call restriction feature, please cancel the function.

Phone can not be incoming

Check the phone is turned on.

Check the screen is no network, and if so, in accordance with the method proposed above.
May barring of incoming calls in the phone settings, please cancel the function.
The screen is very dark
Check whether the battery power is low, the replacement of the battery or charger.
Inside your phone settings option to adjust the screen contrast.

May be caused by damp because the phone, please keep the phone dry.
Click on the screen, the deviation
The screen may need to calibrate, calibrate the screen.

Tip: If the above proposals and measures does not solve the

11. Accessory List

1 Each of handset, battery, charger, headset, user manual, data cable.

Specific Absorption Rate(SAR) certification information

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines and the guidelines issued by Department of Telecommunication (DoT). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit for mobile devices is 1.6 W/kg. Tests for SAR are conducted using standardIt is declared that the SAR Value of th d operating position with the device transmitting at its highest certified power level in all tested frequency bands.

is Mobile Handset is certified by ILAC and is in conformity with the SAR values of 1.6 W/kg as recommended in the guidelines issued by DOT

The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded

Head SAR:0.728W/Kg□1g□
Body SAR:1.194W/Kg□1g□

During use, the actual values for this device are usually well below the values stated above. This is because, for purpose of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power output of the device, the lower SAR value. If people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the body during use, or reduce the amount of time spent using the device.

12. Service Center List.

Maharashtra: Mumbai-Andheri 32945199/26878136 / 8137/ 4879/
26874891/ 9324102119 Mumbai-Chembur 32937984/25241984/
9323786625 Mumbai-Borivali 9867643695/ 28697754 / 28697802
/9867643695 / 9323724415 Mumbai-Goregaon 9324721942 /
28764605 / 28791499/9892530953 Mumbai-Lalbaug 9869230643/
24714300 / 64517177 / 9869230643 Thane 25470806 / 9322192400
/ 25421948 / 9323724463 Kalyan 3209470/ 2327060/ 9324451953
Vasai 2334089 / 90/9323698399 Vashi 27827503/27827583 /
9821716724 Vasai 6451455/ 9967905543 Kalyan 3212075/
9323294772 Nagpur 3248461/65 / 9373599205 Nagpur – South
2222366 / 6460366/ 9372425958 Amravati 3297767/ 9326280099
Chandrapur 277166 / 9372277166 Akola 6418348 /
9326450488 Pune 32931959/ 2605 4770/ 40078356 /
9372497877 AhmedNagar 2425877/ 9325606919 Pune NEW
Wanawadi 40052177 / 40090377 / 9371205077 Pune-Kothrud
25461876 / 9371205077 Solapur 3294758 /2723711 / 9370454570
Pimpri / Chinchwad 27485173/ 9890968052 Panaji - North Goa 222
2736 / 222 1099 / 222 8295 / 9325551233 Madgaon - South Goa
3259391 / 9326797265 Kolhapur 2462325/ 9371225633
Sangli 3298587 / 2322 242 / 9370820104 Ratnagiri 321683 Satara
284351 / 9370820104 Aurangabad 3252656 / 9372369399
Aurangabad 6992444 / 9922681232 Nasik 3200775/ 6524123 /
578524 9372422890 Jalgaon 3206670 / 3204257/ 232368 /
9370730985 Nanded 325025 / 321253 /9325084880
Karnataka: Bangalore- Indiranagar 32928265/ 9341033739
/Bangalore - Rajaji Nagar 23122672 / 23125245 9916908103
Bangalore – Jaynagar 26577409 / 26576274 / 9916908046 Bangalore

Radial CRC 25438796 / 25438795 9902732891 Mysore CRC 3206473
/ 2463437 / 9341255959 Kolar 401445 / 9844405543 Mangalore
3255339 / 2411210 / 9341880107 Mangalore 2414924 / 2415445
Hassan 266606 Udupi 2532810/ 2532830 Shimoga 277391/ 226846
Hubli 3298808 / 2214814 / 2288712 / 9341680104 Gulbarga
324327 / 275816 / 9886628723 Raichur 231311 / 9886628723
Davangere 325765 / 233982 / 253585 / 9449629481 Bellary 277826
/ 9449629481 Belgaum 3295249 / 2424095 / 2469139 / 9342306934
Bijapur 2255278 / 9342306934
Tamil Nadu : Chennai 32961651 / 28330220 / 9381144102 Chennai
– Adyar 24525067 Chennai – Tambaram 22413334 Chennai – Avadi
26558118 Chennai – Tondairpet 25913350 Chennai –
Valasarawakam 24865500 Chennai – Kilkattalai 22475300
Pondicherry 3296177 / 2342467/ 2348856 / 2222368 / 9344444112
Cuddalore 324566 /236677 / 223105 /9345344108 / Vellore
2235946/ 2235964/ 4203946 / 9894600218 Chennai – Radials
32973243 / 32973244 / 9381144118 Kanchipuram 67270964
Tiruvannamalai 250761 / 254167 Madurai 3259062 / 2533 033/
6543001/ 6543002 / 9360044103 Tirunelveli 3291831/ 2331731/
2331831/ 2331901/ 9367944111 Nagercoil 234362 / 234372 /
9381251696 Trichy 2775133 / 2770433 / 9345144120 Dindigul
2433747 / 9344678809 Thanjavur 271729 / 2712979360318839
Madurai 2604340 / 2600529 / 9360044116 Karaikudi 227939/ 40
/ 9360009802 Pudukotai 320441 Coimbatore 3258032/ 252
7314 / 3250431/ 243 3340 / 244 3482/ 93448 44117 / 93448
44104 Salem 3048090 /244 9525 / 244 3237 93444 44113 Erode CRC
222 7211 / 222 7201 / 93622 27201 Karur 259 295 / 234 295 /

9367155286 Pollachi 325756/ 231796 Tiruppur 223 4526 / 223 0407
93443 44110

Andhra Pradesh: Hyderabad 32935964 Secunderabad 27840126 /
9885579039 Kukatpally 23161296 / 9885569764 Malakpet
24547649/ 9885578329 Kurnool 278510 / 9393840105 Tirupathi
2286867/ 6563377 /9391724389 Karimangar 2230947 / 9290077307
Nizamabad 550115 / 9347240104 / Godavri Khani 932444204
Ameerpet 32495566 / 62615566 / 9246509614 Nellore
9393667793 Godavari Khani 243123 / 9849262806 Warrangal
2454951 / 9885850002 Mahabub Nagar 253475/ 9849412435
Ananthapur 227801/ 9346235756 Proddatur 248844 / 9849655619
Vijaywada 3299410 / 2438681 / 6536040 / 9397840107 Vizag
3296423 / 2598 463/ 6533825 / 9394240111 Rajahmundry
6663873 / 2443873 / 9393940112 Guntur 3252223 /2233006/
9396402716 Vizianagaram 9246492177 Eluru 9246492177
Bhimavaram 9246492177 Ongole 9246492177 Tenali
9246492177 Khammam 9246492177 Kakinada 9290624383

Kerala: Cochin 3259353/ 3988900 / 2357 536 / 2357 440 /
9388648410 Calicut 3942114 / 2740 858 / 2743 502 / 9349748417
Vadagara 2522502 / 9947033220 Malapuram 3298228/ 2730125
/9947033228 Kannur 3292681 /2766 581 / 2711733 / 9349748416
Payannur 325456/ 201/742/209/511/ 9446005231 Thalassery
3205179/ 2322152 / 9446005225 Trivandrum 2465 426 / 2462 924 /
9349348418 Balarampuram 2409010 / 2409238 / 9947030083
Attingal 2629368/ 9947030088 Kottayam 3292651 / 2575 446 / 2575
336 / 9947031631 / 9349948420 Kattappana 273255 /
9947031643 Thodupuzha 220355 / 9947031644 Trichur
3296725 / 3249666/ 2337667 / 9349848419 Kollam

3963666 / 2765 721 / 2743 701/ 9387008421 Pathanamthitta
2231450 / 9349996332 Alleppy 3255001 / 2267065 / 9388899449
Perumbavur 2520099 / 2590099/ 9388405846 Aluva 6520208/
2620208/ 9387171000 Palakkad 938883883 Mavelikara 3290222 /
9995154512 Tirur 9847425151 Irinjalakuda 3291515 / 2830796
9387301515
Gujarat: Ahmedabad 32942148 /26422176/ 26422174/ 26440505/
26422175 / 30028232 / 9925236541 / 9998082070
Gandhinagar 32900501/ 23243747 / 9925236511 Bhavnagar
2522523 / 9925236555 Rajkot 3204919/ 2454783 Gandhidham
323070 / 9327314443 Mehsana 254573 / 9825477439 Jamnagar
9924047076 Baroda 3253267 /2786041/42/43/45 Surat 3018652
/2465633 / 34 /9825979998 Surat 9824172114
Madhya Pradesh: Indore 3249000/ 3241043 / 2530 146 / 679 / 126 /
9302473112 Gwalior 3240900/ 2428513 /9300773115 Ujjain
3240900 / 2525921 / 9301508801 Ratlam 324490 / 230235 /
9329435055 Bhopal 3240900 / 2558192 / 9301373113 Jabalpur
3240900 / 2450621 / 9303373114 Rewa 256491 / 9893974910
Balaghat 247652 / 9425139552 Itarsi 235222 /9981207108 Dewas
220005 /9893064949 Sagar 329951/ 2392086 / 9329414144
Rajasthan: Jaipur 3206300 / 3245484 / 5101951/ 5116601 / 5116602
/ 5116603 /9314914110 Ajmer 3291084 / 2632548 / 9352214113
Kota 5100137 / 9314412303 Jodhpur 3253809/ 2440413 / 2622366 /
2633449 / 9314714116 Pali 320900 / 256370 / 9352916107 Udaipur
3297675 / 2411548 / 2417182 / 9314414112 Bikaner 3295324
/ 2525425 / 2201958 / 9351658717 Ganganagar 2476195 /
9252524717/ 9784866246 Bhilwara 307054 / 9214966006/

9829142360 Sikar 253645 / 9214177130 Alwar 5120630 /
9351372508

Punjab & Himachal Pradesh: Ludhiana 9316404203 / 9317617216 /
98888904201 Chandigarh 2714614/ 2703248 Bhatinda 2254265
/ 5012075 Patiala 3255432 / 2205603 Jalandhar 3245432 /
2225891 / 2235488 Amritsar 3245432 / 2530349 Hoshiarpur
245508 Pathankot 2254182 Kangra 9816944028 / 9218922881
Shimla 2655136 / 9816046016 Bhota 9817109838

Jammu & Kashmir: Jammu 2562258 / 9906037727 /
9906026170 / 9906020854 Srinagar 2481083 / 9419006964 /
9906303093

Haryana: Karnal 3295237 / 3293794 2220525 / 2220725 /
2220825 / 9354717310 / 9355956700 Ambala 3296270 /
4006270 / 93158-59018 Rohtak 250335 / 9315430724 Faridabad
3297290 4050637 Gurgaon 3240134 / 4202835 / 93135-95193 /
9313940390 Panipat 4006498 / 9315430718 Hisar 9896111603
Hisar 9896111603 Bhiwani 9812244146 Fatehabad 220668 /
9812114637 Sonapat 9815900579 Kurukshetra 652172 /
92541017528 Jind 9812175001

Delhi: South Delhi 32449736/ 2694 48 - 26 / 34 / 43 / 24 / 42 /
8822 / 3843 / 46028228 / 9350852821 / 9350852822 /
9313572659/9350414121 East Delhi 65656240 / 41 /
9350595643/ 9350595658 / 9810841314 West Delhi 65656239 /
9313363012 / 9350852813 North Delhi 2745 5617 / 2663 /
9350593596 / 9350852822

Uttar Pradesh Lucknow 3252284/ 3225340/232 3306/ 232 3044/
2335764/ 9336848973/ 336848974 Kanpur 3265005/
3264550/2540581/9935769322 Faizabad 320808/ 241314

9415061089/ 9335029940/ Nirala 2786530 /4066249 / 9839173503
Kanpur / 9336337575 /9919237575 / 9415062345/
9336866999 Kanpur 9415062345/ 9336866999 Lucknow
9335030333/ 9305461689 Jhansi 9415502608, 9936674704
Raibareilly 9335671666/9415082635 Varanasi 3298538/
2224560 / 2227704 09336847755 Gorakhpur
3293222/2346126/9335029936 Allahabad 3296888/ 2260768/
9336847754 Allahabad 2427080/ 9450542506 Mahmoorganj
2225135/9935758360 Ghaziabad
3263207/3223868/4104981/9313171608 Bareilly 3256600/
2302688/ 9837554885 Meerut 3254424/ 2640296 /9385312016 /
9319604400/ 9319604400/ 9319604400/9319604400 Noida
3229094/ 3228483/ 4267157/ 9313171607 Saharanpur 9760363770
MuzafferNagar 897363001/ 9897363001 BulandShahar
9358713434/ 9358713434 Bijnor 9335348707/ 9335348707 Bareilly
Moradabad 9319963000/ 9319963000 Agra 3256033 /
3202045/2523067/ 9336847763 Agra 205995/ 9336847761
Etah 309527/9358085588 Mathura 3298208/9319338400 Kasaganj
9319878333/ 9219986444
Uttaranchal: Dehradun 3250544/ 2650916/ 9336618068 Haldawani
326300/ 282462/ 9336847756
Chattisgarh: Raipur 3240900/ 4074325/ 9329570731/ 4074326/
3203435/ 4069176 Korba 320090/245857/9301321361 Bhilai
3940900/ 4050700 / 9301321362 Rajnandgaon 9329551000
West Bengal: Kolkata South - New Alipore 32426424/ 24007951/
24007952 / 24007953/
24009999/8322/09330913133/09830537820/09433460983/098360
38804

Kolkata North – Saltlake

2426425/6431/22896221/22896192/22896193/ 9339733104/
9433522575/ 9339310761 Asansol 2280978/9433522574 Siliguri
2525722/ 2525721/ 9434130296/ 9338078401/ 9434178876
Barrackpore (24PG North) 9332066199 Garia (24 PG South)/
24367528/ 9339772596 Murshidabad 274691/ 9232473594/
9333194352/ 9434743675 Nadia 9332656601 Burdwan 2542387/
9332100554/ 9332233901 Durgapore 3290954/ 3208585/
9332800271

Assam: Guwahati 2413138 / 2413158/09435044420/9954890168
/9864116390 Jorhat 2309008/ 9435091567 Guwahati 09864408750/
Tinsukia 2337512/ 09864052167

Orissa: Bhubaneshwar 0674-3299315/2530449/
2573439/09338167410 / 9338167416/ 9338167411 Rourkela
3295442/2507092/ 9337467417 Cuttack 3254442/ 2331122/
9337167412 Sambalpur 3295442/ 2404871/ 9338967419
Behrampur / 3295442/ 2221574/ 9338967414 Balasore 329442 /
241348/9338367415

Bihar: Patna 3252513 / 3259715 / 16/2261 071/09334461210 /
9234611210/ Muzaffarpur 2247221/ 9334061211 Gaya
2432863/9334140303 Bhagalpur 2409473/ 9431383711 Arrah
2409473/ 9304386630

Jharkhand: Ranchi 3299585/2341049/9334465110 Jamshedpur
3205008/2432464/ 9334173951/ 9334133359 Hazaribagh
9431366644 Dhanabadi 9234411586

Note: For updated service center list please call customer care
022-39889000[9a.m. to 9a.m.]or visit our website www.onida.com



ONIDA

Customer's Warranty Card

Details

Customer's Name: _____

Address: _____

Dealer's Name: _____

Dealer Address & Stamp:

Model: _____

Date of Purchase: _____

Date of Expiry of Warranty: _____

--

Please paste the IMEI sticker in the space provided below, the Warranty of your handset is based on the same, so keep the form in a safe place

MIRC ELECTRONICS LTD provides this Limited Warranty to person who has purchased the ONIDA mobile phone and original accessory delivered with your mobile phone.

1.The warranty period for the transceiver for 1 year, battery & charger for 6 months is from the date of purchase of the product.

2.The warranty does not cover external housing and cosmetic parts.

3.MIRC ELECTRONICS LTD warrants to you that during the warranty period MIRC ELECTRONICS LTD or a MIRC ELECTRONICS LTD authorized service network will repair or replace, at MIRC ELECTRONICS LTD option, any defective product, or parts thereof, with new or factory rebuilt replacement items, and return the product to the consumer in working condition. No charge will be made to the consumer for either parts or labour in repairing or replacing the product. All replaced boards or equipment shall become property of MIRC ELECTRONICS LTD.

4. The warranty in respect of a repaired or replaced product/part shall extend for the remaining warranty period of the repaired product or replacement thereof to the consumer

5. Upon request from MIRC ELECTRONICS LTD or its authorized service center, the consumer must provide the purchase receipt or other documentation or information in respect of the date and place of purchase.

6. The consumer shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable.

- The Product has been subject to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperatures, unauthorized modifications, unauthorized repair including but not limited to use of unauthorized spare parts in repairs abuse, accident, Acts of God, spills of food or liquids, maladjustment of customer control and breakage or damage to antenna.

- MIRC ELECTRONICS LTD has not been notified by the consumer of the defect in the product during the applicable warranty period.

-
- The product serial number or the accessory date code has been removed, defaced or altered.
 - The defect or damage caused by defective function of the cellular system or by inadequate signal reception by the external antenna.
 - The product has been used with or connected to an accessory not supplied by MIRC ELECTRONIC LTD , not fit for use with ONIDA mobile phones or used in other than its intended use.
 - The seals of the product's battery enclosure have been broken or show evidence of tampering or the product's battery has been used in equipment other than for which it has been specified.

7. In order to derive the benefits of this warranty, the consumer should follow the following procedure.

- The consumer shall return the product to place of purchase for repair or replacement.
 - The consumer may contact local MIRC ELECTRONICS LTD office for the nearest authorized service center.
 - The consumer shall arrange for the product to be delivered to the authorized service center.
-

- The consumer will be billed for any parts or labour chargers not covered by this warranty. The consumer shall be responsible for expenses related to reinstallation of the product.
