


# SVT-4 Cloud Server

## **User Manual**

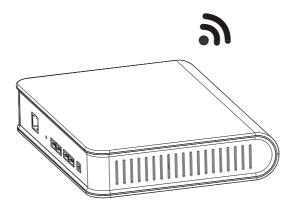


# CONTENTS

1. Introduction	
2. System diagram 1	1
3. Wiring diagram	
4.Specifications	2
5. Technical parameters	3
6. Set up	3
6.1 Android system	3-7
6.1.1 Downloading the App3	3
6.1.2 Installing the App	}
6.1.3 App - User instructions4	7
6.2 IOS system 8	3-13
6.1.1 Downloading the App8	3
6.1.2 Installing the App8	}
6.1.3 App - User instructions9	)-13


## 1. Introduction

The SVT-4 Cloud Server transfers call signals from the SVT-4 Outdoor Stations to a smart phone. This allows a live view of your front door, two-way communication with your guest, and unlocking the door remotely. When the call button of the outdoor station is pressed, the indoor monitor rings and shows a live video, and instantly sends the call signal to any registered smart phone.

## 2. System Diagram

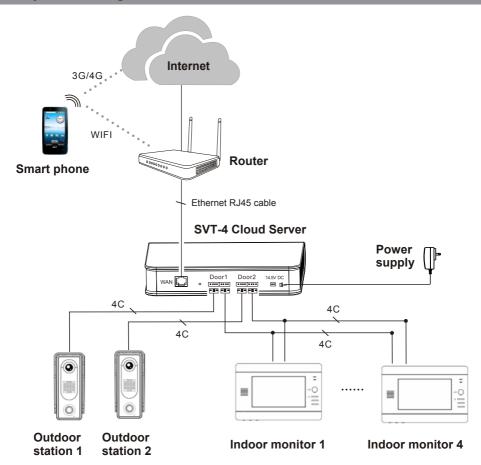

# 3. Wiring Diagram

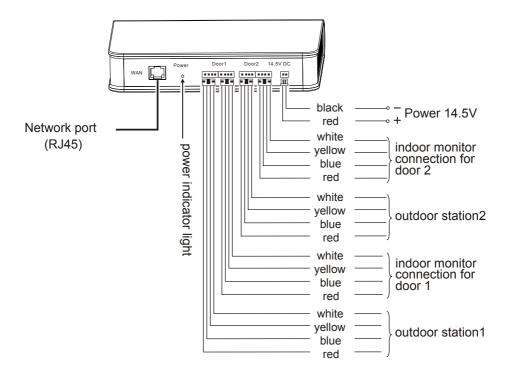

## 4. Specifications

- Supports Android and IOS systems
- · Built-in 32G storage
- · Automatically records a 20-second video (stored on cloud server and accessible on any registered smart phone)
- Snap pictures (stored on smart phone)
- · Supports multiple users
- · Two way communication
- · Call duration: 120 seconds
- · Answer and unlock the door from a smart phone
- · Ethernet RJ45 connection (cable not included)
- · Operation Voltage: DC 14.5V
- · Working temperature -4°F to 140°F / -20°C to 60°C
- · Dimensions: 38(H)x200(W)x152(D)mm

# 5. Technical parameters

Technical parameters		
Operating Voltage: DC 14.5V	Standby power consumption : 2.8~4.5W	
Standby Current: ≤230mA		
Operating Current:: ≤ 250mA		

# 6. Setup


## 6.1 Android System

## 6.1.1 Downloading the application

Download the application from GOOGLE PLAY into your smart phone. Note: GOOGLE ID is required when downloading application from the GOOGLE PLAY.

## 6.1.2 Installing the application

Select the GOOGLE Store icon (picture 1-1). Search for COMViewer as shown on picture 1-2 and select the install button to download and install the application.

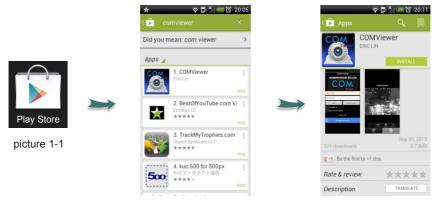

picture 1-2

picture 1-3

## 6.1.3 Application - User instructions

## ► Register and login

After the installation of the application, the COMViewer icon (Picture 1-4) will be on the smart phone application list. Select the icon to enter into the login interface (Picture 1-5).



COMViewer

When the SVT-4 Cloud Server is used in the first time, account name and password is required. Select CREATE ACCOUNT. Enter the user registration information and complete the registration. Then the system return to the account page. Enter the account name and password . A new screen opens (Picture 1-6)



picture 1-5



picture 1-6

#### ▶ Add Camera

Select 'Add Camera' (Picture 1-6). Select 'NEXT' (Picture 1-7) to enter the MAC address and Act. Code setting interface as shown on picture 1-8. User can choose between SCAN QR CODE or MANUAL INPUT. For manual input, please refer to picture 1-9.









picture 1-7

picture 1-8

picture 1-9


picture 1-10

### ► Monitor via the SVT-4 outdoor station

After connecting with the SVT-4 outdoor station, the camera will be listed in the 'Camera List screen' (Picture 1-10). Select the camera icon and the SVT-4 Cloud Server connects to the SVT-4 outdoor station. When a visitor presses the CALL button of the SVT-4 outdoor station, the user can monitor and talk to the visitor, take a snap shot and unlock the door as shown on picture 1-11.



picture 1-11

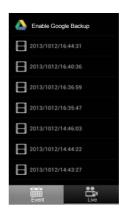

picture 1-12

- **Unlock button:** Select to unlock the door.
- Microphone: Select the mic. icon and hold to talk. Release the mic. icon to send the recording to the SVT-4 outdoor station.
  - Note: There is no need to select this icon when visitor is talking.
- Snap shot: Select to take a picture of the guest. The picture will be stored in the smart phone memory.
- **Volume:** Select to adjust the volume.

## Check the video recordings

Select 'EVENT' to review all the video recordings from the SVT-4 outdoor station (Picture 1-12).




#### A NOTE:

The system automatically records a 20-second video once a gues presses the call button. When the memory of the SVT-4 Cloud Server is full, the system will delete the oldest video automatically.

## ► Application settings

Select 'SETTING'. The setting available are the following: Account Settings, Google Drive Account Setting, Notification Setting, Version Info, Contact Us and Support as shown on picture 1-13.

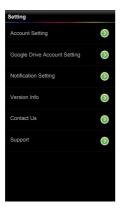



picture 1-13 picture 1-14

#### (1). Account setting:

Select the account setting, enter the new password and confirm the change as shown on picture 1-14.



#### A NOTE:

If user forgets the password, you may recover it on: http://www.competition-viewer.com/

#### (2). Notification setting:

Select 'NOTIFICATION SETTING' as shown on picture 1-15 to configure the notifications when outdoor station is called in (Picture 1-16).





China Mobile 🐯 😪 📶 🖼 2:01PM

picture 1-15

picture 1-16



#### A NOTE:

To test the smart phone notification function, press the call button of the SVT-4 outdoor station two minutes lafter the last call.


## 6.2 iOS System

## 6.2.1 Downloading the application

Download the application from APP STORE into the smart phone. (Note: APPLE ID is required when downloading the application from the APP STORE.

## 6.2.2 Installing the application

Select the APP STORE icon (picture 2-1). Search for COMViewer as shown on picture 2-2 and select the install button to download and install the application.

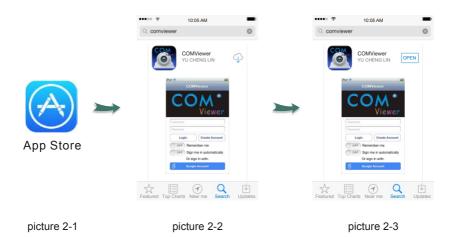

-8-

## 6.2.3 Application - User instructions

## ► Register and login

After the installation of the application, the COMViewer icon (Picture 2-4) will be on the smart phone application list. Select the icon to enter into the login interface as picture 2-5.




COMViewer

picture 2-4

When the SVT-4 Cloud Server is used in the first time, account name and password is required. Select CREATE ACCOUNT. Enter the user registration information and complete the registration. Then the system return to the account page. Enter the account name and password . A new screen opens (Picture 2-6)



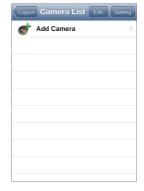

picture 2-5 picture 2-6

-9-

#### ▶ Add Camera

Select 'Add Camera' (Picture 2-6). Select 'NEXT' (Picture 2-7) to enter the MAC address and Act. Code setting interface as shown on picture 2-8. User can choose between SCAN QR CODE or MANUAL INPUT. For manual input, please refer to picture 2-9.




picture 2-7



picture 2-8




picture 2-9

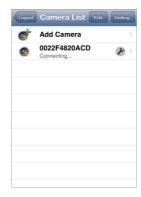

picture 2-10

### ► Monitor via the SVT-4 outdoor station



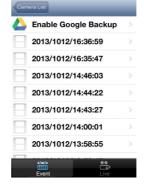

picture 2-11

picture 2-12

- Unlock button: Select to unlock the door.
- Microphone: Select the mic. icon and hold to talk. Release the mic. icon to send the recording to the SVT-4 outdoor station.
  - Note: There is no need to select this icon when visitor is talking.
- Snap shot: Select to take a picture of the guest. The picture will be stored in the smart phone memory.
- **Volume:** Select to adjust the volume.

# ► Check the video recordings


Select 'EVENT' to review all the video recordings from the SVT-4 outdoor station (Picture 2-12).



The system automatically records a 20-second video once a gues presses the call button. When the memory of the SVT-4 Cloud Server is full, the system will delete the oldest video automatically.

## ► Application settings

Select 'SETTING'. The setting available are the following: Account Settings, Google Drive Account Setting, Notification Setting, Version Info, Contact Us and Support as shown on picture 2-13.

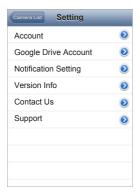

picture 2-13



picture 2-14

#### (1). Account setting:

Select the account setting, enter the new password and confirm the change as shown on picture 1-14.



#### A NOTE:

If user forgets the password, you may recover it on:

http://www.competition-viewer.com/

## (2). Notification setting

Select 'NOTIFICATION SETTING' as shown on picture 2-15 to configure the notifications when outdoor station is called in (Picture 2-16).



picture 2-15



picture 2-16



#### A NOTE:

To test the smart phone notification function, press the call button of the SVT-4 outdoor station two minutes lafter the last call.

