

User Manual

Evolio Hi-Speed 4.3

IMPORTANT

Satellite signals are required for this product to function in Navigation Mode. There may be occasions within your home or building when the signal strength is limited and Navigation Mode may not be possible. This is quite normal for products of this type. If you experience difficulty in receiving a signal in your car you may need to use the external antenna (optional). You can check the number of satellite signals that the unit is receiving and the strength of those signals by viewing the GPS Receiver page; see "GPS Receiver" on page 8.

Safety

The Global Positioning System (GPS) is a satellite based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the Government of the United States of America, who are responsible for its availability and accuracy.

Using Your navigation in the Car

When using while driving it is essential that you drive with

due care and attention. Never modify the settings or program your navigation while driving. Only look at the map when it is safe to do so. Only follow the instructions when the road regulations allow you to do so.

When mounting the device in your car make sure that it does not obscure your view or impede the operation of any driving controls.

Battery

Your navigation uses a Li-ion battery. Do not use it in humid, wet or corrosive environments. Do not operate or store your device in high temperatures (>60 C) or in direct sun light. Do not store in a microwave or pressurized container. Do not pierce or break the battery casing.

Failure to follow these cautions will invalidate the warranty and may cause the battery to leak acid, become hot, explode or ignite and cause injury or damage.

Failure to follow these cautions will invalidate the warranty and may cause the battery to leak acid, become hot,

explode or ignite and cause injury or damage.

If you come into contact with leaked battery acid wash thoroughly and seek medical attention.

The Li-ion battery contained in this unit must be recycled

Main function introduction

1. Starting up.....	7
2. Power saving.....	8
3. Main Functions.....	8
3.1 GPS.....	9
3.3 Multimedia.....	10
3.3.1 Music Play.....	11
3.3.2 Video.....	12
3.3.3 Movie list.....	14
3.3. 4 Photo.....	10
3.3.5 Photo list.....	16
3.3.6 Ebook.....	17
3.3.7 bookmark.....	18
3.3.8 Applications	19
3.4 Games	20
3.4.1 Linlink.....	16
3.4.2 Poker.....	16
3.4.3 Backgammon.....	22
3.5 Tools.....	23
3.5.1 Calculator.....	23
3.5.2GPS Info.....	24
3.6 Setting	26

3.6.1 Volume.....	26
3.6.2 Backlight.....	28
3.6.3 Language.....	29
3.6.4 Date/Time.....	30
3.6.5 Time zone.....	32
3.6.6 Calibration.....	33
3.6.7 System Info.....	33
3.6.8 USB.....	35
3.6.9 Factory Reset	35
3.6.10 Nav Path	36
3.7 Backlight settings.....	37

Main function introduction


1. Starting up

Insert the supplied SD card (optional) into the slot at the bottom of device.



Starting up then enter into the main function operation screen as below.

2. Power saving

Press the power button  on the top side of your device to turn off your device, the device actually enters a suspend state and the system stops operation. Once you turn on the

system again, it resumes.

3. Main Functions

Press the power button to turn on the GPS unit. The Main Menu screen will be displayed as below:



Tap the icon or can choose function

3.1 GPS



Double tap the “GPS” icon

to start program.

3.3 Multimedia



Tap the icon " Multimedia " on the main menu and enter into following interface.





3.3.1 Music Play





Tap the icon on the main menu again and enter into following interface.




: return to the main menu

: minimize

: order of play, single, play all,

: previous

: speed bar

: pause/play

: next


: stop


: sound /mute

: volume control


3.3.2 Video



Tap the icon  on the main menu and enter into following interface.

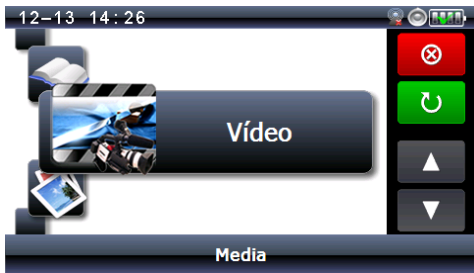




: pause/play

: speed bar

: video list


: return to the main menu

: volume control

: previous


: next

3.3.3 Movie、 list


Tap the  icon and enter into the following interface.



3.3. 4 Photo

Tap the icon  on the main menu and enter into following interface.




: previous

: next

: zoom in

: zoom out

: rotate

: full screen


: photo list



: return to the main menu

3.3.5 photo list




Tap the  icon and enter into the following interface.





3.3.6 Ebook




Tap the icon  on the main menu and enter into following interface.



: return to the main menu


: previous

: next

: font setting


: zoom in

: zoom out

: full screen

3.3.7 bookmark

Choose to add as part of the bookmark text, click on the

 icon, and enter into following interface.



3.3.8 Applications



Tap the icon " Applications " on the main menu and enter into following interface.



3.4 Games



Tap the icon "Games" on the main menu and enter into following interface.



3.4.1 Linlink




Tap the icon on the main menu again and enter into following interface.



3.4.2 Poker



Tap the icon and enter into following interface.

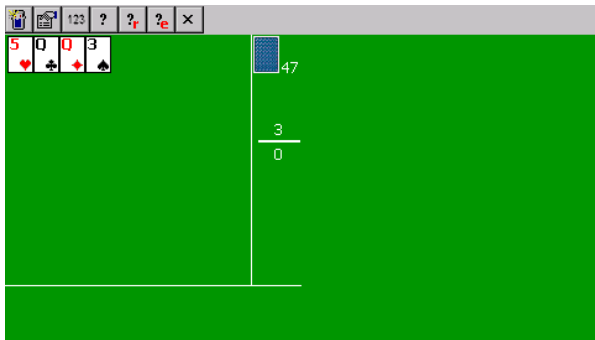


3.4.3 Backgammon



Tap the icon and enter into following interface.

File Game Help

You have 2
Computer has 2

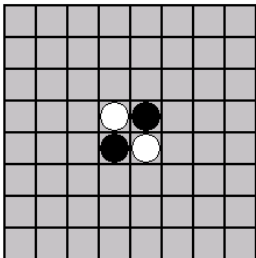

3.5 Tools



Tap the icon on the main menu and enter into the following interface.

3.5.1 Calculator



Tap the icon and enter into following interface.



3.5.2GPS Info



Tap the icon on the main menu and enter into the following interface.



And enter into the following interface

NO. DB Star Used:0

NO.	DB	Star Used:0



Speed:0.000000 km/h
Lon:E000'00'00.0"
Lat:N00'00'00.0"
Alt:0.000
TTFF:10/12/13 04:09:17

This document is for guidance only and does not form part of any contract, and may be subject to change without notice.

3.6 Setting




Tap the icon "Setting" on the main menu :

3.6.1 Volume



Tap the icon on the main menu on the system as below

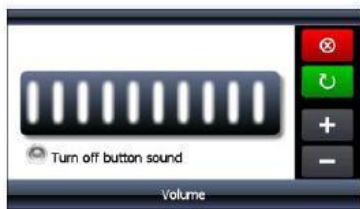

: previous

: saving

: increase


: decrease


: volume control

 : sound /mute

3.6.2 Backlight



Tap the icon  on the system menu and enter into following interface.

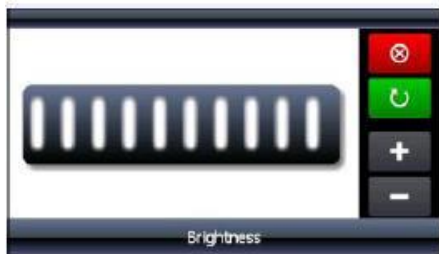


: previous

: saving

: increase

: decrease

: select auto off time

3.6.3 Language



Tap the icon on the system menu and enter into following interface.



3.6.4 Date/Time




Tap the icon on the main menu on the system menu as below

 




And enter into following interface.




: previous

: saving

: tap  or  icon to adjust the time and date

3.6.5 Time zone

Tap the icon  on the system menu and enter into following interface.





: previous



: saving




: tap  or  icon to

adjust the time zone.

3.6.6 Calibration



Tap the icon  on the system menu and enter into following interface.



3.6.7 System Info




Tap the icon on the system menu and enter into following interface.




And enter into the following display




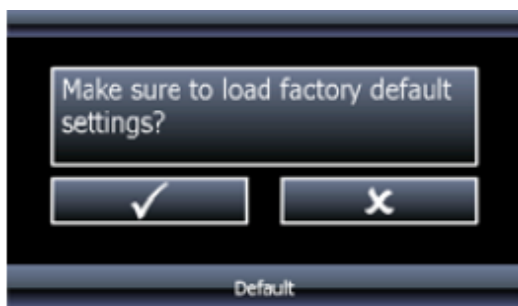
3.6.8 USB

Tap the icon  on the System menu, to set the USB working mode.

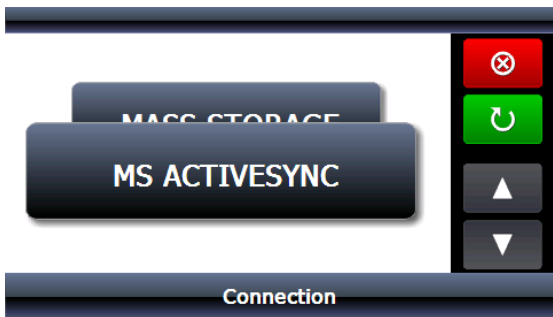

3.6.9 Factory Reset


Tap the icon  on the System menu and enter into following interface.



3.6.10 Nav Path



Tap the icon on the System menu and enter into following interface.

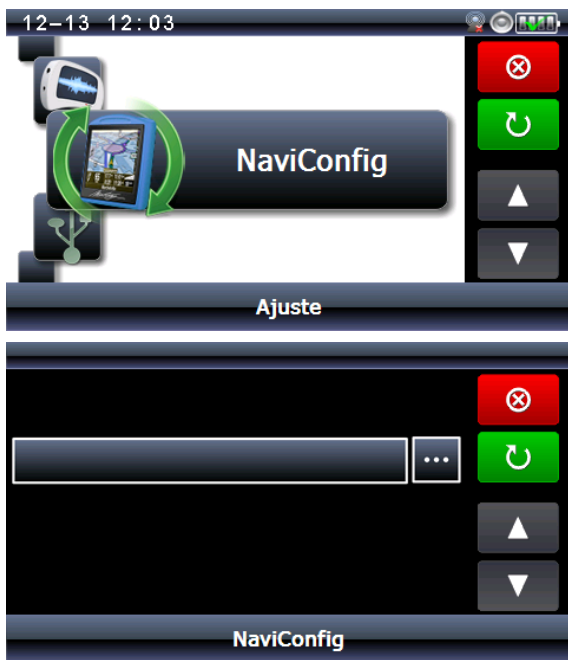

3.7 Backlight settings



Tap the icon on the main menu and enter into the following interface.



Trade reference Evolio Hispeed 4.3

Function	Hardware Specification
CPU	Mstar MSB2531
Frequency	800 MHz
Operating System	Microsoft WinCE NET 6.0 Core Version
GPS Antenna	Internal
Channels	32
SD RAM Memory	128MB
Internal Memory	4GB
Display	4.3"QVGA; 480 x 272 pixeli; 65, 536 culori; touch
Audio	Integrated speaker 1x1.5w Stereo Jack
SD Slot Card	Up to 8GB supported
USB	Mini USB 2.0(High speed)
Battery	3.7V/500 mAh Lithium Polymer
Dimension	119x 78 x 12.9mm
Weight	130gr
Music	MP3 (până la 44KHz), WMA (până la 44KHz), WAV
Photo	JPEG, BMP, PNG

Video	MPEG-1, MPEG-4, AVI, WMV, ASF, 3GP, Divx
Ebook	only .txt format, max 2MB

Note: specification are subject to change without notice

DECLARATION OF CONFORMITY

SC TELEVOICE GRUP SRL

**39, Grigore Cobalcesc Street, District 1, Bucharest
Romania**

Product identity :

- Type : GPS
- Trade reference : DJ50

declare under our sole responsibility that the product described upper to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) and safety toy directive (2009/48/EC).

The product is in conformity with the following standards and/or other normative documents:

HEALTH & SAFETY :EN60950-1

EMC : EN301489-1 EN301489-19

SPECTRUM : EN300487

And declare that all RTTE tests required were made.

Laboratory identity :

- Nom :MTI
- Procédure suivie : Annexe II

Disposal of old electrical appliances

The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Web site www.cpit.com.hk

Made in PRC



Made in P.R.C.