



User's Manual  
DM7  
Dynamic Messenger

Introducing the 7" Dynamic Messenger. To fully understand the product, please read the manual carefully and keep it for later reference.

## Table of Contents

1. Introduction .....	2
2. Safety precautions .....	2
3. Installation Instruction .....	3
3.1 Introduction .....	3
4. Remote Control.....	5
5. Setup Menu.....	7
5.1 SETUP MENU—MAIN PAGE.....	8
5.2 SETUP MENU—PHOTO.....	8
5.3 SETUP MENU—MUSIC.....	9
5.4 SETUP MENU—SLIDE SHOW.....	10
5.5 SETUP MENU—MOVIE.....	11
5.6 SETUP MENU—PREFERENCES PAGE.....	12
5.7 SETUP MENU—EXIT SETUP .....	14
6. OSD Setup guide .....	14
6.1 AV Mode .....	14
6.1.1 VIDEO ADJUST .....	15
6.1.2 OSD ADJUST (OSD MENU SETTING) .....	16
6.1.3 INPUT SELECT .....	17
6.1.4 AUDIO (AUDIO SETTING) .....	17
6.1.5 LANGUAGE SELECT (LANGUAGE SETTING) .....	18
6.1.6 EXIT .....	18
6.2 TV MODE SETTINGS .....	19
6.2.1 TV FUNCTION.....	20
6.2.2 TV MODE .....	20
7.1 Auto Channel Scan .....	20
7.2 Channel Selection .....	21
7.3 Display TV Channel Number .....	21
7.4 Channel Recall.....	21
8. AV Input / Output User Instruction.....	21
9. Specifications .....	22

## Check List

# 1. Introduction

7" Dynamic Messenger supports:

- JPEG picture file

- WMA, MP3 sound files

- MPG1, MPG2 video files

- Background sound playing

- 13 different picture transitions

- CF, SM, MS, MS PRO, SD, MMC, IBM MICRODRIVE seven type of memory cards.

- AV Input/Output

- TV

- Remote control support

# 2. Safety precautions


Please beware of the following precautions.

1. Handle it carefully. Place machine on a soft cloth or surface before installation in order to prevent scratches.
2. Spray a little cleaner on soft cloth and wipe the panel.
3. Do not block the vent to prevent overheating.
4. Never disassemble or perform self-maintenance and repair, since opening or removing cover plate may cause high-voltage electric shock or other dangers. Have a qualified technician perform all product maintenance.


## 3. Installation Instruction

### 3.1 Introduction

1. Front view:

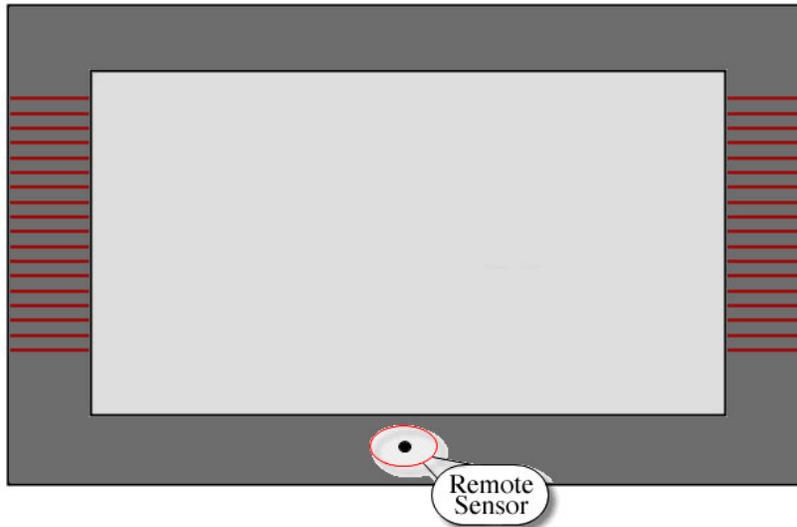


2. Top View:

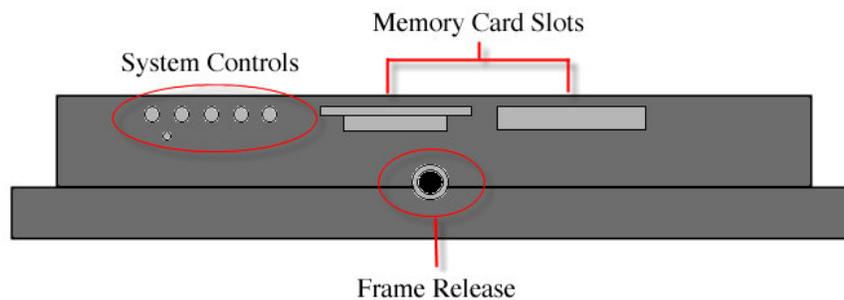

Two slots for CF, SM, MS, MSPRO, SD, MMC, IBM MICRODRIVE: 7 types of memory card ports.

3. Back View:


- Wall Hanging: can be installed onto the surface of a wall. Table Stand: use the stand to support the 7" Dynamic Messenger for weight support.

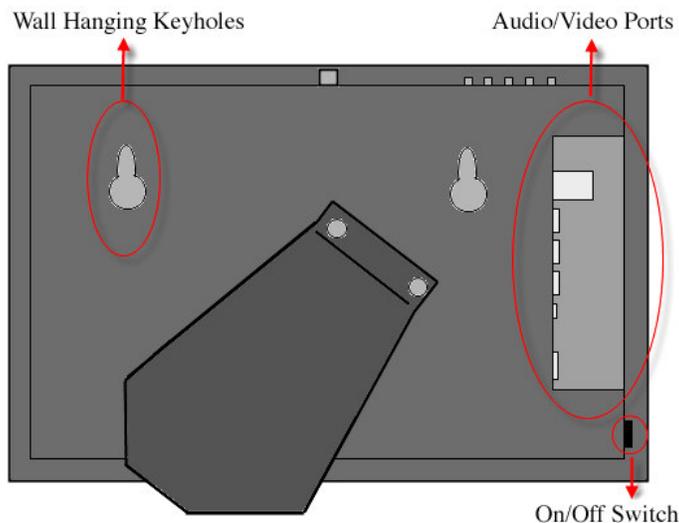

● Input/output Introduction:

<p>The diagram shows a vertical panel of ports. From top to bottom: a white circular port labeled 'TV'; a yellow circular port, a white circular port, and a red circular port, all grouped together and labeled 'AV'; a black circular port with a headphone icon next to it; and a square black port labeled 'DC 12V'.</p>	<ul style="list-style-type: none"> <li>● CATV cable input: Connect CATV cable with TV interface.</li> <li>● AV input: Connects with AV cable and match the cable with the correct color.</li> <li>● Headphone Input (Sound export) , can connect to Stereo or headphone.</li> <li>● DC 12V: Power input, install the power cord into the DC12V input.</li> </ul>
--	--

**3.2 Button Instructions (Right-hand side) :**

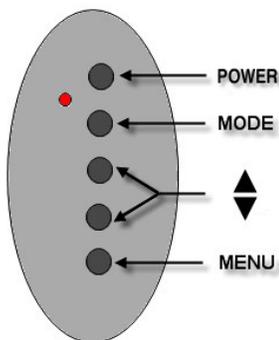


**Instruction:**

- Power: on/off switch.
- "MODE": Mode change, can switch TV、MEDIA PLAYER, and VIDEO.
- Up and Down Button: By pressing the up & down buttons, you may select various options.
  1. Volume Control
  2. Under TV mode, the buttons allow changing of channels.
  3. Under on screen display (OSD) mode, you can select adjustments & options.
- "MENU": Select on screen display (OSD) mode, this allows various options.

## 4. Remote Control

**NOTE:** Due to a manufacturing error, many of the buttons on the remote are mislabeled. Throughout the rest of this manual, please use the “intended” button on the remote and not the button actually labeled for that action. For example, if instructed to press “Photo”, the button on your remote may be labeled as “Movie”.

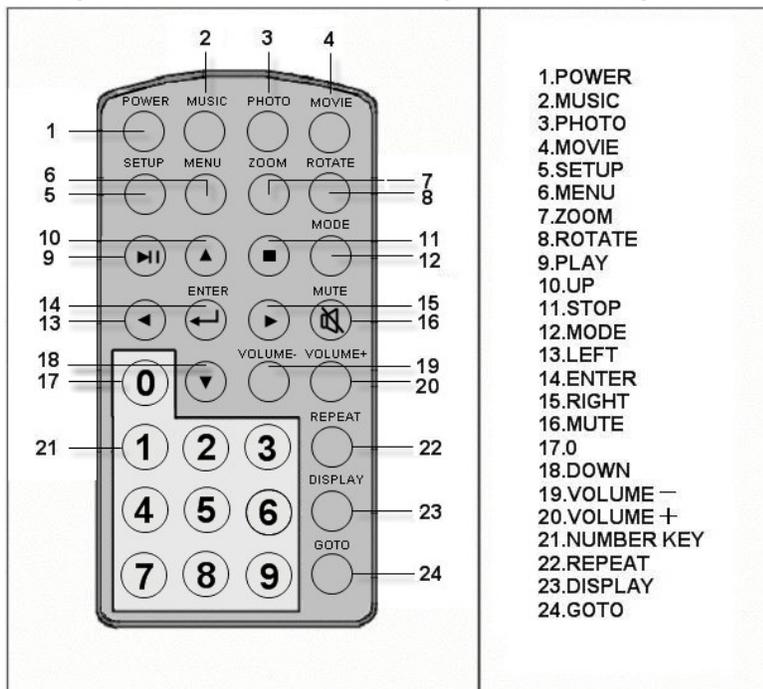

Key	Function
1 POWER	Press to turn the machine on or off
2 MUSIC	In selection menu, pressing the “Music” key will select the music files. If you do not select any files, then the system will automatically play the first music file.
3 PHOTO	In selection menu, pressing the “PHOTO” key will select the picture files. If you do not select any files, then the system will automatically play the first picture file.
4 MOVIE	In selection menu, pressing the “Movie” key will select the movie files. If you do not select any files, then the system will automatically play the first movie file.
5 SETUP	Press for setup menu. Press setup again to exit the setup menu.
6 MENU	Press to configure settings.
7 ZOOM	Under the play selection, if the picture size does not match

- with the frame, then use the "ZOOM" button to enlarge the picture. Press once for three times the size, twice for four times the size, three times for the original size. After enlarging the picture, use the " ▲ ▼ ◀ ▶ " for surface adjustments.
- 8 ROTATE Under the play selection, use the "ROTATE" key for picture rotation. "Rotate" key only works under PHOTO menu.
- 9 PLAY
1. Play and pause function.
  2. When playing a picture and music at the same time. Press once to stop playing the picture, press twice to stop both picture and music playing, and press three times to restore playing.
- 11 STOP Under play mode, press the "STOP" button to stop playing.
- 12 MODE Switch Picture display modes. There are 13 different slide transitions.
- 10, 18 UP, DOWN In OSD menu, up and down switch. (▲ ▼)
- 13, 15 LEFT, RIGHT In OSD menu, left and right switch. (◀ ▶), In setting, press for increase and decrease adjustment.
- 14 ENTER Select an option from a menu.
- 16 MUTE Mute (Sound off).
- 19-20 VOLUME± Volume control.
- 17-21 NUMBER Numbers Keys:
- Under menu play selection, can press the number to select files, such as MP3, JPEG, WMA, MPEG files.
- Under TV mode, use the numbers for channel selection. Press Enter for instant channel change. (Or wait 2 seconds for auto channel change)
- 22 REPEAT Under menu play selection, press REPEAT to have MP3, MPEG or picture files repeat its play function.
- 23 DISPLAY Under play selection, use the DISPLAY key to have picture and music to play at the same time (Background music).
- 24 GOTO In Photo, music, video, or file, user can switch between these 4 modes. As shown under the picture below.




## 5. Setup Menu

### Play multimedia files


1. Refer to product description for instruction on inserting memory cards.

Note: Unit supports 7 types of memory cards: CF, SM, MS, MS PRO, SD, MMC, IBM MICRODRIVE

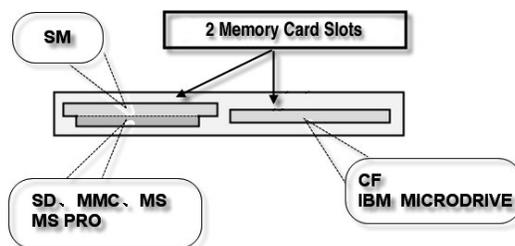


2. Display photo: press “**PHOTO**” key, and enter the photo menu. Use number keys (1-9) for photo selection and press “**ENTER**” to select the photo.
3. Display music: press “**MUSIC**” key, and enter music menu. Controlling instruction is the same as above.
4. Display movie: press “**MOVIE**” key, and enter movie menu. Controlling instruction is the same as above.
5. When playing the media, press “**PLAY**” to pause and press again to continue. Press “**STOP**” to stop playing.
6. Background music (Can play music and photo at the same time) :
  - 1) Under PHOTO menu display mode, press “**DISPLAY**” can play photo and music at the same time. The first music and the first picture will be played at the same time.
  - 2) Under MUSIC menu display mode, press “**DISPLAY**” and same instruction as above.
  - 3) When music and photo is playing at the same time. Press “**PLAY**” once to stop playing photo, twice for both music and photo, and three to continue playing both.
7. For other user instruction please go to Remote Control instruction.

### 5.1 SETUP MENU—MAIN PAGE

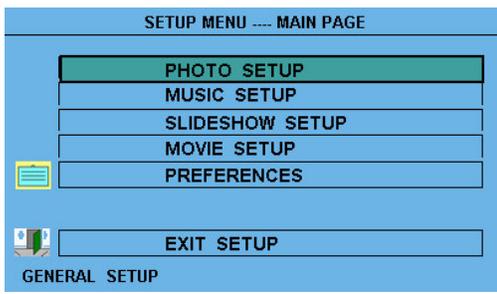 <p style="text-align: center;">MAIN PAGE</p>	<p>SETUP MENU – MAIN PAGE</p> <ul style="list-style-type: none"> <li>• PHOTO SETUP (Change Photo’s settings)</li> <li>• MUSIC SETUP (Change Music’s settings)</li> <li>• SLIDESHOW SETUP (Change Slideshow’s settings)</li> <li>• MOVIE SETUP (Change Movie’s settings)</li> <li>• PREFERENCES (Change Menu’s settings)</li> <li>• EXIT SETUP (Exit MAIN PAGE)</li> </ul> <p>Press SETUP key on remote control to open SETUP MENU.</p>
--	--

### 5.2 SETUP MENU—PHOTO

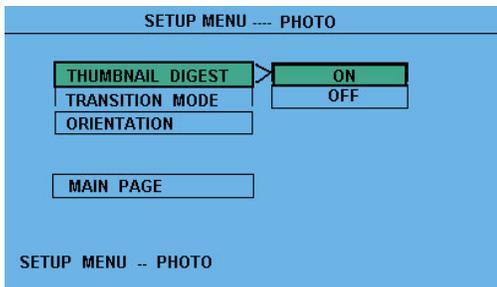 <p style="text-align: center;">PHOTO—THUMBNAI DIGEST</p>	<p>PHOTO Thumbnail Digest Function Setup</p> <p>ON: Turn this function on.</p> <p>OFF: Turn this function off</p> <ol style="list-style-type: none"> <li>1. Enter MAIN PAGE</li> <li>2. Press ENTER key to enter submenu PHOTO.</li> <li>3. Press up and down arrows to highlight item to change, and then press ENTER to save.</li> <li>4. Press to go back to upper menu, then highlight MAIN PAGE to go back to previous menu.</li> </ol>
---	--




<p>PHOTO—TRANSITION MODE</p>	<p>PHOTO transition mode function setup</p> <table border="1"> <tr> <td data-bbox="799 296 964 373">FAST</td> <td data-bbox="967 296 1172 373">NORMAL</td> <td data-bbox="1175 296 1325 373">SLOW</td> </tr> </table> <ol style="list-style-type: none"> <li>1. Enter Photo Setup menu.</li> <li>2. Press ▲ ▼ to highlight TRANSITION MODE, press ► show submenu on right.</li> <li>3. After selection, press ENTER to confirm.</li> <li>4. Press ◀ to turn to previous menu. Choose MAIN PAGE to return to previous menu.</li> </ol>	FAST	NORMAL	SLOW
FAST	NORMAL	SLOW		

<p>PHOTO—ORIENTATION</p>	<p>PHOTO Orientation Function Setup</p> <table border="1"> <tr> <td data-bbox="799 804 1068 882">DEFAULTS</td> <td data-bbox="1071 804 1325 882">IGNORE</td> </tr> </table> <ol style="list-style-type: none"> <li>1. Enter PHOTO SETUP menu.</li> <li>2. Press (▲, ▼) to highlight ORIENTATION, Press (►) to show submenu on the right. Press (▲, ▼) to select desired item. Press (ENTER) to save.</li> <li>3. Press (◀) to return to previous menu. Select MAIN PAGE then press (ENTER) to return to previous menu.</li> </ol>	DEFAULTS	IGNORE
DEFAULTS	IGNORE		

### 5.3 SETUP MENU - MUSIC

<p>MUSIC—REPEAT MODE</p>	<p>MUSIC Repeat Function Setup</p> <table border="1"> <tr> <td data-bbox="799 1442 1325 1520">ONE: Repeat one music file (MP3).</td> </tr> <tr> <td data-bbox="799 1524 1325 1602">ALL: Repeat all music files.</td> </tr> <tr> <td data-bbox="799 1606 1325 1684">OFF: Turn REPEAT function off.</td> </tr> </table> <p>Instruction same as above.</p>	ONE: Repeat one music file (MP3).	ALL: Repeat all music files.	OFF: Turn REPEAT function off.
ONE: Repeat one music file (MP3).				
ALL: Repeat all music files.				
OFF: Turn REPEAT function off.				

### 5.4 SETUP MENU - SLIDE SHOW

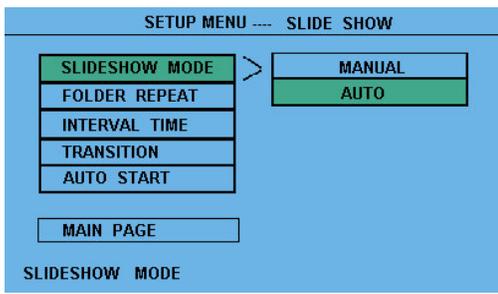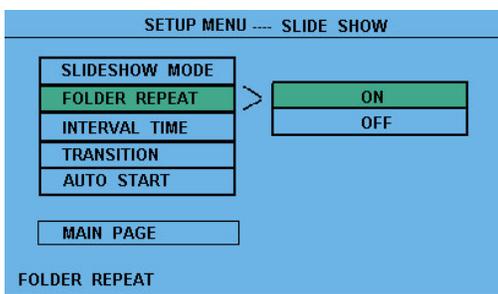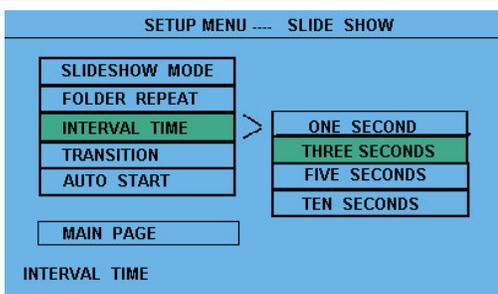 <p>SLIDE SHOW – SLIDE SHOW MODE</p>	<p>SLIDE SHOW Playing Function Setup</p> <p>MANUAL: Slide show plays manually.</p> <p>AUTO: Slide show plays automatically.</p> <p>Instruction same as above.</p>
 <p>SLIDE SHOW – FOLDER REPEAT</p>	<p>SLIDE SHOW Folder Repeat Function Setup</p> <p>ON: Turn folder repeat function on.</p> <p>OFF: Turn folder repeat function off.</p>
 <p>SLIDE SHOW – INTERVAL TIME</p>	<p>SLIDE SHOW Interval Time Setup</p> <p>ONE SECOND</p> <p>THREE SECONDS</p> <p>FIVE SECONDS</p> <p>TEN SECONDS</p>

	<p><b>SLIDE SHOW Transition Function setup</b></p> <table border="1"> <tr> <td>FULL SCREEN</td> <td></td> </tr> <tr> <td>TOP-&gt;BOTTOM</td> <td>From top to bottom</td> </tr> <tr> <td>BOTTOM-&gt;TOP</td> <td>From bottom to top</td> </tr> <tr> <td>T/B-&gt;CENTER</td> <td>From top/bottom to center</td> </tr> <tr> <td>CENTER-&gt;T/B</td> <td>From center to top/bottom.</td> </tr> <tr> <td>BLIND:T/B</td> <td>Blind top to bottom</td> </tr> <tr> <td>LEFT-&gt;RIGHT</td> <td>From left to right</td> </tr> <tr> <td>RIGHT-&gt;LEFT</td> <td>From right to left</td> </tr> <tr> <td>L/R-&gt;CENTER</td> <td>From left/right to center</td> </tr> <tr> <td>CENTER-&gt;L/R</td> <td>From center to left/right</td> </tr> <tr> <td>IMPLODE</td> <td>Outer edges to center</td> </tr> <tr> <td>BLIND-&gt;L/R</td> <td>Blind left to right</td> </tr> <tr> <td>RANDOM</td> <td>Random transitions</td> </tr> </table>	FULL SCREEN		TOP->BOTTOM	From top to bottom	BOTTOM->TOP	From bottom to top	T/B->CENTER	From top/bottom to center	CENTER->T/B	From center to top/bottom.	BLIND:T/B	Blind top to bottom	LEFT->RIGHT	From left to right	RIGHT->LEFT	From right to left	L/R->CENTER	From left/right to center	CENTER->L/R	From center to left/right	IMPLODE	Outer edges to center	BLIND->L/R	Blind left to right	RANDOM	Random transitions
FULL SCREEN																											
TOP->BOTTOM	From top to bottom																										
BOTTOM->TOP	From bottom to top																										
T/B->CENTER	From top/bottom to center																										
CENTER->T/B	From center to top/bottom.																										
BLIND:T/B	Blind top to bottom																										
LEFT->RIGHT	From left to right																										
RIGHT->LEFT	From right to left																										
L/R->CENTER	From left/right to center																										
CENTER->L/R	From center to left/right																										
IMPLODE	Outer edges to center																										
BLIND->L/R	Blind left to right																										
RANDOM	Random transitions																										

SLIDE SHOW – TRANSITION

	<p><b>SLIDE SHOW Auto Start Function Setup</b></p> <p>ON: Turn AUTO START on.</p> <p>OFF: Turn AUTO START off.</p>
--	--

SLIDE SHOW – AUTO START

### 5.5 SETUP MENU - MOVIE

	<p><b>MOVIE Interval Time Function Setup</b></p> <p>FAST</p> <p>NORMAL</p>
--	--

MOVIE – INTERVAL TIME

	<p>MOVIE Repeat Mode Setup</p> <p>OFF: Turn Repeat function off.</p> <p>ONE: Repeat one movie file.</p> <p>ALL: Repeat all movie file.</p>
--	--

### 5.6 SETUP MENU - PREFERENCES PAGE

(ONLY AVAILABLE WHEN MEDIA CARD SLOTS ARE EMPTY)

	<p>PREFERENCES PAGE TV Type Function Setup</p> <p>MULTI.SYSTEM : Change TV system automatically</p> <p>NTSC: For U.S. and Japan</p> <p>PAL: For country adopts PAL system.</p>
--	--

	<p>PREFERENCES PAGE VIDEO OUTPUT Setup</p> <p>S-VIDEO: S-Video signal output</p> <p>YPBPR: YPBPR signal output</p> <p>RGB: RGB signal output</p>
--	--


<p>The screenshot shows the 'PREFERENCES PAGE' with a list of menu items: TV TYPE, VIDEO OUTPUT, OSD LANG (highlighted), OSD MESSAGE, and DEFAULTS. An arrow points from 'OSD LANG' to a sub-menu with 'ENGLISH' (highlighted) and 'CHINESE'. A 'MAIN PAGE' button is at the bottom. The text 'SET OSD LANGUAGE' is visible at the bottom of the screen.</p> <p>PREFERENCES PAGE—OSD LANG</p>	<p>PREFERENCES PAGE OSD Language Setup</p> <p>ENGLISH: OSD in English</p>
---	---

<p>The screenshot shows the 'PREFERENCES PAGE' with a list of menu items: TV TYPE, VIDEO OUTPUT, OSD LANG, OSD MESSAGE (highlighted), and DEFAULTS. An arrow points from 'OSD MESSAGE' to a sub-menu with 'ON' (highlighted) and 'OFF'. A 'MAIN PAGE' button is at the bottom. The text 'OSD MESSAGE' is visible at the bottom of the screen.</p> <p>PREFERENCES PAGE—OSD MESSAGE</p>	<p>PREFERENCES PAGE OSD MESSAGE Setup</p> <p>ON: Turn OSD MESSAGE on.</p> <p>OFF: Turn OSD MESSAGE off.</p>
---	---

<p>The screenshot shows the 'PREFERENCES PAGE' with a list of menu items: TV TYPE, VIDEO OUTPUT, OSD LANG, OSD MESSAGE, and DEFAULTS (highlighted). An arrow points from 'DEFAULTS' to a sub-menu with 'RESET' (highlighted). A 'MAIN PAGE' button is at the bottom. The text 'OSD MESSAGE' is visible at the bottom of the screen.</p> <p>PREFERENCES PAGE—DEFAULTS</p>	<p>PREFERENCES PAGE DEFAULTS Setup</p> <p>RESET: Restore manufacturer's default settings.</p>
--	---

NOTE: PREFERENCES PAGE DEFAULTS is active only in initial status by pressing SETUP key. If not, please press SOURCE key to return to initial status.

## 5.7 SETUP MENU - EXIT SETUP

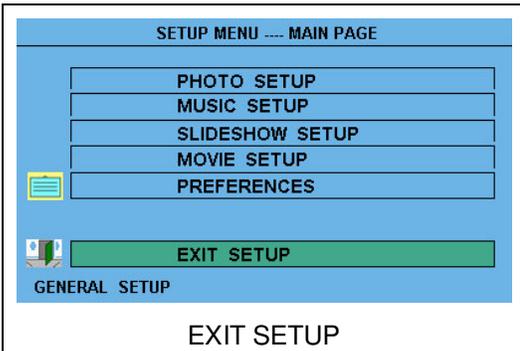
	<p><b>MAIN PAGE EXIT SETUP</b></p> <ol style="list-style-type: none"> <li>1. Press ,  to highlight EXIT SETUP.</li> <li>2. Press ENTER to exit OSD menu.</li> </ol>
---	--

## 6. OSD Setup guide

### 6.1 AV Mode

#### ➤ Remote Control Operation

- Press “MENU” to highlight the OSD setting , press“ ”, to select submenu, press “ ”, to select aimed variable, then press“ ”to adjust numerical variable; If the variable is not numerical( such as “ TV”, “ VIDEO”, press“ ” to select aimed variable, then press “ENTER” to confirm. Press “RETURN” button at the submenu to exit OSD, or you can wait for OSD exit automatically (please reference the detail OSD menu closing time setting) .

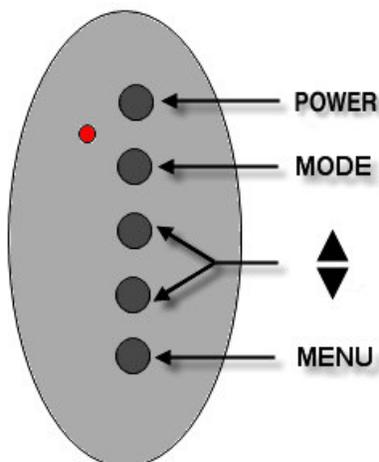

**Tips:** You can also press “ENTER”、 “MENU” buttons on remote control or “OSD” on the machine to exit the OSD setting.

## VIDEO、DVD and MEDIA PLAYER Mode

### The Specific Menus:

The specific of Menus are different for each mode of VIDEO、DVD、TV、MEDIA PLAYER, However, the same for VIDEO、DVD 与 MEDIA PLAYER Menus

Select Menu:

- VIDEO ADJUST
- OSD ADJUST
- INPUT SELECT
- AUDIO
- LANGUAGE SELECT
- EXIT

### 6.1.1 VIDEO ADJUST




Operation under highlighting the variable

BRIGHTNESS	Reduce/ increase the variable	HUE	Reduce/ increase the variable
CONTRAST	Reduce/ increase the variable	COLOR TEMPERATURE	Reduce/ increase the variable
SHARPNESS	Reduce/ increase the variable	RESET	Reduce/ increase the variable
SATURATION	Reduce/ increase the variable	RETURN	Reduce/ increase the variable

Note: To ease the operation, the second function of “ multifunction” buttons will be used (up, down, left, right at menu setting) , representing by : ▲、▼、◀、▶。

6.1.2 OSD ADJUST (OSD MENU SETTING)

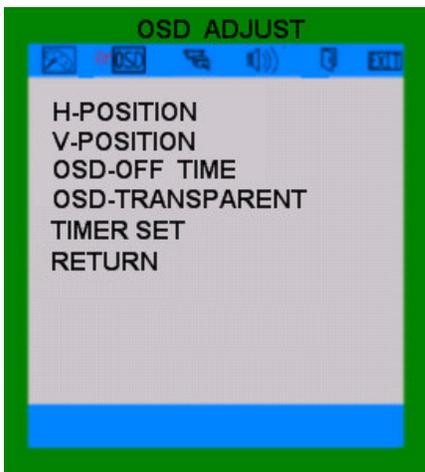

OSD MENU SETTING

H-POSITION	Move horizontally
V-POSITION	Move vertically
OSD-OFF TIME	OSD auto off time set
OSD-TRANSPARENT	OSD transparency

TIMER SET

Press it for Timer setup. Select "Timer" to activate.

When timer is on, three selections will be displayed on the screen, including "ON", "OFF", and "TIME". Press numbered keys to adjust to the correct time. If the current time is 13:15:41, press 1, 3, 1, 5, 4, 1 as the arrow flashes. Confirm it after time adjust.

- "ON": System is off, internal clock still runs, when it's time to start, system will be automatically turned on.
- "OFF": System is on, when it's time to shut down, system will be automatically turned off.
- "TIME": Current time.

When timer is set to "NO", auto-timer is off.

RETURN	Return to Menu
--------	----------------

1. Press MENU to enter submenu, then press ENTER to enter "VIDEO ADJUST" (or press "▼").
2. Press "◀ ▶" to highlight your choice.
3. Then press ENTER to enter, press "◀ ▶" to change settings. Or Press ENTER for options.

### 6.1.3 INPUT SELECT




#### INPUT SELECT

VIDEO	For VIDEO input signal
TV	For TV signal
MEDIA PLAYER	For Media Player
RETURN	Return to menu

1. Press MENU to enter submenu, then press ENTER to enter "INPUT SELECT" (or press "▼").
2. Highlight your choice, and press "ENTER" to confirm.

### 6.1.4 AUDIO (AUDIO SETTING)

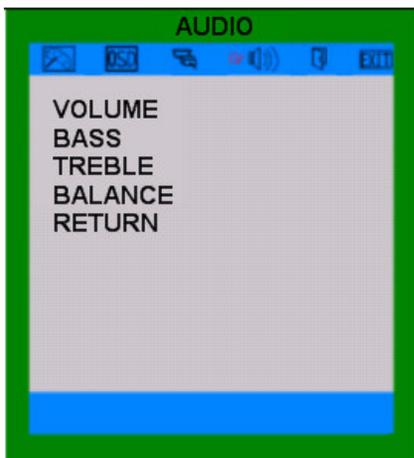

#### AUDIO SETTING

VOLUME	音量
BASS	低音
TREBLE	高音
BALANCE	左右声源平衡度
RETURN	返回

1. Press MENU to enter submenu. Then press ENTER to open "AUDIO" menu. (or press "▼").
2. Press "▼、▲" to highlight your choice.
3. Press ENTER to open and press "◀、▶" to change settings. Or press ENTER for options.

6.1.5 LANGUAGE SELECT (LANGUAGE SETTING)




LANGUAGE SELECT

ENGLISH	英语
RETURN	返回

1. Press MENU to enter submenu. Then press ENTER to open "LANGUAGE SELECT" menu.
2. Select a language, then press "enter" to confirm.

6.1.6 EXIT

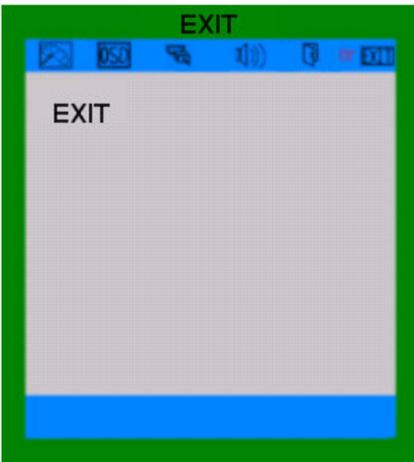

EXIT OSD

Press "ENTER" / "MENU" to quit OSD adjust.


## 6.2 TV MODE SETTINGS

### Menu:

- VIDEO ADJUST
- OSD ADJUST
- INPUT SELECT
- TV FUNCTION
- TV MODE
- AUDIO
- LANGUAGE SELECT
- EXIT

The Operation for VIDEO ADJUST、OSD ADJUST、INPUT SELECT、AUDIO、LANGUAGE SELECT、EXIT are the same for VIDEO、MEDIA PLAYER mode are same, here are the details of TV function and TV mode setting.

6.2.1 TV FUNCTION

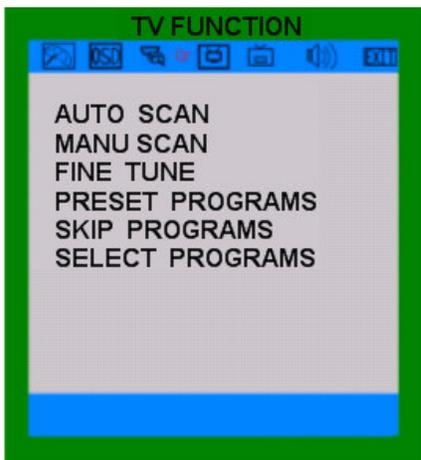

TV Function Menu

AUTO SCAN	Auto search all channels
MANU SCAN	Manual Search channels
FINE TUNE	Covering manually full channel width, to the highest level of performance.
PRESET PROGRAMS	Able to change channels' sequence.
SKIP PROGRAMS	This function for skip a channel, "▲▼" on remove control to select a skip channel.
SELECT PROGRAMS	This function for select channel on the machine buttons, "▲▼" on machine to select channels.

1. Press remote control direction key to select, and press **ENTER** / **MENU** to confirm
2. Select "PRESET PROGRAMS" setup selection, press "◀▶" to adjust the aimed channel in the mid-bottom of OSD menu, press **ENTER** / **MENU** to realize preset function

6.2.2 TV MODE



TV MODE (Provided Countries)

NTSC	US.JP.KO.	PAL B/G	Europe
PAL I	Hong Kong	PAL D/K	China

1. Select **ENTER** / **MENU** to enter submenu, press "▶" button on remote control.
2. Then press **ENTER** / **MENU** to confirm.

7.1 Auto Channel Scan

First time use or TV moved to new area, needs to process auto channel search.

1. In TV Playing mode, press "**MENU**" to enter submenu. (Please compare system setting part on the front page.)
2. Press "◀▶" on the remote control to TV Menu, then press "**ENTER**" to enter setting.
3. Press "▲▼" on the remote control to Auto Channel Scan, press "**ENTER**" to enter "Auto Channel Scan". After auto scan finished, there will be auto play first channel, and channels can be watched normally.
4. To stop Auto Scan, press "**ENTER**" Key to quit.

## 7.2 Channel Selection

To select channels, press "▲▼" or enter number of a channel on the remote control, then press **ENTER** to confirm. Also "Channel Selection" can be found in the submenu for select channels.

## 7.3 Display TV Channel Number

While TV is in playing mode, press "**DISPLAY**" to show channel number on the top right corner screen.

## 7.4 Channel Recall

While TV is in playing mode, press "**ENTER**" to go back to previous channel.

# 8. AV Input / Output User Instruction

This product has AV Device. VCD AV Device can directly connect with DVD, VCD player (PS. AV M status needs to change to, which AV input turns on).

User Instruction below:

AV Input & Output can be controlled by the switch.

AV Input: VIDEO Input (Connect DVD/VCD AV Output), AUDIO Input (Connect DVD/VCD Audio Output), needs to switch status to IN, then digital frame playing mode switch to Video mode, then AV signal can be played.

Instruction:

First Thing AV Signal Cable connected follow by color:

1. Take DVD, VCD's VIDEO (Yellow) Connect to Album TV's VIDEO AV.
2. Take DVD, VCD's AUDIO (Red、White) Connect to Album TV's AUDIO AV.

Then switch Digital frame's mode to VIDEO:

- 1、 Press "**MENU**" into OSD system menu.
- 2、 Press "◀▶" switch to "**INPUT SELECT**" screen.
- 3、 Select "**VIDEO**" input mode, "**ENTER**" to confirm VIDEO input mode.

Finished Instruction above will be able to watching DVD,VCD.

AV Output Status Description: System AV Signal can be output, need to connect AV input, then can playing media from Album TV. Let Video Input/output switch to Out, also digital frame playing mode change to MEDIA PLAYER, then it will be able to play.

## 9. Specifications

Panel:	Active Matrix Color TFT LCD
Active area:	211.2 mm(Horizontal)×158.4 (Vertical) mm
Pixel pitch:	640 (W) × 480 (H)
Horizontal frequency:	30—80KHZ
Vertical frequency:	60/75HZ
Lamp Lifetime:	50000 Hr
White Luminance:	330cd/m <sup>2</sup>
Contrast ratio:	250: 1
View Angle:	Top 110°/ Bottom 110°/ Left 140°/ Right 140°
Input Power:	AC110—240V (50HZ-60HZ)
Power Management:	VESA DPMS
Power Consumption:	25W
Operating Temperature:	0 - 50℃
Supported Multimedia File:	MPEG1、MPEG2 MP3、WMA JPEG
Supported Memory card:	CF、SM、SD、MMC、MS、MS PRO、IBM MICRODRIVE