



Non-Stick Frypan

Model RS1935FP

INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS



Dear Valued Customer

Thank you for purchasing a Red Stamp appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this Red Stamp product into your home.

Your Red Stamp appliance is recognised as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of Red Stamp appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 230V ~ 50 Hz – AC only
Rated Power: 1250 Watts

SERVICE

In the unlikely event of failure or for product information please contact the below help lines.

New Zealand call 0800 898 580
Email: service@opnz.com
Australia call Toll Free 1-800-858011



BEFORE FIRST USE

- Your appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.
- Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.
- Carefully wipe the exterior of the appliance and cooking surface to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners. Remove any label or sticker.
WARNING! Do not immerse supply cord, plug or probe in water or any other liquids. Do not immerse the frypan in water.

OPERATION

- Always place the appliance on a level non-slippery stable surface.
- Always place the appliance on a heat resistant surface, as the appliance will reach high temperatures.
- **WARNING!** DO NOT LEAVE ON WHILE UNATTENDED.
- **WARNING!** Always leave a gap of approximately 20 cm around the exterior of appliance when on. Never use near curtains, under cupboards or near walls, or other flammable material.
- **WARNING!** DO NOT LET SUPPLY CORD HANG OVER THE EDGE OF ANY BENCH OR TABLETOP. AS THERE MAY BE A RISK OF SCALDING OR OTHER INJURY SHOULD YOUNG CHILDREN PULL THE APPLIANCE FROM THE BENCH OR TABLETOP.



- Ensure the temperature controller is set to the 'OFF' position. Attach the temperature controller to the frypan, ensuring that it is firmly pushed into place. **WARNING!** Never plug the controller into the appliance when it is connected to the mains, always connect to the frypan first.
- This frypan must only be used with the controller supplied.
- Connect the supply plug to the mains power and switch on.
This appliance must be earthed.
- To turn power on to the frypan simply adjust the temperature controller to the desired temperature setting.
- The indicator lamp and heating will cycle on and off automatically once the selected temperature is reached. The appliance is ready for use.
- **WARNING!** Do not use metal tools or similar as these will scratch the non-stick coating and damage the appliance. Use wooden or plastic utensils.
- **FIRST TIME USE!** For first time use, coat the cooking surface with a small amount of cooking oil.

Approximate temperature guide.

Temperature	Setting	Degrees (approx)
Low	1 (1)	100°C
	2	110°C
	3 (2)	125°C
Medium	4	140°C
	5 (3)	150°C
	6	160°C
	7 (4)	175°C
High	8	185°C
	9	200°C
	10 (5)	210° C

Note! Controller markings may vary.



The following guide gives approximate cooking times. Times will vary on different quantities.

Food.	Temperature setting	Cooking time (approx)
Pancakes	190°C	1-3 min
Bacon	190°C	4-7 min
Hash browns	200°C	8-10 min
Eggs	150°C	2-5 min
Fish	180°C	6-9 min
Pork chops	190°C	10 min
Sausages	180°C	10 min

NOTE! To prevent foods from sticking to the cooking surface use low temperatures, ensure that there is sufficient liquid / cooking oils and season the frypan surface before and after each use.

NOTE! The first time you use your appliance; there may be a small amount of smoke and odor. This is normal. It is due to the heating of a protective coating, placed on the heating elements, to protect the heating elements during shipping.

CLEANING AND CARING

WARNING! Always disconnect from the mains supply and remove the supply probe before cleaning. Always allow your appliance to cool completely before final cleaning. **WARNING!** DO NOT POUR COLD WATER INTO THE HOT FRY PAN AS THIS MAY WARP THE APPLIANCE.

WARNING! Never immerse your supply cord, plug or probe or the appliance in water or other liquids. Ensure the frypan power inlet is completely dry before use after cleaning.

- If required wipe the probe and supply cord with a slightly damp cloth, dry with a dry towel.



- Wipe the surface of the frypan with a cloth and hot soapy water. Dry with a dry towel. Ensure that no water enters the power inlet socket area. Allow to dry completely before re-use.
- Do not use scouring pads or harsh abrasives as they may damage any plastic, non-stick surface or the exterior finish.
- To remove hard to shift stains or food items fill with HOT soapy water and leave to soak. This will soften the material and make it easier to clean.
- Always re-season the frypan by rubbing a small amount of oil into the cooking surface after cleaning and before storage.
- Store your appliance in its original box or in a dry cupboard.
- Do not use metal utensils as they may scratch the cooking surface.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands. Do not immerse the supply cord, plug or probe in water, wipe with a damp cloth if required.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. **WARNING!** Unplug from mains outlet when appliance is not in use, filling with water or cleaning.



5. An appliance dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Replace only with a suitable authorised replacement part.
8. CAUTION: Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance
9. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service Dealer.
10. This appliance is intended for household use only and not for commercial or industrial use.
11. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
12. WARNING! Do not let the cord hang over edge of table or counter. Risk of scalding.
13. WARNING! An appliance should never be left unattended when plugged in.
14. WARNING! Hot surfaces or steam. Keep away from hot steam. Do not touch hot surfaces.
15. WARNING! Always place the appliance on a heat resistant surface.
16. WARNING! Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.
17. WARNING! Do not use the appliance near flammable materials such as curtains, or other combustible material.



18. If appliance is to be used by a third party, please supply the instruction manual with it.
19. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of twelve months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of appliance: _____

Model Number: _____ Purchase date: _____

Store Purchased: _____

Name: _____

Address: _____

Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt.

Please do not post to the Retailer or Importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.