

ADDRESSING AND TEST DEVICE

MINIBT 05



This document consists of 8 pages.



MINIBT 05 USER MANUAL

CODE : MUMOI
REV : 2
DATE : 27 / 06 / 08
PAGE : 2

CONTENTS

I.	DOCUMENT'S EVOLUTION	2
II.	GENERALITY	3
III.	CHARACTERISTICS.....	3
IV.	OPERATING INSTRUCTION.....	4
	Main menu	4
	Manual address coding of an element.....	4
	Automatic address coding of an element.....	5
	Line verify	6
	Warnings	7
V.	RECOMMENDATIONS.....	7
	Battery install/replace	7
	Recommendations for addressing.....	8

I. DOCUMENT'S EVOLUTION

REV	MODIFICATIONS	DATE
1	First release	03 / 07 / 06

II. GENERALITY

The “**miniBT 05**” is an electronic instrument designed to program and verify the DEFNET serial communication protocol addressable devices, such as fire/smoke detectors, manual call point, input/output modules and the lines composed by this devices.

It is compatible with devices of series 95 and 05.

“MiniBT 05” appears to the user as a rugged and practical plastic case; by means of its small outline, the case handle, and the possibility to install a battery to stand-alone from the main power supply, it results particularly user friendly for field application.

III. CHARACTERISTICS

By opening the case the user access the front panel, which present the following elements:

- The main fused male+female plug (cable not provided),
- The power on switch,
- A sixteen characters over two lines LCD display,
- A sixteen-keys keyboard,
- A couple of spring-connector for fast line connecting,
- A detector base.

Electrical characteristics

Parameter	Value
Main power supply	230Vac 50Hz
Main protection	Fuse 5x20mm 250V F400mA
Battery	Pb 12V 1,9÷2,1Ah
Battery protection	Polyswitch
Autonomy	>6h
Main current	< 50mAac standby
Battery current	< 250mAdc standby

Mechanical characteristics

Parameter	Value
Outline dimensions	240 x 223 x 90mm
Weight	2,5Kg (with battery)
Colour	Black
Protection grade	IP55 (case closed)

Inside the miniBT it takes place an electronic card that controls all the functionalities, and a battery recess. The battery is kept in charge by the main supply also when the miniBT is powered off.

IV. OPERATING INSTRUCTION

The operations of the miniBT are driven by the user via the keyboard, which has the following keys: numeric keys **0÷9**, direction key **↑** (up) to increment a value, **↓** (down) to decrement, **↵** (enter) to confirm, **←** (backspace) to erase the selected numeric character, **esc** (escape) to go a step back, **menu** to go back to the main menu.

The LCD displays operations and variables, note that the blinking block indicates to introduce a digit.

Main menu

At the power on, the following message appear for a while:

```
Initialisation  
MiniBT-0 Vx.y
```

Then appear the main menu; the bottom line indicates the command achievable simply by pressing **↵**. The options are scrollable (1-2-3-1... o 1-3-2-1...) using the arrows **↑** e **↓**:

```
MiniBT-0 Vx.y  
1 Manual coding
```

```
2 Autom. coding
```

```
3 Line verify
```

The user can enter one of the commands also by pressing the associated number, for example press **3** to activate the line verify menu.

Manual address coding of an element

This function allows the user to modify the address of an element of which the actual one is known.

After the command enter (either by pressing **1** form main menu or **↵** when this command is displayed), the LCD displays:

```
Enter address  
to modify : █
```

The blinking block character **█** indicates the position of the actual digit; this digit can stand for units (if no other digit will be introduced), tens (if only one other digit will be introduced) or hundreds (if other two digits will be introduced) of the variable under editing. In this case the variable indicates the actual address of the element (detector, MCP, module...) that will be modified. Note that if none digit is introduced, miniBT will assume the value zero.

Press **←** to erase last introduced digit (rectification) or **↵** to confirm the address and go to the next step; should the element with that address is not present, a "bip" is produced and the following message will appear for several seconds (after that the visualization goes back to the request of the address to modify):

```
Address xxx  
Not found
```

If the element is present, its LED will blink and the display shows:

```
New address  
tttttt: █
```

The bottom line contains the type of the element and the place to introduce the new address (cursor); after this value is entered press \downarrow to confirm. If the new address is already present on the line, a “bip” is produced and the following message will appear for several seconds (after that the visualization goes back to the request of the new address):

```
Address  
already present
```

If the operation (change the address of an element) completed successfully, this message will appear until either **menu** or **esc** are pressed:

```
Add. yy ttttt  
address assigned
```

Note that the LED of the element *yy* will blink for the time the message is shown.

Every time is requested to choose an address, if a value out of range is introduced a warning message is shown for several seconds:

```
Address out of  
range (0-200)
```

Automatic address coding of an element

This is an effectiveness function useful to address sequentially a lot of elements, especially during a start-up. Thanks to the miniBT interactivity, the user can assign the address to all the elements directly on field without accessing the miniBT, which can be connected to any place of the detection line.

The information exchange between user and miniBT uses the element's LED and the opportunity to get the element in alarm.

After the command enter (either by pressing **2** form main menu or \downarrow when this command is displayed), the LCD displays:

```
Address nbr. 0  
searching
```

At this moment, an element with the address 0 (default address for new elements) is searched either onto the base or the line; when found, miniBT suggests the first free address subsequent the last assigned address during the present session and, anyway, not already present; now the user can see on the display this suggested address or, if he is in the field, it has the information that a new address is ready to be assigned by means of the element's LED blinking:

```
Add. 0      tttttt  
new address :xxx
```

The new address can be confirmed either by pressing \downarrow (if the user is close to miniBT), or by getting the element in alarm (via an apposite tool for the detectors, pressing MCP, module's input activation...). This action inform the miniBT that the new address must be written into the element, a verify can be made by looking the LCD:

```
Add. xxx  tttttt  
address assigned
```

The same time, the element's LED will light up for 10 seconds. At the end of this period, the LED will turn off to indicate the miniBT is gone back to search address 0 for a new operation. Note that if the address of the element to search is not 0, it is possible, at this moment, to press \downarrow , the LCD shows:

```
New address  
to search : █
```

Use numeric keys to enter desired value and confirm with \downarrow .
If the address suggested by the miniBT is not desired, the user can press \uparrow to skip it and display the next one.

Line verify

This function detects how many elements are connected to the miniBT over the line and the local detector base. Furthermore some informations about the elements are reported to the user.

After the command enter (either by pressing **3** form main menu or \downarrow when this command is displayed), the LCD displays:

```
Total addresses  
found :   qqg
```

Where *qqg* indicates the amount of the elements connected to the miniBT. Note that it can take a lot of seconds to reach the real amount of elements. Press \downarrow to display the information of the elements starting from lowest address:

Element in standby state:

```
Add. xxx  tttttt  
state: normal
```

Element in fault state:

```
state: fault
```

Element in alarm state:

```
state: alarm
```

Dirty optical detector:

```
state: dirty
```

Element no more answering:

```
state: no answer
```

During this visualization, the element's LED blinks. Use \uparrow and \downarrow to walk through the elements.

Warnings

Should the current to either the line or the local base exceed a given value, miniBT would cut-off line power for a lot of time and display the following message:

WARNING !
Short circuit

While stand-alone use, if the battery voltage fall down to an insufficient value, every 15 seconds a "bip" is generated and this message appears:

WARNING !
Battery low

V. RECOMMENDATIONS

Battery install/replace

Tools needed: a screwdriver and a 7mm hexagonal wrench.

- Turn off miniBT.
- **Remove main cable.**
- Close cover; turn the miniBT upside down and then remove the four screws.
- Open the cover and remove the metallic frame, the detector base can help in doing it.
- Remove the battery bracket by unscrewing the two M4 nuts.
- Disconnect battery and remove it (if a battery a present).
- Insert a new battery and connect it with the correct polarities: red cable +, black cable -
- .
- Lock the battery with the bracket by screwing the two M4 nuts.
- Place the metallic frame into the plastic case.
- Turn the miniBT upside down and screw the four screws.

WARNING:

This device does not provide any battery circuit breaker when out of charge. When the battery is signalled low the user is strongly recommended to provide either its recharge or replace to avoid a deep discharge that can damage battery.

Recommendations for addressing

For a correct use of miniBT and for the best element's addressing during a fire detection system commissioning, please follow these indications:

- Collect all installation documents (plans, functional descriptions, particular requirements, ...) and the manuals of the whole devices composing the system.
- Preview the elements placing to the panel's lines taking in account installation requirements, panel's limitations and power supply limitation.
- Set the address for any of the element of the installation.
- Either the addressing will be made manually or automatically, stick to any device (and related base, case, ...) the appropriate label indicating the address.
- Factory default element's address is 000.
- Do not place to a line two or more elements with the same address (also if 0) because of the conflicts that will be generated; this will give bad or impossible use of the line.
- Before placing addressable elements onto the line, make sure of the electrical characteristics of the line, especially conductors continuity (also the shield), no short-circuit and no leakage between conductors.