



ETB8646

8" TABLET PC ANDROID 4.4



Instruction Manual

Contents

Welcome	3
Important Notices	4
Keys and Functions	5
I. Getting Started	6
1.1 Turn on/off	6
1.1.1 Turn on	6
1.1.2 Turn off	6
1.2 Lock/unlock the screen (sleep mode)	7
1.3 Connect to computer	7
II. Your Home Screen	7
2.1 Change wallpaper:	7
2.2 Add/delete applications on home screen:	7
2.3 Add widgets to home screen:	8
III. Network Connection	8
3.1 Wi-Fi	8
3.1.1 Turn on Wi-Fi	8
3.1.2 Turn off Wi-Fi	9
3.1.3 Add a Wi-Fi network	9
3.2 Bluetooth	9
3.2.1 Make device discoverable	9
3.2.2 Scan for devices	10

3.2.3 Pair with the Bluetooth device	1 0
3.3 3G Network.....	1 1
3.3.1 External 3G Network	1 1
3.3.2 Internal 3G support.....	1 1
IV. Internet Browsing	1 1
4.1 Internet Browsing.....	1 1
VI. Multi-media Functions	1 2
6.1 Music	1 2
6.2 Video	1 3
6.2.1 HDMI output.....	1 4
6.3 Gallery	1 4
6.4 Camera.....	1 5
VII. Settings.....	1 6
VIII. Trouble-shooting.....	1 8

Welcome

Thank you for choosing this tablet pc.

This guide serves to enable users to get to know and familiar with the product as soon as possible. Here we have made a brief introduction to the key layout and definition in figures and words.

Please refer to this user manual carefully.

Important Notices

- This product is suitable for use in non-tropic areas below 2,000 meters.
- Prevent the tablet pc from falling to the ground or being strongly impacted otherwise.
- Avoid using it in the strong magnetic and strong static environment.
- Please back up your important material at any time to avoid loss.
- Once water or liquid splashes onto the tablet pc, close it immediately and do not use it until it dries out.
- Do not clean the tablet pc with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
- While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

Keys and Functions



- USB Port: for data transferring and power charge
- Micro HDMI Interface: High-Definition Multimedia Interface
- Earphone socket: T transmit the audio signals to loudspeaker or earphone.
- MicroSD card slot: supports MicroSD and MicroSDHC format.
- MIC: for recording voice
- Back camera
- Power button: Press it down to start or close the display.
- Volume+ & volume-
- Speaker

I. Getting Started


1.1 Turn on/off

1.1.1 Turn on

To start your tablet, press and hold the power button for a while. Tap and drag the lock



out of the circle to unlock.

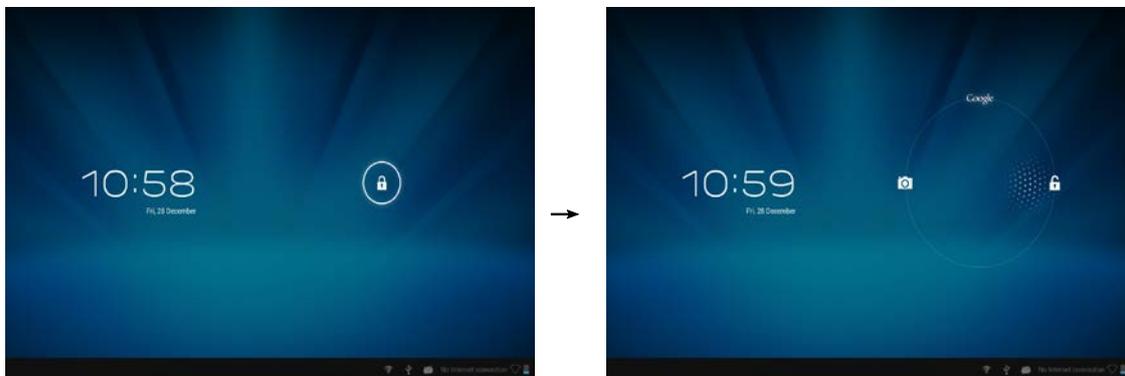

1.1.2 Turn off

To power off your tablet, press and hold the power button, click “Power off” until you see a dialog windows “Your tablet will shut down”. Click “OK” to turn off the tablet.

1.2 Lock/unlock the screen (sleep mode)

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power button. Press it again to wake up the screen.

1.3 Connect to computer

You can connect your tablet to your computer with the supplied USB cable so you can transfer various files.

II. Your Home Screen

2.1 Change wallpaper:

Tap the “Settings” icon on the all apps panel, you will see a pop-up options; Enter into “Display” interface, you can choose wallpaper from Gallery, live Wallpapers or Wallpapers.

2.2 Add/delete applications on home screen:

There are several apps in the home screen, you can also add more frequently-used app icons in this home page and delete some less frequently-used ones.

Tap the app launcher in the top right corner to go to all apps panel, tap and move the app you want to the home screen.

To delete an app from home screen, tap and hold it, and then move it to the remove icon 

2.3 Add widgets to home screen:

Tap all Apps launcher → Tap WIDGETS. There are Analog clock, bookmarks, calendar, Email, and lots of other widgets. Drag the widget you want to the home screen.


III. Network Connection

3.1 Wi-Fi

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free Wi-Fi hotpot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap "scan"

3.1.1 Turn on Wi-Fi

Within the App Panel, tap “Settings” → “Wi-Fi” to turn on wifi.

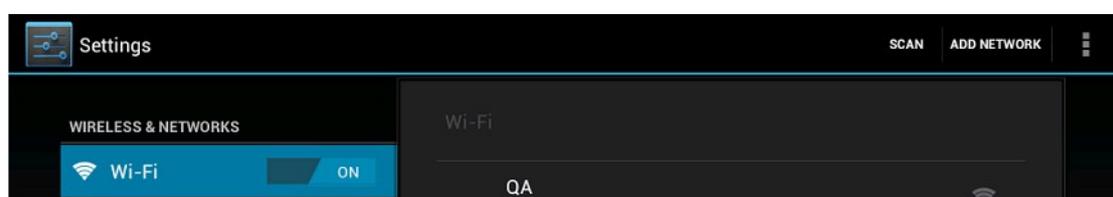

Your tablet lists the networks within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength.

3.1.2 Turn off Wi-Fi

Please turn off Wi-Fi if you’re not using it to save the battery. To turn off Wi-Fi, Tap it again.



3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “settings”. In “settings”, tap “” on the upper right corner. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

3.2 Bluetooth

3.2.1 Make device discoverable

You must pair your tablet with a device before you can connect to it. Once you pair your tablet with a device, they stay paired unless you unpair them.

Under “Settings”, choose “Bluetooth”. Tap Bluetooth to turn on it and tap “Search for devices”. The Bluetooth indicator  then appears in the status bar.

3.2.2 Scan for devices

After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.

3.2.3 Pair with the Bluetooth device

Tap the name of an available Bluetooth device to pair with. In the popup "Bluetooth pairing request" dialog, type a PIN.

If the pairing is successful, your tablet connects to the device.

Example: to transmit a photo

Go to "Gallery", choose a photo to share. Tap any spot on the photo to view a submenu. Tap  icon → , and then choose the device name in the Paired devices list. The photo will then be sent.

You can touch the right icon to unpair the device.

Note: After pairing, it shows under the Bluetooth device "Paired but not connected", but file transmission is still possible.

You can see the received files by touching the right corner icon. At present, the Bluetooth function only supports files transmission. To extend battery life, turn Bluetooth power off when not in use.

3.3 3G Network

3.3.1 External 3G Network

A 3G network is a mobile network that allows high-speed data access and advanced network capacity.

This tablet supports external 3G network by a 3G dongle. You can connect the 3G dongle to micro USB port via the OTG convertor cable. However, this tablet supports some 3G dongles, but not all dongles. If you need a special dongles to support, please check with the shop before you buy it.

3.3.2 Internal 3G support

This tablet does not support internal 3G network. You can try external 3G network if necessary.

IV. Internet Browsing


4.1 Internet Browsing

Before using your browser, make sure Wi-Fi or internet is connected.

In your app panel, Tap the browser  icon to open your browser.

Tap the address bar, the Android keyboard will appear for your entry of keywords or URL.

New tap bookmark this page Open bookmarks


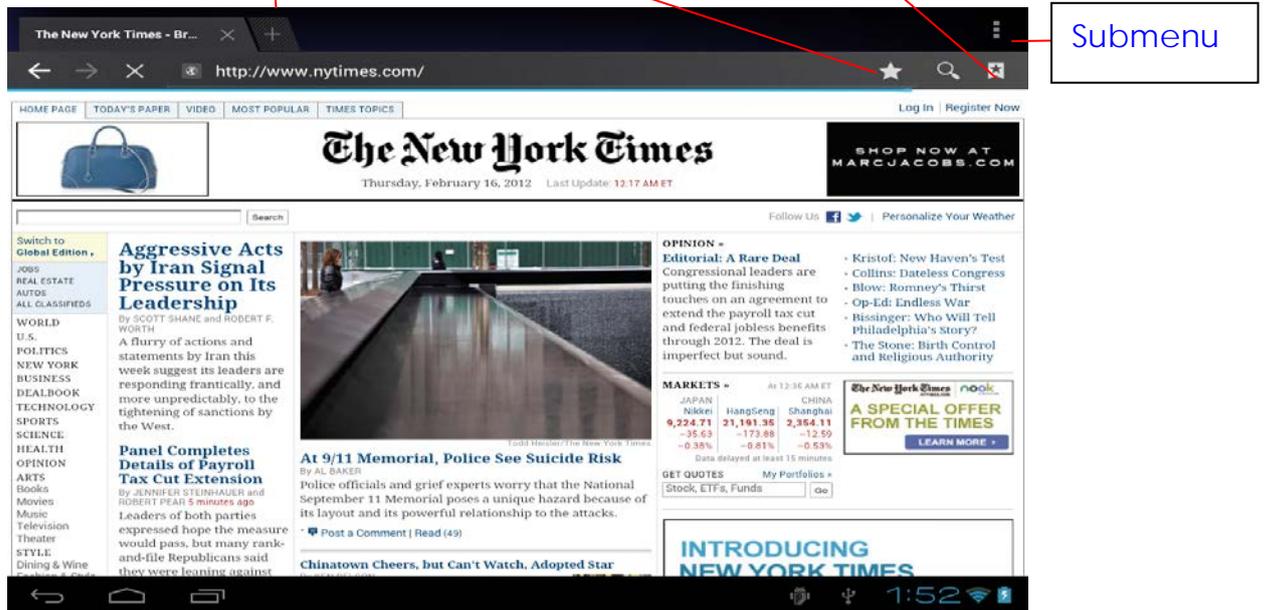


Tap the  icon in the top corner of the browser page to open the submenu.

VI. Multi-media Functions

6.1 Music

 
After loading music into your tablet, tap the music icon  to open the music player. You can select songs by Artist, Albums, songs or Play lists. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

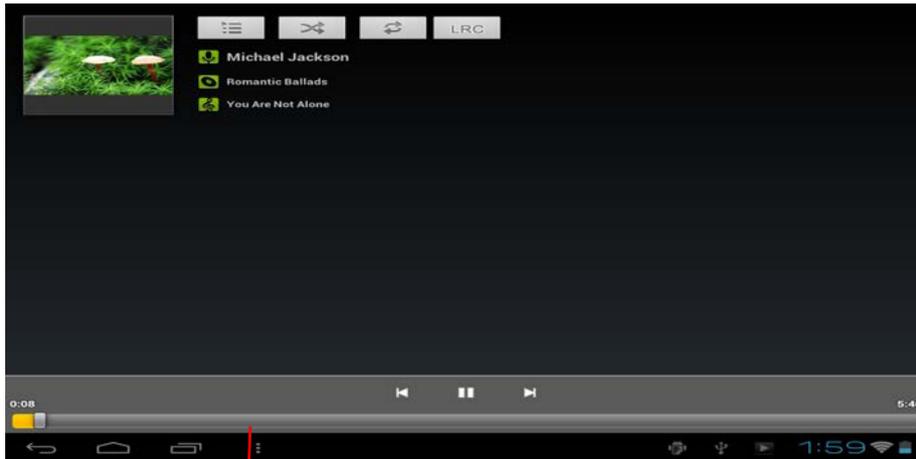

Tap  in the bottom line to open a submenu in music playing page.


6.2 Video

You can play videos saved in your tablet or TF card. To play, tap Movie Studio icon to launch the video player:

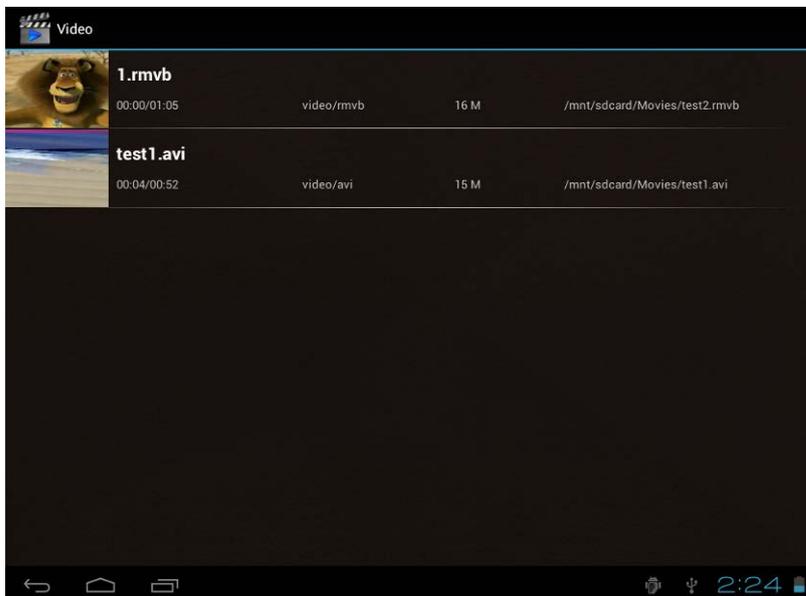

Tap the video you would like to play. Tap the screen to show the video tool bar. You can play back, fast forward, pause your video here. You can also add

bookmark for your video, adjust brightness, or set screen ratio here. Here is the toolbar:

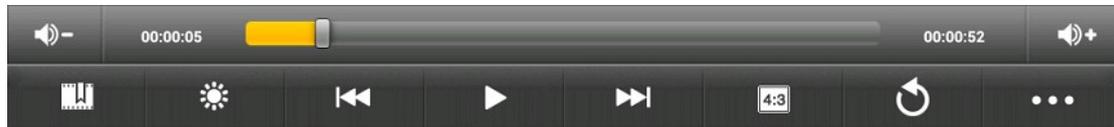

With the Wi-Fi on, you are also able to view an on-line video.

6.2.1 HDMI output

- a. Tap 'Video player' or other video players and play a required movie.
- b. Adjust your TV set and select “HDMI” output
- c. Connect the tablet to your TV via HDMI cable, and wait for a few seconds for your TV set to receive signal.

You can also operate on your tablet while HDMI connected..

6.3 Gallery

You can view, show off, and even edit your digital pictures on the tablet’s full color, high-resolution display. After loading your media, tap Gallery  to display your pictures:



Tap the picture you want to display it, and slide right or left to show other pictures.

Tap the menu icon, you can edit, rotate, crop, or set it as wallpaper.



6.4 Camera



Tap the  icon to open camera. You can take a photo, or a video both by front camera and rear camera.

Note: After you power on your tablet, you can go to camera directly by drag the lock to left.


Note: Auto Focus function, tap anywhere on the camera screen, the camera will focus on the spot you are tapping to. As the picture shows.

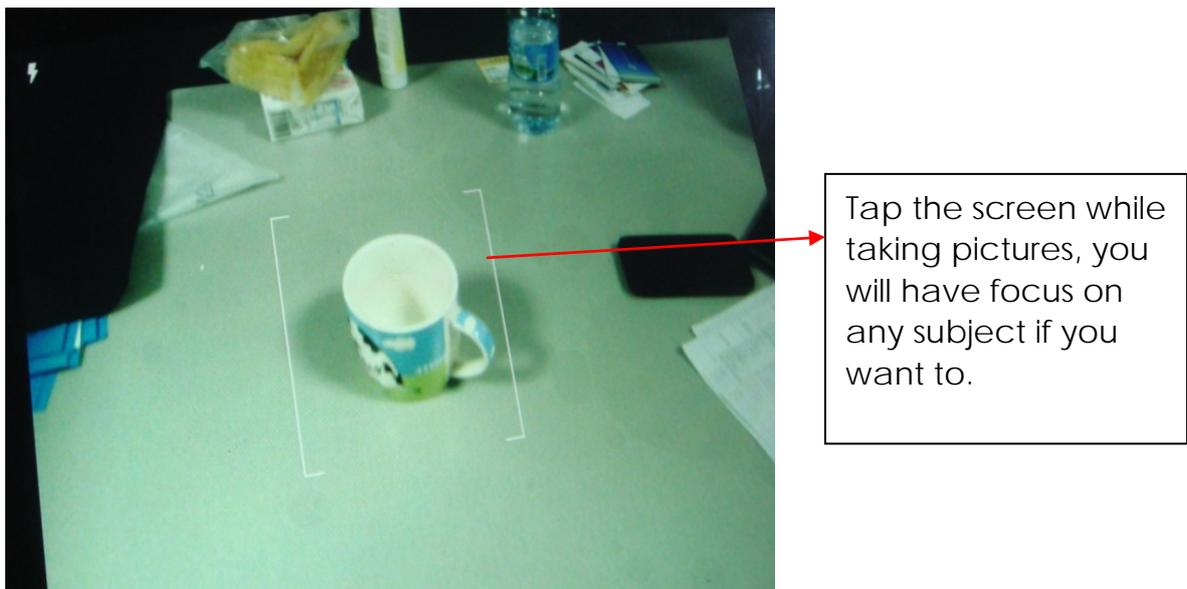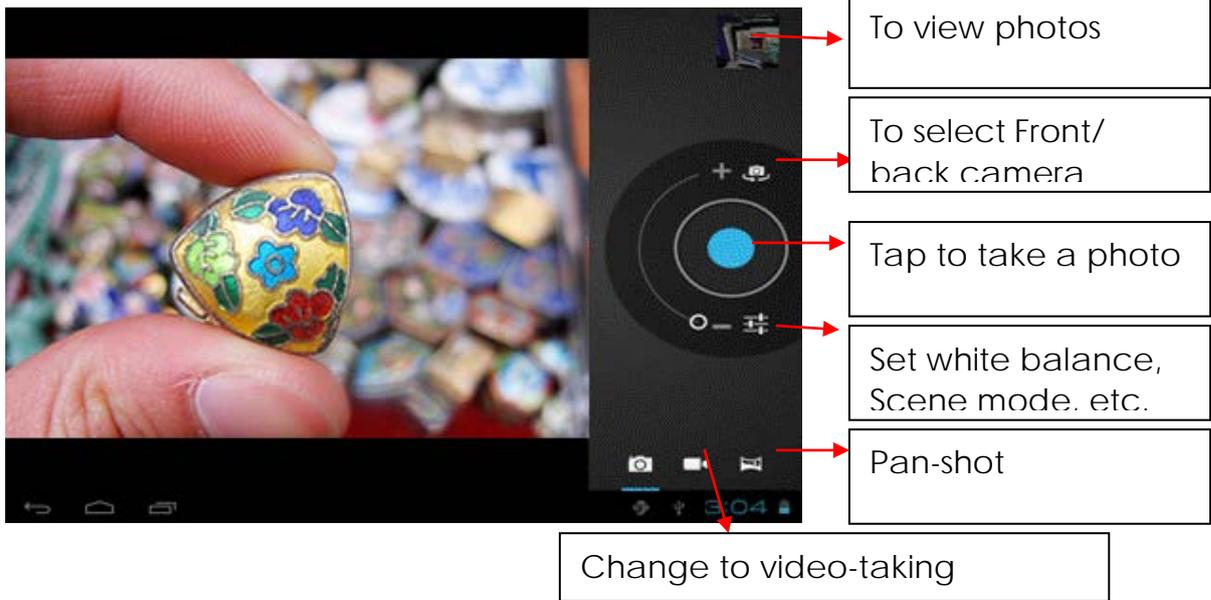

VII. Settings



Tap the "Settings" icon to go to settings. You can check and set wireless & networks, sound, display, storage, Battery, Accounts & sync, security, language, date & time, about tablet, etc.

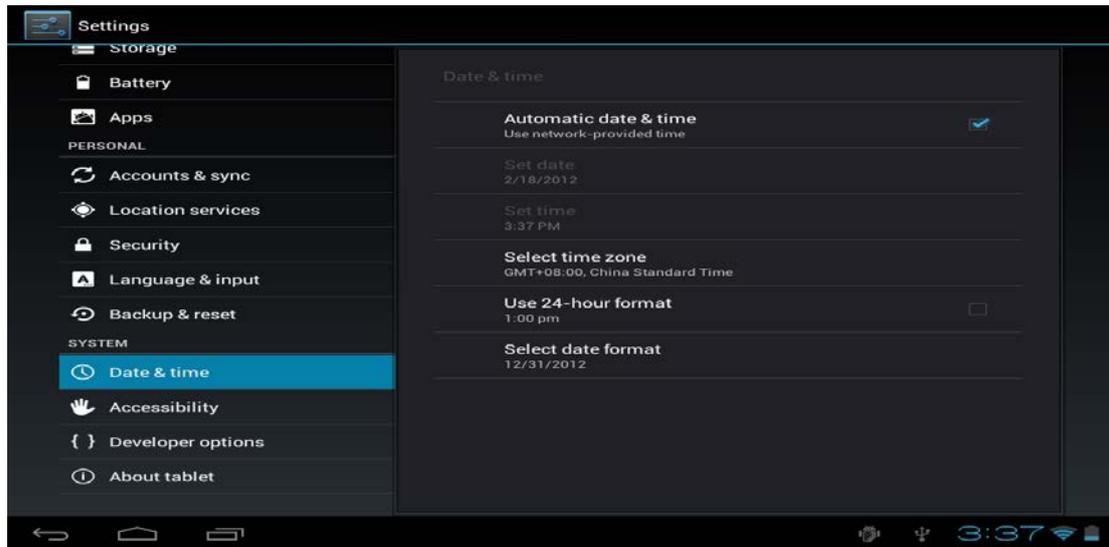

Wi-Fi: tap “Settings” → “Wireless & networks” to turn on wifi and scan. It will show a list of Wi-Fi networks scanned in range. Choose a strong Wi-Fi network to connect. (You may need to input the password).

Bluetooth: Turn on Bluetooth, enable the file transmission

Data usage: You can set Airplane mode, Default SMS app, Tethering & portable hotspot, VPN, Mobile networks.

Sound: turn off touch sound by tapping “sound” — “touch sounds”

Display: To set Brightness, Wallpaper, Sleep time-out, Font size here.

Storage: Check internal storage here. If you insert a Micro SD card, or USB disk, you can check the total and available space for your Micro SD card or USB disk. Please unmount it to safely remove it.

Battery: Check the Battery status here.

Language & input: to set language and keyboard input.

Backup & reset: to go to submenu "back up my data" and "Factory data reset". If you choose factory data reset, all data from your tablet's internal storage will be erased. Choose this option carefully.

About Tablet: To check information about your tablet, such as Model number, android version, etc.

VIII. Trouble-shooting

1. Can not turn on the tablet

Check the tablet's power level; please charge it before booting up.

2. No sound from earphone

Check if volume is set to '0'. Or earphone may be broken, please change for another one.

3. Big noise

Check if there is dust in the earphone or speaker. Check if the file is broken.

4. Application not workable

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

5. How to delete a Google account?

If an account is added, the account is shown in “Accounts & sync” of “Settings”, where you may also add another account. To delete an undesired account, go to “Settings” → “Privacy settings” → “Factory data reset”. Your tablet’s internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.

6. USB unmounted, SD card unmounted

Some times after inserting SD card or USB, it will show on the tablet that “unmounted”, do the factory reset by “setting” – “backup & factory reset”, and then turn off and turn on tablet once again. If fail, you have to upgrade the firmware.

Notice about recycling



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Declaration of Conformity

This product complies with the requirement of below directives:

EMC Directive: 2004 / 108 / EC

Low Voltage Directive (LVD): 2006 / 95 / EC

ErP Directive: 1275/2008/EC

Restriction of Hazardous Substance (RoHS) Directive: 2002/95/EC

R&TTE Directive: 1999/5/EC



EXCLUSIVE IMPORTER IN GREECE:

Amiridis – Savidis S.A.

- 33, Vas. Olgas Street – P.C. 54641 – Thessaloniki, Greece.
Tel: +30 2310-850107, 2310-850108, Fax: +30 2310-867835
- 45 Posidonos St. – P.C. 18344 – Moschato, Athens, Greece
Tel: +30 210 9402064, Fax: +30 210 9402137

www.amiridis-savvidis.gr