 


正面

反面


Android sm@rt TV kit

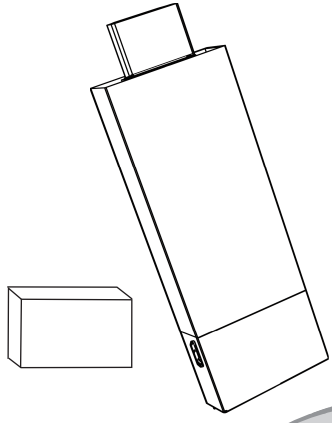

EN

QUICK INSTALL GUIDE


INSTALL INFORMATION

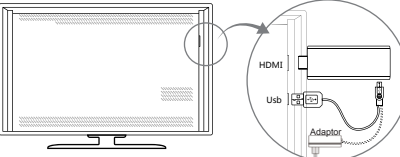

•Normal Condition

Insert the product into TV's HDMI input interface. Connect the product's micro USB port to TV's USB port/Adaptor via USB supply line for power supply.

(*ATTENTION:Make sure the USB/Adaptor power supply can offer 5V/1.5A.If not, please use a 5V/at least 1.5A output AC adapter instead!)

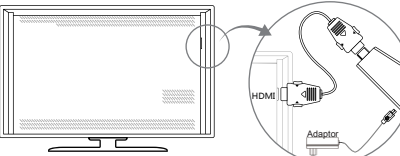

•Special Condition

(NO ENOUGH ROOM FOR THE PRODUCT AROUND THE TV'S HDMI INPUT INTERFACE).

Connect the product to TV's input interface needs to add another HDMI extended cable as above.

!SECURITY INFORMATION

2

Before using the product, please read this manual thoroughly.

The manual contains important security information and tutorials about the product.

!SAFETY WARNING

3

PLACEMENT

- Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.
- Do not expose the unit to direct sunlight and other sources of heat.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind into the unit.
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit.

POWER SUPPLY

- Make sure the USB power supply can offer 5V/at least 1.5A. If not, please use a 5V/at least 1.5A output AC adapter instead.
- Please unplug power supply and aerial plug when the weather is thunder-storm or lightning.
- Please unplug power supply, when there is nobody at home or didn't use over a long period of time.
- Please keep power cord from physical or mechanical damage.
- Please use exclusive power cord, don't modify or lengthen it.
- Please check and ensure AC source is connected with the ground.

Attention:

For better experience in playing media from your USB storage, please note that: 1.To ensure the good compatibility, please make sure to use mobile HDD/SSD from WD/Seagate/Hitachi/Intel; 2.To ensure a flow experience in media playing, please identify the correct media format or use 3rd party media player.

!SAFETY WARNING

4

TEMPERATURE

- Do not place the unit near or over a radiator or a heater register.
- If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours until moisture removed.

HUMIDITY

- Do not expose machine in rain, damp or place near water.
- Ensure the indoor is dry and cool.

VENTILATION

- Keep the ventilation openings clear.
- Ensure that the unit has enough space for ventilation around.

BATTERY

- Please dispose used battery correctly.
- Please don't let kid touch battery, in case of dangerous don't throw battery into fire.

SOFTWARES

- Some softwares for smart phones or unique CPU solutions may not suit for this product.
- Some softwares need unique peripherals to support, like G-sensor, may not suit for this product.

FEATURES

5

Android Dongle is based on Android OS. You can use it:

- Surfing the Internet via Wi-Fi
- Communicate with your friends via SNS applications
- Enjoy movie, music and photo via media player applications


PRODUCT & ACCESSORIES










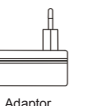

MAIN LAUNCHER

LAUNCHER INTRODUCTION

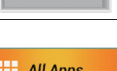

EXAMPLE	DESCRIPTION
	Weather&Time: Click to set area information
	Recommendation: List at most 6 link-windows of recommended apps
	All Apps: Click to enter app list
	Often used apps: It will update the ten most used app icons in recent time.

MEDIA PLAYER

12

The "Music" and "Video" are the media player for local storage. You can play the media on the USB flash memory, MICRO SD-CARD etc.

Video player:

 Enter  Press OK button to select the desired "Video" in the file list, it will playing. If press OK again, the menu will display "Play or pause,Stop, Fast Reverse, Fast forward ect". Press  button to return to the previous menu.

Music player:


 Enter  Press OK button to select the desired "Music" in the file list, it will playing. Press  button to return to the previous menu.

The following table shows the codec or format the product can play (more detail at general outline):

Type	Features
Video (Upper to 1080P)	avi files
Audio	mp3

BROWSER

 13

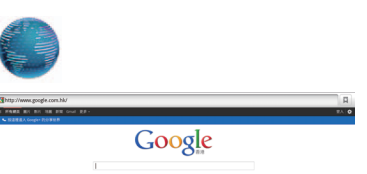

You will use the following key:

•Menu Key: Call out the Browser's menu, include forward, edit bookmark, refresh etc.

•Back key: Back to the last page


•Search key: Call out the search bar for searching or input new web address.

•PG + PG-: You can use the keys to browse up/ down the web page.

•Double click: Double click will zoom in/out the webpage comfortably.

APPLICATIONS

14

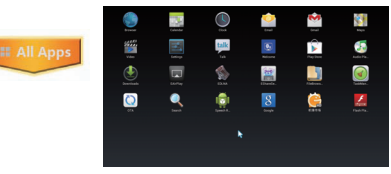

• Install from U-disk/MICRO SD card

1.Open the "File Browser".

2.Choose your U-disk or any other mass storage's folder.

3.Find your application, and press it.

4.Press the install button.

5.You can find the application in "All Apps" after installation.

• Install from Browser

1.Open the Browser.

2.Press search key and input your website address.

3.Download an APK file if there is a link for download this file ("Before download, for a large file you must have your MICRO SD card in the card slot).

4.You can find the file in Downloads or your MICRO SD card folder.

5.Install it use "File manager".

• Install from ApkInstaller

1.Open the ApkInstaller.

2.Find the icon of the application, and enter it.

3.Press the install button.

4.You can find the application in "All Apps" after installation.

◆ Remove Applications

1. Enter SETTINGS

2. Enter "Apps"


3. Find the application you want to remove in tab "All"

4. Enter the icon and press "Uninstall"

5. Press "OK" to confirm uninstall

SETTINGS

15

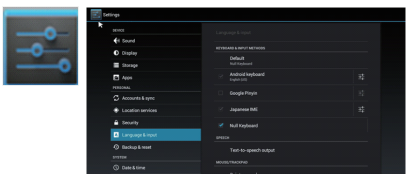

Setup settings	Brief description
Wi-Fi	Wi-Fi ON/OFF Scan Add Network Advanced setting
Display	Output mode: • 1080p • 720p Set your display overscan ratio, Set font size
Apps	Downloaded On SD card Running All
Storage	INTERNAL STORAGE NAND FLASH SD CARD USB STORAGE
Language & input	Language & input KEYBOARD&INPUT METHODS MOUSE/TRACK PAD
Backup&reset	BACKUP&RESTORE Backup up my date Automatic restore PERSONAL DATA Factory data reset
System updates	Local device Online Upgrade Auto Upgrade
Date & time	Automatic date&time Select time zone Use 24-hour format Choose date format
About device	Status Model number Android version Kernel version Build number Legal information

1	2	3	4	5
6	7	8	9	10

对折

1	2	3	4	5
---	---	---	---	---

再扇形折

规格：286mm×206mm-80g道林纸-双面单黑印刷

单位：mm

比例：1:1

注：标注尺寸为制造尺寸。

TOLERANCES (UNLESS OTHERWISE STATED)										(mm)
DECIMALS	0.5 – 3	>3 – 6	>6 – 20	>20 – 30	>30 – 60	>60 – 90	>90 – 120	>120 – 400	>400	
ANGLES	± 0.2	± 0.3	± 0.4	± 0.5	± 0.6	± 0.7	± 0.8	± 1.2	± 2	

文件图号	D68-A08-F15202	版本号	V1.0
本页内容	D68-EN说明书		
设计			
审核			
批准			
		页码	1/1