

HomeTime

V₆ Radio Alarm Clock
iPhone/iPod Docking Station

User Manual

*FM radio alarm clock and dock for iPod&iPhone,
with a backlit LCD to show clock and menu functions*

HomeTime

V₆ Radio Alarm Clock
iPhone/iPod Docking Station

*FM radio alarm clock and dock for iPod&iPhone,
with a backlit LCD to show clock and menu functions*



Catalog

1. Safety Information	①	5-2. Alarm Clock Settings and Operating	⑦
2. Accessory	②	6. Playing Music	
3. Initial Setup		6-1. Playing Your iPod	⑧
3-1. Backup Battery	②	6-2. Playing Auxiliary Source	⑧
3-2. Universal Dock Adapter	③	6-3. FM Radio Operation	⑨
3-3. AC Power Supply	③	6-4. Sleep Mode	⑨
3-4. LCD Backlit Adjusting	③	7. Specification	⑩
4. Button Functions		8. Cleaning and Recycling	⑩
4-1. Buttons on the Unit	④	Others	⑩
4-2. Buttons on the Remote Control	⑤		
5. Time & Alarm Clock Settings			
5-1. Time Settings	⑥		

1. Safety Information

Please read all safety information before proceeding.



WARNING If ignoring safety information and operating incorrectly, it may cause personal injury.

- Please read all instructions before operating the unit.
- Do not take the unit to pieces by yourself.
- Do not place other objects on the top of the unit. Do not apply excessive force to the unit. Do not wrench, cut off and process with the power supply cable.
- Do not place the unit in the humid place or in the water.
- Do not put other accessory into the unit.
- Only use the power supply specified by the manufacturer.
- If incorrect operation causes phenomenon such as deformation, odd smelling, and fuming, please stop using the unit immediately.
- ※ To prevent the risk of short circuit, electric shock, fire disasters and so on, please follow all safety information above strictly.
- ※ When the unit fails working, do not repair the unit by yourself. Please contact technical support group or authorized service personal.



CAUTION If ignoring safety information and operating incorrectly, it may cause harms to personal or other objects.

 
- The unit is precise product. Do not keep or operate it in the conditions below.
 - Shock sites
 - Direct sunlight, high temperature sites
 - Humid sites
 - Excessive dust sites
 - Powerful electromagnetic wave sites
 - Powerful static sites
 - Frequently condensing sites
- Do not touch iPod connector directly with you hand. It may cause damages to the unit and your iPod and also cause data lose because of the static.
- Do not step on the unit or on the power supply cable.

①

2. Accessory

Only use attachments/accessories included in the unit.

Taking care of the accessories when taking out and using them.

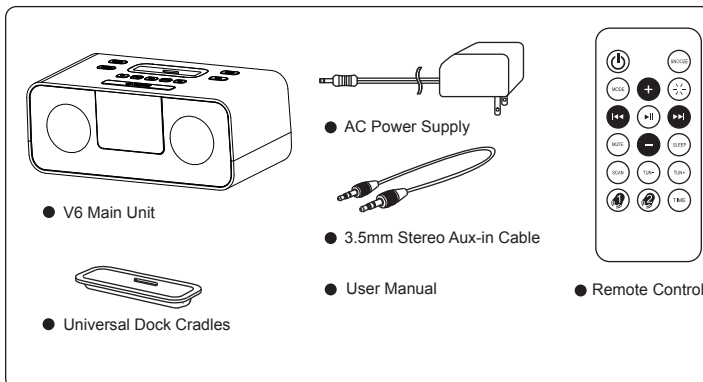


3. Initial Setup

Please install and set the unit by following steps before use.

3-1. Backup Battery

As show to the right, open battery compartment cover located on the bottom of the unit, insert 2 AAA backup batteries.

 - ※ Please install the battery according to the engraved symbols of the positive and negative poles.
- ※ The backup battery is to retain and display the time in the event of a power failure. It can retain the setting for 3 months when power is disconnected.
- ※ Please keep AC power be connected with the wall plug when replacing the backup battery to avoid losing its memory and initial setting.
- ※ Please dispose of the old battery with local battery disposal rules.

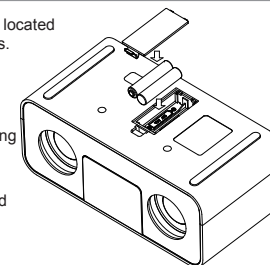

The doohickey of installing the battery


The time of the unit starts from the time when the AC power is connected. After the time setting is finished, then install the battery. This is the best way to get and retain the correct time.

②

3-2. Universal Dock Adapter

The reference table to choose the Universal Dock.


Adapter Cradle	Model	Capacity
8	iPod nano	2GB,4GB
9	5G iPod (with video) / U2 iPod (with video) / iPod classic	30GB/30GB/80GB&120GB
11	iPod nano(2nd generation)	2GB,4GB,8GB
15	iPhone 3G	8GB,16GB
16	iPod touch(2nd generation)	8GB,16GB&32GB
18	iPhone 4G	16GB,32GB

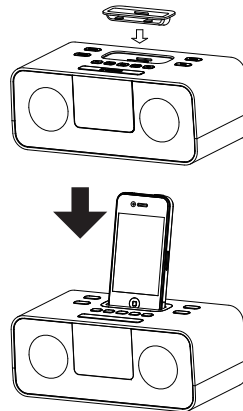 

- ※ Take care of iPod connector when pulling out your iPod.
- ※ When the AC power supply is connected and your iPod is docked, it will charge for your iPod automatically.
- ※ If there is no suitable adapter cradle in the table above, please install the original adapter cradle attached with your iPod. If there is no original adapter cradle, please go to iPod exclusive shop to purchase one.

3-3. AC Power Supply

 Connect the AC power supply into the DC jack on the back of the unit, and then plug the power supply into the wall outlet.

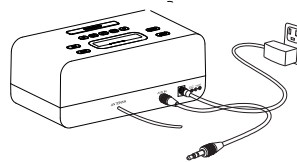

- ※ Please use the matched AC power supply.
- ※ AC power supply: 110V~240V~50/60Hz.

3-4. LCD Backlit Adjusting

When the AC power supply is connected, the LCD displays clock and alarm status. (The unit is under "OFF" status)

Press **SNOOZE** on the unit or on the remote to turn off the backlit LCD.

 
Press **POWER** to turn on the unit. There are 6 brightness level of the backlit LCD.

Press **SNOOZE** on the unit or on the remote to adjust the brightness.

③

4. Button Functions


4-1. Buttons on the unit

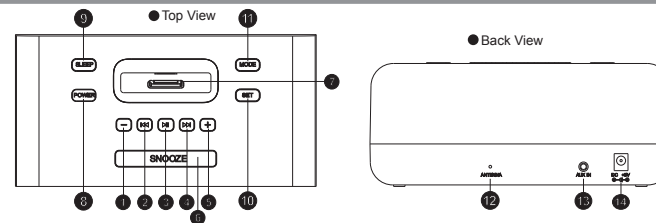

Icon	Operation Instructions
①	Press to volume down when playing. Clock & Alarm setting mode: Press to adjust time and alarm time.
②	Press to skip backwards last song or iPod tracks. FM mode: Press to skip backwards last tune. ※ Manual-scanning radio station mode: Press to adjust the frequency backwards.
③	Press once to play or pause playing. ※ Press and hold to enter FM station auto-scanning.
④	Press to skip forwards next song or iPod tracks. FM mode: Press to skip forwards next tune. ※ Manual-scanning radio station mode: Press to adjust the frequency forwards. ※ Clock & Alarm setting mode: Press twice to switch 12-hour mode and 24-hour mode. ※ Clock setting mode: Presses to choose audio sources.
⑤	Press once to volume up when playing. Clock & Alarm setting mode: Press to adjust time and alarm time.
⑥ SNOOZE	Press to stop alarm for 10-minute snooze. FM mode: Press and hold to enter manual -scanning. Under OFF status or other status: Press to adjust the brightness of the backlit LCD and retain the latest setting.
⑦	iPod Connector
⑧ POWER	Press to power On/Off the unit. Alarm mode: Press once to stop alarm.
⑨ SLEEP	※ Press once to activate the sleep function, press continually to adjust sleep time.
⑩ SET	When the unit is on, press once to set alarm 1; Press it twice to set alarm 2; Press 3 seconds to enter clock setting mode.
⑪ MODE	When the unit is on, press to switch among the modes of iPod, FM and AUX.
⑫	FM Antenna
⑬	AUX/LINE IN JACK
⑭	DC IN

④

 
4-2 Buttons on the Remote Control

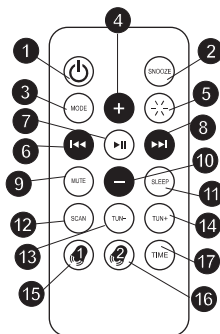

● The remote control battery

Before using, make sure to pull out the "Remove" tab that is protecting the battery. When the remote control stops operating or its range seems reduced, it is time to replace the battery.

 ● Backside of the remote

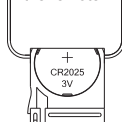

■ To replace the battery

- ① To open, hold the remote with the back facing up and pull out the battery door, take out the current battery.
- ② Replace the battery with a "CR2025" 3-volt lithium cell battery, with the "+" of the battery facing up.

	Icon	Operation Instructions
①		Press to power ON/Off the unit.
②		Press to stop alarm for 10-minute snooze.
③		When the unit is on, press to switch among the modes of iPod, FM and AUX.
④		Press to volume up when playing. Clock & Alarm setting mode: Press to adjust time and alarm time.
⑤		Press to adjust the brightness of the backlit LCD and retain the latest setting.
⑥		Press to skip backwards last song or iPod tracks. FM mode: Press to skip backwards last tune.
⑦		Press once to play or pause playing.
⑧		Press to skip forwards next song or iPod tracks. FM mode: Press to skip forwards next tune. ※ Manual-scanning radio station mode: Press to adjust the frequency forwards. ※ Clock & Alarm setting mode: Press twice to switch 12-hour mode and 24-hour mode. ※ Clock setting mode: Press to choose audio sources.
⑨		Mute function. Press to mute
⑩		Press to volume up when playing. Clock & Alarm setting mode: Press to adjust time and alarm time.
⑪		Press once to activate the sleep function. press continually to adjust sleep time.
⑫		FM Mode: Long press to auto-scan tunes.
⑬		FM Mode: Press to adjust manually backwards frequency.
⑭		FM Mode: Press to adjust manually forwards frequency.
⑮		Press to enter alarm 1 setting.
⑯		Press to enter alarm 2 setting.
⑰		Press and hold for 3 seconds to enter clock setting.

⑤

5. Time • Alarm Settings

5-1 Time Settings

Set clock by following steps

SET Press and hold it for 3 seconds.
※ Press **TIME** on the remote and hold for 3 seconds.

AM/PM Setting

Press **▶▶** to switch among AM/PM/24-hour mode.
(If the clock is under 24-hour mode, AM/PM will not display.)

※ Press **▶▶** on the remote to set.
※ when being not under time setting mode, press it to skip forwards next song.

Clock Setting

Press **+** **-** to adjust time.
※ Press **+** **-** on the remote to adjust time.

SET Press the key on the unit
Press **TIME** on the remote

Minute Setting

Press **+** **-** to adjust time.
※ Press **+** **-** on the remote to adjust time.

SET Press the key on the unit
Press **TIME** on the remote

Setup Completed

※ No operation on any buttons in 10 seconds, the unit will get back to its original status.

⑥

5-2 Alarm Clock Settings and Operating

SET

※ (Alarm 1)

② (Alarm2) on the remote

↓

ON/OFF

↓

SET

※ (Alarm 1)

② (Alarm2) on the remote

↓

Pengaturan [HOUR]

↓

SET

※ (Alarm 1)

② (Alarm2) on the remote

↓

Pengaturan [MENTI]

↓

SET

※ (Alarm 1)

② (Alarm2) on the remote

↓

Pengaturan nada alarm dan pengaturan suara

↓

Pengaturan Selesai

Tekan sekali untuk mengatur alarm.
Tekan dua kali untuk mengatur alarm2.
Alarm 1 berkedip pada waktu yang sama setiap hari.
Alarm 2 berkedip hanya satu kali per pengaturan.

Tekan **[+]** **[-]** untuk beralih pada ON/OFF
※ Tekan **[+]** **[-]** pada remote kontrol untuk beralih pada ON/OFF
Ketika **④** **⑤** mulai berkedip, alarm jam menyala

Tekan **[+]** **[-]** untuk menyesuaikan waktu
※ Tekan **[+]** **[-]** pada remote kontrol untuk menyesuaikan waktu.
Pada mode 1/2jam, tekan **[▶]** pada unit atau **②** pada remote kontrol untuk mengubah antara "AW", "PW", "Mode 24-Jam".

Tekan **[+]** **[-]** untuk menyesuaikan waktu
※ Tekan **[+]** **[-]** pada remote kontrol untuk menyesuaikan waktu.
Tekan **[▶]** untuk beralih antara iPod, FM and Buzzer
※ Tekan **④** pada remote kontrol untuk beralih.
※ Jika memilih untuk bangun dengan suara dari radio FM, maka nada alarnya adalah saluran radio yang dipasang terakhir kalinya.

Tekan **[+]** **[-]** untuk menyesuaikan volume suara alarm
※ Tekan **[+]** **[-]** untuk menyesuaikan volume suara.
※ Jika memilih untuk bangun dengan suara buzzer, maka tidak diperlukan pengaturan volume suara.

7

● SNOOZE

※

SNOOZE

⑤

▶

● Stop Alarm

④

▶

※

※

※ Pay attention! If AC power supply is not connected, alarm clock will not work.

6. Playing Music

6-1. Playing Your iPod

①

②

③

④

MODE

⑤

POWER

③

④

⑤

6-2. Playing Auxiliary Source

①

②

③

④

※

MODE

④

⑤

⑥

⑦

POWER

③

④

⑤

8

6-3. FM Radio Operation

Confirm the place where you live can receive signal firstly before listening FM radio station.

Two ways of scanning radio station: Auto-scan Radio Station and Manual-scan Radio Station.

※ The frequency of the unit starts form 76~108MHz.

Auto-scan Radio Station

- ① Check the status of the unit. If it is under "OFF" staus, Press **[POWER]** on the unit or **[⏻]** on the remote to turn on the unit.
- ② Press **[MODE]** on the unit or **[MODE]** on the remote to enter FM mode and confirm the FM icon apperas on the display.
- ③ Press and hold **[▶|]** on the unit or **[SCAN]** on the remote for three seconds to auto-scan radio station and store the scanned stations accordingly.
- ④ When auto-scanning is finished, it goes back to play the 1st station stored. Press **[◀|▶]** to select the station (Press **[◀|▶]** on the remote).

Manual-scan Radio Station

- ① Check the status of the unit. If it is under "OFF" status, Press **[POWER]** on the unit or **[⏻]** on the remote to turn on the unit.
- ② Press **[MODE]** on the unit or **[MODE]** on the remote to enter FM mode and confirm the FM icon appears on the display.
- ③ Press and hold **[SNOOZE]** on the unit or **[SNOOZE]** on the remote for three seconds to manual-scan radio station. The "FM" begins to flash.
- ④ Press **[◀|▶]** on the unit or **[TUN|TUN]** on the remote to adjust frequencies at 0.1MHz intervals.
- ⑤ Press **[SET]** on the unit or **[SCAN]** on the remote to store the scanned station.
- ⑥ No operation on any keys in 5 seconds, it exits manual-scanning. The "FM" begins to flash.
- ⑦ When manual-scan radio station is finished, press **[◀|▶]** on the unit or **[◀|▶]** on the remote to select the station.

6-4. Sleep Mode

Sleep function to turn off iPod playing and FM radio station automatically at the time set by you. When setting the sleep mode, the unit should be on. Press **[SLEEP]** on the unit or **[SLEEP]** on the remote to adjust the sleep time intervals at 15,30,45 and 60.

※ To shut off sleep function, press **[SLEEP]** on the unit or **[SLEEP]** on the remote to choose sleep time intervals at [00].

※ Quickly Press **[SLEEP]** on the unit or **[SLEEP]** on the remote to see the remaining sleep time when the unit is on.

7. Specification

Parts of the unit	
Power supply	AC power supply (input:100~240V AC, output:5V1.5A DC)
Backup battery	2 X AAA (battery)
Audio cable	3.5mm stereo aux-in cable
Output power	3W x 2, 16 levels stereo volume (1~16)
Size . weight	200(W) X 100(D) X 80(H)mm 0.66kg
Alarm/Clock	
The number of alarm clock	2 (Alarm 1 works at the same time of each day, and alarm 2 works only one time per setting). snooze (10-minute).
Alarm audio sources	iPod, FM radio, Buzzer
Set sleep time	15, 30, 45, 60 minutes
Brightness level of the backlit LCD	6 levels
FM Radio	
FM frequency range	FM76.0~108.0MHz
Preset radio stations	30
Antenna	External antenna
Others	
iPod connector	30pin connector
Charging for iPod	5 V

8. Cleaning and Recycling

If cleaning is required, use a soft dry cloth. If necessary, please use a damp cloth qithout solvent.

When recycling the plastic, electronic and metal parts of the unit, please act accordingly to your local rules.

Others

When the unit is working, it will not influence other electronic products around in generally. If causing noises to your TV, radio and other electronic products, please adjust the distance between the unit and other electronic products.