GEF/UNDP/IMO GLOBAL BALLAST WATER MANAGEMENT PROGRAMME



BALLAST WATER RISK ASSESSMENT

(Activity 3.1)

USER GUIDE

(v1.4)

for the

BWRA Database/GIS System

PREFACE

SOFTWARE LICENCE REQUIREMENTS

The Global Ballast Water Management Programme (GloBallast Programme) is a cooperative international initiative of the Global Environmental Facility (GEF), United Nations Development Programme (UNDP) and International Maritime Organization (IMO). Legal use of the Ballast Water Risk Assessment (BWRA) Database and associated software requires, at a minimum, single-station licenced applications provided by licensed distributors of:

- Microsoft's Windows 2000, MS Access 2000 and MS Excel 7 (or higher versions).
- ESRI's ArcView 3.2
- Primer-E Pty Ltd's PRIMER v5.

Such licences have been obtained for Pilot Country participants of Activity 3.1 of the GloBallast Programe, and have been licensed to either the IMO or specific Country Focal Points (CFPs) upon written instructions of the IMO to URS Australia Pty Ltd and Meridian-GIS Pty Ltd.

COPYRIGHT AND PROPRIETARY RIGHTS

The Ballast Water Risk Assessment (BWRA) Database and associated interfaces, GIS maps and User Guide have been developed by URS Australia Pty Ltd and Meridian-GIS Pty Ltd for the specific purpose of BWRA training and evaluation by pilot country participants of Activity 3.1 of the GloBallast Programme, as administered by the IMO.

The proprietary rights to modify, make copies or otherwise distribute all or parts of the BWRA Database or its associated interfaces, GIS maps and User Guide are vested with the IMO and its Programme Coordination Unit (PCU), URS Australia Pty Ltd and Meridian-GIS Pty Ltd under international copyright law and written contract.

Any person or organisation not directly associated with Activity 3.1 of the GloBallast Programme who obtains a copy of the Database, its GIS interfaces, Maps or User Guide for commercial research, commercial evaluation or commercial use without prior written permission from the IMO (globallast@imo.org) is liable to prosecution.

The IMO-PCU, URS Australia Pty Ltd and Meridian-GIS Pty Ltd uphold the right to modify the BWRA software and User Guide without notice.

Global Ballast Water Programme Programme Coordininating Unit 4 Albert Embankment LONDON SE1 72R United Kingdom globallast@imo.org (contact re. administrative and BWRA system licence queries) URS Australia Pty Ltd Level 3, 20 Terrace Road EAST PERTH Australia WA 6004 robert hilliard@urscorp.com (contact re. User Guide and BWRA technical queries) Meridian-GIS Pty Ltd PO Box 295 WEST PERTH Australia WA 6872 <u>chris@meridian-gis.com.au</u> (contact re. GIS queries)

INTERPRETATION AND APPLICATION OF BWRA OUTPUTS

The BWRA Database software has been developed to provide a 'first-pass' risk assessment for training, demonstration and evaluation purposes. The accuracy and reliability of its output depends heavily on the quality of data entered from ship's Ballast Water Reporting Forms, published and unpublished reports, and inputs from marine scientists. Responsibilty for applying the BWRA database and/or its results for any ballast water management purpose by a Pilot Country rests with the Country Focal Point (CFP) of that country.

Table of Contents

1.	INTR	RODUCTION	1
	1.1 1.2 1.3 1.4	BWRA System OverviewRationale for 'First-Pass' Risk Assessments	2 3
2.	BW F	REPORTING FORMS – DATA ENTRY AND MANAGEMENT	5
	2.1	Database Overview	
	2.2	Checking and Avoiding Errors	
	2.3 2.4	Mandatory Data Required by Database Entering the Vessel Visit and Ballast Tank Information	
	2.4	Editing and Printing the Ship Visit Records	
	2.6	Database Management	
3.	USIN	IG THE ARCVIEW GIS	19
	3.1	GIS Scope and Technical Assistance	
	3.2	Developing the Port Map	
	3.3	Structure of the World Bioregions Map	23
	3.4	Linking the ArcView GIS to the Access Database	
	3.5	Displaying the BWRA Results	24
4.	RISK	COEFFICIENTS AND FACTORS FROM BWRF DATA	28
	4.1	BW Discharge Frequency (C1 Risk Coefficient)	
	4.2	BW Discharge Volume (C2 Risk Coefficient)	
	4.3	Risk Reduction Factors (R1 and R2)	30
5.	ENV]	RONMENTAL MATCHING COEFFICIENT	
	5.1	Overview of the C3 Coefficient	
	5.2	Collating the Port Environmental Data	
	5.3 5.4	Managing the Port Environmental Data with Excel	
6.		SPECIES COEFFICIENT (C4)	
	6.1	Calculation of C4	
	6.2 6.3	Using the World Bioregions	
7.	RUN	NING THE BW RISK ASSESSMENT	
	7.1	Overview	
	7.2	Data Requirements for a Reliable Assessment	
	7.3 7.4	Importing the Environmental Matching Coefficient (C3)	
	7. 4 7.5	Displaying and Exporting the BWRA Results	
	7.6	Forward Risk Assessment	
8.	FVΔI	UATING THE BWRA RESULTS	52
U .		· · · · · · · · · · · · · · · · · · ·	رد

LIST OF APPENDICES

- 1 BW Risk Assessment Terminology and Methods
- **2 UN Country Codes**
- 3 Use and Origin of the World Bioregions
- 4 Creating an ODBC Connection between Database and GIS
- **5** Glossary of Maritime Jargon and Ballasting Factors
- **6** IMO Ballast Water Reporting Form

1. INTRODUCTION

1.1 BWRA SYSTEM OVERVIEW

URS Australia Pty Ltd and Meridian-GIS Pty Ltd have produced this User Guide to help dataentry operators and managers use the computer system developed for the Ballast Water Risk Assessment (**BWRA**) of the GEF-UNDP-IMO Global Ballast Water Programme (GloBallast Activity 3.1; see http://globallast.imo.org/ for details and Pilot Country BWRA reports).

A major objective of Activity 3.1 was to provide, for each Demonstration Site, a user-friendly Database-GIS system that can manage and integrate key shipping, environmental and risk species data for undertaking 'first-pass' risk assessments.

The BWRA Database is operated by MS Access 2000 and allows users to:

- (1) Store, edit and manage all data recorded on IMO BW Reporting Forms (Task 5 of BWRA Activity 3.1).
- (2) List all source ports from which BW is imported by the demonstration site and tabulate the frequencies and amounts of ballast water discharged from each these ports (Tasks 2 and 3 of BWRA Activity);
- (3) Interact with Excel and PRIMER applications for calculating, storing and using results from multivariate environmental similarity analysis (Task 6 of BWRA Activity).
- (4) Store and edit the types, regional locations and status information of risk species which have been transferred between ports by ships' ballast water and other vectors (Task 8 of BWRA Activity).
- (5) Undertake 'first-pass' risk assessments using a semi-quantitative method that minimises subjective input¹ (Task 9 of BWRA Activity).


The graphical information system (GIS) is operated by ArcView 3.2, and allows users to:

- (6) Map and display all coastal and marine resources (biological, social/cultural and commercial) in and around the demonstration port that might be impacted by introduced marine species (Task 1 of BWRA Activity).
- (7) Map and display the de-ballasting and ballasting patterns in and around the demonstration port including locations, frequencies and volumes of ballast water discharges and uptakes (Task 2 of BWRA Activity).
- (8) Display, in a convenient colour-graphic style, the:
 - (a) location of all source ports from which BW is imported (Task 3 of BWRA Activity);
 - (b) location and frequency of departures to all potential 'destination ports' (= next ports of call) to which ballast water is exported (Tasks 4, 11 of BWRA Activity);
 - (c) environmental similarity between the demonstration port and its various source and destination ports (Task 7 of BWRA Activity);

see Appendix 1 for a summary description of qualitative, semi-quantitative and quantitative methods of risk assessment.

- (d) the types of risk species present at the source ports and demonstration port that might be introduced either to the demonstration site or exported to its destination ports, respectively (Task 8 of BWRA Activity); and
- (e) the five levels of relative risk (= very low, low, moderate, high, very high) posed by each source port for the introduction of unwanted species to the demonstration site, based on its present pattern of trade (Tasks 9 and 11 of BWRA Activity).

This User Guide also explains how to perform the multivariate environmental similarity analysis (Task 6 of the BWRA Activity) using the PRIMER statistical package. The following graphic shows the complete BWRA computer system described in this User Guide:

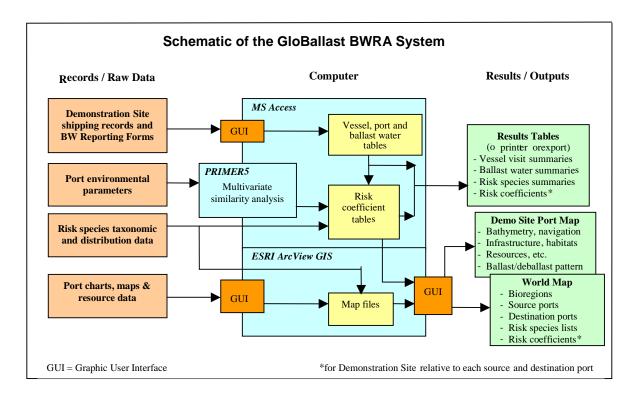

1.2 RATIONALE FOR 'FIRST-PASS' RISK ASSESSMENTS

Current IMO BW management guidelines provide port states significant flexibility in determining the nature and extent of their national BW management regimes. This flexibility is warranted given that nations are still experimenting with different approaches. Thus a port state may wish to apply its management regime uniformly to all vessels arriving with ballast water, or it may wish to apply a more selective regime by attempting to identify those trading routes and/or vessels which have a significant chance of introducing unwanted aquatic species.

The uniform approach offers the advantage of a simple programme administration, in that there are no judgements to be made (or justified) by the port state regarding which vessels must participate. It also requires minimal information management and offers more protection from unexpected, novel invaders. The primary disadvantages of the uniform approach are:

(1) it causes considerable costs to vessels which otherwise might not need to take action;

(2) because all vessels are involved in undertaking the required BW control measures, compliance monitoring costs by the port state will be high and inordinate berthing and cargo loading delays may be experienced.

A selective (risk management) approach can reduce the number of ships subject to ballast water controls and compliance monitoring, and is also attractive to nations that wish to avoid introductions of particular harmful species, such as toxic dinoflagellates. If fewer restrictions are placed on 'low risk' vessels, then more time and funds will be available for applying more rigorous measures on ships deemed as 'high risk'. The disadvantages of the selective approach are:

- (1) it requires the port state to implement an information management system whose effectiveness depends on the quality of the supporting information, computer systems and management infrastructure;
- (2) it requires an organized, defensible means of evaluating the risk posed by each route or vessel.
- (3) it may leave the port state more vulnerable to introduction risks from non-targeted or unknown species.

To help the pilot countries evaluate the choice of adopting either a uniform or selective approach, the GloBallast Programme included a 'first-past' BWRA for their demonstration sites (Activity 3.1). The assessment undertaken for each of these sites used the same Access-ArcView system described in this User Guide. The system allows operators to identify shipping arrival patterns and sources of 'imported' ballast water (Section 4), and gives an indication of the relative risk posed by each trading route by integrating this information with source port/demonstration site environmental similarity (Section 5) and the regional locations of risk species (Section 6).

1.3 IMPORTANCE OF GIS COMPONENT

The GIS component is invaluable for graphically displaying key information and results, in a user-friendly and interactive fashion, using its Port and World maps. It is possible to collate all the shipping, environmental and species data and calculate the first-pass risk assessments without installing or using the ArcView GIS. However, checking and interpreting the results in the large output tables produced by the Access database is difficult and time-consuming. Displaying results with ArcView GIS helps results checking and evaluation, and it provides convenient graphic outputs for BWRA demonstrations and training.

It is also possible to link the outputs from the Access database to other GIS packages, such as ArcInfo or MapInfo. However, the ESRI *ArcView 3.2* has been used for the following reasons:

- it is an affordable, widely used, well-tested and stable platform for the Windows operating system.
- it remains a *de facto* industry standard for GIS tasks that is well supported by ESRI and the global user community (various types of geographic files and data produced by ERSRI and ArcView users are easy to acquire from the web and share).
- there is excellent product and 'distance' support, including a wide variety of help and training resources on the internet.
- it is easy to customise its user interface and tailor its functionality, therefore permitting an uncluttered application that facilitates BWRA training, use and demonstration.

1.4 SYSTEM DEVELOPMENT AND ACKNOWLEDGEMENTS

The system was developed by the following team at URS Australia Pty Ltd and Meridian-GIS Pty Ltd:

Dr Rob Hilliard (Tteam leader, and calculation and treatment of risk coefficients)

Mr Chris Clarke (BWRA Database/GIS integration and GIS interfaces)

Mr Christopher Stevens (BWRA Database customisation and Graphic User Interfaces)

Mr John Polglaze and Cmdr Terry Hayes (BW Reporting Form – BWRA Database compatibility)

The following people assisted with 'hands-on' evaluations of various components of the developmental versions, and are thanked for their useful suggestions and information inputs:

Dr Boris Alexandrov, Institute of Biology of Southern Seas [Odessa Branch], Ukraine National Academy of Science, Odessa, Ukraine.

Dr AC Anil, National Institute of Oceanography, Dona Paula, Goa, India.

Mr Roman Bashtannyy, Shipping Safety Inspectorate, Ministry of Transport, Odessa, Ukraine.

Ms Letitia Greyling, National Ports Authority, Johannesburg, South Africa.

Mr Rob Healy, Meridian-GIS Pty Ltd, Perth, Australia.

Dr Andréa de O.R. Junqueira, Instituto de Biologia, Universidade Federal do Rio de Janeiro, Brazil.

Mr Victor Khmelevskiy, Sea Commercial Port of Odessa, Odessa, Ukraine.

Mr Daniel Lins Menucci , Agência Nacional de Vigilância Sanitária, Gerência Geral de Portos e Fronteiras, Brasilia.

Mr Alexandre de C. L. Neto, Programa GloBallast, Diretoria Portas e Costas, Rio de Janeiro, Brazil.

Dr Nikolay E. Pavlenko, Institute of Transport Medicine, Odessa, Ukraine.

Mr Naseer Kayvan Rad, Ports & Shipping Organisation, Tehran, IR Iran.

Mr Liu Yan, Maritime Safety Administration [Liaoning Province], Dalian, PR China.

The base layer of the World Bioregion Map and advice on risk coefficient options was kindly provided by Dr Chad Hewitt, CSIRO Marine Research (now at Marine Biosecurity, Ministry of Fisheries, Wellington, New Zealand) The following are also thanked for their review and improvements to the World Bioregion Map and/or provision of risk species information:

Mr Adnan Awad, GloBallast Programme, Cape Town, South Africa.

Dr Marnie Campbell, Campbell & Associates, Perth, Western Australia.

Dr Steve Coles, Bishop Museum, Honulu, Hawaii, US.

Dr Flavio Fernandes, Instituto de Estudos do Mar Almirante P-Moreira, Arraial do Cabo, Brazil.

Dr Luciano Felício Fernandes, Universidade Federal do Paraná, Brazil.

Dr Gustaaf Hallegraeff, University of Tasmania, Hobat, Australia.

Dr Pat Hutchings, Australian Museum, Sydney, Australia.

Dr Di Jones, Western Australian Museum, Perth, Australia.

Dr John Lewis, Defence Science and Technology Organisation, Melbourne, Australia.

Dr Wang Lijun and Mr Jiang Yuewen, National Marine Environment Protection & Monitoring Centre, State Administration of Oceanography, Dalian, China.

Dr Barry Russell, Museum of the Northern Territory, Darwin, Australia.

Dr S Sawant, National Institute of Oceanography, Dona Paula, Goa, India.

Dr Fred Wells, Western Australian Museum, Perth, Australia.

Dr Vahid Yavari, University of Ahvaz, Ahvaz, IR Iran.


Professor Y. Zaitsev, Institute of Biology of Southern Seas [Odessa Branch], Ukraine National Academy of Science, Odessa, Ukraine.

2. BW REPORTING FORMS – DATA ENTRY AND MANAGEMENT


2.1 DATABASE OVERVIEW

The Database can store all information provided in all cells of the standard IMO Ballast Water Reporting Form (**BWRF**; Appendix 6). Entering and saving the data from a single BWRF creates a new '**Ship Visit Record**' in the Database. The Database also allows the Deadweight tonnage (DWT) and berth of the visiting ship to be part of this record (this information is not requested in the present IMO BWRF, although the '*Discharge Location*' cell of this form can be used to record which terminal or berth the ship intends discharging BW; Appendix 6).

The graphic user interfaces (GUIs or 'windows') for adding and for editing or printing the ship visit data are similar. The data input window is opened by clicking the 'Add New Ship Visit Record' button on the main menu. To locate a previously saved Ship Visit Record (for editing or printing), click on the 'Edit/Print Ship Visit Records' button in the main menu.

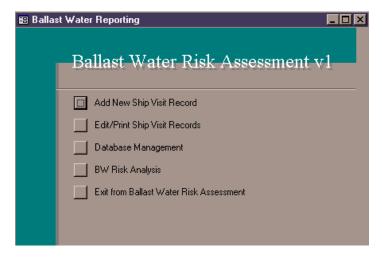

Both the 'Add' and the 'Edit/Print' Ship Visit Record windows have three 'tabs' which open subwindows (the tabs are labelled '**Vessel Information**', '**Ballast Water Tanks**' and '**Ballast Water History**'). The three sub-windows follow the same structure of the IMO standard BWRF (Appendix 6). This allows the BWRF data to be entered and/or edited conveniently.

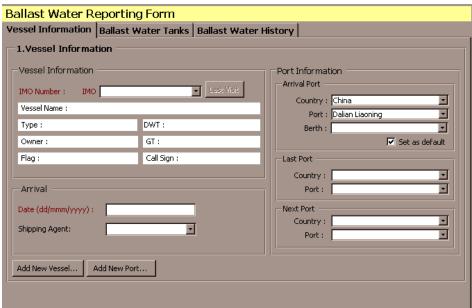

It is important to recognise that some BWRFs issued by Port States or used by shipping companies may not be <u>exact</u> replicas of the IMO BWRF. These forms may contain a different number of questions, and/or the questions may be located on different places on the form. Extra care is required when entering data from different types of BWRFs, to ensure the information is entered into the correct data entry-field of the Input interface.

2.2 CHECKING AND AVOIDING ERRORS

BWRFs handed to Port Officers without any checking system are very likely to be incomplete and/or contain errors. These errors usually represent mistakes or misunderstandings by the ship's officer or agent when filling out the form. Data-Entry Operators need to use their experience and judgement when entering BWRF records, and must not enter information into the Database if it is clearly wrong or illogical. There are four types of errors:

- (a) Missing information (empty cells on the BWRF);
- (b) Illegible (unreadable) and misspelled information (e.g. from a poor photocopy, fax or bad writing, misspelled port or ship names);
- (c) Factual mistakes in the BWRF data (including illogical dates, conflicting BW volumes, BW tank numbers, etc); and
- (d) Transcription errors made by the Data-Entry Operator (when entering or editing the BWRF data).

(a, b) Missing and Unreadable Information

These errors are common and will always occur unless adequate BWRF checking procedures have been implemented at the Receiving Port. Much of the critical information about a particular ship can be found or checked if the Data-Entry Operator has access to a recent *Lloyds Ship-Finder* CD (as provided by the GloBallast PCU to the Demonstration Sites). International Port Guides (e.g. the *Fairplay Ports Guide* CD or hard cover directory) are also invaluable for checking the correct spelling of source port and destination port names, their UN port codes and geographic coordinates (all of which are used by the Database).

Where the BW discharge volume is missing, unreadable or illogical, an Excel file is available in the **Utilities Folder** (**Estimating BW discharges from port records.xls**) for estimating typical discharge volumes for different vessel types, based on their deadweight tonnage (DWT) and cargo-loading/unloading behaviour. DWTs can be found in the *Lloyds Ship-Finder* CD for all listed ships.

(c) Factual and Logical Errors

These BWRF errors typically comprise conflicting information with respect to the:

- Logical sequence of BW Source, Exchange, Ship Arrival and Intended Discharge dates;
- Number of Ballast tanks containing BW (versus the ship's Total Number of BW Tanks);
- Ballast Tank volumes declared for intended discharge, versus the ship's Total BW Capacity, its DWT and its cargo-loading requirement at the Receiving Port.

Care is needed to interpret and enter all dates correctly. For example, "01-02-03" could be 01-Feb-2003, or 02-Jan-2003, or 03-Feb-2001, depending on the date format system (i.e. typical European, American and Asian respectively). It is therefore important to check if <u>all</u> dates written on any BWRF conform with the Database's fixed **dd/mmm/yyyy** format.

Apart from checking the dates on a BWRF, Data-Entry Operators must also check the logical sequence of the BW source date, BW exchange date, the ship arrival date and the intended (or known) BW discharge date. It is obviously impossible for a ship to arrive or discharge its BW before it has taken it up, or made an exchange. For example, if the BW tank exchange date/s are recorded on the BWRF, these <u>must</u> be after the BW source date (date of uptake) and before the ship's arrival date and BW discharge date.

Data-Entry Operators must be alert for these surprisingly common errors, which are often caused by haste, unfamiliarity and confusion when a ship's officer is completing the BWRF.

Dates recorded on the BWRF for the BW uptake (and subsequent possible BW exchange at sea) must also be consistent with the <u>duration</u> of the ship's voyage from the BW source port to the Arrival Port, and the size and number of filled BW tanks. Data-Entry Operators should remember that even small ships require 18 hours or more to complete a BW exchange of all tanks. For large bulk carriers and crude carriers that use the x3 'flow-through' method, a complete BW exchange can take 4-6 days or more, depending on weather and sea state.

(d) Transcription Errors

These errors can be made by the Date-Entry Operator when entering the data, including accidental mis-typing ('typos'). Transcription errors include the Data-Entry Operator misunderstanding the 'day-month-year' sequence (date format) in the dates on the BWRF.

The date format used by a ship's officer may not be same as the fixed format used by the BWRA Database (**dd/mmm/yyyyy**; see Section 2.4). Date formats on BWRFs will vary according to the origin and training of ship's officers, and may be ambiguous. For example, a date may be written as "*mm/dd/yy*" (e.g. by North American officers), "*yy/mm/dd*" (e.g. by Chinese, Korean or Japanese officers), or "*dd/mm/yy*" (e.g. by officers from European and Commonwealth countries).

If any piece of BWRF information is illogical or highly questionable, but cannot be checked or corrected from other data sources, it is better <u>not</u> to enter it (especially if the information is not a **Mandatory** item; see Section 2.3).


Most GloBallast Pilot Countries began implementing a BWRF checking system to reduce the incidence of incomplete/incorrect forms during Activity 3.1. While future BWRFs should be more complete and have fewer mistakes, Data-Entry Operators should maintain the habit of carefully examining every BWRF <u>before</u> starting to enter its data into the Database. To help Data-Entry Operators understand English phrases commonly used in shipping and ballasting requirements, Appendix 5 contains a glossary of 'Maritime Jargon', including the factors which influence the timing and volumes of BW discharges.

2.3 MANDATORY DATA REQUIRED BY DATABASE

Not all of the data-entry fields need be completed in order for the Risk Assessment to function. However some data-entry fields are **Mandatory**, and the Database will not allow a new Visit Record to be saved until these fields are entered. The following mandatory fields are labelled in **red text** on the 'Add' and 'Edit/Print' Visit Record windows:


- IMO Number
- Arrival Date
- Tank Code
- Tank Volume

The IMO number is the unique 7 digit identifier of the vessel. This ID number remains the same for the whole life of the ship, irrespective of any changes to its name. Other fields which should be completed are the 'Arrival Port' (in the 'Vessel Information' sub-window) and the unit of discharged BW (in 'Specify units' in the 'Ballast Water Tanks' sub-window):

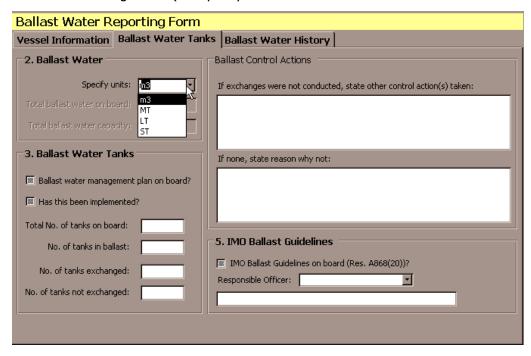

The unit of BW discharge is recorded on the IMO BWRF, and is specificed for each ship visit record by selecting from the drop-down list either **m3** (cubic metres), **MT** (metric tonnes), **LT** (long tons) or **ST** (short tons; see Section 2.4.6 and Appendix 5). Until a unit is selected, the other data-entry fields for 'Total Ballast Water On Board' and 'Total Ballast Water Capacity' will remain <u>unavailable</u> in the '**Ballast Water Tanks**' sub-window. If no unit is present on the BWRF, select **MT** as the default unit (this is the most common unit used by ships).

The Database will <u>not</u> save a Ship Visit Record until all **Mandatory** fields have been completed and the **`Save Visit Details**' button is clicked (at bottom right of the **`Ballast Water History**' subwindow):

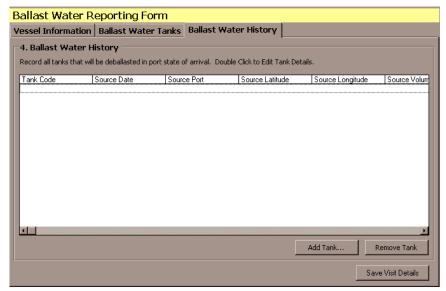

Similarly, <u>no</u> BallastTank details will be saved unless the '**Save Tank Details**' button is clicked. This button is located in the bottom right corner of the '**Add Tank**' sub-window):


Add Tank		
Details		
Tank Code:		
Ballast Water Source	Ballast Water Exchange	Ballast Water Discharge
Date (dd/mmm/yyyy):	Date (dd/mmm/yyyy):	Date (dd/mmm/yyyy):
Source Port or Coordinates	Exchange Method:	Discharge Port or Coordinates
Country:	Exchange Coordinates	Country: China
Port :	Endpoint Latitude :	Port : Dalian Liaoning
Latitude :	Endpoint Longitude :	Latitude :
Longitude :	Volume (units) :	Longitude :
Volume (units) :	Percentage Exchanged :	Volume (units) :
Temperature (c):	Sea Height (m) :	Salinity Units: Salinity:
Add Previous Tank Details Add New Po	rt	Save Tank Details

2.4 ENTERING THE VESSEL VISIT AND TANK INFORMATION

2.4.1 IMO Number and Vessel Name

- Always check and enter the ship's unique IMO Number first. This mandatory ship
 identifier is used by the Database to identify all Visit Records. The ship's IMO Number
 may already be present in the drop-down list.
- If the ship is already on the Database, its IMO Number should be selected from the dropdown list. This will cause the ship's Name, Type, DWT, Owner, GT, Flag and Call Sign to automatically appear in the respective data-entry fields.
- If the IMO Number is not present or appears incorrect on the BWRF (e.g. not 7 digits), use the Vessel Name or its Call Sign to obtain or confirm the IMO Number from the Lloyd's Ship-Finder CD. The Lloyd's Ship-Finder also lists other valuable information including shipType, GT and DWT.

If the IMO number is not in the drop-down list, then click on the 'Add New Vessel...' button (in the 'Vessel Information' subwindow) to enter the new ship information in the cells of the 'Add Vessel' subwindow. Use the Lloyd's Ship-Finder to check and fill any data gaps:

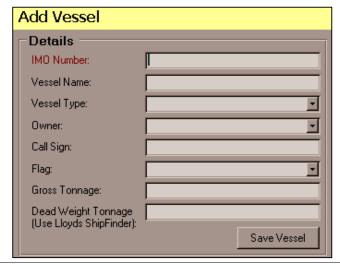

Be careful with the vessel's name spelling, especially on hastily written BWRFs. For example, the correct, official name of '*Tokyo Maru II'* may be '*Tokyo Maru 11'*, '*Tokyo Maru No. 11'*, or '*Tokyo Maru No. 2*). Similarly, the correct name of the tanker '*MT Tokyo Maru'* is <u>probably</u> '*Tokyo Maru'*. This is because 'MT' means 'motor tanker' and is not part of the ship's registered name. Similar abbreviations include 'MV' (motor vessel), 'SS' (steam ship), 'RV' (research vessel), etc. In the case of company names or initials (e.g. *OCL Pacific Trader, NYK Pacific Trader, Evergreen Pacific Trader* etc), sometimes they are part of the official name in *Lloyds' Ship-Finder*, sometimes they are not.

Be aware that ships often change their name, radio call sign, flag, owner or local agent. This does not matter for the Database, <u>provided</u> the IMO Number matches the basic ship details in the *Lloyd's Ship-Finder* (i.e. Vessel Type, GT and DWT). If a ship changes its name after a previous visit and Database entry, there is an **'Edit Vessel'** feature for updating its details such as a new Name, Call Sign, Flag, Owner, Agent, etc (see Section 2.5).

2.4.2 Vessel Type

• To allow the Database to generate accurate reports for particular Vessel Types, the exact spelling of Vessel Type <u>must</u> conform to one of the following labels used by the Database:

Bulk Carrier Bulk/Container carrier

Container Ship General Cargo Ship

Reefer (Refrigerated Cargo Ship)

Ro-Ro Cargo Ship Vehicles Carrier Other (for miscellaneous types)

Tanker (for multipurpose/unclassed types)

Oil/Bulk Ore Carrier ('OBO' and 'O/O')

Chemical Tanker

Chemical/Products Tanker

Crude Oil Tanker Products Tanker

Gas Tanker (incl. LPG, LNG, etc)
Passenger Ship (includes ferries, liners)
Passenger/Ro-Ro Cargo Ship (includes

many roll-on/roll-off ferries)

Spelling mistakes will accidentally create a 'new' and uneccessary Vessel Type (e.g. typing in 'Product Tanker' will generate a new vessel type, as it is different from 'Products Tanker'). To avoid this error, <u>always</u> use the drop-down list to select the Vessel Type, unless it is actually a new vessel type which is making frequent visits to the Receiving Port (infrequent and miscellaneous vessel types such as a Research Ship or a Dredge should be classified as 'Other').

This tip applies to <u>all</u> data-fields which have drop-down lists, such as Country, Port, IMO Number, Vessel Name, Owner, Agent etc.

When using the Database to review Vessel Types or allocate them to particular berths and terminals within the Arrival Port, be aware that many of the smaller 'general cargo ships' and 'bulk carriers' (<15,000 GT) can trade both general cargo and bulk cargo. Many general cargo ships also carry containers which can be worked by their own deck gear or by wharf cranes.

2.4.3 Other Vessel Information

- The ship's Name, Flag, Owner, Port and Country should be entered with initial Capital Letter, followed by lower case.
- All of the Call Sign should be entered with UPPERCASE letters.
- As with all dates in the Database, the mandatory arrival 'Date (dd/mmm/yyyy)' has to be entered in this format (i.e. '21-01-03' must be entered as "21/Jan/2003").

• Remember that date formats used by ship's officers may be different, and these require careful interpretation (see Section 2.2 for details).

The **'Last Visit**' button (in the **Vessel Information** sub-window) accelerates the data entry task. The **'Last Visit**' will display all information concerning the last visit made by the selected ship to the Arrival Port. This is very useful for ships which make regular port visits on scheduled services (for example Odessa - Bourgas, Khark Island - Ain Sukhna, Dalian - Pusan, Mumbai - Colombo, Saldhana Bay - Rotterdam, Sepetiba - Taranto, etc).

2.4.4 Port Information

- Ensure that the 'Arrival Port' name is correct and is ticked in the 'Set as default' tick box. This saves time as well as ensuring the Database will use the Visit Record. If this box is not ticked, the Visit Record will not be included in the Database risk calculations.
- Similiarly, the name of the **Berth** should be selected only from the berth or terminal names already used by the ArcView GIS Port Map. These names will be available for quick selection in the drop-down box.

NOTE: Although 'Berth' is not <u>specifically</u> requested in the IMO BWRF, it asks for the location of the BW discharge. A Receiving Port can request all ships to enter the number or name of their planned berth, terminal or anchorage as the Discharge Location (plus a 'Lat-Long' position if a discharge is to be made in the port's approach channel or in an emergency anchorage, etc).

2.4.5 Last Port, Next Port and Add New Port

- A large number of ports and associated details are already present in the Database, and these can be quickly selected by using the 'Country' then 'Port' drop-down lists.
- If the name of the Last Port or Next Port was not written on the BWRF, but the next or last Country is present, then only Country name may be entered by going to the Port drop-down box for that Country and selecting 'Not Reported' (at top of Port list).
- If the Country of the missing Last Port or Next Port is also absent on the BWRF, then 'Not Reported' needs to be selected from the Country drop-down menu (at top of Country list). Visit Records that have a 'Not Reported' Last Port will not be listed in the risk calculation outputs, but they will be used by the Database for compiling accurate statistics and reports about the Receiving Port's vessel visits, etc.
- Some Country and Port names may appear to be absent from the Drop-down lists because of different spellings. Data-Entry Operators need to understand that some Country names may be spelled in English or in the language of that country (e.g. 'Spain' = 'Espagna'; 'Ivory Coast' = 'Cote D'Ivoire').
- Similarly, the port of 'Vlissingen' in the Netherlands may be written on a BWRF as 'Flushing' (which is not the official name). Therefore Data-Entry Operators should refer to an international Port Guide <u>before</u> entering the name and details of any new port.
- Another problem is that a port name hastily written on a BWRF may actually refer to two
 or more different ports, sometimes within the same country! For example, 'Tenerife' on
 a BWRF may refer to the famous port of 'Tenerife' in Spain's Canary Islands, or to the
 busy bulk import port of 'Santa Cruz de Tenerife', which is also in Spain.
- Many Middle East ports have an official prefix (typically 'Al' or 'El') which is not added to the BWRF, while others are provided an <u>unofficial</u> prefix on the BWRF. Therefore the names of some Middle East ports may appear to be 'missing' from the Database. To

confirm if the port is already present on the Database, Data-Entry Operators should quickly check for the 'Al', 'El' or no prefix spelling in the Port drop-down list.

- Port name errors are caused by haste, laziness or ignorance of ships' officers when writing the BWRF. The vessel type, size and last/next ports of call (plus its history of previous visits on the Database) should alert the Data-Entry Operator to this problem.
- Before adding a new port to the Database, it is important to use a recent international Port Guide publication (e.g. *Fairplay Ports Guide* CD) to check the 'new' port is not:
 - the name of a terminal or 'sub-port' <u>within</u> a larger port (e.g. *Hansaport* is a sub-port of Hamburg, *Europoort* is the big container terminal at Rotterdam);
 - the name of a town or city beside an existing port which has a different name;
 - lacking an official prefix such as 'Al' (or was given an unofficial prefix); and/or
 - is mispelled (this is <u>common</u> for many Japanese, Korean and Chinese ports).

In China, 'Zhousan' and 'Dinghai' refer to the same port, as do 'Yantai' and 'Muping', and 'Xiamen' and 'Weitou'. The City State of Singapore has several ports, one of which is called Singapore (i.e. Singapore Singapore, as well as Singapore Jurong, Singapore Keppel, Singapore Semawang, etc). For confusing Japanese or Chinese port names, use the port's Prefecture Name (the second name after the port name in the Database) and the UN Port Codes to help confirm the correct port name and spelling.

- All ports in the Database have a unique, five letter UN Port Code. The first two letters
 denote the Country (prefix codes of most countries are in Appendix 2). The last three
 letters identify the port in that country. For example, Saldanha Bay in South Africa is
 ZASDB and Cape Town is ZACPT. For the port of Mumbai in India (previously known as
 Bombay), its code is INBOM, while Dalian is CNDLC and Sepetiba is BRSPB.
- All ports in the Database already have their five letter code. As with the IMO Number, the
 Database uses the unique UN Port Codes to ensure all data are managed correctly for the
 risk calculations.
- To Add and Save a New Port, the Data-Entry Operator must confirm the correct spelling of its Country, Name, UN Port Code and obtain its Latitude/Longitude and Bioregion, before clicking on the 'Add New Port...' button to add these details.
- Apart from a port's Bioregion, all port details can be obtained from publications such as the Fairplay Port Guide CD.
- All Bioregions in the GIS World Map (Section 3) are already listed in the drop-down list inside the 'Add New Port' subwindow. Use the World Map to find the correct Bioregion. A copy of this map is in a zoomable Adobe file of the Utilities Folder (Bioregions.pdf), as well as on the ArcView GIS (Section 3).
- Not every port in the world has been assigned a UN Port Code, including many domestic ports in China. For ports without a UN Port Code, the first three letters of the port's name may be added <u>behind</u> the two letters of its Country code prefix (Appendix 2) to form a unique port code. If the grouping of letters is already used for another port, the Database will not accept it. In this case, the 3rd, 4th or 5th letter of the new code can be altered to make a unique combination that the Database will accept. Alternatively, numbers can be used (e.g. CN008 for a small port in China).
- As with all latitude/longitude entries to the Database, the port's latitude and longitude should be entered in the **Decimal Degree** format (i.e. <u>not</u> as Degrees, Minutes, Seconds). Latitudes South and Longitudes West are entered as negatives (e.g. -30.25).

• Lat/Long minutes (') and seconds (") need to be converted to Decimal Degrees before adding to the whole degree number. The full conversion can be done automatically using the Excel PED File (see Section 5.3), or by refering to a simple conversion table such as:

Minutes	Decimal	Minutes	Decimal	Minutes	Decimal	Minutes	Decimal
01	0.02	16	0.27	31	0.52	46	0.77
02	0.03	17	0.28	32	0.53	47	0.78
03	0.05	18	0.30	33	0.55	48	0.80
04	0.07	19	0.32	34	0.57	49	0.82
05	0.08	20	0.33	35	0.58	50	0.83
06	0.10	21	0.35	36	0.60	51	0.85
07	0.12	22	0.37	37	0.62	52	0.87
08	0.13	23	0.38	38	0.63	53	0.88
09	0.15	24	0.40	39	0.65	54	0.90
10	0.17	25	0.42	40	0.67	55	0.92
11	0.18	26	0.43	41	0.68	56	0.93
12	0.20	27	0.45	42	0.70	57	0.95
13	0.22	28	0.47	43	0.72	58	0.97
14	0.23	29	0.48	44	0.73	59	0.98
15	0.25	30	0.50	45	0.75	60	1.00

Coordinates South of Equator and West of the 0° Meridian require the minus sign (-) prefix

2.4.6 Entering data into the 'Ballast Water Tanks' sub-window

- Specifying the Units of BW volume must be completed for each ship Visit Record (select **MT** as the default value if the Unit is missing from the BWRF).
- Units of BW volume are typically **MT** (metric tonnes), **m3** (cubic metres), Long Tons (2200 pounds) or **Short Tons** (2000 pounds), all of which are available in the drop-down list. They are roughly equivalent (see Appendix 5).
- Always check for inconsistencies between the 'Total Number of BW Tanks', the 'Number of Tanks in ballast', the 'Number of Tanks not in ballast' and the 'Total Number of Tanks Exchanged'. These numbers should form a logical relationship.
- Similarly, 'Total BW On Board' should never exceed 'Total BW Capacity'.
- If the BW exchange data have been completed incorrectly, it is not necessary to obtain the correct information because the BW exchange details are <u>not</u> used by the 'first-pass' BWRA calculations (Section 4.1).
- Other data-entry fields in the 'Ballast Water Tanks' window are not critical to the Risk Assessment calculations, but can be entered to provide a complete database to permit other reviews, data export/analysis and reporting requirements.

2.4.7 Entering data into the 'Ballast Water History' sub-window

The reported BW discharge volume, source port/s, and the source, arrival and discharge dates must all be logical with respect to the duration of the voyage, the vessel's type and cargo loading pattern, its size (DWT) and its ballast water capacity (see Section 2.2). Common errors on BWRFs include:

Inconsistencies between the dates of ballast water uptake, exchange and discharge.

It is impossible for a ship to discharge ballast water before it has taken it up. However Data-Entry Operators must alert for this surprisingly common error, probably caused by haste or confusion by ship's officer with the form. Also, if a BW exchange has been reported, then the date/s of this exchange must logically be <u>after</u> the date of uptake, and before the dates of arrival and subsequent discharge.

- The date/s recorded on the BWRF for the BW uptake (and possible BW exchange) must be consistent with the voyage time from the BW source location to the arrival port.
- Latitude/longitude positions for the BW source and discharge locations are only required if these operations were not conducted in the usual port locations (the Database and GIS use and display only pre-determined discharge locations such as berths, terminals, anchorages; see Section 3).
- Latitude/longitude positions are usually provided for the voyage sector where BW was reported to be exchanged. Data-Entry Operators need to remember that even small ships may require 24 hours to complete a ~95% BW exchange for all tanks. For large bulk carriers and crude carriers which use the x3 'flow-through' method, a complete exchange often requires 4-6 days (or more if bad weather and seas interrupt the exchange).
- The reported method of BW exchange should be recorded in the Database. If an exchange
 is reported but no method was recorded on the BWRF, use the 'Not Specified' option (in
 the drop-down window for BW Exchange Method).
- 'Sea height' refers to the height of waves and swells at the time of the reported BW exchange. 'Sea height' is typically between 0 and 6 metres (maybe up to 20 metres for a severe winter storm or cyclone, which ships always try to avoid). Anything greater than 10 metres on the BWRF very probably represents a mistake or misunderstanding, and large values should not be entered. High seas and rough weather provide a genuine reason for a ship not exchanging ballast en route. However it is common for a Ship's officer to think that 'Sea height' refers to water depth at the time of the exchange, and not to the wave height.
- Sea temperature values, if present, should lie between −1°C (minimum) to about 32°C (maximum).
- Check that all BW discharges recorded on the BWRF are actually for the <u>correct arrival port</u> (i.e. the port where the ship submits the BWRF). For example, if a ship arrives at Sepetiba and submits a BWRF that includes tank/s discharges at the port of Santos, these discharge volumes should not be entered into the Sepetiba Database.
- Salinity units are usually recorded as 'SG' (Specific Gravity; often 1.025 for coastal port waters). The units may be 'g/L' (about 35 g/L for typical ocean water), or 'µS/cm'. After a salinity unit has been entered to the database the first time, it will always appear in the drop-down list. The 'first-pass' BWRA does not use salinity in the calculations (Section 4.1).

After the BW History details for the first Tank have been entered for a particular Visit, entering data for the subsequent tanks can be accelerated by clicking on the 'Add Previous Tank Details' button. This will populate the new tank sheet with the same details, and the operator can quickly change minor details (such as tank name, BW source, source date, BW volume, exchange details). This removes the need to re-enter the same information for every tank.

2.4.8 Bunkering and Part-Loading Cargos

When interpreting BWRFs, it is important to remember that port and BW details may be influenced by previous 'temporary' port calls to obtain fuel, change crews or part-load a cargo.

- BWRFs for crude oil tankers operating to the ROPME Sea Area commonly present this 'last port of call' ≠ 'BW source port' problem. Many tankers, including VLCCs and ULCCs (Appendix 5) often stop at Fujairah or Khor Fakkan for bunkering, stores and/or a crew change, usually on their inbound voyage but sometimes on their outbound voyage. The BWRF entries for "last port" and "next port" can be therefore be these ports, although they may not be a true BW source or destination port. While the true source port should normally be identified from "BW Source" field (Part 4 of the BWRF), the 'Next Port' for a true BW destination can only be deduced for tankers involved in a "liner trade" (such as Ain Sukhna - Khark Island - Ain Sukhna), or by checking the oil terminal's trading records and cargo manifests. However this may be difficult for commercial confidentiality reasons.
- Large tankers and bulk carriers may also visit one or more terminals to part-load cargo before arriving at the Receiving Port, having discharged some or all of their BW at the previous stops. If only a 'top-up' cargo is loaded at the Receiving Port, this operation may involve a small or zero discharge of BW. If the BWRF has been entered clearly and correctly, any BW discharge associated with a part-loading operation can be interpreted without a problem. If there are doubts, Data-Entry Operators should refer to port trading records and cargo loading lists, or try contacting the local Shipping Agent for advice.

2.5 **EDITING AND PRINTING THE SHIP VISIT RECORDS**

After a Ship Visit Record has been added to the Database, it can be edited or printed by going to 'Edit/Print Ship Visit Records' from the main menu. Find the Record by selecting the ship's IMO Number and/or its Arrival Date from the Search Window:


Search	
Search Visit Entry By Vessel	1
IMO Number : IMO 7392866 ▼	
And / Or	
Arrival	ı
Date (dd/mmm/yyyy) : **********	
Search	

If the particular Arrival Date is not known, leave the Date field empty (** *** ****), and click the **Search** button. If the Arrival Date is known but not the IMO Number, leave the IMO Number field blank, enter the Date and click the **Search** button.

Both methods take you to the Edit/Print window, which has blue 'scroll' buttons to locate the specific Arrival Date (for a selected ship), or the specific ship (for a selected Arrival Date). These forward/reverse buttons are at the bottom left corner of the Edit/Print window (this window is shown at the top of the next page).

After locating the Visit Record, details in the three tab sub-windows can be changed, including individual BW tanks, which can be edited, deleted or added in the 'Ballast Water History' sub-window. To remove a complete BW tank and all of its details, select the tank then click the 'Remove Tank' button.

URS Meridian-GIS December 2003 [v 1.4]

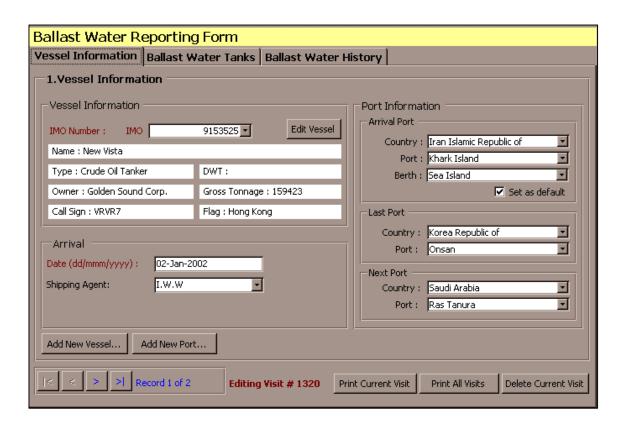

After making the edits, save the amended Visit Record by clicking the 'Save Visit Details' button in the bottom right of the 'Ballast Water History' sub-window.

To make an A4-size print-out of the selected Visit Record, click on the '**Print Current Visit**' button (in the '**Vessel Information**' subwindow). The page layout ('landscape') and format closely resembles the standard IMO-BWRF. It may be necessary to adjust your Printer *Properties* settings to prevent the printed record using two 'portrait' pages (go to 'Print...' in the Access 'File' menu, then click 'Properties' and check the paper size, layout etc).

To update the Vessel Details, click the 'Edit Vessel' button on the 'Vessel Information' sub-window, which opens the smaller 'Update Vessel' subwindow:

Update Vessel					
Details ———					
IMO Number:	7917915				
Vessel Name:	Chang Yun				
Vessel Type:	Crude Oil Tanker				
Owner:	Chinese Petroleum Corp.				
Call Sign:	ВНВС				
Flag:	Taiwan _				
Gross Tonnage:	122447				
Dead Weight Tonnage	224738				
(Use Lloyds ShipFinder):	Update Vessel				

Any update to the Vessel details will apply to <u>all</u> of its previous and future Ship Visit Records. Note that the Vessel's unique **IMO Number <u>cannot</u>** be changed in this window. If a Vessel has been entered with an incorrect IMO number, it is necessary to:

- (1) Add a New Vessel, using the <u>correct</u> IMO Number and vessel details (click the '**Add New Vessel...**' button, near the bottom left of the Edit/Print Records window).
- (2) Re-assign all Visit Records which are linked to the incorrect IMO Number, to the 'new vessel' which has the correct IMO Number. Do this re-assignation by:
 - locating all Visits assigned to the <u>incorrect</u> IMO Number (i.e. select the incorrect IMO Number in the '**Search**' entry window to 'Edit/Print Visit Records').
 - using the blue **FWD/REV** scroll buttons, go to each Visit Record and select the correct IMO Number from the drop-down list, then Save each new Visit Record by clicking the 'Save Visit Details' button in the '**Ballast Water History**' sub-window.
- (3) After all Visits have been saved to the correct IMO Number, return to the incorrect IMO Number and <u>delete</u> the unwanted Visits (use the 'Delete Current Visit' button in the bottom right of the '**Vessel Information**' sub-window).
- (4) The Vessel with the incorrect IMO Number can now be deleted from the Database (the vessel deletion is made in the '**Database Management'** window; see Section 2.6).

If deletion or edit of incorrect visits and tank discharges causes one more BW Source Ports to be no longer associated with any discharge, the Database will continue to store these port/s in its previous risk calculation tables, but they will have '0' BW frequency and volume risk coefficients.

To remove any Source Ports or Next Ports with zero BW discharges from the risk calculations, the list of source ports (or next ports) with BW tank discharge records must be <u>updated</u>. This is achieved by re-generating the list of source (or next) ports which require an Environmental Matching Coefficient (see Section 7.3.1).

2.6 DATABASE MANAGEMENT

The Database Management menu is accessed from the Main Menu. There are three features in the Database Management menu:

- Delete Ships With No Visits
- Edit Port Details
- Export Ship Visit Details to Excel

'Delete Ships With No Visits'

This house-keeping item displays a window that lists all Vessels in the Database which are **not** linked to any Ship Visit Record:




If you are trying to delete a vessel with an incorrect IMO Number and it is **not** present in this list, this means it still has one (or more) Ship Visit Records which need to be unlinked (and perhaps reassigned to the ship with the correct IMO Number; see Section 2.5).

The list may also show ships which have <u>correct</u> IMO Numbers etc, but have made no visit (or provided no BWRF) to the Arrival Port. These vessels may be safely left in the Database for possible future visits and BWRFs.

'Edit Port Details'

This feature provides a small port 'Search' window, using Country and Port drop-down lists:

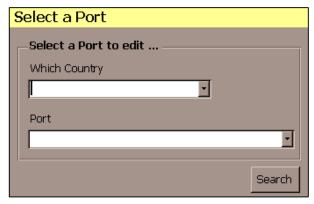

After selecting the port, an **Edit Port Details** sub-window is provided for correcting the port details, including its name, unique UN Port Code, Lat/Long position and Bioregion:



'Export Visit Details to Excel'

This feature permits a range of visit record information (for all or specified vessel types, visit dates, berthing areas, BW source ports, last ports of call, next ports of call and BW tank discharge details) to be automatically exported into Excel spreadsheet files, which can be used for other types of analysis, evaluation, formatting, copying or printing outside of the Database.

Select the data to be exported by following the prompts that allow particular combinations of arrival dates, vessels or vessel types, berthing areas and BW source ports, last ports of call or next ports of call. Then generate the Excel file by clicking the 'Export' button, and use the standard Save window to name and save the new .xls file in a directory/folder.

Using MS Access for other data manipulation tasks

Database managers may wish to use the Query facility of MS Access to achieve other data management tasks, or file management tools such as 'Compact and Repair...' (go to 'Database Utilities' in the MS Access 'Tool' menu). Using the various Design and Query functions of MS Access to produce customised tables and report files of the various vessel, visit, /port, BW tank and risk species data is beyond the scope of this User Guide. Database managers should refer to the MS Access 2000 Handbook, and are highly recommended to seek 'hands-on' demonstrations and quidance from experienced MS Access users.

3. USING THE ARCVIEW GIS

3.1 GIS SCOPE AND TECHNICAL ASSISTANCE


The GIS (Geographical Information System) component of the BWRA system is ESRI's ArcView 3.2. This is used to display the Port Map, the World Bioregions Map and the results of the risk assessment which are generated in the output table of the BWRA Database.

Technical knowledge and detailed guidance with GIS housekeeping tasks are not required for operating the BWRA and are beyond the scope of this User Guide. However GIS managers and operators should work through the Self-Help Tutorial that is supplied with the ArcView 3.2 application. They can also access the public (free) knowledge base at the ESRI website (www.esri.com). This website also contains links to various Self-Help GIS tutorial courses at ESRI's 'Virtual Campus'.

3.2 DEVELOPING THE PORT MAP

3.2.1 Structure

The Port Map displays the navigational and infrastructure features of the demonstration site, plus its coastal habitats and resources. A useful Port Map requires several types of information to be collated and managed, including spatial data on pertinent navigational, geophysical, environmental, socio-cultural, commercial and planimetric features. For clarity and convenience of data management and display, each type of data ('theme') deserves a separate layer which can be compiled using copies of the 'base layer'. The layers used for the Port Maps are as follows:

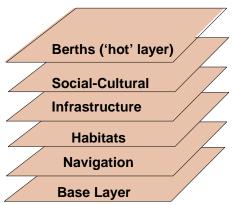

The base layer can be constructed from nautical hydrographic charts that are available in electronic format (preferable) or paper form from the nation's maritime authority or local chart suppliers respectively. It is often the case that useful data are already available in electronic formats which can be readily converted to the ESRI ArcView file format.

Some regional topographic data is supplied with ArcView and more can be obtained by web searches. Electronic versions of many nautical charts are available from such companies as C-Maps (www.c-map.com). Government agencies, universities, survey companies and local GIS specialists can hold significant quantities of useful data. The trick is to find the people who are keeping it or know where to find it. The protocols for each thematic layer are outlined in the following subsections.

3.2.2 Base Layer

The base layer can be derived from nautical charts of the port and its approaches. It should include the bathymetry (seafloor contours) and other key *planimetric* features, such as lighthouses, important channel markers and other permanent or near-permanent features. Planimetric data include 'ground reference features' which are unlikely to change or move frequently, such as main roads, railway lines, large chimneys, mountain peaks, hill tops, bridges, TV/Radio towers, bridges and other prominent structures or buildings. All the other geophysical, environmental, cultural and commercial features of the port and its sourrounding area (= the port 'catchment') can be layered over this base.

Some pilot countries already have access to electronic data suitable for the base layer, such as CAD ($Computer\ Aided\ Drawing$) bathymetry maps. If electronic charts are not available, upto-date vertical colour or black/white aerial photographs (e.g. 1:10000-1:50000) can be scanned at high resolution ($>300\ dpi$) and geo-referenced. These can provide an alternative base layer that provides a useful frame of reference. If photographs are used for the base layer and no electronic bathymetry data are available, the latter can be added by digitising from scans or using a digitiser board.

NOTE: If no 'in-house' GIS/data building capacity exists at the port, local companies or other government agencies which have GIS specialists are often pleased to negotiate a data-capture and/or GIS mapping service for the port authority.

The key features of the base layer should comprise:

- The entire coastline including harbour walls, breakwaters and jetties. The coastline is the same as the high tide mark, as shown on all nautical charts.
- The lowest tide mark (= the 0 m bathymetric contour [*Isobath*]). The 'Chart Datum' of nautical maps is typically very close to sea level at the Lowest Astronomical Tide. It may also refer to the 'Port Datum' or a National or Regional 'Height Datum'.
- 5 metre isobath (often the first continuous contour line below the low tide mark)
- o 10 metre isobath
- o 20 metre isobath
- o 30 or 50 metre isobath
- Edges of dredged shipping channels (often as blue or purple lines which also show the boundary of the channel depths which are maintained by port dredging programs).

Important land contours can also be added to the base layer, particularly for ports edged by distinctive hills or mountains. The colours and colour shades used to highlight the land, the intertidal zone and the various subtidal depth zones, should follow those of the local nautical chart as closely as possible. Otherwise the map will look unfamiliar and difficult to interpret.

3.2.3 Navigational Layer

The navigation features of this layer should try follow standard symbols used by nautical charts. The prime source for the symbology has been the Admiralty Standard Reference for Nautical Charts (Chart No. 5011, which is in booklet form).

Unfortunately the symbol libraries (for point and pattern symbols) that are supplied with ArcView do not contain international navigation symbols, and third-party symbols that follow the Admiralty standard could not be found. Therefore a 'closest match' has been used.

3.2.4 Habitat Layer

This layer needs to show the main intertidal and subtidal habitats using a logical colour scheme which helps users to recognise the type and depth of the habitat. Subtidal habitats occupy <u>all</u> areas below the 0 m isobath (low tide mark), while intertidal habitats must occupy <u>all</u> areas between the 0 m isobath and the high tide mark (Section 3.2.2). The intertidal areas should extend along the sides of tidal creeks and estuaries.

The subtidal habitats displayed by a typical Port Map are:

- muddy seafloor (= muds, sandy muds, shelly muds; middle brown colour).
- sandy seafloor (= sands, muddy, sands, shelly sands; pale brown colour).
- rocky seafloor (= rocky pavement and subtidal rock reefs; dark grey colour).
- coral reef (= true carbonate reef built by corals and coralline algae; pink or red colour).
- significant seagrass or seaweed beds (e.g. Zostera, Laminaria, Dictyotis, mid-green colour).

The intertidal habitats displayed by a typical Port Map are:

- high intertidal salt flats / sabkahs / marsh areas (may extend to supratidal zone; white).
- sand beaches and sand spits (often occur along the back edges of bays and beside a sandy seafloor in the shallow subtidal area; strong yellow colour).
- mangrove forests (these usually occupy middle to high tide area; dark green colour).
- low tide mud flats (= become fully exposed only during low spring tides). Often wide with a gentle slope, and along the edges of estuaries, lagoons, river channels and/or a shallow muddy seafloor of the subtidal zone; olive-brown colour).
- cliffs / rocky coastline (where the gap between the low and high tide marks does not exist, or is very small, because of the almost vertical slope into the subtidal zone; black lines for vertical cliffs, medium-grey colour for rocky platforms and terraces).
- stony beaches (predominantly boulders, cobbles, stones or gravel, with any sand forming narrow, thin strips or small patches in middle or upper beach; cream or pale grey colour).
- exposed coral reef platform (true carbonate reef built by corals, coralline algae; pink/red).
- artificial seawalls and rocky breakwaters (includes corniches, public promenades and the seaward edges of land reclamation projects and some flood defences; purple/black lines).

The habitat layer should not be developed until the base Layer has been completed, printed and checked. It also requires assistance from local marine scientists who are familiar with the port, particularly if they have undertaken field work for Baseline Biological Surveys.

Coastal scientists and marine biologists with reasonable local knowledge can identify the location of most habitats by interpreting the various isobaths, seafloor symbols, coastal aspects and gradients which are displayed on quality nautical charts. A half-day field excursion and some aerial photographs are invaluable for confirming habitat boundaries and filling 'gaps'. Checking with University marine researchers, local fishermen and/or members of local SCUBA diving clubs can provide valuable knowledge sources for the subtidal zones.

Habitat features are often displayed on small-scale, quality nautical charts by special symbols and colours. These include:

- High tidal marshes and sabkahs.
- Sand beaches, rocky shorelines and cliff lines.
- Seaward edge of mangrove fringes.

- o Intertidal edges of coral reef (different symbol compared to rock reef).
- o Intertidal and subtidal exposures of rocky reef (different to coral reef).
- Intertidal mud flats.
- Several types of artificial rocky shoreline, including breakwaters.
- o Presence of shelly, sandy, muddy or rocky seafloors, deoted by letters such as Sh, S, M and R respectively. For example, MS is muddy sand (which means sand is dominant), while ShM is shelly mud (i.e. the silty mud is dominant).

A key reference for the standard symbology and colours used by nautical charts to show marine habitat features is the Admiralty Standard Reference for Nautical Charts (Booklet Chart 5011). Some nations produce their own versions of this guide which are very similar.

3.2.5 Port Infrastructure Layer

The Infrastructure Layer should show the key 'working' components of the port and its surrounding urban area, including any large and prominent oil tank farm, coastal power station, refinery, desalination plant, subsea petroleum pipeline, railway line, port control tower and municipal airport, plus visually-dominant structures such as a large bridge, landfill site or TV/communications tower. These items improve site orientation and familiarisation by Port Map users. Some of these items may be used in the base layer to provide key planimetric features (Section 3.2.2).

The GIS Port Map may be used for other port environmental management purposes, including Oil Spill Contigency Plans (OSCPs). In these cases the Infrastructure Layer should include the sites of storage sheds for oil combat equipment and command nodes. 'Pop-up' tables providing telephone numbers, emergency radio channels and communication/command procedures can also be added, as may available for copying from a local OSCP.

3.2.6 Social-Cultural Layer

Significant social-cultural resources at risk from introduced species include recreational, artisanal and/or commercial fishing areas, plus aquaculture and mariculture facilities (i.e. trawling grounds, shrimp ponds, fish traps, fish cages, seaweed growing areas and popular angling sites etc). They also include declared or known fish nursery areas, popular recreational or swimming beaches, boating areas and culturally-significant sites (e.g. historic shipwrecks, archaeological sites, coastal memorials, places of worship, etc).

A specific layer may be created to display all these resources, or they may be added to the Infrastructure layer (e.g. mosques, shoreline memorials), the Habitat Layer (e.g. fishery and aquaculture resources) or the Navigation Layer (e.g. historic shipwrecks), as appropriate.

The social-cultural layer should also show the boundaries of conservation sites, including Wildlife Reserves, Fish Nursery Areas, Marine Protected Areas (MPAs), Coastal Nature Reserves, Special Conservation Zones or Marine Parks. These sensitive areas should include any locally or nationally recognised site for seabirds, turtles or sea lions (e.g. breeding or nesting sites, feeding sites, loafing areas, haul-out sites).

Declared wildlife reserves, nature sanctuaries and fish nursery areas are often prohibited to trawling, netting or boating, so their boundaries are shown on nautical charts. Boundaries of other wildlife conservation reserves, MPAs and parks are usually shown on maps produced by Environment, Natural Resource and/or Fishery departments (and sometimes by the local office of a national or international NGO such as WWF).

3.2.7 Active Berth Layer

This layer shows all the berthing, mooring and anchoring areas at the Arrival port. The names or numbers of the berths and berthing areas can be obtained from the Harbour Master or a detailed port chart. It is important that the names used by the GIS for the different berthing areas (ArcView's *Attributes*) are <u>identical</u> to the names of the same berthing areas used in the Access Database, so that summary tables of the BW discharge data can be automatically taken from the Database and displayed in the correct locations via the ODBC (Section 3.4).

3.2.8 Other Geophysical and Biological Data

This data includes topographic (land contours) as well as hydrographical information such as local streams, tidal creeks, rivers and canals.

Where available, animated or video files (.gif/.avi/ etc) can be linked to ArcView to show prevailing tidal currents etc. These movie files can display the directions of water movement to and from the various ballasting/deballasting locations, and can help determine potential time-slots that would reduce BW and suspended sediment discharge/uptake risks for particular sites. Seasonal extremes in turbidity (e.g. suspended solids; mg/L) and/or phytoplankton blooms are also very useful for BW risk assessment work, and these can be added to the Port Map as spatial information or in 'pop-up' tables.

There is no limit concerning the types of data that can be linked or added to the Port Map. Pertinent tables or graphics include the direction of prevailing seasonal winds, plus the maxima, minima and averages for salinities, water temperatures, turbidities and/or red tides of dinoflagellates for particular areas for each season, month or other convenient timescale.

3.3 STRUCTURE OF THE WORLD BIOREGIONS MAP

The World Bioregion Map is used as a backdrop for displaying the BWRA results. It has been compiled from a base map provided by CSIRO-CRIMP and modified according to advice provided by marine scientists in the Pilot Countries (Section 1.4; see Appendix 3). Bioregions for several large river systems have also been added to accommodate some river ports.

The present map displays 204 discrete bioregions. Each region is labelled with a unique code (e.g. **NWP-6** is Northwest Pacific 6). A zoomable Adobe file of the World Bioregion Map (**Bioregions.pdf**) is available in the **Utilities Folder** of the BWRA directory.

The same bioregions are also stored in the Database, where each bioregion has a particular set of risk species linked to it (Section 6.2). Except for the Receiving Port, any port located within a particular bioregion is considered likely to contain the risk species of that bioregion, (= precautionary approach; see Appendices 1 and 3).

3.4 LINKING THE ARCVIEW GIS TO THE ACCESS DATABASE


To display the results of the BWRA, ArcView needs to access the Database using ODBC (Open Database Connectivity). Details for establishing this connection are given in Appendix 4.

3.5 DISPLAYING THE BWRA RESULTS

The ArcView *User Interface* has been customised to allow convenient interpretation of the BWRA results. Customised button tools allow the various risk coefficient results as well as the Relative Overall Risk (ROR) and summary statistics for each BW source port to be displayed on the World Map, while statistics for each berthing area can be accessed from the Port Map. The display features provided in the ArcView GIS are described in the following sub-sections.

3.5.1 ArcView's BWRA Menu


The BWRA menu is a customised 'pull-down' menu that gives easy access to graphically displaying the various BWRA results and statistics on the World and Port Maps:

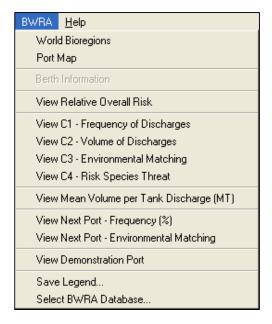

World Bioregions: Toggles from the Port Map to the World Bioregions Map.

Port Map: Toggles from the World Bioregions Map to the Port Map.

Berth Information: Launches the Berth Information dialog window, which shows summary BWRA statistics for each berthing area that is used by the Access Database:

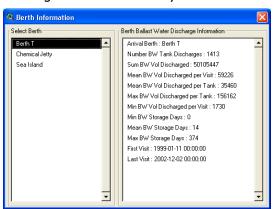

NOTE: This 'Berth Information' option is active only when the Port Map is being displayed.

View Relative Overall Risk: Displays the Relative Overall Risk, as calculated by the BWRA Database (Section 6). This option is active only when the World Bioregions Map is displayed.

View C1 – Frequency of Discharges: Displays the Frequency of BW Discharges from each source port (= Risk Coefficient C1). Active only when the World Bioregions Map is displayed.

View C2 – Volume of Discharges: Displays the Volume of Discharges from each source port (= Risk Coefficient C2). Active only when the World Bioregions Map is displayed.

View C3 – Environmental Matching: Displays the Environmental Matching Coefficient (= Risk Coefficient C3). Active only when the World Bioregions Map is displayed.

View C4 – Risk Species Threat: Displays the Risk Species Threat from each source port (= Risk Coefficient C4). Active only when the World Bioregions Map is displayed.


View Mean Volume per Tank Discharge (MT): Displays the mean volume per Tank Discharge (as converted to metric tonnes) from each source port. Active only when the World Bioregions Map is displayed.

View Next Port – Frequency (%): Displays each Next Port of Call and the vessel departure frequency to each of them. Active only when World Bioregions Map is displayed.


View Next Port – Environmental Matching: Displays the Environmental Matching (Risk Coefficient C3) for each Next Port of Call. Active only when World Bioregions Map is displayed.

View Demonstration Port: Highlights the location of Demonstration Port (= Arrival Port). Active only when the World Bioregions Map is displayed.

Save BWRA Legend... Users can change the 'Default Legend' to customise the display of the BWRA results (i.e. colours, sizes and fonts of symbols and text lables, etc). If the Default Legend is changed, the customised legend can be saved as the new Default. This subwindow option is active only when the World Bioregion Map is displayed:

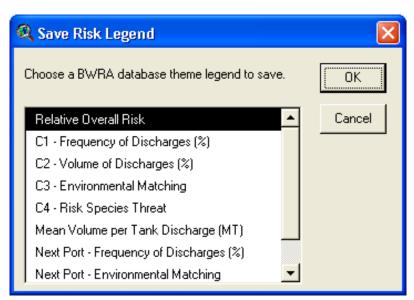

Select BWRA Database... Provides a list of available ODBC connections (see Appendix 4). If an ODBC connection to the Database has not been previously made, this dialog box will open automatically when ArcView is first launched.

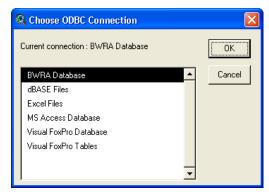


3.5.2 ArcView's BWRA Tools

Two tools have been added to the ArcView toolbar to enable easy querying of the BWRA Database. The buttons to these special tools are located on the right side of the lower bar:




Risk Assessment Information

This tool is available only when the World Bioregions Map is displayed. Selecting this tool allows a User to click on any port displayed in any layer of the World Map, to launch a summary results table for that port. The table includes a list of the risk species present in the bioregion of that port:

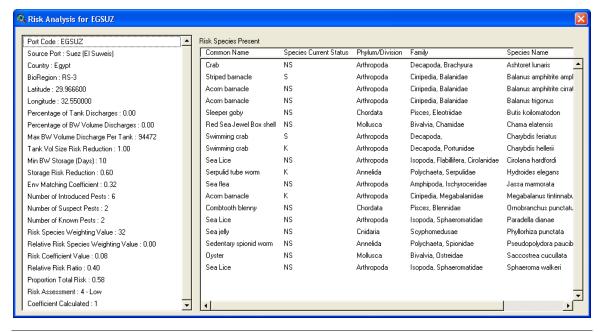

Berth Summary Information

This tool is available only when the Port Map is displayed. Selecting this tool allows the User to click on any berthing areas in the Arrival Port to launch a summary results table for that berthing area. The table presents a summary of the BWRA Database statistics for the berthing area:

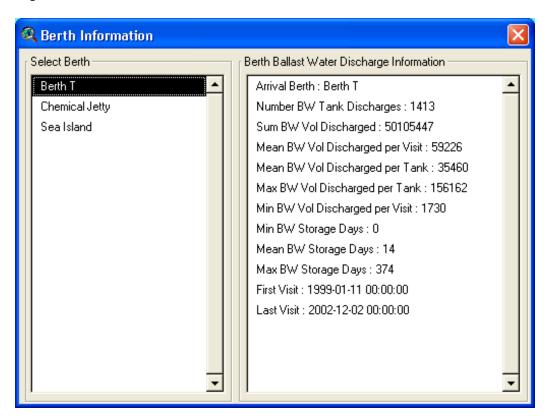


The next Sections of the User Guide (Sections 4-6) provide more details about the various results and Risk Coefficients that can be displayed by the ArcView GIS.

4. RISK COEFFICIENTS AND FACTORS FROM BWRF DATA

4.1 BW DISCHARGE FREQUENCY (C1 RISK COEFFICIENT)

'Packets' of source port water which are ballasted, transferred to a receiving port and then deballasted represent a series of discrete 'injections', each containing a mixture of surviving organisms (= 'inoculations'). The more times these injections occur, the higher the chance that conditions promoting the uptake of organisms and their survival both during and after the voyage may coincide to permit a 'successful' inoculation (i.e. the surviving organisms grow and reproduce to establish a new population at the receiving port; Appendix 1).

In other words, the larger the number of vessel visits involving BW tank discharges from a particular source port, the greater the chance of successful transfers and subsequent introduction of at least one Non-Indigenous Species (NIS). The proportional frequency of such voyages from each source port is automatically calculated by the Database for use and display by the GIS (Section 3.3 and Section 7). Calculating this risk coefficient (C1) for each source port is shown as follows:

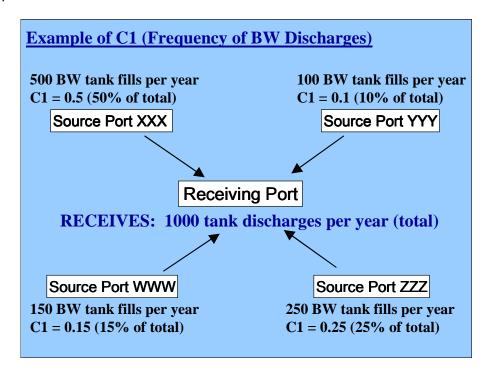

The sum of the coefficients for all the source ports amounts to 1 (= total hazard due to BW discharge frequency), with the size of the individual C1 coefficients in the above example between 0.5 and 0.1. In terms of discharge frequency (= number of inoculations), tank discharges from Port XXX (0.5) provide five times more chance of causing an introduction than tank discharges from Port YYY (0.1), and twice as many as tank discharges from Port ZZZ (0.25). This assumes the BWRF data provide a reliable picture of the receiving port's <u>current</u> shipping trade (e.g. all vessel arrivals for at least one and preferably two or three years).

Since the BWRF Database also contains the records of BW Exchanges, these could be added to the risk assessment calculation to provide a 'hazard-reduction' function. However, the

current BW exchange data are not particularly reliable for the 'first-pass' risk assessments for various reasons, including:

- not all ships can undertake ideal 'blue water' exchanges due to constraints imposed by their route, weather, vessel design, pump condition, etc.
- systematic compliance monitoring is required to check the truth of claimed BW exchanges (not yet commenced);
- the success of exchanges is highly variable and their ability to eliminate organisms depends on many factors (the best reported removal rates are in the 50-90% range);
- many organisms can avoid removal by various behaviours (including sediment burial, swimming up-current and/or seeking quiescent areas within the tank);
- the objective of the 'first-pass' risk assessment is to identify the most hazardous trading routes and associated vessel types, irrespective of the proportion of ships which regularly achieve effective, risk-reduction exchanges on each route.

The Database also stores the reported Salinity of the discharged BW source water, and this could similarly be used for a risk-reduction function (e.g. discharges of BW from a freshwater river port present lower risk to an open coastal port). Again, there are several reasons why the Database does not attempt to use the salinity values of the BWRFs for the 'first-pass' BWRAs:

- not all ships are reporting the salinity value, or measuring it reliably.
- there is a need to standardise the meaning and use of this value (its original intent was to check if ships are performing an adequate 'blue-water' ocean exchange, which would reduce the risk of invasions for BW discharges into permanently fresh lakes and waterways such as the Great Lakes system).
- some euryhaline species can survive in both freshwater and brackish water ports (e.g. the golden Asian mussel, *Limnoperna fortunei*);
- some ports are highly freshwater during their local wet season but become salty during their dry season (e.g. Montevideo, Buenos Aires, Karumba, Rotterdam etc).


To use salinity, the Database would therefore need a risk-reduction function that is 'customised' to fit the salinity regime of the Arrival Port/Demonstration Site. The port would also need to arrange a ship education programme and compliance monitoring to ensure all visiting ships were reliably reporting the BW salinity after uptake at the source port, and after any BW exchange that was attempted during the voyage.

4.2 BW DISCHARGE VOLUME (C2 RISK COEFFICIENT)

The C2 coefficient assumes there is a simple linear relationship between the amount of BW imported from a source port and the number of organisms transferred with this water (= 'inoculation size'; Appendix 1). For example, if overall average plankton/nekton densities at two source ports are similar, then inoculations from the port which annually exports, say, ten times more BW tonnage, may be expected to supply ten times more organisms.

Water quality in larger tanks usually declines at slower rates than in small tanks owing to the surface area/volume ratio, meaning that more organisms tend to survive (see Section 4.2.3). Finally, the volume of BW imported from a source port is more closely linked to the type, size and trade of the ships than to the frequency of visits involving a BW discharge (C1). Thus the amount of BW imported from each source port deserves separate treatment by the BWRA.

The proportion of BW volume received from each source port is treated as a measure of inoculation size by the BWRA, and is automatically calculated by the Database. Calculating this simple risk coefficient (C2) is shown graphically as follows:

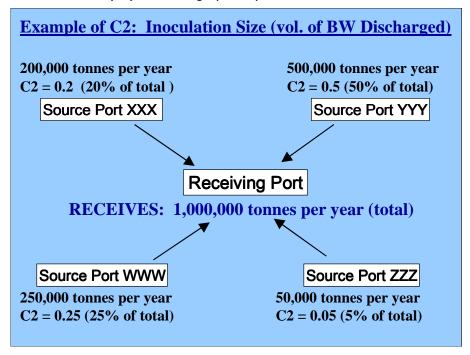

As with C1, each source port contributes a proportion of the total inoculation 'size'. The example also shows that arrivals from Port XXX may provide only 20% of the total inoculation size (i.e. 200,000 of the 1 million tonnes annually imported), but pose a higher risk in terms of inoculation frequency (i.e. 50% of C1). This would occur when ships arriving from Port XXX with ballast water are a different type, smaller and/or partly-loaded with cargo, compared to the fewer ships from Port YYY that are discharging 50% of the total received volume (C2).

Whether or not the inoculation frequency (C1) should be treated by the BWRA calculation with more importance ('weight') than inoculation size (C2), is addressed in Section 7.4.

4.3 RISK REDUCTION FACTORS (R1 AND R2)

In addition to C1 and C2, the BWRA Database uses data from the BWRFs to calculate two risk reduction factors, namely the maximum BW tank size (R1) and the minimum BW storage time (R1) of the ships which bring BW from each source port.

4.3.1 Maximum BW Tank Size (R1)

There is good field and laboratory evidence indicating that oxygen levels and water quality in large ballast tanks (which includes cargo holds for some classes of bulk carriers) decline at slower rates (and experience smaller temperature variations) than in small tanks (e.g. Oemcke 1999^2). This is mostly due to the 'surface area:volume ratio effect' ($a^2 : v^3$). For voyages of similar length, large bulk carriers or tankers with big, segregated BW tanks can therefore be expected to provide better water quality (= improved organism survival) than vessel types

Oemcke D, 1999. The treatment of ship's ballast water. *EcoPorts Monograph Series* 18, Ports Corporation of Queensland, Brisbane, Australia.

with relatively small BW tanks (e.g. Container Ships, Ro-Ro Ships and General Cargo Ships less than 20,000 DWT).

The BWRA Database automatically records the <u>largest</u> (MAX) tank discharge volume recorded for vessels arriving from each BW source port, as a second measure of voyage survivability. Using the MAX discharge is precautionary, since average (AVG) tank discharge could yield an unreliable picture where various vessel types and sizes are discharging significant quantities of BW from a particular source port.

The BWRA Database automatically assigns a risk reduction factor (R1) to each MAX number, using the following default set of inverse logarithmic categories:

MAX tank discharge volume:	<100	100-500	500-1000	>1000 tonnes	
Risk reduction factor (R1):	0.4	0.6	0.8	1	

These default values can be readily altered (Section 7.4). However R1 comes into play only if ships correctly record their individual tank discharge on the BWRFs, and these are entered into the database. If combined or total tank discharges have been recorded, then the value of R1 will most probably remain at 1 (i.e. providing no influence to the BWRA calculation and results).

4.3.2 Minimum BW Tank Storage Time (R2)

The longer BW is stored in a tank, the smaller will be the number of surviving plants and animals as a consequence of the lack of light and decline in water quality, especially from falling oxygen and pH levels due to biological respiration and rusting (iron oxidation)³. Even relatively short storage periods (5 days) cause noticable declines in the density of many planktonic plant and animals (e.g. Oemcke 1999). Long storage periods (>20 days) typically result in large mortalities of the planktonic life-cycle stages of most kinds of aerobic species, but not for the hardy spore and cyst stages of some species (especially toxic dinoflagellates), nor for anaerobes including pathogens and viruses. Whether or not the BW tank storage time should be used by the BWRA calculation therefore depends on which types of species are being considered (Section 7.4).

The BWRA Database automatically calculates, for each tank discharge from a particular source port, the number of days between the BW uptake date at the source port and the BW discharge date at the Arrival Port, then finds the <u>minimum</u> number of days (MIN) that it calculated for each source port (= precautionary approach). The BWRA Database automatically assigns a risk reduction factor (R2) to each MIN, using the following default set of inverse logarithmic categories:

MIN number of storage days:	<5	5-10	10-20	20-50	>50 days	
Risk Reduction Factor (R2):	1	0.8	0.6	0.4	0.2	


The above R2 values can be readily changed if the BWRA is to be focussed on pathogens, toxic dinoflagellate cysts and other anaerobic life forms and life-cycle stages (Section 7.4). The minimum (MIN) rather than average (AVG) number of storage days is used for the default calculation, since AVG may not provide a reliable picture for a source port with relatively few voyages to the receiving port, especially if various routes have been taken (e.g. some vessels using an intermediate port of call would produce a bimodal distribution of tank storage time). If inspection of the database shows that the majority of source ports are represented by >15 voyages with a similar voyage time, the default 'MIN' can be readily substituted with 'AVG' (Section 7.4) to determine how much it influences the results.

³ The air pocket between the water level and ballast tank ceilings (= 'head-space') is usually minimised ('pressed up') to prevent dangerous water 'slamming' and 'slop' effects.

5. ENVIRONMENTAL MATCHING COEFFICIENT

5.1 OVERVIEW OF THE C3 COEFFICIENT

The Environmental Matching coefficient (C3) provides an indirect measure of the likely survivorship of organisms following their discharge into the receiving port, plus their potential to establish a new population (Appendix 1). The following graphic portrays a simple example:

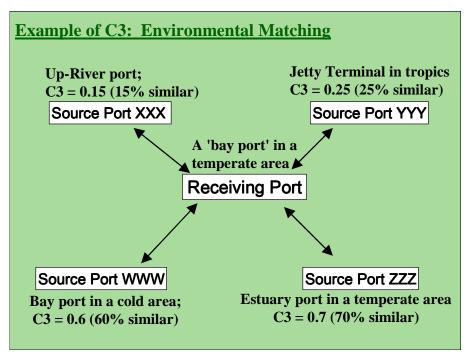

Essentially, the more the receiving port is environmentally similar to a BW source port, the greater the chance that an introduction from the source port will survive and reproduce to establish a viable population.

The C3 coefficients are derived from the results of a multivariate Environmental Similarity Analysis (ESA), which is conducted outside the BWRA Database using the PRIMER package. These coefficients are brought into the Database via automatic import of an Excel spreadsheet (Section 5.5). Each coefficient lies between 1.0 (perfect environmental matching) and 0.05 (least environmental matching). Unlike C1 and C2, each C3 does <u>not</u> represent a specific proportion of the sum total risk, and essentially acts as a risk reduction measure (Section 7.4).

The ESA is undertaken by using the PRIMER package to calculate, from an Excel data file containing 34 environmental variables, the **normalised Euclidean distances** between the receiving port and its BW source ports and next ports of call (the latter can be used for a 'forward' BW risk assessment; Section 7.3). The Cluster and Ordination modules of PRIMER are used to review and check the distance results before their conversion into C3 coefficients and importation to the Database.

Users requiring technical information about ESA (including optional data transformations not used for the standard 'first-pass' method), should consult the PRIMER manuals and other statistical guides. Note that the Access Database can import <u>any type</u> of C3 coefficient calculated by <u>any</u> statistics program, by simply copying the C3 values into the Excel file which the Database produces for its C3 'import' feature (see Section 5.5).

5.2 COLLATING THE PORT ENVIRONMENTAL DATA (PED)

The following 34 variables were selected from review of similar analysis, plus suggestions from IBSS scientists at Odessa, for performing the ESA and producing the C3 coefficients used for the BW source ports and destination ports.

No	Name	Variable Type
1.	Port Type ⁴	Categorical
2.	Mean water temperature during warmest season (°C)	Scalable
3.	Maximum water temperature at warmest time of year (°C)	"
4.	Mean water temperature during coolest season (°C)	"
5.	Minimum water temperature at coolest time of year (°C)	"
6.	Mean day-time air temperature recorded in warmest season (°C)	"
7.	Maximum day-time air temperature recorded in warmest season (°C)	"
8.	Mean night-time air temperature recorded in coolest season(°C)	"
9.	Minimum night-time air temperature recorded in coolest season (°C)	"
10.	Mean water salinity during wettest period of the year (ppt)	"
11.	Lowest water salinity at wettest time of the year (ppt)	"
12.	Mean water salinity during driest period of year (ppt).	"
13.	Maximum water salinity at driest time of year (ppt).	"
14.	Mean spring tidal range (metres)	"
15.	Mean neap tidal Range (metres)	"
16.	Total rainfall during driest 6 months (millimetres)	w
17.	Total rainfall during wettest 6 months (millimetres)	"
18.	Fewest months accounting for 75% of total annual rainfall	Integer
19.	Distance to nearest river mouth (kilometres) - negative value if upstream	Scalable
20.	Catchment size of nearest river with significant flow (square kilometres)	W
	Logarithmic habitat-distance category - from closest BW discharge site to nearest	:
21.	Smooth artificial wall	Categorical
22.	Rocky artificial wall	"
23.	Wooden pilings	"
24.	High tide salt marsh, saline flats or sabkah	"
25.	Sand beach	"
26.	Stony beach	"
27.	Low tide mud flat	"
28.	Mangroves	"
29.	Natural rocky shore or cliff	"
30.	Subtidal firm sands	"
31.	Subtidal soft mud _	**
32.	Seagrass meadow ⁵	"
33.	Rocky reef or pavement	"
34.	Coral reef (carbonate framework)	w.

The values for each parameter were obtained or derived from data and information culled from scientific, government and port publications, web sites, sampling records, survey reports, SST charts, salinity charts, climate databases, atlases, national tide-tables, nautical charts, coastal habitat maps, national habitat databases, OSCPs, aerial photographs and local expert advice. Details are provided in the Pilot Country BWRA Reports (http://globallast.imo.org/).

⁴ Offshore jetty/ mooring; Natural bay; Breakwater harbour; Tidal creek; Estuary; River.

⁵ Kelp forest/macroalgae bank was not included but is recommended for future calculations of C3

5.3 MANAGING THE PORT ENVIRONMENTAL DATA WITH EXCEL

Collating and analysing the Port Environmental Data (PED) is typically undertaken by marine scientists who are located at institutions away from the port office where BWRFs are added to the Database. By using the Excel PED file in the **Utilities Folder** (**Port Environmental Data for PRIMER.xls**), the environmental data collating and ESA work can proceed independently, to avoid clashing with Database activities such as BWRF data entry/editing. Using the Excel files allows convenient analysis and review of the PED/ESA work without the need to install MS Access 2000. The Excel PED file contains five <u>interconnected</u> **Worksheets**, used for the following tasks:

- 1. 'Input Port Enviro Data here...': This sheet is formatted to enable convenient entry, review and editing of the 34 PED variables. The variables are stored in a 'port samples by rows' format. The Port name, UN Port Code and location (inputted as degrees, minutes, seconds) occupy the first 8 columns of each row.
- 2. <u>Lat-Long Decimal data</u>': This sheet automatically calculates and displays the Decimal Degree positions for each port (Section 2.4.5), and is formatted to provide an optional export to PRIMER (e.g. for 'geographically' plotting the port positions by 2D Ordination).
- 3. 'WkSht3 PRIMER Input': This sheet automatically presents the values placed in Worksheet 1 in the format that permits their direct import by PRIMER, for the ESA.
- 4. 'WkSht4 Transform Input': This sheet provides a location to investigate the distributions of the variables, and the effect of variable transformations on the ESA results. The format permits the direct import of the transformed variables by PRIMER.
- 5. 'PRIMER Output': This sheet is organised for receiving the ESA results from PRIMER (into the White Cells). The sheet autmatically converts the White Cell values into the C3 matching coefficients, which are displayed in the bright Green Cells.

Note: If the order and number of ports in Worksheet 1 is altered by a Row insertion, deletion or Copy/Replication, this will affect the order of port rows in the other worksheets. To quickly re-order the Rows in Worksheets 2-5, use a simple **'Select Row then Drag-Copy Down'** mouse operation inside each sheet will 'refresh' its Rows, so that they follow the new order of ports developed in Worksheet 1. In each sheet, start this operation at a Row located **above** any change/s that were made in Worksheet 1. If the first port (in Row 4 of Worksheet 1) had been changed,

It is important to understand how PRIMER reads the PED data in an Excel worksheet (full details are in the PRIMER manual). PRIMER expects the following:

- The FIRST CELL in the FIRST ROW of the worksheet provides comment that PRIMER will add to its PED data file as a simple **descriptive label**. Any text comment, port name or calendar date can be placed in this cell.
- The SECOND ROW must contain **unique labels** for each Variable. The environmental labels are already provided in Row 2 of Worksheets 2-5 of the Excel PED file.
- The FIRST COLUMN must contain **unique labels** for each 'Port Sample'. The UN Port Codes are obviously the most convenient labels and are present in the Excel PED file.

The **Arrival Port** (BW Receiving Port; e.g. Dalian, Odessa, etc) <u>must</u> be the first port sample (top row). Otherwise there will be no quick and convenient way to review and copy the results from PRIMER's *Similarity Distance Matrix* output.

The similarity measures produced by PRIMER are **normalised Euclidean distances** which give a direct but inverse measure of environmental matching (a zero distance (0) represents a 'perfect match' of 1 (100%; Section 5.1). These distance measures are converted into C3 matching coefficients by inverting them into proportional values between 1 and 0.05 (not 0 because no environment should be infinitely distant from another on a single planet).

5.4 USING PRIMER FOR THE ENVIRONMENTAL SIMILARITY ANALYSIS (ESA)

5.4.1 ESA Process Overview

The environmental similarity analysis (ESA) cannot be undertaken until <u>all</u> the environment data cells for each port have been given a value in Worksheet 1 of the Excel PED file, and the port row order in Worksheets 3 and 5 has been checked (see Note in Section 5.3).

PRIMER will detect any 'empty' cells within a port's row of variables, provide a 'Missing Value' warning message, and stop the analysis. However there may be sufficient information to permit a reliable estimate for the missing value, so this can be inserted in Worksheet 1. If there is no reliable estimate and/or there are several missing values, the incomplete port row should be removed from the Excel worksheets. To keep any incomplete port/s in the ESA, every incomplete column of values must be removed by deleting these from the Excel worksheets (i.e. reducing the total number of variables read by PRIMER).

The ESA is undertaken in four steps:

- 1: Import the PED data into PRIMER (from Worksheet 3 of the Excel file).
- 2: Use PRIMER to produce the Similarity Distance Matrix.
- 3: Check the Similarity Distance results by generating Cluster and Ordination plots.
- 4: Export the Similarity Distance results to Worksheet 5 of the Excel PED file for automatic conversion into the C3 Environmental Matching coefficients (Section 5.3).

The C3 coefficients in Worksheet 5 of the Excel PED file can then be imported into the BWRA Database, using the BWRA Database's C3 import facility (Section 7).

5.4.2 Importing the Excel Port Environmental Data into PRIMER

- (a) Save and Close the Excel PED.xls file, and note its Directory/Folder location.
- (b) Open PRIMER (e.g. using the PRIMER shortcut on the Desktop)
- (c) Click the 'Open file' icon on Primer's toolbar (or go to the 'File' drop-down menu and select 'Open...'). This displays the Open File Selection window of Primer.
- (d) Go to 'Files of Type' and select 'Excel (*.xls)' from the drop-down list.
- (e) Browse to the Directory/Folder containing the Excel PED.xls and open it in the usual way.
- (f) PRIMER now presents two boxes with options, which you select as follows:

In the 'Excel File Properties' box, select: Worksheet '3'

'Sample data'
'Includes title'

'Includes row labels'

'OK'

If the Excel file has the correct structure, PRIMER will now read it successfully. If there is an **Error Message**, or the next box does not appear after 1-2 minutes, close PRIMER and go to Excel to re-check the structure of the PED data in Worksheets 1 and 3 (Section 5.3).

In the 'Sample Data Properties' box, select: Samples as 'Rows'

'OK'

PRIMER will now display the imported data using its own data file format (*.pri). The PRIMER layout is more similar to a data table in Access. For example, the port names and environment labels are now 'outside' the rows and columns of data. It may be useful but not necessary to save the data table as a PRIMER file (*.pri) before performing the ESA.

5.4.3 Producing the Similarity Distance Matrix

- (a) Make sure the PRIMER data table window is the active window ('highlighted')
- (b) Go to the 'Data' drop-down menu and select 'Similarity...'

(c)	In the Similarity options box, select:	Analyse between: Samples
		Transformation: None

Standardise: [] (leave blank)

Measure: Normalised Euclidean Distance

'OK'

[see Appendix 1 and PRIMER manual for information on normalised Euclidean distance]

(d) PRIMER will now undertake the similarity analysis and provide two new windows:

The first window shows a saveable text file called '**Results1'**. This contains a log of your calculations and option selections, in rich text format (*.rtf) which can be read by MS Word. The log provides a record of the options selected for the analysis. It is not necessary to save this file unless you are exploring different options and methods.

The second window is called **'Sheet1 (Similarity Matrix)**'. This is the matrix which shows the environmental similarity distances between all of the ports. This matrix has the same structure as a 'City-to-City' distance table in a Road Map/Tourist Guide Book.

The first column lists the environmental distances between the Arrival Port and all of the source ports, provided Excel's Worksheet 3 had the correct structure (see Section 5.3).

(e) Save the Similarity Matrix, firstly as a PRIMER file (Sheet1.pri), then again as an Excel file (Sheet1.xls). For example, select 'Save As...' from the 'File' drop-down menu, then choose 'Excel (*.xls)' in the 'Save as Type' drop-down list, then the pathway to your BWRA Directory Folder.

5.4.4 Checking the ESA results by Clustering and Ordination plots

A simple mistake in the Port Environmental Data can produce a big difference in the ESA results, particularly a decimal point error (e.g. 2.50 instead of 25.0 for summer water temperature, or 150.000 instead of 150,000 for river catchment size). It is therefore important to check the similarity distance results before they are converted to Environmental Matching Coefficients (C3) and placed in the BWRA Database. PRIMER allows the following:

CLUSTERING

- (a) Make sure the PRIMER 'Similarity Matrix' window is selected (= 'highlighted')
- (b) Go to the 'Analyse' drop-down menu and select 'CLUSTER...'

(c)	In the Cluster options box, select:	Cluster mode:	Group average
		Use ranked similarities:	[] (no)
		Plot dendrogram:	[✓] (yes)
		`OK '	

PRIMER will now perform group-averaged hierarchical clustering of the ESA results and produce a dendrogram. Print to A4 or A3 paper and check the groupings of the ports.

If the Port Labels on the dendogram are too small to read, go to the 'Options' drop-down menu, select the 'Graphs' tab, and change the 'Print Scale' value (e.g. from 0.5 to 1, or from 1 to 1.5, etc). Repeat the Cluster analysis and print the improved dendogram.

- (d) Check the dendogram for any unexpected port groupings or patterns such as:
 - a single Black Sea port grouped with a bunch of warm-water ports;
 - a River port grouped with open-water coastal ports; and/or
 - any solitary Port (grouped 'by itself', because it is very distant from all other ports).

Environmental Distance on the dendrogram is measured on the Vertical Axis only – there is <u>no</u> 'Horizontal' axis. The dendrogram is like a mobile hanging from the ceiling of a child's bedroom: the vertical 'strings' holding each group can rotate around each other.

If there is any unexpected or peculiar grouping, you should go back to the Excel PED file and carefully check the port's environment data in Worksheets 1,3 for suspicious values.

ORDINATION

- (a) Make sure the PRIMER 'Similarity Matrix' Window is selected (= 'highlighted')
- (b) Go to the 'Analyse' drop-down menu and select 'MDS...'

(c) In the MDS options box, select: Number of restarts: **6** (*minimum*) Plot graph: [✓] (yes)

(d) PRIMER will now perform a 2D ordination of the 'non-metric dimensionless scaling' of the similarity results. The position of each port is an estimate, in 2 dimensions, of the actual distance between each port, as measured in the 34 dimensions representing each environmental parameter.

The MDS ordination plot can be rotated (by 'click-and-drag'). This allows you to check for any peculiar feature in the general pattern. Look for ports that are very isolated (all by themselves), or inside a group ports which you do not believe to be very similar.

Remember that the "Stress" of trying to show true positions of all ports in only 2D may be high. The blue 'Stress Number' is on the upper right corner of the 2D plot, and it is also listed in the log file. The Stress should be below 0.2 (preferably below 0.15). You can select the 3D ordination option to reduce the stress value (go to 'Graph' drop-down menu, select 'Properties...' and click the '3D' button). The stress number for 3D plots is provided only in the log file (the text file in the other window).

The 3D plot can also be rotated ('click-and-drag') but it cannot show the port labels. Therefore you will have to identify the different ports using colours and symbol shapes for each group (level) you make inside a FACTOR (see the PRIMER manual for details).

If there is an unusual pattern in 2D or 3D, or a strange group of ports within the pattern, go back to the Excel PED file and carefully check the environment data of the suspect port/s in Worksheets 1 and 3.

If the port labels on the Ordination Plot are too small to read, go to:

The 'Options' drop-down menu, select the 'Graphs' tab, and change the 'Display Scale' and 'Print Scale' values (e.g. from 0.5 to 1, or from 1 to 1.5, etc).

Now repeat the MDS and print the new plot (see the PRIMER manuals for details). Generally, any unusual pattern in the MDS Ordination will also show in CLUSTER, but sometimes a peculiar feature may not be easily seen in one of them. It is therefore wise to check the outputs of both methods. To gain an insight of how the ESA and Ordination methods work, follow the same ESA and Ordination procedures described above using Worksheet 2 (the ports latitudes and longitudes) instead of Worksheet 3. The 2D Ordination plot will, with some rotation, reveal a familiar geographical 'world plot' of the ports with very low stress (only 2 variables were used). The Euclidean distance can also be used instead of the normalised Euclidean distance as the two variables use the same units, and the similarity matrix lists the port distances in degrees.

5.4.5 Exporting the Similarity Distance Results from PRIMER

A similarity distance of '0' between two ports means a 'perfect' environmental matching of 1. This can only happen if all their environmental parameters have exactly the same values. As discussed in Sections 5.1 and 5.3, the Similarity Distances need to be converted into the C3 Environmental Matching coefficients (for example, converting distance values in a 0 - 12.678 range to the 1 - 0.05 range).

The conversion is done automatically in Worksheet 5 of the Excel file (Section 5.3). It is therefore necessary to to take a copy of the first two columns of the Similarity Distance Matrix (i.e. the results for the Demonstration Port only) and paste these into Worksheet. Because the number of columns in PRIMER's similarity table is more than the maximum permitted by an Excel file, it is not possible to simply save the table as a new Excel file (corruptions occur).

The following method uses an intermediate text file (.txt) to avoid the problem, and allows the correct similarity values to be quickly placed into Worksheet 5 of the Excel PED file:

- (a) Check the PRIMER Similarity Matrix window is active (its top border is 'highlighted')
- (b) Go to the 'File' drop-down menu and select 'Save As...' to display the Save file box.
- (c) Go to 'Save as type' and select 'Text Files (*.txt)' from the drop-down list.
- (d) Browse to your Directory/Folder containing the port environment data Excel file, and save the Similarity Matrix as a Text file called 'Sheet1.txt', in the usual manner.
- (e) Close PRIMER and open the Excel PED file, select Worksheet 5, then open the new 'Sheet1.txt' text file (select '*.* All files' in Excel's 'File Open' window to see the file).
 - (i) When you open **Sheet1.txt**, Excel will display a 'Text Import Wizard' box to help you import text into a new Excel spreadsheet.
 - (ii) In Step 1 of the Wizard Box, check the 'Delimited' radio button, go to the 'Start Import Row' and replace the 1 with a 2, then press the 'Next >' button.
 - (iii) In Step 2, the 'Tab' delimiter should be checked, and 'Text gualifier' should be "
 - (iv) In Step 3, select all columns in the Wizard Box after the 2nd column. Do this quickly by selecting the 3rd column (it will become dark shaded). Then go to the

end of the columns (using the Slide Bar under the window of columns), then 'Shift Key-Select' this last column (all unwanted columns will become dark shaded). Now click the '**Do Not Import Column (Skip)**' radio button. The word '**Skip**' will now show in the header of the unwanted columns.

- (v) Now 'Finish' the Wizard Box. A simple spreadsheet will appear, with the UN Port Codes in column A and the distance values in column B. Save this as 'Sheet1.xls'.
- (f) From the 'Sheet1.xls' file, select all Port codes and distance values, starting with the first port name in the first column (the Arrival Port) and its blank distance value (in second column). Copy this selection using 'Control-C' or clicking on the 'Copy' button () if this is present in your toolbar.
- (g) Open the Excel PED file, go to Worksheet 5 (called 'PRIMER Output') and select (highlight) the first **White cell** in Column F, Row 2 (i.e. the start of the Port code list).
- (h) Go to the 'Paste Special...' command in the 'Edit' drop-down menu (**Note**: This command may not be visible if your Excel customisation has been set to show '**Recently used commands only**'). To show the full list of commands in the 'Edit' menu, click on its double vertical arrows: *
- (i) In the 'Paste Special' box, select the '<u>Values'</u> button then hit '**OK'**. The 'paste values' option maintains the User-Friendly colours and formats in Worksheet 5.
- (j) After pasting the port label and distance values into the White Cells, you will see that the **Green Cells** in Column I will automatically show the C3 Environmental Matching Coefficients. You should re-save the Excel PED file at this stage.

The C3 values generated and saved in Worksheet 5 of the Excel PED file are now ready for importing into the ACCESS Database, using its Export/Import File feature (Section 7.3).

6. RISK SPECIES COEFFICIENT (C4)

6.1 CALCULATION OF C4

The C4 risk species coefficient provides a measure of the relative threat of harmful introductions, as posed by each BW source port, due to the number and status of the risk species present in its bioregion (Appendix 3). The taxonomic description, bioregional distribution, native status and threat status of each risk species are stored in the BWRA Database, and these can be displayed for review, update and edits.

The Database automatically calculates the C4 value for each BW source port. Each value represents a proportion of the 'total risk species threat'. The total threat is the sum of all risk species in the bioregions of all source ports which export BW to the Receiving Port. Risk species which occur in more than one bioregion are summed only once. The sum includes all non-native species (NIS) in the bioregion of the Receiving Port, because the calculation assumes the Receiving Port has not been 'infected' by any risk species (= the precautionary approach). The calculation does not include any risk species which have a <u>native status</u> in the bioregion of the Receival Port.

NOTE: After a Port Baseline Survey and its taxonomic identifications have been completed for a Receiving Port, a copy of the Database can be made, in which all risk species found at the Receiving Port can be re-assigned as 'Native' for the bioregion of the Receiving Port. This customised copy of the Database cannot be used to undertake BWRAs for other Receiving Ports.

The Database allows each risk species to be assigned to one of three levels of threat. The Database assigns a default weighting value to each level of threat, as follows:

- Lowest threat level (weight value = 1): This is for NIS with no special status, other than its known introduction to at least one bioregion (i.e. the non-native population has a proven ability to be transferred and establish in a new bioregion). The Lowest level is also the <u>default</u> level assigned to any species when first added to the BWRA Database.
- <u>Second level (weight value = 3)</u>: This is for potential or '**S**uspected' pests. Risk species assigned to this level have a default weighting [**w1**] of 3 in both their native and introduced bioregions.
- <u>Top level (weight value = 10)</u>: This is for **K**nown harmful species (i.e. species already listed, reported or declared as a nuisance or pest in a scientific, government agency or NGO report or web database).

The Database also allows users to change (a) the threat status level assigned to each species, and (b) the size of the default weighting values given to Suspected (**w1**) and Known pests (**w2**).

The Database calculates the C4 value for each BW source port by firstly summing:

- the number of NIS in its bioregion which have no suspected or known harmful status. This number is a measure of the species which have no recognised harmful status but proven 'transfer credentials' (e.g. 'ready-to-go' genes enabling their transfer to another port or bioregion with unknown/unpredictable consequences).
- the number of Suspected harmful species, either introduced or native, in its bioregion. Each suspected species is tripled in importance by the weighting factor **w1** (the default value of **w1** is 3 for the project standard BWRA).

- the number of Known harmful species, either introduced or native, in its bioregion. These species are multiplied by **w2** (its default value is 10 for the project standard BWRA, in accordance with the log principle used for measuring increases in biological risk).


In the second step of the C4 calculation, the total sum for each BW source port is divided by the overall sum of the risk species values (i.e. from all of the BW source port bioregions):

C4 = (NIS + [Suspected Harmfuls x w1] + [Known Harmfuls x w2]) / Total Value all source port Bioregions

Dividing by the Total Value (does not include every bioregion in the world) produces a relative measure of the total risk (C4 values are between 0-1). Thus each C4 value represents a proportion of all risk species that could be transported and discharged into the Receiving Port via its contemporary BW importation routes. Note that the C4 values of BW source ports located in the same bioregion are identical.


The C4 graphic box shows how the Database calculates the relative risk species threat for the example which has four BW source ports.

Note there is third weighting value (**w3**). This can be used to uniformly increase <u>all</u> C4 values by altering its default setting of 1. Using **w3** to increase or decrease the influence of C4 in the calculation relative overall risk is addressed in Section 7.4.

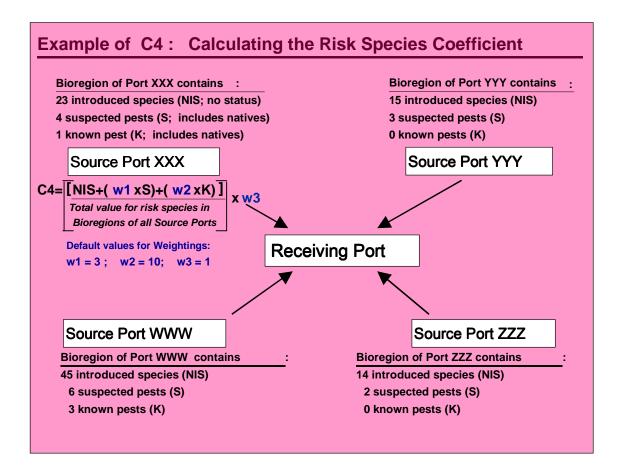

6.2 USING THE WORLD BIOREGIONS


The distribution and status of each risk species in each bioregion is managed by the BWRA Database, which uses the same 204 bioregions that are displayed on the GIS World Map (Section 3.3; Appendices 3, 4). Part of the world map is shown below:

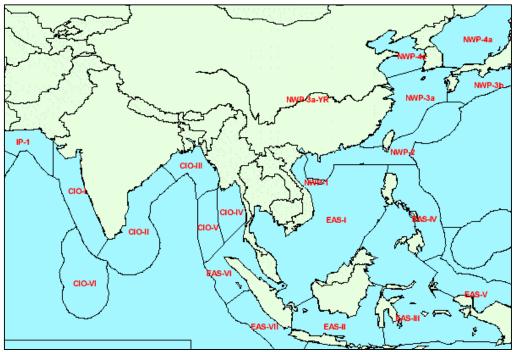


A zoomable Adobe (.pdf) file of the full map is in the **Utilities Folder** (**Bioregions.pdf**).

6.3 ADDING/EDITING THE RISK SPECIES DATA

To add, review or edit a risk species, go to the 'BW Risk Analysis' sub-menu from the main menu and click on 'Identify Species in each Bioregion':

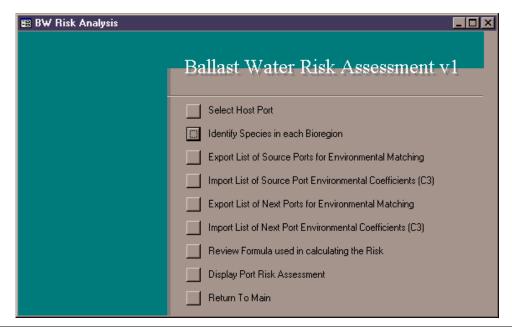


This takes you to the bioregion/risk species review window, which lists the species that have been assigned to particular bioregions (**AG-1** in the following example).

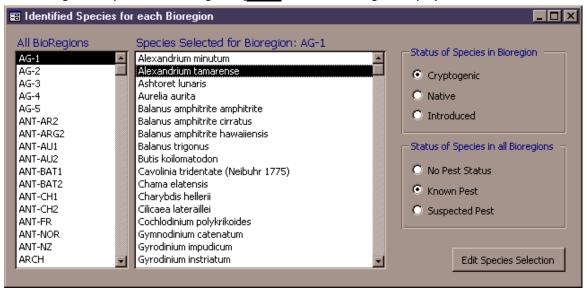

When a Bioregion is selected in the left table, the various species assigned to that region are listed in the centre table. When a particular species is selected (*Alexandrium tamarense* in above example), the radio buttons in the upper-right box show its origin **Status** in the AG-1 bioregion (i.e. if it is a cryptogenic, native or introduced species in AG-1). The radio button in the lower-right box (①) shows its threat **Status** as a pest, which remains the same for all bioregions unless it is native in the bioregion of the Receiving Port (Section 6.1).

Note that the Cryptogenic/Native/Introduced **Status** of a species changes according to the particular bioregion (and these differences are stored in the Database), but its pest status remains the same for all bioregions. Both the 'bioregion origin' and 'global pest status' of a species selected in this window can be changed by clicking a different radio button in the boxes. Clicking on a different button and closing the window will <u>automatically</u> save the status change. No separate 'Save' command is needed since the radio buttons which are on (©) when the window is closed, will store both statuses in the Database.

To add or remove a species from the selected Bioregion, click on **'Edit Species Selection'** (bottom right button). This takes you to the **'Species Selection'** editing window:

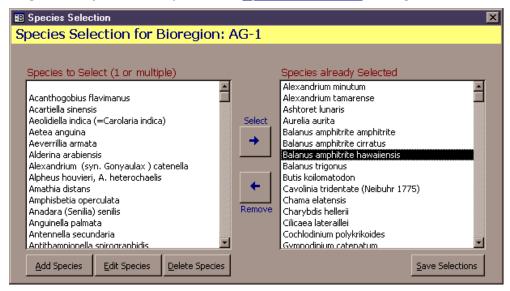

The left table lists all species <u>not</u> assigned to bioregion AG-1, and the right table lists the species which have been assigned to this bioregion. In the example above, the barnacle *Balanus amphitrite hawaiiensis* has been selected for removal from AG-1.

If any species are removed or added to a bioregion from the general list, the change needs to be saved by clicking the '**Save Selections**' button in the lower-right corner. This also returns you to the previous window where other bioregions can be selected for editing.

A new species can be added to the general list of the Database by clicking the 'Add Species' button (which takes you to the Species window). Clicking the 'Edit Species' button will launch the same Species window, but this will display the details of the species selected in the general list for editing. The 'Delete' button allows a species that has been entered twice or more (e.g. because of a species name synonym or misspelling) to be deleted.

The following graphic shows the **Species** window displaying information previously entered for the European shore crab:

Species		×
Common Name	European shore crab	
Phylum/Division	Arthropoda	
Family	Decapoda, Portunidae	
Species Name	Carcinus maenas	
References	1,3,42	
Comments	Broad temperature range, can reproduce at Aggressive scavenger in sheltered intertidal, rocky shores.	
Species Current Status	Known Pest	
		Save Edits

The numbers in the **References** box refer to the list of references stored in an Excel spreadsheet file, which is kept in the **Utilities Folder** ('**Risk Species Master List v1.xls**').

This Excel file contains a list of the risk species in the Database, including their taxonomy, status, comments and references. Using an Excel file allows convenient sharing and updates of risk species information between marine scientists involved in Port Baseline Surveys and BWRAs.

The Excel file has no 'automatic' link to the Database. Therefore any updates made to the Excel file should be highlighted to facilitate making additions or edits to the BWRA Database.

7. RUNNING THE BW RISK ASSESSMENT

7.1 OVERVIEW

The BWRA is set up and run using features which are accessed via the 'BW Risk Analysis' sub-menu (Section 6.3). As noted in the previous sections, the BWRA will not work or provide consistent results unless:

- sufficient BWRF data have been checked and added to the BW Database (Section 4);
- C3 matching coefficients have been obtained for all source and/or next ports (Section 5);
- Risk species assigned to bioregions have been given an appropriate origin status and global pest status (Section 6).

The first step of the BWRA is to confirm the identity of the Receiving Port to the Database. Go to 'Select Host Port' in the BW Risk Analysis sub-menu, and select its name from the drop-down list.

The next step is to import the C3 matching coefficients for both the source ports and the next ports, and this is described in Section 7.3. C3 values are required for all Next Ports of Call if a 'Forward Risk Assessment' is to be undertaken (Sections 7.2 and 7.6).

Finally, before running the BWRA, the formulae and weightings used by the BW Risk Analysis can be checked (and if necessary changed) by clicking on the 'Review Formulae for Calculating the Risk' in the 'BW Risk Analysis' sub-menu. Changing the formulae and/or their default values is described in Section 7.4.

If the Database is ready, the BWRA can be run by clicking on the 'Display Port Risk Assessment' button in the 'BW Risk Analysis' sub-menu. This causes the Database to perform all calculations and generate a large results table. This table will include all BW Source Ports that have been provided a C3 environmental matching coefficient (source ports with a missing C3 value will not be listed, nor contribute to the C1, C2 or C4 calculations).

In each source port row, the table displays its overall **Relative Overall Risk** value (ROR), as well as the C1-C4 coefficient and R1-R2 risk reduction values (Section 7.4). Results from this table can also displayed on the ArcView GIS, provided the Database is connected to ArcView by ODBC (Appendix 4). Additional tables showing statistical results for each berthing area in the Receiving Port are also shown by the GIS Port Map.

7.2 DATA REQUIREMENTS FOR A RELIABLE ASSESSMENT

The BWRA Database should contain <u>at least</u> 12 months (preferably 24 months) of reliable BWRF data collected from <u>all</u> vessels visiting the port. There is no advantage to collate +3 years because international trade patterns have been changing rapidly throughout the 1990s following independence of the former Soviet states and satellite countries, and the continuing rise in the importance of the major South and East Asian economies. The value of adding discharge data from old port records is also limited compared to the steady collection and input of reliable BWRFs. After 3 years of BWRF data have been added to a Database, it is advisable to remove and archive any +3 year data, so as to maintain an up-to-date, contemporary picture.

If the collection of BWRFs involves 'targeting' only vessels that intend to discharge BW, the results will <u>not</u> provide a true picture of the risk associated with all trading routes. Limiting the collection or data entry of BWRFs to vessels discharging BW will also prevent a 'Forward' risk assessment, since this must focus on ships which uplift and export BW from the Receiving Port to its trading ports.

For unchecked and incomplete BWRFs, critical gaps can be filled for a percentage of these forms by careful analysis of previous visits made by repeat-arrival vessels, plus their type, size and pattern of trade as determined from port records. The value of reliable, computerised port records, the *Lloyds Register of Ships*, and international port and terminal guides such as *Fairplay* cannot be overestimated when undertaking a gap-filling analysis (see Section 2.2).

Gap-filling exercises are likely to be most reliable and fruitful for crude oil tankers, product tankers, gas tankers and bulk carriers which are engaged on regular trade between 'single-commodity' export and import terminals. Even with these vessel types, however, the true sources and volumes of deballasted water may be hidden in confidential commercial records, although interviews with shipping agents and ship's officers will improve estimates or guesses.

When trying to use port records to collate BW discharge estimates for a period before the regular use of BWRFs, the most common problem is identifying 'true' BW source ports. For somes types of bulk cargo trade, the recorded 'Last' and 'Next' Ports of Call may be obvious unloading or loading terminals. In the case of oil tankers and bulk carriers, however, their voyages often involve 'Last' and/or 'Next' ports of call which involve:

- a fuel bunkering stop, requiring a relatively minor (500-1800 tonnes) or no BW discharge;
- a crew-change, supply and/or in-water maintenance port (no discharge or uplift of BW);
- dry-docking for repainting and heavy maintenance (all BW will be discharged before and during docking, then up-lifted during and after the re-floating operation);
- a strategic route or hub port to wait for new sailing orders (usually no discharge/uptake);
- the first or last of 1-3 terminals for cargo part-loading (e.g. at some shallow water crude oil terminals in the ROPME Sea Area, Black Sea, Nigeria, Venezuela, etc), or for part-cargo unloading (e.g. product tankers and bulk carriers visiting coastal and river ports in many parts of the world).

In the case of bulk carriers, these may be spot-chartered from a strategic bunkering and regional hub such as Singapore, but may still be carrying BW from a different Asian port which was the final destination of its previous charter. For both liquid and dry bulk carriers departing an import berth in ballast and not engaged on a time charter/liner service (Appendix 5), their Next of Port of Call may be a 'route direction' port, based on known or anticipated sailing orders (many ships do not receive their ultimate destination instructions until after their departure). 'Direction ports' for ships in ballast or carrying product or crude oil include:

- Gibraltar (= the ship will enter or exit the Mediterranean for an unconfirmed destination);
- Istanbul (= the ship will enter or exit the Black Sea for the same reason);
- Port Said, Suez, Panama etc (= the final destination lies beyond one of these canals);
- Hong Kong, Singapore, Shanghai, Rotterdam etc (= moving towards a strategic hub).

For ports with a significant import trade via general cargo ships, small bulk carriers and chemical/products tankers (e.g. Mumbai, Odessa and Dalian), attempting a worthwhile 'Forward Risk Assessment' is made worse by the multi-trading behaviour of these vessel types, which tend not to visit the same ports on a regular or voyage-consecutive basis.

Even when fully completed, an IMO BWRF does not help identify BW Destination ports because this form does not request any detail or prediction concerning BW uptake or

destination (Appendix 6). To undertake a reliable 'Forward' risk assessment therefore requires supplementary questions. These would need to be provided on a small form very close to the time of sailing to maximise the number of useful answers.


7.3 IMPORTING THE ENVIRONMENTAL MATCHING COEFFICIENT (C3)

To import the C3 values from Worksheet 5 of the Excel PED file (Section 5.4.5), it is necessary to copy them into a temporary Excel file which is generated by the D atabase. One file lists all BW Source Ports (even if discharged BW volumes were not added in the Database), the other lists all Next Ports of Call (C3 values for Next Ports of Call are used only for the 'forward risk assessment' of presumed BW destination ports).

Using Excel files for exporting the two lists of port names and importing the C3 coefficients avoids the problem of sending copies of the large BW Database to scientists who undertook the PRIMER analysis but who may not have MS Access 2000 on their PCs It also avoids possible accidental changes to the Database's contents. The steps for importing the C3 values are described in the following sections.

7.3.1 Importing C3 Values for the BW Source Ports

The Excel file 'SourcePorts.xls' contains the list of BW Source Ports, and is generated by the Database. To do this, click on 'Export List of Source Ports for Environmental Matching' (in the BW Risk Analysis sub-menu), then type a Directory/Folder pathway in the Request Box:

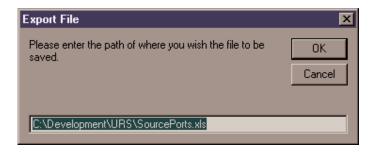

NOTE: Generating this Excel file will cause the Database to <u>automatically</u> review and update the list all BW Source ports, including <u>Deleting</u> any source port no longer associated with any BW tank discharge (Section 2.5) and <u>Deleting</u> the C3 values previously entered for all BW Source Ports, in preparation for receiving a new set of C3 values.

The 'SourcePorts.xls' file lists the UN Port Code, port name, country, decimal Lat/Long position and bioregion of all source ports. It also contains two columns for the C3 values. The layout of its Worksheet is as follows:

UN Port Code	Port Name	Country	BioRegion	PortLatDeci mal	PortLongDeci mal	Environmental MatchingCoefficient	Coefficient Calculated
BGBOJ	Bourgas	Bulgaria	MED-IXA	42.5000	27.4800		TRUE
BGVAR	Varna	Bulgaria	MED-IXA	43.2000	27.9500		TRUE
BRMCZ	Maceio	Brazil	SA-III	-9.6800	-35.4300		TRUE
BRPNG	Paranagua	Brazil	SA-IIB	-25.5000	-48.5200		TRUE
BRSSZ	Santos	Brazil	SA-IIB	-24.0000	-46.3300		TRUE
CNSHA	Shanghai (Shihu) Sh	China	NWP-3a	31.2500	121.5000		TRUE
CUCFG	Cienfuegos	Cuba	CAR-II	22.1500	-80.4500		TRUE
CYLCA	Larnaca	Cyprus	MED-V	34.9166	33.6500		TRUE
CYLMS	Limassol	Cyprus	MED-V	34.6500	33.0200		TRUE
DEBRE	Bremen	Germany	NEA-II	53.0000	8.7800		TRUE

The C3 values can be Copy/Pasted from the green cells in Worksheet 5 of the Excel PED file into the empty "Environmental Matching Coefficient" column, after checking the ports are listed in the same order (if necessary, use Excel's *Data [Sort by...]* tool on the UN Port Codes to make both lists 100% alphabetically matched).

It is likely there will be BW Source Ports which were not included in the PRIMER multivariate analysis because of insufficient environmental data. For these ports, it is possible to take a C3 value calculated for a <u>similar</u> port in the same bioregion, increase it by 'rounding-up', and using this estimation. Care is required when selecting an appropriately similar port (e.g. do not use a river port to provide an estimated C3 for a nearby 'bay' or 'estuary' port, and vice versa. A generous (conservative) 'round-up' provides a precautionary estimate.

Any port given an estimated C3 can be flagged in the BWRA Results Table, by deleting the "TRUE" value (in the adjacent "Coefficient Calculated" column of the Excel file) or replacing it with a "0", "FALSE", "ESTIMATED" or other appropriate text comment.

After saving and closing the 'SourcePorts.xls, its contents can be imported automatically into the BW Database by clicking on the 'Import List of Source Ports Environmental Coefficients...' button (in the 'BW Risk Analysis' sub-menu). The same file pathway 'Request Box' will then appear, asking for the Directory/Folder pathway to the saved file (the pathway previously provided for exporting this file will appear in its box).

If the BWRA results indicate that port/s with an estimated C3 have high risk, the BWRA should be repeated using a calculated C3 value (i.e. find the missing port environmental data, repeat the PRIMER analysis, then import the calculated C3 values before re-running the BWRA).

7.3.2 Importing C3 Values for the 'Next Ports of Call'

The Excel file **NextPorts.xls** is generated automatically by clicking on **`Export List of Next Ports for Environmental Matching**' then giving a Directory/Folder pathway in the Request Box (i.e. same procedure as for the SourcePorts.xls, in Section 7.3.1).

<u>NOTE</u>: Generating this Excel file will cause the Database to <u>Delete</u> all previous C3 values entered for Next Ports, in preparation for receiving a new set of C3 values.

This file lists all 'Next Ports of Call' stored in the BW Database, including their UN Port Code, port name, country, decimal lat/long position, bioregion and the frequency of vessel departures (= Next Port Visits). The 'Next Ports.xls' file contains the same two columns for the C3 data and has a similar layout:

UN Port Code	Port Name	Country	Latitude	Longitude	BioRegion	Frequency Of Next Port Visit	C3 - Environmental Matching	Environmental Matching Calculated
AOCAB	Cabinda	Angola	-5.55	12.183	WA-IV	0.360000014		TRUE
AOLAD	Luanda	Angola	-8.78333	13.2667	WA-IV	0.449999988		TRUE
ARBUE	Buenos Aires	Argentina	-34.6	-58.35	SA-IIA	0.180000007		TRUE
ARCMP	Campana	Argentina	-34.25	-58.97	SA-IIA-RP	0.090000004		TRUE
ARRGA	Rio Grande	Argentina	-53.8	-67.66	SA-I	0.090000004		TRUE
AUBNE	Brisbane	Australia	-27.38	153.16	AUS-XII	0.090000004		TRUE
AUPBY	Port Bonython	Australia	-33.01	137.76	AUS-VII	0.090000004		TRUE
BEANR	Antwerpen	Belgium	51.2333	4.46667	NEA-II	1.360000014		TRUE
BRFOR	Fortaleza	Brazil	-3.68	-38.5	SA-IV	0.270000011		TRUE
BRPNG	Paranagua	Brazil	-25.5	-48.52	SA-IIB	0.090000004		TRUE
BRRIG	Rio Grande	Brazil	-32.03	-52.1	SA-IIA	0.090000004		TRUE
BRRIO	Rio de Janeiro	Brazil	-22.85	-43.13	SA-IIB	0.540000021		TRUE
BRSSZ	Santos	Brazil	-24	-46.33	SA-IIB	0.180000007		TRUE
BRVIX	Vitoria	Brazil	-20.31	-40.33	SA-III	0.090000004		TRUE

The "Frequency of Next Port Visits" column allows the most common destinations to be readily identified (e.g. use Excel's *Data* [Sort by...] tool to re-arrange the ports in descending order).

As with the 'SourcePorts.xls' file, the C3 values can be quickly copy/pasted from Worksheet 5 of the Excel PED file. For ports with estimated C3 values, these can also be flagged by deleting or changing the adjacent "TRUE" cell to any character or text comment.


After saving and closing the file, import its contents to the BW Database by clicking on the 'Import List of Next Port Environmental Coefficients' button (in the 'BW Risk Analysis' sub-menu), and giving the file location pathway in the Reguest Box.

7.4 REVIEWING AND CHANGING THE BWRA FORMULAE

The default formulae and weightings, as used by the Database to calculate the Relative Overall Risk (ROR) for a project standard BWRA, can be checked (or changed) by clicking on 'Review Formula for Calculating the Risk' in the 'BW Risk Analysis' sub-menu.

This launches an interactive **Factor Formulae** display window, showing the various components of the ROR calculation. These components include the 'Risk Category Assessment', which shows the way each ROR value is 'binned' into one of five colour categories used by the GIS display (**Highest**, **High**, **Medium**, **Low**, **Lowest**).

To alter a default setting, select the text of the formula inside the white cell and make the required change. This change will not become 'active' or saved until the **Factor Formulae** window is closed (i.e. close this window before re-running the BWRA analysis). In the following example, the default text of the formula used for the project standard ROR calculation has been selected for editing:

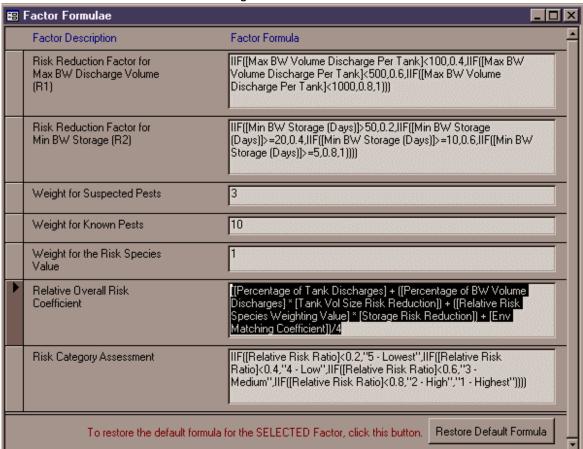

There are many formula or weighting changes which may be made during a BWRA study. For example, if C1 (tank discharge frequency) is considered more important than C2 (tank discharge volume), the influence (weight) of C2 on the ROR result may be halved by multiplying C2 by 0.5. To achieve this, simply insert `*0.5' into the ROR default formula, as follows:

[[Percentage of Tank Discharges] + [[Percentage of BW Volume Discharges] * 0.5 * [Tank Vol Size Risk Reduction]] + [[Relative Risk Species Weighting Value] * [Storage Risk Reduction]] + [Env Matching Coefficient]]/4

Then close the display window to save the change and re-run the BWRA (Section 7.5). Any change must follow the format, function and mathematical rules of MS Access 2000. These are similar but not 100% the same as those in Excel's calculation cells. For example, the logical 'If' is spelled IIF, and each named factor must be inside square brackets [...].

The various format rules and mathematical functions are described in the MS Access 2000 user manual and also in its 'Help' function (if the application has been fully installed).

A formatting error or function name spelling mistake in one of the calculation cells can cause the BW Database to abandon the calculation and report an Error Message. To remove mistakes and return the calculation to the default 'project standard', return to the Formula Display window, select the altered component, then click on the 'Restore Default Formula' button (in the lower-right corner of the Factor Formulae window).

Making a change and closing the Display Window will automatically save the change. The new formula will then be used every time, even if the Database file is closed and reopened later. Any change will remain until the 'Display Formula' window is re-opened and either a new change is made or the 'Restore Default' button is clicked.

Two more examples of the types of change that can be made, are as follows:

(1) For a BWRA that focusses only on toxic dinoflagellate cysts and pathogens (i.e. anaerobes that can survive in ballast tanks for long storage periods), there should be no reduction in risk due to long storage times. In this case, simply replace all the default IIF statements in the calculation cell for 'Risk Reduction Factor for Min BW Storage (R2)' with a single 1, as follows:

1

This will make R2 = 1, so the calculation will apply a uniform 'non-reduction' factor of 1 to all storage times. The values of R2 are displayed in the results table, so these can be checked to confirm the change was made correctly.

(2) In the case of the Weight values, these influence the size of the risk species C4 coefficient, which is denoted in the ROR formula cell as the: [Relative Risk Species Weighting Value]

To <u>uniformly</u> change the sizes of C4 and thus their total influence on the ROR results, replace the "1" default value provided in the 'Weight for Risk Species Value' [w3] cell, with either a higher (=> more influence) or smaller (=> less influence) value. The same effect can be achieved by inserting the C4 multiplier directly into the formula (see the above example box).

If one or both of the Weights which are used on the suspected (**w1**) and known (**w2**) pest species are changed, this will <u>differentially</u> change the C4 values, according to the numbers of these species types in each bioregion (Section 6.1; see also the BWRA Country Report for Sepetiba (Brazil) for a summary of the types of outcomes that can occur by manipulating the C4 weights; http://globallast.imo.org).

7.5 DISPLAYING AND EXPORTING THE BWRA RESULTS

Every time the 'Display Port Risk Assessment' button is clicked in the 'BW Risk Analysis' sub-menu, the Database will re-calculate the BWRA and regenerate the results table. If any change had been made in a BWRA formula or weighting cell, make sure the Factor Formulae window is closed before re-running the BWRA.

The results table automatically ranks the ROR results for each BW Source Port in descending order (i.e. from Highest to Lowest risk ports). The ROR values are listed on the right side, beyond the various columns which list the port details, the C1-C4 coefficients and the risk reduction factors (R1, R2).

The results are calculated using the default 'project standard' methods unless these have been changed (Section 7.4). The 'Next Ports of Call' results are not listed in this table because there are no data for calculating the C2, R1, R2 and C4 values (see Section 7.6).

The results table can be 'copy/pasted' into a MS Word document or an Excel spreadsheet for convenient storage and review on PCs which do not have the MS Access 2000 application.

TIP: To avoid importing non-standard characters and attributes into an Excel spreadsheet, it is best to first copy the table into a Word document. Use 'Select All' (in Access' Edit drop-down menu), then 'Copy' and paste into a blank Word document. Then select and copy the rows of the new Word table, and paste these into an empty Excel spreadsheet. This two-step process will provide a 'clean' worksheet that is amenable to all Excel format and calculation commands.

A copy of the results table can also be saved by the Database as a new Excel file, if the Database is opened using the 'Shift-Key/Open' method. This method gives the Database manager access to all Access functions, including the use of the Query, Records Filter/Sort and Export features to assemble new tables.

There is no need to copy or transfer any results to the ArcView GIS. The GIS will access all BW Database tables automatically if there is an ODBC connection (Section 3; Appendix 4).

7.6 FORWARD RISK ASSESSMENT

The Forward Risk Assessment examines the relative risk of introducing unwanted species via BW uplifted at the Receiving Port and <u>exported</u> to other ports. The largest single quantities of ballasted water will be uplifted by large liquid and bulk carriers when offloading their cargo at a dedicated import facility. The ballasting requirements of general cargo ships, container vessels, Ro-Ro vessels, vehicle carriers are variable and often small. It is rare for these ship types to discharge all their cargo at a single port and depart in full ballasted condition.

Some of the problems in determining how much BW may be taken up, and where and when the ballasted or part ballasted tanks are eventually discharged, are described in Section 7.2.

A prelimnary evaluation is possible using the ArcView GIS, as this displays the two coefficients which give an indication of the 'forward' risk, i.e. the percentage of vessels departing to each 'Next Port of Call' (= 'C1 Forward'), and the environmental matching of these destination ports with the Receiving port (= 'C3 Forward'). The GIS can also display tables of the species assigned by the Database to the Bioregions of the Receiving Port and its Next Ports of Call. The NextPorts.xls file also contains the list of all Next Ports of Call, plus the proportional frequency of departures to these ports (Section 7.3.2).

The preliminary 'forward' assessment can therefore be undertaken by identifying the most frequent destination ports which have a moderate to high environmental matching, then cross-checking the vessel types and probable trading patterns to these ports. The aim is to remove any apparently 'high risk' destination port which is a bunkering or 'direction' port, plus ports that are the frequent destination of laden ships (i.e. departing from cargo export terminals and carrying little or no BW). It is also possible to evaluate the types of species which are present in the bioregion of the Receiving Port and possibly absent in the bioregion of the remaining 'high risk' destination ports.

8 EVALUATING THE PROJECT-STANDARD BWRA RESULTS

The BWRA Database provides 'first-pass' risk assessment results for training, demonstration and evaluation for BW management and research purposes. The project standard (default) BWRA provides a semi-quantitative method which removes as much subjective decision-taking as possible from calculating the risk rankings (Appendix 1). However the reliability of the various risk coefficient values and port rankings remains heavily dependent on the quality of the input data.

Accuracy of the Database outputs relies particularly on the number of collected BWRFs and the quality of these records, as well as on the amount and quality of the port environmental data and risk species taxonomic and presence/absence data, as sought and collated from a wide range of published, non-published and scientist sources.

Responsibilty for a Pilot Country applying the BWRA Database and its results for any BW management purpose rests with the Country Focal Point (CFP) of that country. In the case of the 'first-pass' results produced by the Pilot Country BWRAs during Activity 3.1⁶, these provide baseline outputs and benchmark to help explore and refine the method, including any future improvements and expansion to the input tables and risk calculations.

For example, the Database does not contain all of the NIS identified from the pilot country Port Baseline Surveys (the taxonomic identifications for many groups were still progressing during Activity 3.1). The Database also contains many risk species which are known or strongly suspected to be transferred primarily via hull fouling or aquaculture vectors rather than BW. While their inclusion was actively and unanimously sought by the pilot country scientists who participated in the activity, the project-standard BWRA is unable to discriminate against hull fouling or aquaculture-mediated species.

As noted during the *1st International BWRA Workshop* held in Melbourne in September 2003, the design and open structure of the Database allow future versions to be enhanced and include additional factors such as the principle vector for each risk species, and measure/s of the 'invader-friendliness' of the port's receiving environment, such as its eutrophication status (Appendix 1). Similarly, other tools in the PRIMER package can be used to investigate which of the present 34 port environmental parameters have provided the most value (explanatory power) for separating dissimilar port environments.

Finally, the value of treating the environmental matching coefficient (C3) as a risk-reduction factor (i.e. applied as an 'R3' in the BWRA calculation instead of a surrogate for the incomplete C4 measure of risk species threat; see Appendix 1), will progressively increase as the bioregional distributions and threat status of NIS become clearer from future baseline port surveys (e.g. see GloBallast's *Ballast Water News* **12** [September-December 2003] and the BWRA Pilot Country Reports⁶).

_

GloBallast's newsletters and the six Pilot Country BWRA Reports are available at: http://globallast.imo.org

Appendix 1

Terminology and Methods of Ballast Water Risk Assessment

Table of Contents

A1.	Terms and Definitions	1
A2.	Quantitative Risk Assessments	5
A3.	Semi-Quantitative Risk Assessment	8
	A,3.1 Pros and Cons	8
	A.3.2 Measuring Environmental Similarity	9
	A.3.3 End-Point of the GloBallast BWRA	10
A4.	Hybrid Approaches to BW Risk Assessment	11
A5.	References	13

A.1 TERMS AND DEFINITIONS

"The less a science has advanced, the more its terminology tends to rest upon uncritical assumptions of mutual understanding" (from Quine 1946, as quoted by Carlton 2002).

The understanding and modelling of marine invasions is an emerging immature science, and its terminology is continuing to change and evolve. Presently there is no widely-used convenient glossary of terms providing an integrated set of consistent, logical definitions based on fully understood processes.

All aquatic species invasions are international, and successful efforts to curb and combat them require the collaboration, mutual understanding and willing cooperation of many marine scientists, advisers, bureaucrats and politicians whose first language is not English. For this reason, it is useful to avoid a large number of apparently interchangeable but potentially confusing terms.

The following terms are drawn from those defined, discussed or followed by various publications, including IMO documents as well as Carlton (1985, 1987, 1996), OTA (1993), Cohen & Carlton (1995), Hilliard *et al.* (1997a), Hilliard (1999), Bouderesque & Verlaque (2002) and Hutchings *et al.* (2002).

<u>Non-Indigenous Species</u> (NIS) / <u>Non-Native Species</u>: These terms have exactly the same meaning, and both are more precise than ambiguous and potentially confusing terms such as 'adventive', 'alien', 'exotic', 'feral'⁷, 'foreign', 'invasive' or 'weedy' species.

A feral marine species may be used to describe a NIS which was originally imported by the Aquaculture or Aquarium trade, but then 'escaped' to establish self-maintaining populations 'in the wild'. This usage is the same as that to describe previously domesticated animals or plants which have established 'wild' populations. A feral species is therefore one which, before escaping from a mariculture operation or aquarium, had previously undergone some form of selective breeding for improved growth and husbandry (e.g. the Pacific oyster Crassotrea gigas and the 'aquarium strains' of Calaupera taxifolia).

A <u>Cryptogenic Species</u> is "neither demonstratively native nor introduced" (Cohen & Carlton 1995, Carlton 1996). Many of the widespread and so-called 'Cosmopolitan' species are cryptogenic, because their original, natural distribution has been blurred by centuries of transfers via sail ships, canoes, canal building, aquaculture etc. In some regions, several historical introductions had been assumed to be part of the native marine community until fossil bed and genetic studies have shown otherwise, or at least invoked doubt. Examples include some common foulers and wood-borers, such as the infamous bivalve 'shipworm' (*Teredo navalis*), the striped barnacle (*Balanus amphitrite*), the blue mussels (*Mytilus* spp. complex), the brown mussels (*Perna perna, Perna pictal Perna viridis*) and the so-called Portuguese oyster "*Ostrea angulata*" (until genetic studies in 1998 confirmed its 16th Century introduction from *Crassostrea gigas* stocks in Japan) (Carlton 1999, Zaitsev & Ozturk 2001, Leppakoski *et al.* 2002, Dr F. Fernandes, pers comm.).

The terms <u>Introduction</u> and <u>Introduced Species</u> are still causing confusion, as definitions are often terse and poorly defined. For example, definitions in a recent APEC report glossary ("*An introduced species is a marine species that's movement has been assisted by human activities to an area outside its range"; "an introduction/translocation is the human-assisted movement of an animal to an area outside its natural range") are inconsistent (plants and protists are ignored) and ambiguous. Such definitions do not separate the direct or indirect human-assisted movements of organisms or propagules, from the possible eventual <u>establishment</u> of a viable, self-reproducing population as a result of the introduction.*

Definitions such as: 'An introduced marine species is one which, through direct or indirect human activity, has established a self-reproducing population in a natural or semi-natural habitat outside its native range places the introduction at the end of a chain of events. In this case, the initial pioneering population of founder organisms are not provided the same introduced status as an established, self-sustaining population of acclimated or naturlised organisms.

To avoid ambiguities and acknowledge that transitory marine introductions are known from Australia, America and Europe, definitions in Carlton (1985) and Hilliard *et al.* (1997) may be modified to define an introduced marine species as: "A species which, by human-mediated transfer, has formed at least a transitory population in a region beyond its native range. This population may or may not develop into a viable long term population owing to local factor/s that may affect some aspect of growth, reproduction or recruitment. In these cases only repeated inoculations may allow the continued (or sporadic) presence of a detectable population."

Cohen & Carlton's (1995) described an <u>established</u> introduction as: "an introduced species that is present and reproducing in the wild, and whose numbers, age-structure, distribution and persistence over time suggest that they will continue to be present - barring eradication efforts or a major natural catastrophic event". This needs to be modified to include regions where major natural catastrophic events are not rare (e.g. cyclone, flood, severe winter, etc), plus the potential ability of the naturalised, self-sustaining population to spread (Hilliard et al. 1997, Bouderesque & Verlaque 2002). Thus an established population is "An introduced species with self-sustaining population/s that have persisted in the wild by natural means for several years, including at least one natural climactic event or extrema, and which may be capable of spreading by natural and/or human-mediated means."

<u>Invasive species</u> are a <u>subset</u> of established introduced species. However increasing *ad hoc* use of the term 'invasive' to convey a sense of impact and urgency for virtually any introduction, is now diluting its meaning (Carlton 2002). The IUCN (2000) definition of an invasive species ("*an alien species that becomes established in natural or semi-natural ecosystems or habitat, is an agent of change, and*

threatens native biological diversity") is unhelpful because it invokes unclear and indistinct concepts (Carlton 2002). Similarly, Boudersesque & Verlaque (2002) define an invasive species to be "an introduced species that is ecologically and/or economically harmful species". This definition provides (a) no differentiation between transitional or established introductions, and (b) no bearing regarding the capacity to spread into undisturbed semi-natural and natural habitats, either naturally by themselves or by local human-mediated vectors.

Following Thomson (1991), Hilliard *et al.* (1997) and Ruiz *et al.* (1997), it is more useful to define an invasive species as: "*An established introduction which:*

- has good natural dispersal characteristics;
- tolerates a range of localised environmental conditions;
- forms a common component of the habitats and communities into which it spreads; and
- is demonstrably capable of colonising a wide geographical area in its new environment.

A truly invasive aquatic species is arguably one which spreads without any form of human assistance, into natural or at least semi-natural areas that are not significantly disturbed or 'vacant' due to previous natural or human causes. As summarised by Hutchings *et al.* (2002), an invasive marine species is typically (but not always):

- Common (= relatively abundant and widespread within their native range);
- Pioneering (= among the first to colonise or utilise disturbed and 'vacant' habitats in both its native and introduced regions; includes most port and harbour foulers);
- Tolerant (= can endure a broad range of physical conditions including temperature, salinity, substrate type and pollutants, and often having a tough or quiescent life-cycle stage well-adapted for surviving extreme conditions as well as dispersal);
- Generalist (= e.g. ingests a range of food by filtering, deposit feeding or scavenging); and
- Competitive (= out-competes/overwhelms native taxa by shading, smothering, altering substrates, predating or excessively filtering the water column; achieved by developing large populations via better reproduction, recruitment, growth and/or survival rates, including relative impunity to local predators, parasites and diseases).

Whether or not an invasive species becomes labelled a 'nuisance species' (USA/ Canada), 'marine pest' (Australia/New Zealand/UK), 'harmful species' (IMO), or 'alien invader' (IUCN) simply depends on the agency and the perceived type and extent of its known or suspected impacts on ecological and socioeconomic resources and values. Labels such as 'harmful', 'invader', 'nuisance' and 'pest' stem from terms used for lists and guidelines that were compiled for the emerging policies of governments and international agencies. The definition for a harmful species in the draft IMO *International Convention for the Control and Management of Ships' Ballast Water and Sediments* is: "aquatic organisms or pathogens which, if introduced into the sea including estuaries, or into fresh water courses, may create hazards to the environment, human health, property or resources, impair biological diversity or interfere with other legitimate uses of such areas".

An invasive marine species is typically given one of the above labels owing to its sheer density of numbers, competitive prowess, rate of spread and/or noxious trait. They are not based on any widely agreed scientific definitions. As Carlton (2002) notes, "the concepts and thus words used to describe non-native species vary among countries and among scientists, and in the near future show no clear

indication of achieving either intra-national or international uniformity (or understanding)". For convenience, the above terms can be considered interchangeable and may be defined in line with Carlton's (2002) call to clarify features and processes. For example, "A harmful marine species or pest is one that has demonstrably:

- Reduced native biodiversity via competition, habitat alteration, infection or diverting food-chains;
- Infected, parasitised or otherwise directly or indirectly damaged a commercial or recreationally important fish stock;
- Caused gross fouling to vessel hulls, seawater intakes, jetty piles, navigation infrastructure, mariculture equipment, etc;
- Disrupted aquaculture activities and caused increased public health risk by infection or release of toxins (eq. toxic dinoflagellate blooms); and/or
- Degraded a locally important public amenity or aesthetic value.

It has been suggested that any invasive species which is defined by a 'spread' criterion must, *ipso facto*, be exerting unwanted ecological impacts, in which case <u>all</u> invasive species should fall under the 'harmful/pest/nuisance' umbrella (see Carlton 2002). However, there are many examples of invasions which have not reduced native biodiversity, particularly where they have occupied 'vacant' ecological space/Eltonian niches (e.g. in the Eastern Mediterranean and Hawaii; Bouderesque & Verlaque 2002, Coles & Eldredge 2002, Leppakoski et al 2002). Some have even become a beneficial part of a local fishery. It therefore seems prudent to allow the division between invasive and harmful, at least for the time being.

Terms such as 'suspected pest', 'suspected harmful species' or 'potential next pest' can be used when their predicted or deduced impacts have not been demonstrated through scientific research reports, refereed publications or government regulations and guidelines.

<u>Vectors</u> and <u>Pathways</u>: these are the physical means or agents by which a species is transferred. Ballast water, ships' hulls and the movements of commercial oysters and baitfish in the aquaculture industry are examples. The particular geographic routes taken by these vectors are sometimes termed pathways, although 'pathway' is used by some agencies to refer to the combined vector and route.

Evaluating the characteristics of vectors and their routes is an integral part of NIS risk management, and their routes can be divided into primary and secondary categories. Primary routes transfer aquatic NIS across significant natural barriers (i.e. trans-oceanic and intercontinental routes), while secondary routes help spread and disperse their initial incursion/s between points within a region (i.e. via routes used by domestic and local 'hub' shipping, coastal fishing vessels, pleasure craft, river barges etc).

In line with use of vector (a medical term for the agents such as mosquitos which introduce disease organisms to the human body), <u>inoculation</u> refers to the release, discharge, spawning or dislodgement of viable marine organisms into a new environment in sufficient numbers and/or frequencies to provide more than a negligible chance of causing an introduction (e.g. Hilliard *et al* 1997, Hayes 1997, Hewitt & Hayes 2002, Ruiz *et al.* 2000). The inoculation concept is appropriate because outcomes (port infections) depend on the viability and strength of the inoculum, the degree of exposure of the receiving 'host' environment to inoculation and its current state of 'health'. In the case of port waters, eutrophic and disturbed bays, harbours, estuaries and inland waterways typically contain damaged if not depauperate communities of native biota (= reduced host immunity), and are being increasingly recognised as 'invader-friendly' water bodies.

Although it is theoretically possible for a single release of two individuals (or a single small colony) to eventually generate a viable population in a new environment, the chances are vanishingly small for the majority of aquatic habitats and circumstances. The most likely exception to this rule-of-thumb is probably the transfer of a handful of mature adults of a highly fecund hull-fouling species into a semi-enclosed, protected area (e.g. a poorly flushed harbour basin). A few such adults may release tens of thousands or millions of gametes if sufficient spawning cues and water quality are present. The result could be a successful, if not massive, settlement on relatively vacant artificial substrates in the harbour.

A.2 QUANTITATIVE RISK ASSESSMENTS

Risk is a measure of the likelihood of an event and magnitude of its consequences. Risk can be estimated by qualitative, semi-quantitative or quantitative means, depending on the type and amount of available information and the completeness of the model of the hazard under investigation (e.g. Hayes 1997, Hay & Talyor 1999).

In a typical quantitative risk assessment (QRA) undertaken by engineers, risk is a measured social-economic consequence of an identified hazard, multiplied by the probability of the hazard occurring (a hazardous situation is one waiting for the circumstances and events to occur that produce the unwanted outcome). Careful identification of all hazards, including evaluation of the possible circumstances and consequences, is the first step in any risk assessment process, and is usually termed a detailed <u>hazard analysis</u>. For example, to quantify the risk of an explosion occuring inside a complex petrochemical plant, the potential consequences ('end-points') of an explosion at particular sites within the plant need to be determined by identifying and evaluating:

- (a) the site of each hazardous activity or process within the plant, including its proximity to unprotected workers and other sensitive plant structures, the nearest public street and houses, and the combinations of equipment failures and human errors that would cause an explosion at each site;
- (b) the possible events and circumstances that could cause these failures and errors to coincide; and
- (c) the number of deaths and injuries and extent of plant and property damage from the resultant explosion at each site. The consequences are typically measured and compared in terms of the \$ costs associated with compensation payments, legal fees, rebuilding, lost production, loss of reputation and marketing losses, based on long established guidelines and dollar values used by insurance companies.

A fully quantitative risk assessment will also provide measures of certainty of the calculated risks.

In the case of assessing the biological risk from introducing a marine species, attempting a conventional quantitative risk assessment is impractical as bioinvasion models remain incomplete and there are rapidly increasing uncertainties with each step of the invasion process (i.e. from ballast uptake/ballast tank infection, through voyage survival, release/inoculation and survival in a new environment, to population establishment, spread, impacts and outcomes; e.g. Hayes 1997, Hay & Taylor 1999, Hilliard & Raaymakers 1997, Hayes & Hewitt 1998, 2000, Hewitt & Hayes 2002). Quantifying the risk for unwanted marine species introductions is possible only if:

each potentially harmful species is identified and assessed individually (i.e. a targeted approach);

- the key physical processes and features dictating the chances of uptake, journey survival, release, new environment survival and subsequent reproduction and recruitment are known for each lifecycle stage, vector and route that are involved in the introduction process for each species; and
- the possible damaging consequences following each introduction (i.e. the end-point of the risk analysis for each species) is simplified to minimise the number of steps and uncertainties,

As noted by Hayes & Hewitt (1998, 2000), if the selected end-point is 'the establishment of a NIS population at the site of interest', then the risk needs to express the likelihood of that establishment. If the end-point is some subsequent effect, such as displacement of local species (loss of native biodiversity), then the risk must express the probablity of this type of ecological damage <u>following</u> the establishment of a non-native species. The latter provides useful information to coastal resource managers, but is currently impossible to measure with any useful degree of certainty because of the incompleteness of bioinvasion understanding and modelling (Hewitt & Hayes 2002).

'Establishment of a NIS population at the site of interest' is a relatively simple end-point that carries the implicit assumption that establishment of <u>any</u> non-native species is unwanted. However even this is difficult to predict with useful certainty for a particular port or harbour. A more achievable end-point is 'Inoculation of any known or suspected harmful NIS into a port where its life cycle stages are likely to tolerate local conditions and reproduce'. This defines the <u>release</u> of specifically unwanted NIS into an environmentally similar port as the risk which needs to be managed (e.g. Hewitt & Hayes 2002).

Australia has experimented with quantitative risk assessment for targeted marine pests, assuming these may also act as 'surrogates' for unknown harmful NIS using the same pathways. Constraining the endpoint to a small subset of total available NIS makes the task of acquiring reliable data on the environmental tolerance ranges for the principal life-cycle stages of each species more achievable, although it can still be a lengthy and expensive process.

Inoculation by one or more of a short-list of targeted species is the end-point taken by Australia's Decision Support System (DSS). The DSS is the first BWRA system in the world to experiment with a fully quantitative approach. It was developed to assess the risk of specific ballast tank discharges following individual ship voyages, and was first implemented in July 2001. It was installed by AQIS to assess the likelihood that particular ballast tank discharges by a vessel arriving from an overseas port could inoculate one or more of 12 declared pest species into a port where they could survive (Hayes & Hewitt 1998, Patterson & Colgan 1998, Colgan 1999, Hewitt & Hayes 2002)⁸.

In response to the issue of using a limited targeted species approach for vessels carrying overseas BW with a wide range of 'untargeted' species, a national taskforce on marine pest incursions recommended an interim 'trigger list' of additional pest species in 2000, while CSIRO Marine Research compiled a list of predicted 'next pests' during 2001-2002 (Hayes *et al.* 2002, Williamson *et al.* 2002). Both lists contain species whose impacts reported elsewhere warranted their treatment as unwanted 'next pests', and were produced to help evaluate the priority and scale of a rapid emergency response following discovery of an incursion, and some may be added to a future version of the DSS. As described by

⁸ The DSS can use several levels of assessment, with the level applied for a particular vessel and voyage determined by the amount of available data. The more quantitative 'upper' levels require detailed data about the BW source, uptake and voyage conditions. The 'lower' levels invoke an environmental-matching component (overlap of temperature & salinity ranges) when key data are absent (a typical situation for international voyages). The DSS was started in 2001 and by the second half of 2002 was using its lower levels to assess the intended BW discharges of some 10-12% of merchant ships arriving from overseas ports.

Hayes *et al* (2002) and Williamson *et al*. (2002), the deductive and inductive criteria used to justify a species inclusion on these lists comprised:

- 1. A demonstrable invasive history;
- 2. One or more relevant transport vectors are still operating;
- 3. A demonstrable impact in either their native or invaded ranges on economy, environment, human health and/or amenity.
- 4. Predicted to have potential major impacts in Australia, as inferred from overseas data and the characteristics of Australian marine environments and their communities.

In 2003, CSIRO completed Australia's web-based *National Introduced Marine Pests Information System* (NIMPIS), while the National Introduced Marine Pests Coordinating Group (NIMPCG) reviewed the outcomes of the DSS experiment. It was concluded that the DSS was not useful for overseas arrivals due to the problem of obtaining reliable species presence/absence data for many overseas ports (the DSS defaults to 'high risk' when key data are absent). However the committee recognised the DSS should be useful for managing ballast water discharges by ships trading on Australia's domestic routes (Australian port survey and environmental data are far more complete), provided Australia's seven coastal States would agree to implementing a uniform national system.

The more rigorously and explicitly can a port state identify 'high risk' ballast water, the more justification it gains for applying rigorous control and management measures on vessels intending to discharge it. The targeted DSS approach is therefore attractive to developed countries wishing to reduce the spread of declared pests, particularly via domestic 'port-hopping' and other secondary pathways in their coastal or inland waterways.

The DSS approach appears most likely to suitable for countries and states with long and/or relatively isolated coastlines such as Australia, Brazil, Canada, Chile, Iceland, Hawaii, New Zealand, South Africa and the United States. Most of these countries have busy ports located in several or more bioregions, many of which are already suffering damage from harmful invasive species. However a ballast water DSS is expensive, and its usefulness and cost-effectiveness remains to be proven since it:

- requires a large amount of data covering a range of specific vessel, port, voyage, BW exchange, target species life cycle stages and environmental parameters;
- places a high information technology and management cost burden on the port state;
- can leave the state vulnerable to the introduction or spread of non-targeted organisms unless other surveillance and response measures are implemented.

A DSS also ignores hull-fouling plus other vectors associated with fishing and pleasure craft, but this is true of any risk assessment method that is focussed on the factors which influence ballast-mediated introductions.

A.3 SEMI-QUANTITATIVE RISK ASSESSMENT

A.3.1 Pros and Cons

BWRA approaches which rank the relative risk posed by trading routes and vessel types do not attempt to quantify the risk posed by individual ballast tank discharges. The main features of a useful semi-quantitative approach for estimating the relative overall risk (ROR) of ballast-mediated introductions from particular trading routes are that it should:

- follow objective principles, allowing the data to speak for itself;
- minimise subjective input. Where this type of input cannot be avoided, it needs to logical and defensible on biological grounds, such as use of the logarithmic principle;
- treat the main coefficients of risk equally;
- produce ratio or proportional result values (e.g. 0 1; 0 100%) which permit categorisations into easily understood, simple levels of risk.

There are several reasons why a semi-quantitative approach can be more preferable than a targeted DSS approach. These include:

- Avoids the detailed data requirements and the infrastructure and manpower costs required for developing, installing, operating and responding to a 24 hour DSS;
- The end-point can cover both anticipated and unanticipated invaders;
- By identifying high risk routes, allows more effective focussing of available resources (often limited) on data gap-filling, ballast exchange compliance monitoring, verification sampling and research;
- Can be readily used or shared on a regional basis by neighboring coastal states which share a common sea, sea lanes and/or inland waterways.

Because of the wide knowledge gaps on the types and precise distributions of risk species, semi-quantitative approaches rely on 'environmental matching' as a surrogate indicator of invasion risk. The disadvantages of semi-quantitative rankings of route and vessel type risks include:

- they require regular updates to incorporate changes in shipping trade and pertinent information from the rapidly expanding invasive species databases and publications;
- they may produce overly conservative ranking results which, unless interpreted carefully, could invoke unnecessary compliance monitoring costs;
- their results provide less robust evidence for politically and economically justifying tank discharge management controls, ship inspections and associated shipping delays or penalty schemes etc.
- an over-reliance on matching temperature and salinity ranges can 'miss' invasive species which
 have unusually broad temperature or salinity tolerances (e.g. the Asian bag mussel, *Musculista*senhousia, has a range reported to extend from Vladivostok to Singapore, although it is unclear if
 there are two or more races or sub-species providing this range).

The last point highlights the value of incorporating mechanism/s into the semi-quantitative approach to reduce the chance of it missing harmful species with broad temperature and/or salinity ranges. Thus the method needs to (a) avoid overly simple environmental matching, and (b) be capable of storing,

utilising and updating data on the distributions of known and suspected harmful species in or near the world's trading ports (i.e. allowing their presence to influence the results). An ability to disriminate trading routes by the presence of known and suspected pests species influences a risk assessment's end-point and improves the value of its results (see Section A.3.3).

A3.2 Measuring Environmental Similarity

Measures of environmental matching can be based on simple overlaps of climate region (1 variable) or maximum and minimum water temperature and salinity ranges (i.e. overlaps inside simple plots), or via statistical analysis of many variables (e.g. Hilliard *et al.* 1997, Gollasch 2002, Hewitt & Hayes 2002).

The environmental matching method adopted for the GloBallast BWRA uses 34 variables in an attempt to make the method more sensitive to the tolerances and habitat preferences of marine, brackish and freshwater species. For example, if salinity range (maximum and minimum) were the only variables for identifying estuarine ports, the matching procedure would not separate highly seasonal estuaries (i.e. those which experience a major and sudden salinity decline for several weeks owing to short monsoon or spring-melt season) from those with similar temperature ranges but located in wet equatorial and temperate regions respectively (i.e. where more consistent patterns of river discharge cause tidally-induced salinity fluctuations on a 6 or 12 hour basis).

There are several multivariate methods available in statistical packages such as Statistica, Systat, SPPSX, etc for handling a large group of disparate variables. Methods which measure variable distances between samples (ports) in multi-dimensional space are considered more direct and appropriate for port environmental matching purposes than less direct approaches such as Principal Components analysis (e.g. Belbin 1991, 1995, Belbin *et al.* 1992, Hilliard *et al.* 1997b; see also the PRIMER Manuals).

The most suitable distance metric in the choices provided by PRIMER is the 'normalised Euclidean distance'. 'Euclidean distance' refers to the geometric principles stemming from the Greek philosopher Euclides. It is a 'point-to-point' metric which represents the direct 'diagonal' distance in n-dimensions of space (n = the number of envirnmental variables used). Other distance measures for comparing environmental characteristics include the Gower-Metric and the so-called 'Manhattan' metric (e.g. Gower 1971, PRIMER Manual). Manhattan distance is equivalent to moving between points along the axes only, in the same fashion a person in Manhattan cannot take diagonal 'short-cuts' from one building to another, but must use elevators and grid of streets (i.e. X value + Y value + Z value etc).

'Normalised' refers to the need to convert a variety of scalabe, integer and even categorical variables into a uniform set of variables with unitless values. For example, the port environmental variable 'Distance to nearest river mouth' is measured in kilometres, while 'Tidal range' is measured in metres, rainfall variables are measured in millimetres of precipitation and temperature variables are measured in degrees, etc. Because 'apples cannot be compared with oranges', the scale of each variable needs to be normalised to prevent it biasing the distance measure.

A categorical variable can be treated as a normalisable integer provided its numerical labelling follows a step-wise logical sequence. For example, the variable 'Port Type' is a category which progressivelly moves from inland to open coastal waters in six steps: River port (1), Estuary port (2), Tidal Creek port (3), Breakwater Harbour port (4), Natural Bay port (5) and Offshore jetty/Mooring terminal port (6).

The normalisation step is automatically undertaken by PRIMER when its normalised Euclidean distance metric is selected for the environmental similarity analysis. A set of unitless variables is generated for the distance calculations, with each value of a particular variable representing the number of standard deviations from the mean value of that variable. The unitless values may be calculated before input (e.g. using the formula in the PRIMER manual), in which case PRIMER's 'Euclidean Distance' should be used. However this is unnecessary except for teaching or demonstration purposes.

It is worth noting that a small set of samples (ports) may yield a number of variables with highly skewed or bimodal distributions, which will add little to (if not reduce) the outcome of the similarity analysis. These problematic distributions can be avoided by either increasing the number of ports to provide a more global range, using a suitable transformation before the normalisation step, or substituting them with an equivalent but more normally distributed parameter.

A3.3 End-Point of the GloBallast BWRA

Environmental matching allows semi-quantitative BWRAs to include both targeted and untargeted species, but the end point has to accommodate the current inability to predict the possible establishment and consequences of transferring particular NIS⁹. Thus the end point is more constrained than in the targeted DSS approach, which is aimed at identifying and so avoiding high risk inoculations for a small group of known pests.

Methods to segregate 'harmless' from 'harmful' NIS require clear-cut definitions, good data and reliable bioinvasion models - all of which are currently lacking (Carlton 2002). It is therefore not possible to use a simple dichotomous approach (harmful/harmless), other than for convenient administrative, political or public awareness purposes. A more precautionary basis for the end-point is needed. This is also appropriate for any ports which have nearby mariculture operations and/or sites declared (or informally recognised) for local fish nursery, public recreation, nature conservation or wildlife/biodiversity values.

It was therefore considered appropriate for the 'first-pass' GloBallast BWRAs to categorise NIS into three groups (those with known, suspected or apparently no harmful credentials), based on a subjective evaluation of available species lists and reports comparable to the deductive/inductive

⁹ Of the large numbers of introduced marine species now documented for the coastal waters of Australasia, Europe and North America, it is generally acknowledged that between 5% and 15% have typically achieved an invasive if not harmful status in most regions, and there is consensus regarding the validity of the "10% rule of thumb" noted for terrestrial introductions. This informal measure predicts that ~10% of introduced terrestrial plants and animals will spread and ~10% of these will become pests (e.g. Ruiz *et al.* 1997, Leppäkoski *et al.* 2002, Williamson *et al.* 2002). Effects of marine pests on native biodiversity, ecosystems, fisheries and aquaculture activities range from severe basin-wide impacts (especially in biogeographically-isolated temperate regions containing a high level of endemic species such as the Ponto-Caspian and Mississippi basins) to localised and as yet unclear effect, such as in Indo-West Pacific tropical waters beyond disturbed port environments (e.g. Hutchings *et al.* 2002).

Among some of the infamous introductions of the 20th Century, several species did not spread or show other signs of their invasive prowess and harmful effects in initial years and even decades following introduction, while others have undergone 'boom-bust' cycles (e.g. the Chinese mitten crab Eriocheir sinensis in several parts of Europe). Reasons why an introduced population may take a long time to start increasing in abundance and spreading include the processes of local adaptation/gene selection, the removal of a local physical barrier (or appearance of a new local vector) allowing spread from a previously isolated location, a change to the local pollution and habitat conditions, and/or a gradual regional trend in temperature, rainfall/evaporation and salinity due to climate change. The boom-bust phenomena of the mitten crab is related to trends in climate variables that influence regional winter temperatures and rainfall intensity (in Leppäkoski *et al.* 2002).

approach described earlier (Section A.2). Allocation of NIS and weighting values to the three categories form the only component of the BWRA system requiring subjective input.

In summary, the end point in the BWRA rankings represents, for each BW source port, a portion of the total threat posed by ballast-mediated introductions of potentially harmful species, as inferred from the species that may be present in the source port, the frequency, size and quality of the ballast tank inoculations, and the capacity of the receiving environment to sustain the discharged organisms.

A.4 HYBRID APPROACHES TO BW RISK ASSESSMENT

Semi-quantitative risk assessment systems which can be shifted, as far as their data permit, into a 'hybrid' of the environmental matching and targeted species approaches avoid redundancy and facilitate development, and this flexibility is an integral feature of the BWRA system used for Activity 3.1.

Hybridising features include easy alterations to the way the environmental matching component is used for calculating overall risk, and to the weight which can be applied to individual risk species and overall risk species threat. To appreciate how components can be changed, users need to understand how the following risk coefficients and risk reduction factors can be applied in exploratory calculations of introduction threats posed by BW source ports:

Coefficient C1 - proportion of total number of BW discharges (relative frequency of inoculation),

Coefficient C2 - proportion of total BW volume discharged (relative size of total inoculation),

Coefficient C3 - environmental similarity (on a scale from 5% to 100% similar),

Coefficient C4 - proportion of total threat posed by all risk species present in all BW source ports^{10,11}).

Risk factor R1 - a reduction to inoculation quality, as reflected by BW tank size (values are W4).

Risk factor R2 - a reduction to inoculation size and quality, as reflected by BW tank storage time (the values are W5).

Equation (1) is the default setting used by the project standard BWRA for calculating relative overall risk (ROR) of a BW source port:

(1)
$$ROR = (C1 + [C2 \times R1.W4] + C3 + [C4 \times R2.W5]) / 4$$

This equation represents a logical formula for scientists who consider that environmental matching (C3) should be treated as an independent coefficient of risk, so that it provides a surrogate for the relatively biased information on NIS distributions and their harmful potential:

as identified in each source port's bioregion. This provides a conservative approach and will be necessary until a lot more port surveys are conducted and published.

for a 'Forward' risk assessment which examines the risk posed by BW uplifted and exported from the Receiving Port, C4 is unavailable but C1 may be replaced by the frequency of intended visits to Next Ports of Call (reported on BW Reporting Forms). C2 is difficult to calculate due to lack of reported data. In some cases it is possible to provide BW volume estimates for C2, such as for empty tankers or bulkers departing from an import terminal to a next port of call which is a well-known export terminal. CD-ROMs such as the *Fairplay Ports Guide* help identify specific port trades, and the Galbraith posters which show important bulk terminals and trading routes are also useful.

In equation (1), ROR is a combined measure of the relative 'inoculation' frequency, size and quality, the ability of risk species in a source port to surive and establish at the Receiving Port, and the relative level of threat posed by species likely to be present at this port. The division by 4 keeps the result in the 0-1 range, allowing convenient expression of the ROR as a ratio (percentage) of the total risk posed by all source ports.

The BW source port of Tubarão (in Brazil) provides an example of how C3 markedly influences the ROR outcome¹². Tubarão had a relatively low C1 (ranked 83rd of all Sepetiba's BW source ports) and a relatively low C4 value (0.117; which was 43% of that of the source port posing the highest risk species threat). However its environmental matching coefficient was relatively high (ranked 3rd at 0.79), and the overall risk (ROR) of Tubarão was 13th in the rank of all source ports exporting BW to Sepetiba.

Such outcomes are not uncommon since the default estimation of ROR (Equation [1]) uses the simple mean of the C1-C4 coefficients, and C3 is often the largest of these. This is because the C3 value represents a direct measure of port similarity and is unaffected by the number or bioregional location of other source ports. In contrast, the C1, C2 and C4 values represent proportional measures of the total inoculation frequency, volume and risk species threat posed by all BW source ports, with C4 operating at the bioregion level. Until the resolution and reliability of the C4 values can be improved, it is logical to allow the port-specific C3 values to markedly influence the ROR results.

For BWRAs involving a limited number of BW source ports for which there is reasonable risk species data, it is simple to alter the ROR formula to allow the relative level of threat posed by these species (C4) to occupy a more focal point in the risk calculation. In this case, a marine scientist may prefer to alter the ROR formula so it can:

- (i) treat C3 as a 'risk reduction factor' which influences the size of C4 (rather than using it as an independent 'surrogate' measure of unidentified and unknown risk species); and/or
- (ii) increase the influence of C4 by raising the value of W3 (C4's overall weighting factor) from its default level of 1 (see User Guide Section 6 for explanation of the W1-W3 weights used for C4).

The GloBallast BWRA Database allows the default ROR formula to be changed to achieve these and other options. To achieve option (i), the formula may be altered to apply C3 as follows:

(2) ROR =
$$(C1 + [C2 \times R1.W4] + [C3 \times C4 \times R2.W5]) / 3$$
 [the divisor is now 3 because of the reduced number of summed coefficients].

Equation (2) is logical if the Database contains a reasonably accurate distribution of appropriately weighted risk species for all BW source port bioregions (including native species considered potentially harmful if they establish in other areas). In the case of a source port with a very dissimilar environment (e.g. C3 = 0.2) but in a bioregion containing a relatively large number of risk species (e.g. C4 = 0.3), then Equation (2) will reduce C4 by at least 80% (i.e. to 0.06). If ballast tank storage times on ships arriving from this source port are long (e.g. for voyages between 10-20 days; W5 = 0.6), then C4 will be further reduced to 0.036 (representing an 88% reduction to its initial value).

in Brazil's Pilot Country BWRA Report for the Port of Sepetiba (http://globallast.imo.org)

Equation (2) is less conservative than (1) when the C4 values do not provide reliable measures of risk species threat. The following table shows how Equation (1) produces higher ROR values for typical trading situations (i.e. when no BW source port has C1 or C2 values larger than 0.5):

		Relative	Proportion of	Proportion of	Enviro-	Relative
		Overall	discharge	discharge	mental	Risk species
		Risk	Frequency	Volume	matching	threat
		ROR	C1	C2	С3	C4
ROR = $[C1 + C2 + C3 + C4]/4$	Equation (1)	0.150	0.1	0.1	0.2	0.2
ROR = $[C1 + C2 + (C3 \times C4)]/3$	Equation (2)	0.080	0.1	0.1	0.2	0.2
DOD 104 02 02 041/4	T (1 (1)	0.000	0.0	0.0	0.0	0.0
ROR = [C1 + C2 + C3 + C4]/4	Equation (1)	0.200	0.2	0.2	0.2	0.2
$ROR = [C1 + C2 + (C3 \times C4)]/3$	Equation (2)	0.147	0.2	0.2	0.2	0.2
		1	1	1	1	1
ROR = [C1 + C2 + C3 + C4]/4	Equation (1)	0.350	0.5	0.5	0.2	0.2
$ROR = [C1 + C2 + (C3 \times C4)]/3$	Equation (2)	0.347	0.5	0.5	0.2	0.2
			r		1	r
ROR = [C1 + C2 + C3 + C4] / 4	Equation (1)	0.400	0.6	0.6	0.2	0.2
$ROR = [C1 + C2 + (C3 \times C4)]/3$	Equation (2)	0.413	0.6	0.6	0.2	0.2
			l .		ì	
ROR = [C1 + C2 + C3 + C4] / 4	Equation (1)	0.450	0.7	0.7	0.2	0.2
$ROR = [C1 + C2 + (C3 \times C4)]/3$	Equation (2)	0.480	0.7	0.7	0.2	0.2

Option (ii) above was to leave the default ROR calculation unchanged but increase the <u>size</u> of C4. Note that any weight change to C4 is more sensitive in Equation (1) because C3 has less influence on C4 size than in (2).

Because C4 typically exerts less influence on the ROR result than C3 in the default GloBallast BWRA, Brazilian counterparts undertaking the BWRA Activity for the Port of Sepetiba explored the effect of altering all three default weights used for calculating C4 (i.e. W1 = 3, W2 = 10, W3 = 1; see Section 6 in the User Guide), in order to evaluate their influence on C4 size and ROR outcomes.

Altering W3 to values between 0.2 and 5 showed that only source ports with moderate environmental matching values were sensitive to marked changes in C4 size (Port of Sepetiba BWRA Report; http://globallast.imo.org). Exploring changes to W2 (the weight applied to known pest species) confirmed that such alterations may cause a source port's C4 value to increase, decrease or remain virtually unchanged, depending on the relative number of NIS, suspected and known pest species that had been assigned to the bioregion of that source port. The Brazilian investigation not only showed how altering the various C4 weights can produce unexpected outcomes, but also underlined the potential trap of 'numbers games' due to the inherent behaviour of the relative approach. The trap arises whenever no clear biological rationale, data bias correction or other logical objective forms the basis for altering the default formula and weighting values. On the other hand, exploring the ROR rankings and influence of the individual risk components is an integral part of evaluating semi-quantitative and hybrid BWRA outcomes, so that the importance and contribution of each coefficient, risk reduction factor and weighting value can be recognised and understood.

A.5 REFERENCES

Belbin L, 1991. Semi-strong hybrid multidimensional scaling, a new ordination algorithm. Journal of Vegetation Science 2: 491-496.

Belbin L, 1995. PATN Pattern Analysis Package Users Guide and Technical Reference Manual. CSIRO Division of Wildlife and Ecology, Lyneham, Canberra (ACT), 18 May 1995. 75 and 204 pp.

- Belbin L, Faith DP & GM Milligan, 1992. A comparison of two approaches to beta flexible clustering. Multivariate Behavioural Research 27, 417-433.
- Bouderesque CF & M Verlaque, 2002. Biological pollution in the Mediterranean Sea: Invasive versus introduced macrophytes. *Marine Pollution Bulletin* 44: 32-38.
- Carlton JT, 1985. Transoceanic and interoceanic dispersal of coastal marine organisms: the biology of ballast water. *Oceanography and Marine Biology Annual Review* 23: 313-371.
- Carlton JT, 1987. Patterns of Transoceanic marine biological invasions in the Pacific Ocean. *Bulletin of Marine Science* 41(2): 452-465.
- Carlton JT, 1992. Introduced marine and estuarine molluscs of North America: An End-of-the-20th Century Perspective. Journal of Shellfish Research 11(2): 489-505.
- Carlton JT, 1996. Biological invasions and cryptogenic species. *Ecology* 77: 1653-1655.
- Carlton J, 1999. Molluscan invasions in marine and estuarine communities. Malacologia 41(2): 439-454.
- Carlton JT, 2002. Bioinvasion ecology: assessing impact and scale. In: *Invasive aquatic species of Europe: Distribution, impacts and management*. (E Leppäkoski, S Gollasch & S Olenin eds). Kluwer Academic Publishers, Dordrecht, Netherlands, pp. 7-19.
- Carlton JT & JB Geller, 1993. Ecological Roulette: the global transport of non-indigenous marine organisms. *Science* 261: 79-82.
- Cohen AN & JT Carlton, 1995. *Nonindigenous aquatic species in a United States estuary: a case study of the biological invasions of the San Francisco Bay and Delta*. Report to the US Fish & Wildlife Service (Washington) and the National Sea Grant College Program Connecticut Sea Grant, December 1995, 211 pp (electronic file version down-loaded 1996 from http://nas.nfreq.gov/sfinvade.htm).
- Coles SL & LG Eldredge, 2002. Nonindigenous species introductions on coral reefs: a need for information. *Pacific Science* 56: 191-209.
- Colgan K, 1999. The Ballast Water Decision Support System Design and Implementation. In S. Hillman (Ed): The Ballast Water Problem Where to from Here?. *EcoPorts Monograph Series* No. 19, Ports Corporation of Queensland, Brisbane (pp. 51-58).
- Gollasch S, 2002. Hazard analysis of aquatic species invasions. In: Leppakoski, E., Gollasch, S. & Olenin, S. (eds). *Invasive Aquatic Species of Europe: Distribution, Impacts and Management*. Kluwer Academic Publishers, Dordrecht, Netherlands. pp. 447-455.
- Gower JC, 1971. A general coefficient of similarity and some of its properties. *Biometrics* 27: 857-871.
- Hay CH & M Talyor, 1999. Pros and cons of an 'Insurance Assessment' approach. In S. Hillman (Ed): The Ballast Water Problem Where to from Here?. *EcoPorts Monograph Series* No. 19, Ports Corporation of Queensland, Brisbane (pp. 62-65).
- Hayes KR, 1997. *A review of risk assessment methodologies*. CRIMP Technical Report 13, CSIRO Marine Research, Hobart, Tasmania (116 pp).
- Hayes KR, 1998. Ecological risk assessment for ballast water introductions: a suggested approach. *ICES Journal of Marine Science* 55: 201-212.
- Hayes KR, 1999. The pros and cons of quantitative risk assessment. In S. Hillman (Ed): The Ballast Water Problem Where to from Here?. *EcoPorts Monograph Series* No. 19, Ports Corporation of Queensland, Brisbane (pp. 59-61).

- Hayes KR & CL Hewitt, 1998. *Risk assessment framework for ballast water introductions.* CRIMP Technical Report 14, CSIRO Marine Research, Hobart, Tasmania.
- Hayes KR & CL Hewitt, 2000. Quantitative biological risk assessment of the ballast water vector: an Australian approach. In: Pederson J (Ed): *Marine Bionvasions. Proceedings of the First National Conference, January 24-27 1999.* Massachusetts Institute of Technology, Cambridge MA (pp. 66-80).
- Hayes KR, McEnnulty FR & C Sliwa, 2002. Identifying potential marine pests using deductive and inductive approaches. In: *Proceedings of the Tropical Temperate Transitions Conference* (Fremantle 10-12 July 2002), Australian Marine Sciences Association, Canberra.
- Hewitt CL & KM Hayes, 2002. Risk assessment of marine biological invasions. In: Leppakoski, E., Gollasch, S. & Olenin, S. (eds). *Invasive Aquatic Species of Europe: Distribution, Impacts and Management*. Kluwer Academic Publishers, Dordrecht, Netherlands. pp. 456-466.
- Hilliard RW, 1999. Marine pest invasion risks warm versus cool water ports. In S. Hillman (Ed): The Ballast Water Problem Where to from Here?. *Ecoports Monograph Series No. 19.* Ports Corporation of Queensland, Brisbane (pp. 65-70).
- Hilliard, RW & S Raaymakers, 1997. Ballast Water Risk Assessment for 12 Queensland Ports: Stage 5 Report Executive Summary and Synthesis of Results. *EcoPorts Monograph Series No. 14*, Ports Corporation of Queensland, Brisbane.
- Hilliard RW, Hutchings PA & S Raaymakers, 1997a. Ballast water risk assessment for 12 Queensland ports, Stage 4: Review of candidate risk biota. *Ecoports Monograph Series No. 13.* Ports Corporation of Queensland, Brisbane.
- Hilliard R, Walker S, Vogt F, Belbin L & S Raaymakers, 1997b. Ballast Water Risk Assessment for 12 Queensland Ports: Stage 3B Report Environmental Similarity Analysis. *EcoPorts Monograph Series No. 12*, Ports Corporation of Queensland, Brisbane.
- Hutchings PA, Hilliard RW & SL Coles, 2002. Species introductions and potential for marine pest invasions into tropical marine communities, with special reference to the Indo-Pacific. *Pacific Science* 56: 223-233.
- Leppäkoski E, Gollasch S & S Olenin, 2002. *Invasive Aquatic Species of Europe: Distribution, Impacts and Management.* Kluwer Academic Publishers, Dordrecht, Netherlands. 583 pp.
- OTA 1993. *Harmful non-indigenous species of the United States*. Office of Technology Assessment (US Congress) Report OTA-F-565. US Government Printing Office, Washington DC (391 pp).
- Patterson D & K Colgan, 1998. *Invasive Marine Species An International Problem Requiring International Solutions*. Paper presented at the Alien Species & Marine Litter Seminar, Lisbon, published by Australian Quarantine & Inspection Service, Canberra, ACT (June 1998).
- Raaymakers S & Hilliard RW, 2003. *Harmful Aquatic Organisms in Ships' Ballast Water: Ballast Water Risk Assessment*. In: Alien Marine Organisms introduced by ships in the Mediterranean and Black Seas: workshop proceedings 6-9 November 2002, Istanbul). CIESM Workshop Monographs No. 20, Monaco (pp. 103-110) (http://ciesm.org/publications/Istanbul02.pdf)
- Ruiz GM, Carlton JT, Grosholz ED & AH Hines, 1997. Global invasions of marine and estuarine habitats by non-indigenous species: mechanisms, extent and consequences. *American Zoologist* 31: 621-632.
- Ruiz GM & C Hewitt, 2002. Toward understanding patterns of coastal marine invasions: a prospectus. In: Leppakoski, E., Gollasch, S. & Olenin, S. (eds). *Invasive Aquatic Species of Europe: Distribution, Impacts and Management*. Kluwer Academic Publishers, Dordrecht, Netherlands. pp. 529-547.

- Ruiz G, Rawlings TK, Dobbs FC, Drake LA, Mullady T, Huq A & RR Colwell, 2000. Global spread of microorganisms by ships. *Nature* 408: 49-50 (2 November 2000).
- Thompson JD, 1991. The biology of an invasive plant: What makes *Spartina anglica* so successful? *BioScience* 41(6).
- Walters S, 1996. *Ballast Water, Hull Fouling and Exotic Marine Organism Introductions via Ships A Victorian Study*. Environment Protection Authority of Victoria, Publication 494 (May 1996). Department of Natural Resources and Environment, Melbourne.
- Williamson AT, Bax NJ, Gonzalez E & W Geeves, 2002. *Development of a Regional Risk Management Framework for APEC Economies for Use in the Control and Prevention of Introduced Marine Pests.* Final Report of APEC-Marine Resource Conservation Working Group (MRCWG), Marine and Waters Division, Environment Australia, Canberra. 182 pp ().
- Zaitsev Yu P & B Öztürk (2001). *Exotic Species in the Aegean, Marmara, Black, Azov and Caspian Seas*. Publication No. 8, Turkish Marine Research Foundation (Turk Deniz Arastirmalari Vakfi), Istanbul, Turkey (267 pp).

Appendix 2 Country Prefixes used in UN Port Codes

Country	Prefix for UN Port Code	Country	Prefix for UN Port Code
Albania	AL	Faeroe Islands	FO
Algeria	DZ	Falkland Islands (Malvinas)	FK
American Samoa	AS	Fiji	FJ
Angola	AO	Finland	FI
Antigua and Barbuda	AG	France	FR
Argentina	AR	French Guiana	GF
Aruba	AW	French Polynesia	PF
Australia	AU	Gabon	GA
Azerbaijan	AZ	Gambia	GM
Bahamas	BS	Georgia	GE
Bahrain	ВН	Germany Federal Republic Of	DE
Bangladesh	BD	Ghana	GH
Barbados	BB	Gibraltar	GI
Belgium	BE	Greece	GR
Belize	BZ	Greenland	GL
Benin	ВЈ	Grenada	GD
Bermuda	ВМ	Guadeloupe	GP
Brazil	BR	Guam	GU
Brunei Darussalam	BN	Guatemala	GT
Bulgaria	BG	Guinea	GN
Cambodia	KH	Guinea-Bissau	GW
Cameroon	СМ	Haiti	HT
Canada	CA	Honduras	HN
Cape Verde	CV	Hong Kong	HK
Chile	CL	Iceland	IS
China	CN	India	IN
Christmas Islands	СХ	Indonesia	ID
Cocos (Keeling) Islands	CC	Iran Islamic Republic of	IR
Colombia	СО	Iraq	IQ
Comoros	KM	Ireland	IE
Congo	CG	Israel	IL
Congo Democratic Republic	CD	Italy	IT
Cook Islands	CK	Ivory Coast	CI
Costa Rica	CR	Jamaica	JM
Croatia	HR	Japan	JP
Cuba	CU	Jordan	JO
Cyprus	CY	Kazakhstan	KZ
Denmark	DK	Kenya	KE
Djibouti	DJ	Kiribati	KI
Dominica	DM	Korea Dem People's Rep	KP
Dominican Republic	DO	Korea Republic of	KR
Ecuador	EC	Kuwait	KW
Egypt	EG	Latvia	LV
El Salvador	SV	Lebanon	LB
Eritrea	ER	Liberia	LR

Country	Prefix for UN Port Code	Country	Prefix for UN Port Code		
Estonia	EE	Lithuania	LT		
Lybian Arab Jamahiriya	LY	Singapore	SG		
Macau	МО	Slovenia	SI		
Madagascar	MG	Solomon Islands	SB		
Malaysia	MY	Somalia	SO		
Malta	MT	South Africa	ZA		
Marshall Islands	MH	Spain	ES		
Mauritania	MR	Sri Lanka	LK		
Mauritius	MU	St Helena	SH		
Mexico	MX	St Kitts-Nevis	KN		
Monaco	MC	St Pierre and Miquelon	PM		
Morocco	MA	St Vincent and The Grenadines	VC		
Mozambique	MZ	Sudan	SD		
Myanmar (Former Burma)	MM	Suriname	SR		
Namibia	NA	Sweden	SE		
Nauru	NR	Syrian Arab Republic	SY		
Netherlands	NL	Taiwan Province of China	TW		
Netherlands Antilles	AN	Tanzania United Republic Of	TZ		
New Caledonia	NC	Thailand	TH		
New Zealand	NZ	Togo	TG		
Nicaragua	NI	Tonga	ТО		
Nigeria	NG	Trinidad and Tobago	TT		
Norfolk Island	NF	Tunisia	TN		
Norway	NO	Turkey	TR		
Oman	OM	Turks and Caicos Islands	TC		
Pakistan	PK	Tuvalu	TV		
Panama	PA	Ukraine	UA		
Papua New Guinea	PG	United Arab Emirates	AE		
Peru	PE	United Kingdom	GB		
Philippines	PH	United States	US		
Poland	PL	United States Virgin Islands	VI		
Portugal	PT	Uruguay	UY		
Puerto Rico	PR	Vanuatu	VU		
Qatar	QA	Venezuela	VE		
Reunion	RE	Viet Nam	VN		
Romania	RO	Virgin Islands British	VG		
Russian Federation	RU	Yemen	YE		
Samoa	WS	Yugoslavia (Fed Rep Of)	YU		
Sao Tome and Principe	ST				
Saudi Arabia	SA				
Senegal	SN				
Seychelles	SC				
Sierra Leone	SL				

APPENDIX 3

Use and Origin of the Bioregion System

1 USE OF BIOREGIONS

Bioregions serve multiple purposes and are required for several reasons. For example, many marine regions of the world remain poorly surveyed with a limited marine taxonomy literature. This results in a 'patchy' and artificial distribution of recorded marine species distributions. In addition, few marine species surveys have been undertaken in port environments, and rarely have all ports been surveyed within one bioregion.

Bioregions represent environmentally similar geographic areas. Thus if a species is present in one part of a Bioregion, there is a good chance it can spread via natural or human-mediated processes to other sites in the same bioregion.

A conservative approach can therefore be adopted for a Ballast Water Risk Assessment, whereby a species, if recorded in at least one location in a Bioregion, is considered potentially present at all ports within the boundaries of the same Bioregion.

2 ORIGINS OF BIOREGIONS

The Bioregions in the World Map largely follow those adopted by the International Union for the Conservation of Nature (IUCN) to define areas for marine biological conservation purposes (Kelleher *et al.* 1995), with specific alterations made by CSIRO-CRIMP. They als follow the recent National Introduced Marine Species Information System (NIMPIS) developed in Australia to help reduce the spread of introductions (Section 3).

The nearshore bioregions are based on Kelleher *et al.* (1995), who used groups of local marine experts within 18 separate ocean regions to identify nearshore bioregions based largely on environmental and biological characteristics.

The offshore bioregions are derived from Longhurst (1998), who primarily identified oceanic regions using their physical characteristics. In this context, it is worth noting the following 'rules of thumb' with respect to seawater temperature in commonly-used regional labels:

- <u>Cold Regions</u>: seawater regularly freezes in winter, rarely exceeds 10°C in summer.
- <u>Cool Temperate Regions</u>: inshore seawater occasionally freezes in winter, rarely exceeds 18°C in summer except in shallow zones of inland seas (e.g. Black Sea, Caspian Sea).
- <u>Warm Temperate Regions</u>: seawater never freezes (usually always >8°C) and may reach 26°C in summer, with shallow, protected inshore areas sometimes peaking to 28-29°C.
- <u>Sub-Tropical Regions</u>: seawater typically in the 14 28°C range between winter and summer, but can have a 10-30°C range in restricted basins (e.g. ROPME Sea Area).
- <u>Tropical/Equatorial Regions</u>: never <18°C, can exceed 32°C in summer or ITZ extremes.

The nearshore marine bioregions of Kelleher *et al* (1995) were modified by Hewitt *et al* (2002) for the purposes of introduced marine species distributions as follows:

- their offshore boundary is limited to 200 nautical miles, in order to represent each country's coastal zone and continental shelf; and
- additional bioregions have been added for oceanic islands and island networks (e.g., Hawaiian Islands, Galapagos Islands, Canary Islands).

Hewitt *et al* (2002) also assigned the nearshore bioregions to large-scale biological provinces derived from Sherman *et al* (1990). These provincial associations represent broad-scale patterns of transitions in biodiversity and species assemblages.

3 AUSTRALIA'S "NIMPIS" SYSTEM

The National Introduced Marine Pest Information System (NIMPIS) was developed by the Centre for Research on Introduced Marine Pests (CRIMP) at CSIRO Marine Research. It was developed to provide managers, researchers, students and public with access to up to date information on the distribution and biology of introduced marine species, and some potential control options for those species designated as 'marine pests'. Included in NIMPIS are:

- (a) species known to be introduced to Australian waters, and
- (b) species considered likely to become future introductions to Australia ('next pests').

The information in NIMPIS is held in a structured format that is also used by the Biological Risk Assessment module of AQIS' Decision Support System for ballast water management (<u>AQIS BWM-DSS</u>; see also Appendix 1). As a result, some of the text may appear technical.

NIMPIS is a dynamic information system that is regularly updated, and therefore certain functions, links, species information and applications may be unavailable at times. Information copied from the NIMPIS site, which is still undergoing development, may be cited and used for public education and research. Individual pages include a recommended citation at the bottom of the page.

4. REFERENCES

Hewitt CL, Martin RB, Sliwa C, McEnnulty FR, Murphy NE, Jones T and Cooper S (2002). Editors. *National Introduced Marine Pest Information System*: http://crimp.marine.csiro.au/nimpis (Date of access).

Kelleher, G., Bleakley, C. and Wells, S. (1995). *A Global Representative System of Marine Protected Areas*. The World Bank, Washington DC, USA

Longhurst, A.R. (1998). Ecological Geography of the Sea. Academic Press, San Diego, CA.

Sherman K, Alexander LM and Gold BD (1990). *Large Marine Ecosystems: Patterns, Processes and Yields*. AAAS Press, Washington DC, USA.


APPENDIX 4

Creating an ODBC Connection


To display the BWRA results using the GIS, it is necessary to establish a connection between the BWRA Database and ArcView. An ODBC (Open Database Connectivity) link is used to do this. Information on ODBC is also at: http://webopedia.internet.com/TERM/O/ODBC.html

Follow these steps to permanently establish the ODBC connection:


1. In Control Panel > Administrative Tools double-click Data Sources (ODBC).

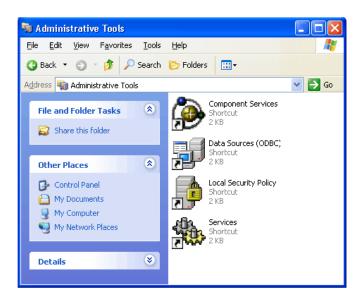


2. Choose Add....

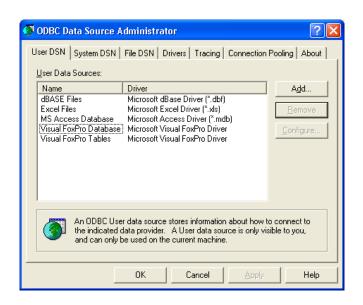

3. Select the Microsoft Access Driver (*.mdb) and click Finish.

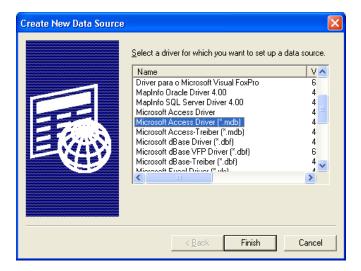


4. Add a **Data Source Name** (i.e. BWRA Database or BWRA Dalian) and then click **Database: Select**.

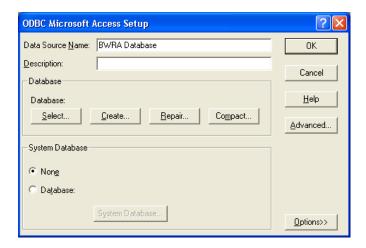


5. Navigate to the appropriate BWRA database.



6. Click **OK**, return to the **ODBC Microsoft Access Setup** dialog and click **OK** again.

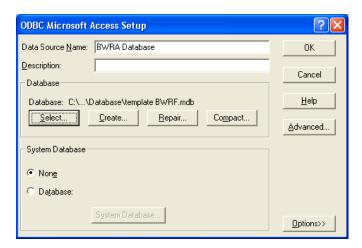

7. You will now see the **BWRA Database** connection appear in the **User Data Sources** list.

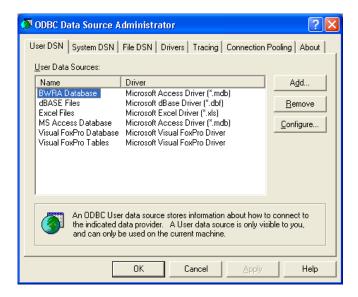

The **BWRA Database** connection is now permanently available for use by ArcView.

APPENDIX 5

Glossary of Maritime Jargon and Ballasting Factors

1 MARITIME JARGON

Aframax — Tankers mainly carrying crude oil (but with separate tanks for other chemicals) designed for African routes and harbour depths. Aframax ships are typically between 97,000 and 107,000 DWT, with a maximum length of 246 meters, beam of 42 meters, and draft of 14.5 meters.

Alliances — Groupings of ocean carriers designed to increase sailing frequencies and realize economies of scale. Typically members of an alliance "pool" their ships in a particular trade, and allocate part of each ship's capacity to alliance members. In this way alliance members can offer far more frequencies than would be possible using only their own ships. Also alliances are used to achieve cost efficiencies, especially in terminal operations. Key alliances (with selected members at present) include: Grand Alliance (Hapag-Lloyd, Malaysia International Shipping Corp., NYK Line, OOCL, and P&O Nedlloyd); New World Alliance (APL-NOL, Hyundai Merchant Marine, and Mitsui O.S.K. Line); and the United Alliance (Cho Yang, DSR-Senator, Hanjin, and the United Arab Shipping Company).

Auto carriers / Vehicle Carriers — Ships similar to "Ro-Ro's" but designed to carry only automobiles. Typically auto carriers enclose a large volume with a low draft (like a big floating box). Multiple decks house thousands of cars. Mainly used on routes from Europe, Japan, Korea and United States to countries with a significant demand for automobile importations.

Ballast — Non-revenue-producing weight used to 'balance' a ship when it has little or no cargo. Bulk carriers and tankers often make the return trip "in ballast" (i.e. empty, without a cargo).

Bulk Carriers, 'Bulkers' or 'Bulkies' — Ships designed to load carry dry cargoes in bulk such as grains, oil seeds, ores, and coal, from point to point. Bulkies may be 'geared' (= has a set of cranes for self-loading/unloading) or 'ungeared' (relies on port equipment to load/unload cargo).

Bunker fuel / 'Bunkers' - typically a standard medium weight fuel oil (MFO) used by ships.

Cape-Size/Cape Class — A type of Bulk Carrier too large for the Suez Canal, and used to carry heavy cargoes (mainly iron ore) around the Cape of Good Hope to and from Asia. Cape-Class ships typically weigh between 80,000 - 199,000 DWT, with a beam between 40 to 50 meters.

CIF — Cost, Insurance and Freight. The cost of a product, plus insurance and freight charges required to deliver the shipment to a specified point.

Conferences — Groupings of carriers designed to limit competition and insure stability by setting and publishing rates for specific trade lanes. Since the U.S. enacted OSRA (Ocean Shipping Reform Act) in 1998, conferences have become largely ineffective with most shippers contracting confidentially with ocean carriers. The largest conference is the FEFE (Far Eastern Freight Conference) for carriers operating between Europe and Asia, followed by TACA (Trans Atlantic Carrier Agreement). At present there is no conference for the transpacific market; instead, there are eastbound and westbound "discussion agreements" that are much looser in structure and have no antitrust protection for joint rate making.

Combo, Combi — Ships that can carry either liquid or dry bulk cargoes (see also OBOs).

Container Ships - carry standards-size ocean containers, either TEUs or FEUs. Most container cargo consists of finished products, capital goods, or higher value semi-manufactured goods.

Cube — the volumetric capacity of a container. A TEU offers an internal volume of approximately 1,150 cubic feet, while an FEU offers approximately 2,300 cubic feet.

Dead Weight Tonnage — see DWT

Density — the number of kilograms per cubic meter (or, in the USA, pounds per cubic foot). Density matters because Containers often are full before they reach their weight-bearing limits. Density is measured in two ways: <u>product density</u> represents the density of a particular product in its packaging (weight divided by volume), whereas <u>stowed density</u> represents the density of a loaded ship (net payload divided by cubic capacity). Stowed density is usually lower than product density because of Container loading inefficiencies (unused space).

Distribution channels — the links through which freight shipments flow from shipper to consignee. There are three primary distribution channels for ocean freight: shipper-direct, carrier-direct and NVOCC. Most bulk trade moves in the shipper-direct channel, where shippers directly charter bulk carriers or tankers, and use the entire capacity of the ship. Most liner trade (containerized traffic) moves through the carrier-direct or NVOCC channels. In the carrier-direct channel, steamship companies employ sales forces to originate traffic from multiple shippers, and bundle other services (such as inland transport) with the core port-to-port transportation product. In the NVOCC channel, a Non-Vessel Operating Common Carrier act as a freight forwarder that combines traffic from multiple shippers into large consolidations that command volume-discounts from carriers. NVOCCs also bundle services in order to create door-to-door transportation.

Draft — depth in water of a ship. Ships typically need at least two or three feet clearance under their keel to avoid accidents. A ship's minimum depth is the draft of ship when empty and in ballast. When harbour or channel depth is less than the fully loaded depth then ships must reduce load.

Dry Bulk Carriers — Ships designed to carry dry bulk cargoes (grain, coal, mineral ores, wood chips, etc).

DWT — Dead Weight Tonnage. DWT is a measure of the <u>carrying capacity</u> of a ship when fully loaded, usually in **Metric tonnes**. DWT is the weight of the cargo, stores, fuel, crew and passengers carried by a ship when fully loaded. It is measured by the difference between the ship's 'lightweight' and its displacement when loaded to its summer freeboard load-line in normal seawater (1.025 specific gravity). DWT can be used to estimate ballast water capacity for many classes of ship.

FCL — Full Container Load. A shipping container which is fully loaded.

FEU — Forty-foot Equivalent Unit. An ocean container measuring forty feet long by eight feet wide by eight feet high. FEUs are used mainly for shipping manufactures, and can hold 8 and 22 metric tons of cargo, depending on the product being shipped. More of the world's trade is being shipped in forty foot containers, but the standard unit of account remains the TEU (two TEUs per FEU). In weight terms, one FEU is typically equivalent to 1.4 TEUs.

FOB — Free On Board. The cost of a product excluding freight transportation and insurance charges necessary to deliver it to the buyer.

Freight forwarder — a company that offers door-to-door transportation shippers, and often sell related services (such as warehouse management) as well. Most major forwarders operate NVOCCs (Non-Vessel-Operating Common Carriers) that combine traffic from multiple shippers into large consolidations that command lower rates from ocean carriers. In most markets, NVOCCs generate the majority of containerized ocean traffic.

GDP (Gross Domestic Product) — the total value of all goods and services produced in a particular country but excluding earnings remitted from abroad.

Geared ships are equipped with their own cranes for loading and off-loading containers at smaller ports. Generally handimax ships (under 50,000 DWT) that carry cranes on board or off loading (conveyer belts and other bulk discharge systems) can be used in smaller ports, especially ports in developing regions.

GNP (Gross National Product) — the total value of all goods and services produced in a particular country including earnings remitted from abroad (by individuals or enterprises). Gross payload includes the tare weight of containers.

Gross Registered Tonnage - (GRT) is a theoretical estimate of a ship's maximum carrying capacity, as it is derived from the total volume of enclosed spaces which are available for cargo, stores, crew,

passengers etc, within the hull and superstructure. GRT does not permit reliable estimates of ballast water capacity.

Handysize — Bulk carriers between 10,000 DWT and 35,000 DWT (48% of world bulk fleet).

Handymax — Bulk carriers of between 35,000 and 50,000 DWT (24% of world bulk fleet).

Laden or Un-laden — A maritime freight term describing if the voyage included cargo or was without cargo. A vessel that is laded has cargo and one that is unladed has no cargo (ie, ballast only).

LCL — Light Container Load. A shipping container which is not fully loaded (see **FCL**).

Length — maximum length of the vessel.

Liner / Liner Service - Ships that travel on a regular and repetitive schedule between a set of ports (usually container ships). Net payload excludes the weight of containers.

Long ton – a British unit of weight (Avoirdupois) equivalent to 2240 pounds (see **Short Ton** and **Metric Tonne**).

LNG - **Liquid natural gas** - LNG (methane, hydrogen) is carried by purpose-built LNG carriers which have very low temperaturepressure containers to maintain a liquid form. Boil off gas is often used aa fuel for the main engine/s, which are adapted to run on gas during the delivery voyage and normal bunker fuel oil on the ballasted return voyage.

LPG - **Liquid petroleum gas** - LPG (butane, propane etc) is generated in petroleum refineries and carried under pressure in LPG tankers to maintain its liquid form. LPG is also carried in palleted cylinders by small cargo vessels delivering fuels and supplies to remote harbours and islands etc.

Metric Tonne – a metric tonne (MT) is equivalent to 1000 kilograms (approximately 2205 pounds) and has the same weight as 1 cubic metre of freshwater (1 $\text{m}^3 = 1000 \text{ litres}$). Note that 1 m^3 of normal seawater (35 psu) has a higher specific gravity and weight (1.035 MT).

 $\it NVO~or~NVOCC$ — Non-Vessel Operating Common Carrier. NVOCCs act as freight forwarders that consolidate multiple shipper's traffic into large consolidations that command lower rates from ocean carriers.

NWS — New Worldscale (= New World-Wide Tanker Nominal Freight Scale). A pricing scale used for measuring daily average lease rates for vessels over 10,000 DWT. The NWS is a table used by ship owners for representative routes for showing time charter rates, using a common set of cost calculations. Included in the scale are distance, port costs, port time (standardized four days), bunker oil costs and other costs, plus \$12,000 per day. A daily rate of .8 NWS (e.g. for a representative 75,000 DWT tanker) means 80% of its daily standard rate for a standard round trip voyage.

OBO's — Ore, Bulk or Oil carrier, which is a vessel capable of carrying dry or wet bulk cargoes that can be used for 'triangular' trades.

O/O— Ore or Oil carriers (vessels similar to OBOs).

Panama Canal — A vital 82 km long international shipping lane which crosses the narrowest part of central America. Built by US Army Engineers and opened in 1914, this canal markedly shortens the distances and voyage times between Pacific and Atlantic ports. Unlike the **Suez Canal**, the Panama has three sets of locks and a freshwater lake sector. Two sets of locks are on the Pacific side (Miraflores and Pedro Miguel Locks) and one set is on the Atlantic side (Gatun Locks). Sea level at the Pacific end is 24 cm higher than at the Atlantic end, and the Pacific end has much greater tides. Lake Gatun is 26 meters above sea level and fed by the Chagres River, which was dammed to make the lake during canal construction. The Gaillard Cut, located between Miraflores and Pedro Miguel, is 9 meters above sea level.

Panamax — The largest types of vessel capable of transiting the Panama Canal (i.e. can just fit into the locks). Panamax vessels do not exceed 80,000 DWT, and are less than 294 m (965 feet) long and 32.3 m (106 feet) wide, and must have a transit draft no more than 12.04 metres (39.5 feet).

Reefer — A refrigerated cargo vessel. Refrigerated cargo may be carried in Reefer vessels (fast ships with insulated cold storage holds or cargo spaces within their hull) or inside Reefer Containers. Container Ships carrying reefer containers may also carry standard containers, but must provide sufficient electric power to each slot which is designated for accommodating a Reefer Container.

Ro/Ro Ships — "Roll-On/Roll-Off" ships are designed to load cargo from front or rear ramps. Designed to carry heavy cargoes of odd shapes but requiring additional rigging or protection from weather (within decks). May be used for automobiles, trucks, tractors, machine tools, generators, etc.

Short ton - a United States unit of weight equivalent to 2000 pounds (see **Long ton**).

Spot charter — Charter of a vessel (sometimes complete with cargo) for a single voyage.

Stevedore — A longshoreman or an individual or company that loads/unloads vessels in a port.

Strings — a group of vessels all operating the same itinerary in order to provide same day-of-week ("fixed day") port calls.

Suez Canal — A 162 km long international shipping lane connecting the Mediterranean and Red Sea. The Suez Canal was built by Ferdinand de Lesseps, opened in 1869 and markedly shortens the distance between Asia and Europe (the alternative is to go around the southern tip of Africa; see **Cape-Size/Cape Class**). There are no locks and the maximum transit draft is presently 16.1 metres (there is a plan to increase depths to allow 22 m draft vessels by 2010). Some 15,000 ships pass through the canal each year, with typical passage times of 11-16 hours.

Suezmax — The maximum size vessel able to transit the Suez Canal. With the exception of very large tankers (VLCCs and ULCCs) and Cape-size bulk carriers, most trading ships can transit the Suez Canal. In the case of tankers, the Suezmax class is typically in the 140,000 - 160,000 DWT range with lengths of 269-274 meters, beams of 44-48 meters and transit drafts up to 16.1 meter(i.e. maximum drafts may be 17.5 m, as some of the cargo can be discharged before entry into the canal). Because of the navigational constraints of the Bosphorus Straits (which links oil exports ports in the Black Sea to the Mediterranean and northwest Europe markets), the smaller dimensions of the Suezmax tankers are allowing them to serve some of the fastest growing oil producing regions in the South Caucasus and Central Asia region.

Tanker – a broad term covering a range of vessel classes which carry liquid or liquified bulk cargo (e.g. crude oil, fuel oil, aviation spirit, LPG, LNG, naptha, other petroleum products or liquid bulk commodities such as caustic soda, vegetable oils or molasses). Most tanker classes are either specialized or dedicated to particular types of cargo, with the majority typically carrying ballast water on their return voyage (e.g. when returning to oil export terminals or refineries in the ROPME Sea Area, Venezuela, Nigeria, etc). The oil tanker market is dominated by the multi-national oil companies. Tankers may be placed on the **Spot Market** or on a longterm **Time Charter**. Tanker owners generally prefer time charters since there is rarely a 'return' cargo. Thus tankers must justify their costs on a single voyage.

Tare weight — the weight of an empty container or pallet. Subtracting tare weight from gross payload yields net payload.

TEU — Twenty foot container for shipping mainly manufactures (sometimes bulk items are containerized but only when transportation costs are low or when the number of empty containers needed to be repositioned is large). A twenty foot container can hold between 5 to 16 MT of cargo (lighter cargo such as clothing and textiles typically cube out, i.e. fill the container space, before reaching the weight limit).

Time Charter — Charter of a vessel for a specified length of time or number of voyages.

Tonne/ton — see Metric Tonne and Short ton.

ULCC/Ultra Large Crude Carrier – the largest type of oil tanker used for carrying crude oil, in the 300,000-360,000 DWT range. ULCCs cannot transit the Suez or Panama canals, having length of ~365 meters, beams of ~60 meters and laden drafts of ~22.4 meters.

VLOC/Very Large Ore Carrier — Dry bulk carriers over 180,000 DWT (0.2% of World Fleet).

VLCC /Very Large Crude Carrier – oil tankers bigger than 'Super Tankers' used mostly for carrying crude oil in the 290,000-300,000 DWT range. As with ULCCs, VLCCs are too large to transit the Suez or Panama canals, having lengths ~330 meters, beams of ~58 meters and laden drafts of 21 meters.

2 FACTORS INFLUENCING BW DISCHARGE VOLUME AND LOCATION

The amount of BW a vessel needs to discharge when visiting a port depends on its type, size and, most importantly, the amount of cargo to be loaded versus the amount of cargo already on board.

The BW is carried in various tanks which vary in number, type and distribution according to ship type and individual design. These tanks are flooded by a combination of gravity feed and pumping, usually through a single or duplicate opening located on the underside and immediately below the pump room (sea chest). In the case of typical bulk carriers and some types of tankers, the ballast tanks are:

- the topside 'wing' tanks. These are a series of tanks which are usually triangular in cross-section and located high up along both sides of the hull. They typically carry 10-20% of the fair-weather ballast capacity, and are designed to inhibit severe, undue rolling when the vessel is empty by raising the centre of gravity. Ballast water from the topside wing tanks can be released by gravity flow from a series of ports located 2-4 m below the moulded deck line, but on many vessels it can also be released via internal piping to the pump room and side ports.
- the fore and aft 'peak' tanks. These carry a further 10-20% of the fair weather ballast capacity, and are located in the bow and stern sections.
- the deep double-bottom tanks (sometimes connected to the side ('hopper') tanks). These are located deep within the hull and hold some 60-70% of the fair-weather ballast capacity. They comprise either separate or confluent compartments, depending on the type, size and age of the vessel. BW from these and the peak tanks must be pumped out through side ports located near the pump room (a compartment usually located immediately in front of the engine room).

In addition to the normal 'fair-weather' ballast capacity, one or more of the cargo holds of bulk carriers and oil tanks of empty tankers can be flooded to further deepen the ship and provide increased stability and handling characteristics during periods of storm-induced high seas and large swells. These temporary 'heavy weather' compartments comprise pre-designated holds which can be filled with 8,000-15,000 tonnes of seawater, which can increase the ballasted weight to 50-60% of DWT (Table 1). The following table compares the fair- and heavy-weather ballast water capacities of common ship types.

Comparison of typical Ballast Water capacities among different Ship Types

DWT		Fair weather	% of	Heavy weather	% of	
Vessel Type	(tonnes)	ballast (tonnes)	DWT	ballast (tonnes)	DWT	
Bulk Carrier	250,000	75,000	30	113,000	45	
11 11	150,000	45,000	30	67,000	45	
" "	70,000	25,000	36	40,000	57	
11 11	35,000	10,000	30	17,000	49	
Oil Tanker	100,000	40,000	40	45,000	45	
Product Tanker	40,000	12,000	30	15,000	38	
Container ship	40,000	12,000	30	15,000	38	
11 11	15,000	5,000	30	-	-	
General cargo ship	17,000	6,000	35	-	-	
" "	8,000	3,000	38	=	-	
RoRo Pass. ferry	3,000	<1,000	_	-	-	

Ships encountering heavy weather en route usually have plenty of opportunity to discharge any extra ballast in deep water, prior to approaching the port. Discharge of heavy weather ballast is done as soon as possible to (a) reduce the amount of immersed surface and so improve fuel efficiency, and (b) maximise the amount of cargo hold drying and airing time. Some ports have "air draft" limitations that require inbound vessels to maintain or even temporarily increase their draft prior to berthing, in order to

pass safely under a low bridge or under the ship loader gantry at a particular berth. However such limitations and practises are generally rare.

In the case of empty bulk carriers and tankers, review data indicate that their fair-weather ballast capacity is typically 35-43% and 26-40% of their DWT respectively. This ballast water is carried in various tanks dedicated to the purpose (in older tankers these include some compartments that originally were cargo tanks, prior to the implementation of MARPOL regulations restricting discharge of oily BW)¹³. The BW coefficients of DWT used in an Australian study of BW discharges are shown in the next table.

Vessel	Bulk	Woodchip	Crude	Product	Chemical	LPG	Container	General	RoRo
type	carriers ¹	carriers	Tankers	tankers	tankers	tankers	ships	cargo ships	vessels
Loading	39% ²	36.0%	-	35.0%	28.5% ³	26.0%	-	17% ⁴	18.0%
Unloading	2.44%	-	3.21%	3.21%	3.21%	3.21%	-	0.55%	0.09%
Both	5.00%	-	5.54%	5.54%	5.54%	5.54%	1.88%	0.68%	1.14%
Av. Capacity	41%	41%	36%	35%	33%	33%	30%	35%	38%

^{1 = 34%} for Ore Carriers; 2 = 30% for grain; 3 = 16% for tallow / veg. oil;

The next table lists the various BW Coefficients used in the Excel spreadsheet for estimating BW discharges from a ship's DWT, in the absence of BW Reporting Forms (**Utilities Folder: BW estimates from port records.xls**):

BW Coefficients used in Excel file for estimating discharges from ship DWTs

	BW discharge as percentage of DWT						
Vessel Type	Cargo Loading	Cargo Unloading	Loading & Unloading				
Gas (LPG/LNG) tanker	26.0%	0.0%	3.2%				
Chemical tanker	28.5%	3.2%	5.5%				
Crude oil tanker	35.0%	0.0%	3.2%				
Oil/bulk ore carrier (OBO)	35.0%	0.0%	3.2%				
Products tanker	35.0%	3.2%	5.5%				
Vegetable oil tanker	16.0%	0.0%	3.2%				
Dry Bulk carrier	38.0%	2.0%	5.0%				
Ore carrier	34.0%	0.0%	0.0%				
Grain carrier	30.0%	0.0%	0.0%				
Woodchip carrier	36.0%	0.0%	0.0%				
Container ship	15.0%	0.0%	1.0%				
General cargo ship	17.0%	3.5%	7.0%				
Refrigerated cargo ship (Reefer)	8.5%	0.0%	0.0%				
Ro-Ro cargo ship	18.0%	1.0%	9.0%				
Livestock carrier	15.0%	0.0%	0.0%				
Vehicles carrier	18.0%	0.0%	3.0%				
Passenger vessel	0.0%	0.0%	0.0%				
Landing Craft/Barges	0-5%	0.0%	0.0%				

Apart from ship type and size, the total volume of BW actually discharged during the ship's approach, berthed, and departure periods, is governed by the following factors:

the amount and type of cargo already on board;

December 2003 [v 1.4] URS Meridian-GIS

-

^{4 = 8.5%} for refrigerated cargo ships; 15% for livestock carriers

¹³ Where a tanker is chartered to load a different product after delivering an incompatible cargo (and hence must wash its cargo tanks), the refinery may operate an onshore treatment facility that may be able to receive some 5,000-10,000 tonnes of oily wash water per tanker, depending on the treatment requirements of previous ships.

- the need, if empty and in ballast, to maintain manoeuvrability and minimise windage (which rapidly
 increases with excessive hull clearance) when negotiating the long and twisting shipping channel
 through Moreton Bay;
- the need to keep the propeller sufficiently immersed to provide optimum propulsion efficiency, reversing power, and minimal wake-induced propeller shaft vibration (QDoT vessel draft regulations administered by the Regional Harbourmaster require at least 90% of the propeller diameter to be immersed when the vessel is at rest); and
- the degree and success of any deep sea ballast exchange undertaken en route (due to possible Port State restrictions or penalties on discharge of un-exchanged ballast water).

Some ships entering a sheltered sea area where strong winds are not forecasted and oceanic swells and wind waves do not occur, may elect to discharge 5-15% of the normal 'fair-weather' ballast volume to reduce their wetted surface area (= slight increase in fuel efficiency, provided the propeller remains properly submerged to prevent shaft vibration and bearing wear). Such preliminary deballasting is usually completed before entering the port's final approaches), but the amount is limited to 10-15% by the need to maintain manoeuvrability, prevent vibrations and to conform to local regulations on vessel trim and navigational safety.

A 5-15% preliminary discharge is typically attained by gravity draining of some of the wing tanks, sometimes accompanied by part-deballasting of one of the peak tanks. This can be undertaken before the ship enters the port's approach channel, or when at anchor and waiting for a vacant berth. It also depends on the prevailing/forecasted weather conditions, the planned cargo loading schedule and the design of the ballast water tanks and ballast pump-out capacity of the particular ship. Gravity draining of a bulk carrier's wing tanks when alongside a berth is strongly discouraged by most terminal operators for safety and maintenance reasons. Ballast in these tanks is therefore either drained internally via piping leading to the pump room or retained, depending on vessel type and its loading/unloading requirements.

Ship masters and Port Pilots are usually very reluctant to allow significant deballasting before or during the berthing phase, with many Ports stipulating that the propeller must remain at least 90% submerged, and draft at the bow must not be less than 2% of the overall length. For a large bulk carrier in ballast with an overall length of 290 metres (>120,000 DWT), these criteria typically require a draft of approximately 8 metres at the stern and more than 5.8 metres at the bow.

If asked, most Port Pilots will agree that ships should not commence (or continue with) a BW discharge when traversing the final approaches to a port or terminal, particularly if the approach is constrained by a narrow navigation channel. Commencing or continuing a BW discharge during this critical stage can generate unwanted, complicating navigational factors in terms of a diminishing draft, unpredictable changes to manouevrability and an increasing windage effect ('sailing').

Thus the vast majority (85-95%) of the normal 'fair-weather' ballast carried by empty bulk carriers or tankers is typically discharged when alongside the berth, almost always in close coordination with the cargo loading program. Deballasting must be closely co-ordinated with loading to avoid placing dangerous stresses on the hull, particularly in the forward sections as a consequence of potential uneven distribution of cargo and remaining ballast.

A key exception can be an outer anchorage area if there are regular or occasional tanker-to-tanker transfers of liquid petroleum gas (LPG) which require BW discharge by the loading tanker. For container ships, general cargo ships or bulk carriers arriving at a port to 'top-off' a part-loaded cargo (taken at a previous port), there is often no need to discharge any BW.

In summary, deballasting is usually pre-programmed and carefully monitored with respect to:

- the anticipated and actual weather and sea state conditions that occur during the arrival, possible anchoring and berthing phases;
- vessel manoeuvrability, safety and port regulations on draft and trim of ballasted vessels (including possible air draft restrictions due to gantries or bridges);
- the amount and type of cargo to be loaded, and the need to record the ship's fore and aft draft at rest.

BALLAST WATER REPORTING FORM

(To be provided to the Port State Authority upon request)

1. SHIP INFORMATION										2. E	BALLAST W	ATER	
Ship's Nan	ne:		Тур	e:		IMO Number:					Specify Units: M ³ , MT, LT, ST		
Owner:			Gro	ss Tonnage:	Call Sign			ı:			Total Ballast Water on Board:		
Flag:			Arriv	val Date:	Agent:								
Last Port a	and Country:		I			I			Arrival Port:			er Capacity:	
Next Port a	and Country:												
3. BALLAS	T WATER T	ANKS	Ballast Wa	ater Manager	ment Plan on	board? Y	ES NO	Managem	ent Plan Imp	lemented?	YES NO		
Total numbe	er of ballast ta	anks on board	d:		No. of tanks	in ballast: _		IF NC	NE IN BALL	AST GO TO	O No. 5.		
No. of tanks	exchanged:				No. of tank	s not exchar	nged:		=				
4. BALL					NKS THAT			TED IN PO	RT STATE				
Tanks/ Holds	В	ALLAST WA	TER SOUR	CE	Circ	BALLAST WATER EXCHANGE Circle one: Empty/Refill or Flow Through					BALLAST WATER DISCHARGE		
(List multiple sources per tank separately)	DATE DDMMYY	Port or Lat/Long	Volume (units)	Temp (units)	DATE DDMMYY	Endpoint Lat/Long.	Volume (units)	% Exch.	Sea Hgt. (m)	DATE DDMMYY	Port or Lat/Long	Volume (units)	Salinity (units)
tarik separately)													
													
		es: Forepeak NOT CONDU						side = TS; C	argo Hold =	CH; Other	= 0		
IF NONE ST 5: IMO BAL	ATE REASOLAST WAT	ON WHY NOT ER GUIDELII ER'S NAME A	T: NES ON BO	DARD (RES.	A.868(20))?	YES NO							

Call Sign: Official call sign.

GUIDELINES FOR COMPLETING THE BALLAST WATER REPORTING FORM

SECTION 1: SHIP INFORMATION

Ship's Name: Print the name of the ship.

Owner: The registered owners or operators of the ship.

Flag: Country of the port of registry.

Last Port and Country: Last port and country at which the ship called before arrival in the current port - no abbreviations, please.

Next Port and Country: Next port and country at which the ship will call, upon departure from the current port - no abbreviations, please.

Type: List specific ship type, write out or use the following abbreviations:

bulk(bc); roro (rr); container (cs); tanker(ts); passenger (pa); oil/bulk ore (ob); general cargo (qc). Write out any additional ship types. GT: Gross tonnage.

Arrival Date: Arrival date at current port. Please use the European date format (DDMMYY)

IMO Number: Identification Number of the ship used by the International Maritime Organization.

Agent: Agent used for this voyage. Arrival Port: This is the current port. No abbreviations, please.

SECTION 2: BALLAST WATER

(Note: Segregated ballast water = clean, non-oily ballast)

Total ballast water on board: Total segregated ballast water upon arrival at current port - with units.

Total ballast water capacity: Total volume of all ballastable tanks or holds - with units.

SECTION 3: BALLAST WATER TANKS

Count all tanks and holds separately (e.g. port and starboard tanks should be counted separately)

Total No. of Tanks on board: Count all tanks and holds that can carry segregated ballast water.

Ballast Water Management Plan on board?: Do you have a ballast water management plan, specific to your ship, onboard? Circle Yes or No.

Management Plan Implemented?: Do you follow the above plan? Circle Yes or No.

No. of Tanks in Ballast: Number of segregated ballast water tanks and holds with ballast at the start of the voyage to the current port. If you have no ballast water on board, go to section 5.

No. of Tanks Exchanged: This refers only to tanks and holds with ballast at the start of the voyage to the current port.

No. of Tanks Not Exchanged: This refers only to tanks and holds with ballast at the start of the voyage to the current port.

SECTION 4: BALLAST WATER HISTORY

BW Source: Please list all tanks and holds that you have discharged or plan to discharge in this port. Carefully write out, or use codes listed below the table. Follow each tank across the page, listing all source(s), exchange events, and/or discharge events separately. If the ballast water history is identical (i.e. the same source, exchange and discharge dates and locations), sets of tanks can be combined (example: wing tank 1 with wing tank 2, both water from Belgium, exchanged 02.11.97, mid ocean). Please use an additional page if you need, being careful to include the arrival date, ship's name and IMO number at the top.

Date: Date of ballast water uptake. Use European format (DDMMYY).

Port or Latitude/Longitude: Location of ballast water uptake.

Volume: Volume of ballast water uptake, with units.

Temperature: Water temperature at time of ballast water uptake, in degrees centigrade (Celsius).

BW Exchange: Indicate Exchange Method: Circle empty/refill or flow through.

Date: Date of ballast water exchange. Use European format (DDMMYY).

Endpoint or Latitude/Longitude: Location of ballast water exchange. If it occurred over an extended distance, list the end point latitude and longitude.

Volume: Volume of ballast water exchanged, with units.

Percentage exchanged: Percentage of ballast water exchanged. Calculate this by dividing the number of units of water exchanged by the original volume of ballast water in the tank. If necessary, estimate this based on pump rate. (Note: For effective flow-through exchange this value should be at least 300%).