

**Setting Up the Red to Work with the AgileCine Cineflex Conversion
User Manual V1.1 February 2015**

To Communicate with the Red from the Cineflex:

Using the RED LCD:

Menu.Settings.Setup.Communications

"Serial" Tab Select "REDLINK Command Protocol" Hit "OK"

To Set Up HDSDI Output from the Red:

Menu.Settings.Display.Monitor Control

"Monitor" Tab

Select "Brain HD-SDI" Hit "OK"

Mode: "Overlay" Hit "OK"

Overlay: "Standard (RED)"

check "Enable"

check "Tools"

"Priority" Tab

Move "Brain HD-SDI" to second from top of list

"Brain LCD" should be at the top of list.

To Enable Control of the Motion Mount ND Filters:

Menu.Settings.Setup.Keys

"Advanced" Tab

Key Source: "Side SSD" Hit "OK"

User Key: "S-SSD User 1 Press" Hit "OK"

Key Action: "Motion Mount: Decrement ND" Hit "OK"

Key Source: "Side SSD" Hit "OK"

User Key: "S-SSD User 2 Press" Hit "OK"

Key Action: "Motion Mount: Increment ND" Hit "OK"

Note: RED Epic sometimes loses it's mind and needs a reboot to default states:

- 1) Power RED off.
- 2) Power up by holding power button down for 20 seconds or until you hear fan blast on.
- 3) Set-up the Serial and HD-SDI Monitor settings.