

# Euromaid

Before using your washing machine, please read this manual carefully and keep it for future reference.

## Washing Machine OWNER'S MANUAL

TL10KG

### **Read This Manual**

Inside you will find many helpful hints on how to use and maintain your washing machine properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your washing machine. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.

## Contents

Safety and precautions.....	2
Installation .....	5
Preparation before washing.....	7
Parts identification .....	8
The operation panel.....	9
Quick start.....	11
The washing process.....	12
Special features.....	13
programme guide.....	14
Cleaning and Maintenance .....	15
trouble shooting.....	16
Technical specifications.....	18

### The energy efficiency testing program:

1. press down the power on button;
2. press down the water level button for more than 5 seconds;  
till the 'pants' starts to flash;
3. press the start/pause button to run the test.

## Safety and precautions

Observe the following items in order to prevent from injuring yourself, others and the damage of property:



Warning

This indicates serious injury or death to human being may be caused.



Caution

This will remind you that injury to people and damage to property may occur.

Please observe following contents of graphics.



This graphic represents [cause attention] ,and detailed cautions will be displayed inside the graphic.



This graphic represents [operation prohibited], and detailed prohibitive items will be displayed inside the graphic.



This graphic represents [forcible execution], and detailed forcible execution items will be displayed inside the graphic.

Please do not disassemble and assemble respectively the machine without authorization.



No dismantling



Please do not insert your hand and take out clothes inside the wash bowl before it is fully stopped.



No touching



Please do not install the machine in excessive wet or rainy areas to avoid electric shocking, catching fire, faults and distortion accidents.



No excessive wet areas



Please do not directly rinse the machine with water when cleaning.



No rinsing




 **Warning**

Please do not let children climb onto the machine or peer into it during the spin cycle as an injury may occur.



Prohibited

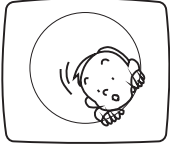

It is prohibited to wash the clothes that have come into contact with kerosene, gasoline, alcohol and other flammable materials.



Prohibited




Please use correct power source.



Please do not pull out or insert the plug with wet hands to avoid electric shocking.



Wet hands are prohibited

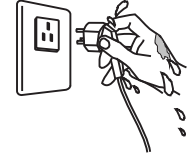


 **Caution**

Please do not use the machine if there is damage to the power cord or plug to avoid electric shocks, short circuit of chance of a fire.




Prohibited

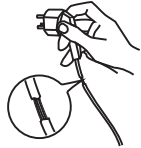

Regularly clean the power plug to remove dust and dirt to avoid contact failure.



Please ensure that the water inlet hose is connected and the tap is opened before washing clothes.

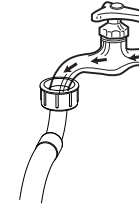

The water temperature shall not exceed 50°C when washing with warm water.




Prohibited



Please pull out plug from the socket if the machine is not in use. Never pull the plug out by the power lead, only by the plug.



Pull out the plug

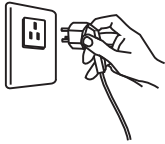


Ensure machine is only plugged into a power point that is earthed correctly to avoid possible accidents or injury.

( earthing )



Earthing

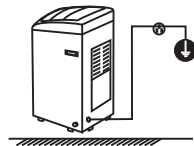

Damage to the power cord or plug should only be replaced by a qualified person.




Prohibited




It is strictly prohibited to place and sit children or lay weights on the washer.



Prohibited

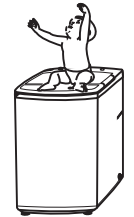

Please insert the power plug tightly.

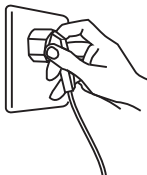

Do not place burning candles, mosquito-repellent incense, cigarette and other flammable items on the washer. No other heating sources such as an electric stove, air heating fan etc. should be placed on or near the machine.



Smoke and fire prohibited



Please do not pull the electric cord when pulling out the plug.



Please do not wash down jacket, raincoat, fishing coat and similar clothes in the washer.




Prohibited




## Installation

### Remove from the packaging

- Remove package and take out the bottom board of the cabinet from the foam cushion.
- Open the lid of the washer to take out accessories.
- Operation or washing on the foamed cushion is strictly forbidden.

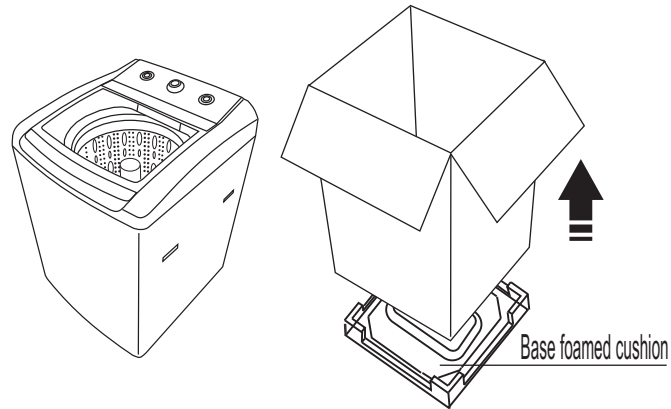

### Installation of the drain hose if not fitted

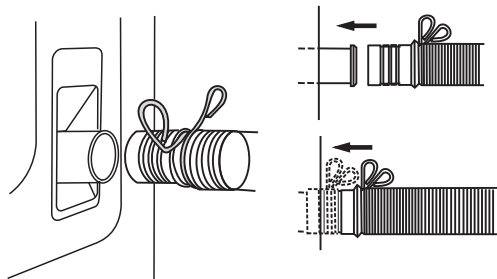


- Completely slide the drain hose over the sewer.
- Fix it with the hoop.  
( As shown in the figure )

## Installation


### Installation of the water inlet hose

Fasten one end of the inlet hose to the tap  
(there is a rubber sealing washer inside)

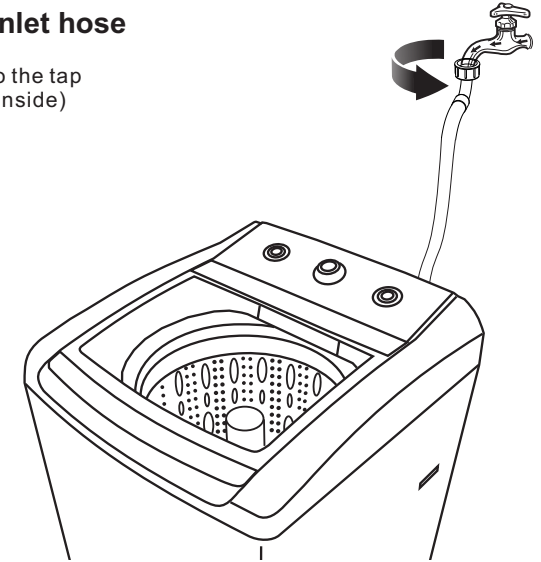


Tightly screw the other end of the inlet hose on the  
water inlet valve . (with rubber sealing ring inside).

Note: When tightening the clamping nut, evenly apply the  
force and do not twist the valve in case breaking  
the valve joint.

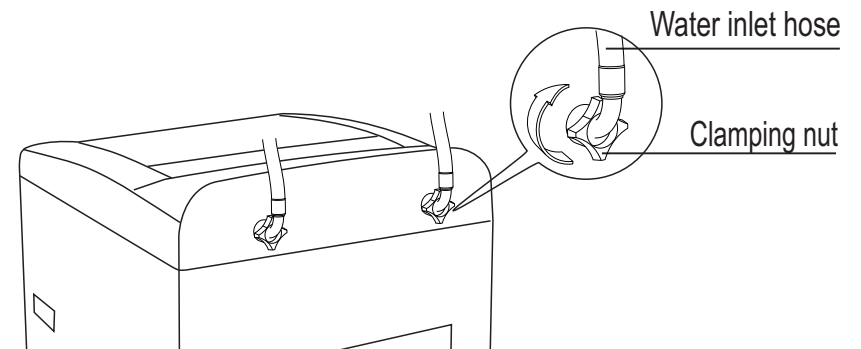

## Preparation before washing

### 1 Adjust the feet to level the machine

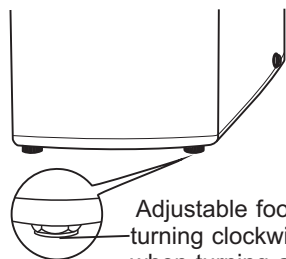

Adjustable foot (extend when turning clockwise and shorten when turning anti clockwise )


(Slightly tilt the machine. Adjust the foot knob to ensure four corners of the machine are steadily contacted with the ground. If the ground is obviously not flat, correction should be made on the ground surface, otherwise the washer barrel will incline and knock the cabinet)

### 2 Install the water inlet hose.

one inlet hose



two inlet hoses

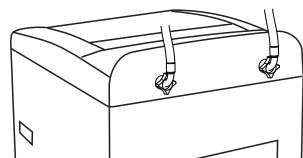


### 3 Connect to the power source.



### 5 Fix the drain hose.

Upper drain

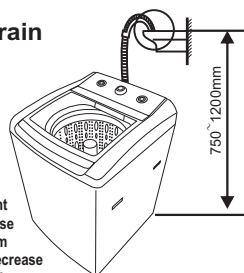

Note:  
The water will overflow when the height of the drain hose is under 750mm the flow will decrease when over 1200mm.

### 6 Put in clothes and suitable amount of washing powder.




#### NOTICE




Before washing, please do take out coins, keys and other hard objects, and close the zip to prevent clothes and barrel from damage.

## Parts identification

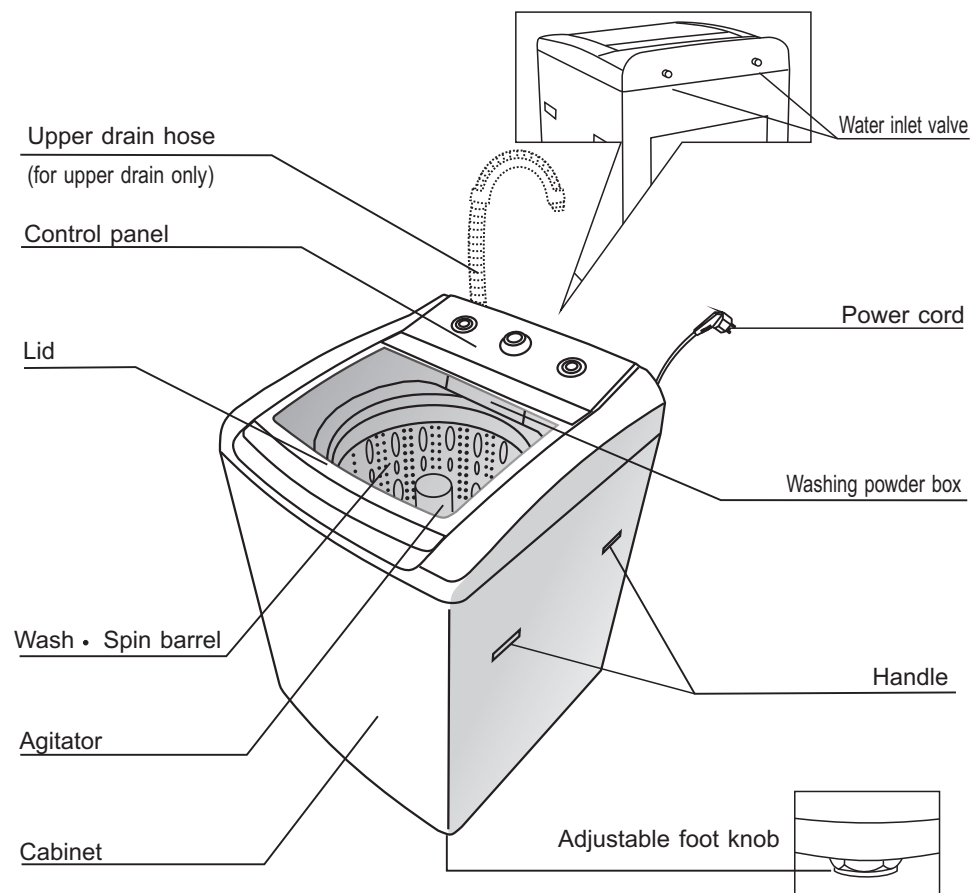


Notice: If the power line damaged, please call maintenance or serviceman of other similar dept. to change.

### Accessories

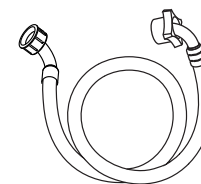

Inlet hose

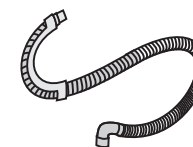


Upper drain hose

# The operation panel



## Water Level Selection

This machine has nine water levels. Press the water level button to select the corresponding water level.

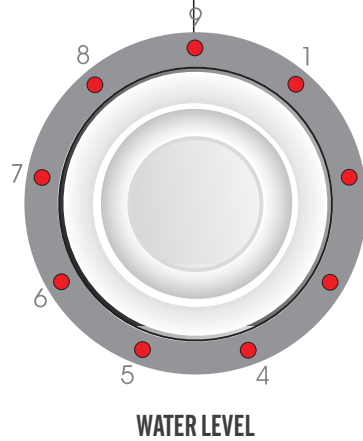

## WASH PROGRESS

WASH PROGRESS contains Long Soak, Medium Soak, Light Soak, Agitating, Rinse and Spin.

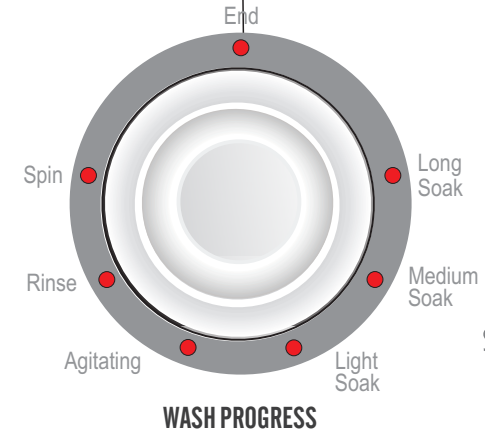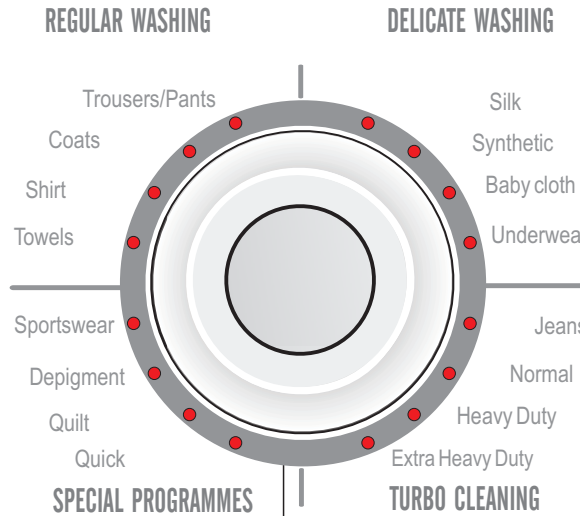

## Power Supply

[Power] button is used to turn on/off the power supply.




## Program Selection

Program divide into four washing mode: REGULAR WASHING, SPECIAL PROGRAMMES, DELICATE WASHING and TURBO CLEANING.  
 REGULAR WASHING contain four programs: TROUSERS / PANTS, COATS, SHIRT and TOWELS.  
 SPECIAL PROGRAMMES contain four programs: SPORTSWEAR, DEPIGMENT, QUILT and QUICK.  
 DELICATE WASHING contain four programs: SILK, SYNTHETIC, BABY CLOTH and UNDERWEAR  
 TURBO CLEANING contain four programs: JEANS, NORMAL, HEAVY DUTY and EXTRA HEAVY DUTY.

## Start / Pause

Press the [Start / Pause] button will switch the machine between start and pause modes.

## Quick start

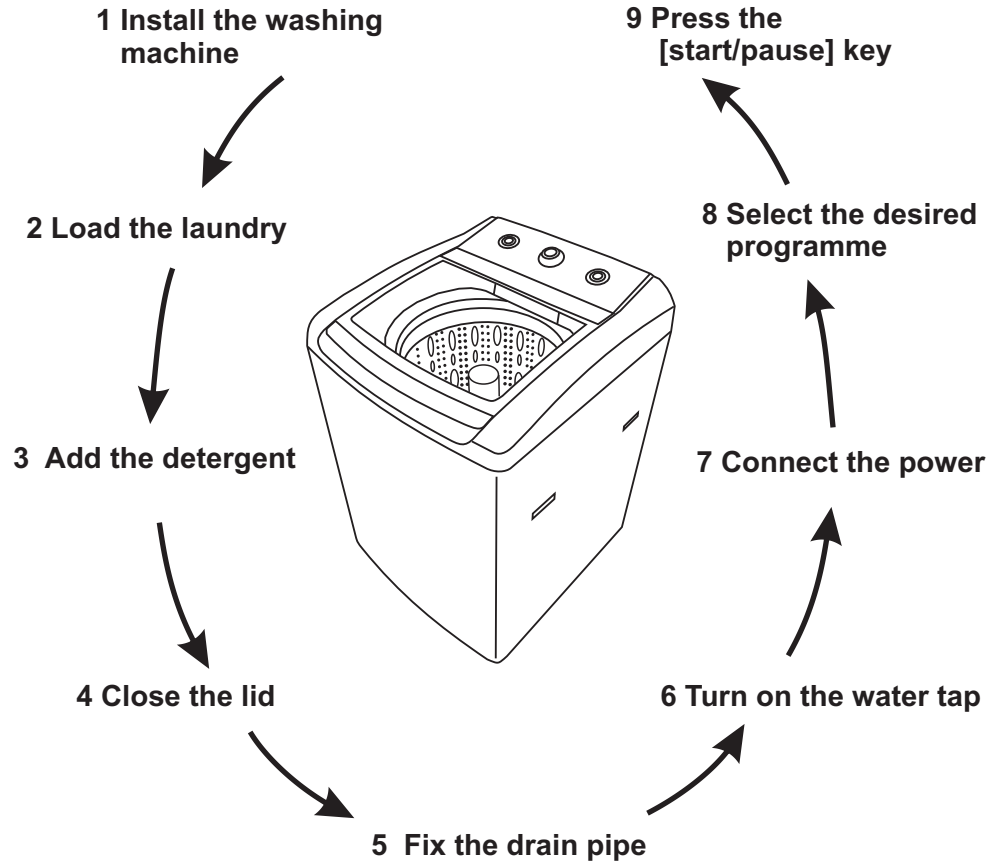

### Programme selection


- 1 Press the [POWER] button.
- 2 Select the programme, then select the water level or other attached functions.
- 3 Press the [start/pause] key.

### When the programme has finished

- When the machine stops, the buzzer will buzz continuously for 6 times and the power will be automatically cut off.
- Turn off the water tap.
- Pull out the power plug for safety.

## The washing progress

press the Wash Progress button to choose the proper washing progress:

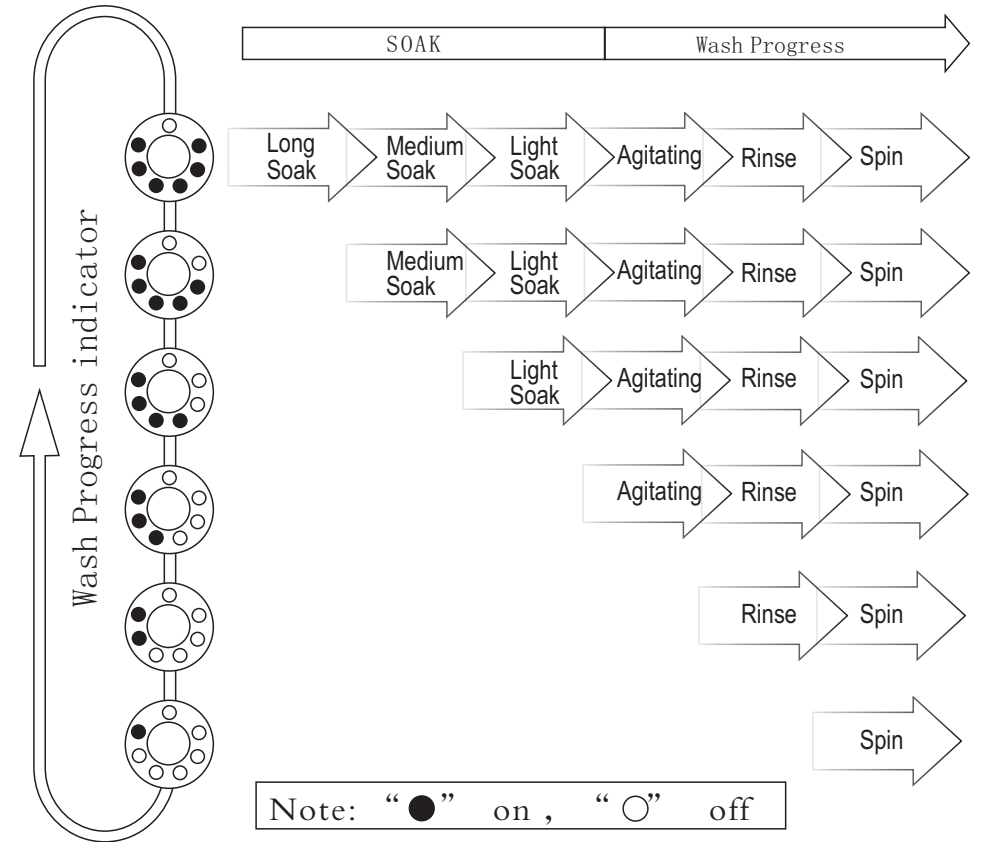

### ⚠ NOTICE

- ! Close the lid before start the machine, otherwise, it will stop automatically during spin process and alarm.
- ! The machine will not work when the filled water does not reach the defined lever.
- ! After turn on the [Power], if the [Start / Pause ] button is not pressed, the power will be automatically cut off after 10 minutes.

## Special features

### TROUSERS / PANTS

This program is used to wash trousers and pants.

### COATS

This program is used to wash coats.

### SHIRT

This program is used to wash shirts, in shorter period and gently.

### TOWELS

This program is used to wash towels.

### SPORTSWEARS

This program is used to wash sportswear with little soaking.

### DEPIGMENT

Wash with cold water only to prevent depigment.

### QUILT

To wash quilt or thick cloths, the low water level is disabled, the flow strength is enforced, the dynamic soakage is added, and the washing time is extended.

### QUICK

To wash light dirty cloths with only one rinsing cycle.

### EXTRA HEAVY DUTY

Similar to 'quilt', wash with strong flow, dynamic soakage, and extended washing time.

### HEAVY DUTY

To wash heavy dirty cloths with three rinsing cycles.

### NORMAL

To wash cloths contaminated by heavy oil, with short soakage and extended washing time.

### JEANS

Similar to 'standard', with 2 rinsing, and short soakages.

### UNDERWEAR

The high water level and hot water are disabled; wash gently in shorter period and more cycles (default as 2).

### BABY CLOTH

The high water level and hot water are disabled; similar to 'standard' washing with 3 rinsing cycles.

### SYNTHETIC

To wash synthetic fibers, the high water level and hot water are disabled.

### SILK

The silk is washed gently with 2 rinsing; the high water level and hot water are disabled.

## Programme guide

Program	water level	default water level	long soak (MIN)	medium soak (MIN)	light soak (MIN)	agitating (MIN)	rinse (TIMES)
<b>REGULAR WASHING</b>	1-9	9				18	2
		8				15	
		6				12	
		7				15	
<b>DELICATE WASHING</b>	1-6	4				9	3
		5				12	
		4				10	
		3				8	
<b>TURBO CLEANING</b>	1-9	6			10	15	2
		7			10	18	
		6		10	10	20	
		8	10	10	20	20	
<b>SPECIAL PROGRAMMES</b>	4-9	6			10	18	2
		7				12	
		8		10	10	15	
		4				9	



## Cleaning and Maintenance


**NOTICE** • Make sure that the power plug is disconnected before the cleaning and maintenance.



• Please keep the machine clean and perform correct maintenance to prolong its service life of washer.

### Cleaning the water inlet hose joint

Unscrew and remove the water inlet hose joint from the washer and clean the screen of the inlet valve with brush.

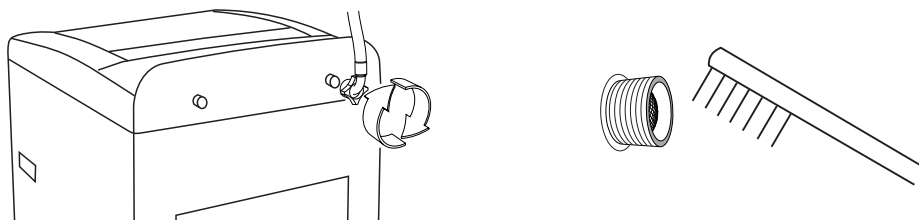

## trouble shooting

If the machine does not work normally, or alarms, please check as the following list. If the problem persists, please contact local service office or the sales service department of our company. The customer should not dismantle the machine without permission.

### List of faults and inspection







Faults	Inspection Items
No water flows in	<ul style="list-style-type: none"> <li>• If the power is off or the fuse is burned out.</li> <li>• If the water supply is cut off or the water pressure is too low.</li> <li>• If the inlet hose is properly connected and the water tap is opened.</li> <li>• If the screen of the inlet valve is blocked by dirt.</li> <li>• If the inlet valve works. (when the inlet valve is switched on, a slight sound will be heard)</li> <li>• If the [Start / Pause] button is pressed after the power switch is pressed.</li> </ul>
No washing	<ul style="list-style-type: none"> <li>• If the power is off or the fuse is burned out.</li> <li>• If the power supply voltage is too low.</li> <li>• If the water reaches to the required water level. (The machine will not work before reaching the required water level)</li> <li>• If it is set to "Delay" washing mode. (It will only start upon the reservation time)</li> </ul>
Abnormal draining	<ul style="list-style-type: none"> <li>• If the water drain hose is placed too high.</li> <li>• If the end of water drain hose is blocked.</li> <li>• If the internal rubber ring of the drain valve is blocked by dirt.</li> </ul>
Abnormal spin	<ul style="list-style-type: none"> <li>• If the lid is closed.</li> <li>• If clothing piled up at one side of the barrel or the clothing put in is beyond the rated capacity.</li> <li>• If the machine is placed unsteadily. (The ground is not flat).</li> <li>• If the motor belt is loose.</li> </ul>

Note: During the de spin process, if cloth are piled at one side of the barrel, it will stop because of unbalance. The user of the machine will detect this and try to correct it by adding water.

If the unbalance situation can not be solved after three try, the use will be asked to replace the clothes manually.

## Trouble shooting

The following is a list of the fault indications and the alarms:

Display	Causes	Solutions	
	Alarm if water filling or making up last over 1 hour.	Check the water tap is opened or not.	Remark: press [Start/Pause] once to unlock the lid; press it again to stop the alarm and resume the operation. Please call our service to repair it, if it fails to get back to the operational state.
	Alarm for draining time out.	Check if the drain hose is placed correctly.	
	Alarm for unbalance during spin.	Please keep the clothes balance.	
	Alarm for communications problem.	Repair	
	Alarm for water level sensor problem.	Repair	
	Alarm for door lock problem.	Repair	Remark: double press [Start/Pause] to stop the alarm from the locker and resume the normal state.

## Technical specifications

Rated power supply	240V~ 50Hz
Input power of motor	680W
Rated washing capacity	10.0kg
Rated spin capacity	10.0kg
Overall dimensions	686 X 718 X 1023
Application water pressure	0.03MPa~0.8MPa
Weight of the whole machine	65kg
Washing mode	Agitate
Draining mode	Upper drain
Spin mode	Centrifugal spin

Note: 'Normal, water level 8' is for a normally soiled cotton load.