Coordinate Reference Systems

Table of Contents

Coordinate Reference Systems	1
Coordinate Reference Systems/Background	3
Coordinate Reference Systems	4
What is a Coordinate Reference System	+ ۸
How is a CBS Specified	+4 ۸
Well known text - WKT	
CPS Transformations	5
CDS and the Deviced Earth WCS94	5 5
Ch5 difu Tile Filysical Editif - WG564	
	כ
Geoguas	8
Components of a GeogCRS	8
GeogCRS Transformations	8
GeogCRS - Datum	9
There may be several GeogCRS for one datum	9
Commonly used datums	9
GeogCRS - Ellipsoid or Spheroid	11
Historical Ellipsoids	11
Petrosys spheroid.dat file	11
GeogCRS - Prime Meridian	12
GeogCRS - Transformations	13
GeogCRS Transform Methods	
Selecting the Most Appropriate Transform	
ProiCRS	14
Selecting an Appropriate Projected CRS	
ProiCRS - Projection	16
ProjCRS - Projection Type	17
Projection Characteristics	
Conic and Cylindrical Projection Types	17
Projection Parameters	17
Projection ratafileters	/ ۱۷ ۱۷
LITM and Other Sones	10
Poferoncos	
Neterences	19 רכ
Coordinate Reference Systems/Data Management	
International CBS Standards	
EPSG and OGP	
Other CRS Sources	23
XMI Encoding - GMI	23 24
Patrosus CBS Stores	25
Oracle and SOI ite Versions of CBS Definitions	25
Project and Site CPS Definitions	25 25
Grid Shift Files for Datum Conversions	25 25
Broiget Default CPS	2J 25
SOLite Database Notes	25
Detrocyc EDSC CDS Provisor	2J רכ
Petrosys Er3G CR3 Blowsel	
Petrosys Data Store CRS References	
Petrosys Gria Files	
Grid Sampled Data (GIP) Files	
Petrosys Contour Files	
Petrosys Polygon Files	
Petrosys Fault Files	
Well Data File	
Domap Database	
Culture and Seismic SDF Files	
Unknown and Undefined CKS in Petrosys Data	29
Assigning LKS to Existing Petrosys Files	

Projection Types from Older Versions of Petrosys	
Submitting CRS Proposals	31
Updating your CRS Definitions	32
Coordinate Reference Systems/Tools	33
Choosing an Existing CRS	34
Defining a New CRS	
New ProjCRS based on an existing GeogCRS	35
New Datum	35
New GeogCRS based on an existing Datum	36
GeogCRS Transformation Editor	
Defining New Transforms	37
Selecting Existing Transforms	38
GeogCRS Transformation Configuration - Project	40
GeogCRS Transformation Configuration - Site	41
ProjCRS Editor	42
ProjCRS Editor - GeogCRS Component	43
ProjCRS Editor - GeogCRS Datums	44
ProjCRS Editor - GeogCRS Ellipsoids	45
ProjCRS Editor - GeogCRS Prime Meridians	46
ProjCRS Editor - Projected CRS	47
ProjCRS Editor - Projections	48
Reporting Your CRS Use	50
CRS Information in Scale Bars and Title Blocks	50
CRS Information in Gridding, Volumetrics and other XML Reports	51
Setting CRS in Existing Files	53
Assigning CRS to a Group of Files	53
Converting Project Coordinates	54

Coordinate Reference Systems/Background

Coordinate Reference Systems

There are no survey markers in the ocean.

To work with petroleum EP information we are totally dependent on our knowledge of present and past survey references and techniques (geomatics).

Coordinate Reference Systems (CRS) define the surveying and geomatics parameters on the basis of which specific location data have been measured and displayed. They allow us to relate observations made in different surveys and at different times to one another, as well as to the physical Earth, in a systematic way.

If your work involved data that was all acquired using current technology over a small area by reliable contractors and based on the work of an established



national mapping standard, then you might just be able to work without thinking about CRS. In Petroleum exploration and production we are always interested in the inclusion of earlier work, or work by other companies, in our interpretations and maps.

An understanding of CRS is therefore essential for anyone working with EP data.

What is a Coordinate Reference System

A coordinate is a definition of one location, typically expressed in a geographic (latitude, longitude and elevation) or a projected (easting, northing, elevation) form.

A coordinate reference system is a collection of knowledge that defines the measurement framework in which a coordinate is defined. This collection of knowledge may include information such as a geodetic datum, a map projection, and a range of mathematical transformations.

To specify a coordinate in a manner that it can be used in conjunction with data from various sources, the coordinate reference system within which the coordinate is defined needs to be known.

How is a CRS Specified

CRS are referred to by names or collections of data that vary widely between systems and locations. CRS references can be confusingly similar. The EP spatial analyst needs to be vigilant for potential mis-interpretations of what a given CRS reference means, and to encourage the use of precise and industry standard CRS specifications.

The most widely recognised form of a CRS reference is a common name such as 'NAD27' or 'AMG zone 52'.

A name such as 'NAD27' can mean different things in different contexts, for example it might refer to a geodetic datum or to a 2D or 3D geographic CRS.

A more specific and unique way of referring to CRS is through the use of 'EPSG codes'. The EPSG (European Petroleum Survey Group) initiated a standardisation of CRS used in the petroleum industry, in which each CRS is assigned a unique numeric code. These codes and their underlying definitions are published in a database currently maintained by the OGP surveying and positioning committee.

Well known text - WKT

EPSG codes, whilst concise and unique, are dependent on their definition in the EPSG database, and on a knowledge of that database. As this cannot be guaranteed, a common form of CRS specification is to include as much information as is known about the CRS with easily recognised key word labelling as a 'well known text' or WKT string.

The WKT specification for the GDA94 MGA zone 55 CRS, for example, can look like:

```
"PROJCS["GDA94 / MGA zone 55",
GEOGCS["GDA94",DATUM["Geocentric Datum of Australia 1994",
SPHEROID["GRS1980",6378137,298.257222101,AUTHORITY["EPSG","7019"]],
AUTHORITY["EPSG","6283"]],PRIMEM["Greenwich",0],
UNIT["degree",0.0174532925199433],AUTHORITY["EPSG","4283"]],
PROJECTION["Transverse_Mercator",AUTHORITY["EPSG","17355"]],
PARAMETER["latitude_of_origin",0],PARAMETER["central_meridian",147],
PARAMETER["scale_factor",0.9996],PARAMETER["false_easting",500000],
PARAMETER["false_northing",10000000],
UNIT["metre",1],AUTHORITY["EPSG","28355"]]"
```

CRS Transformations

If we have two coordinates that are measured in the same coordinate reference system, then we know that operations comparing these coordinates, such as distance, bearing and area computations, will be consistent and repeatable within that measurement system.

If we have two coordinate measured in different coordinate reference systems, and we have a unique coordinate transformation between these coordinate reference systems, then operations comparing coordinates measured across the two systems will be consistent and repeatable to within the mathematical correctness of the transformation.

CRS and The Physical Earth - WGS84

Our ability to relate coordinates precisely to physical points on the Earth depends on the correctness of the CRS transformations available relative to the surveying machines that we use to measure the coordinate on the ground. At the time of writing, the most commonly used surveying machines are based on 'Global Positioning System' or GPS technology, and are usually (but not always!) programmed to give readings in the 'WGS84' coordinate reference system.

To use a range of different CRS on the same map or in the same interpretation, a set of transformations between these must be available. In general, a transformation from a CRS to WGS84 is usually a prerequisite for current mapping, providing a common standard through which transformations for other combinations of CRS can be constructed.

The WGS84 CRS is designed to precisely locate points in a smooth satellite orbit rather than on the Earth's somewhat irregular surface. Operations such as distance and area measurements computed using WGS84 locations for points on the Earth's surface have a degree of error which is based in part on the deviation of the Earth's shape at that point relative to the ideal shape orbited by the satellite. In addition, the absolute location of physical parts of the Earth relative to the satellite orbit will change over time owing to processes such as continental drift. As a result, present day locations are frequently specified in a regional CRS (such as NAD83, GDA94 or NZGD2000) other than WGS84.

Known Problems in CRS

Using CRS correctly does not by itself guarantee that your spatial data analyses and maps will be perfect or unique:

1. If you mix data from different CRS in one map or computation then coordinate

transforms will be used by the software. Not only are all transforms an approximation, there are usually several types or versions of transform available to convert within a given CRS pair. Running the same job after selecting a different transform method will produce different results.

2. Projected CRS, the process by which coordinates on an ellipsoid are mapped to a flat display, all involve some distortion. Computations based on the eastings and northings from projected CRS, such as areas, lengths and volumes, are all subject to the errors brought in by this distortion.

CRS Types

There are several types of Coordinate reference system, catering for different levels of precision and viewing requirements. In these definitions the 'Geoid' is the actual physical planet Earth:

2D Geographic CRS	'Horizontal' coordinates are specified in angular units (latitude and longitude) relative to a specific reference ellipsoid, which is the assumed approximation of the geoid. Elevations are not included as part of the coordinate.
3D Geographic CRS	'Horizontal' coordinates are specified in angular units (latitude and longitude) relative to a specific reference ellipsoid, which is the assumed approximation of the geoid, and elevations are specified as the 'vertical' offset from the reference ellipsoid.
Projected CRS	'Horizontal' coordinates are specified in units, such as northing and eastings in meters, measured on some planar surface which approximates the Earth's surface.
Geocentric CRS	All coordinates are expressed in a 3D rectangular framework, with the origin at a presumed centre of mass of the Earth.
Engineering CRS	Coordinates are expressed in some local coordinate system selected for convenience in precise relative positioning, rather than for their relation to distant locations or measurements made at some other time.

Petrosys currently only uses 2D geographic and projected CRS. Any reference in this documentation to a 'Geographic CRS' or 'GeogCRS' is a reference to a 2D geographic CRS.

To correctly specify a location as a latitude and longitude, there must be a reference to the associated geographic CRS somewhere.

To correctly draw a point on a map, there must be a reference to a projected CRS.

GeogCRS

A Geographic CRS, or GeogCRS for short, allows locations to be defined on a spherical coordinate system taking into account the shape of the Earth.

The Earth does not have a physical 'mid point' that provides an absolute and unique origin for coordinate systems. It deviates not only from being a sphere but also from being a well formed ellipsoid. In addition, the mathematics applied in the definition of the coordinate system can use different units, origins, and methods for taking into account elevations.

A GeogCRS encapsulates the information required to uniquely define how a consistent suite of survey data is related to our view of the Earth.

Components of a GeogCRS

A GeogCRS includes the following information:

- The ellipsoid or spheroid, being a version of an ellipsoidal shape to the Earth, which is not positioned at any specific place relative to it
- The datum, being a specific way of positioning the ellipsoid relative to the Earth, and which can also define local variants from the ellipsoidal shape.
- Units of measure, which in are usually degrees for latitude and longitude. Other angular units not normally used in geomatics include radians and grads. A circle has 360 degrees, 2xpi radians, or 400 grads.
- Additional metadata about the CRS, such as the standards organizations responsible, data sources and remarks.

GeogCRS Transformations

Geographic CRS transformations can be defined that allow location definitions in one GeogCRS to be converted to being consistent with another GeogCRS. Such transformations are necessarily approximations. It is common to have many different transformations applied in different circumstances depending on accuracy relative to location, computational speed restrictions, and requirements for elevation to be included.

By itself, a GeogCRS can be assigned to a spatial data set to complete the knowledge of what that spatial data means even if no associated transformations exist.

To use such spatial data in a situation where data from multiple GeogCRS exist, appropriate transformations must be available.

A transformation to WGS84 is usually a prerequisite to general use of information that includes a range of GeogCRS's.

GeogCRS - Datum

The datum in a geographic CRS defines how the ellipsoid is positioned relative to the actual Earth, and may include further detailed deviations from the ellipsoid in specific regions.

There may be several GeogCRS for one datum

It's tempting to think of a GeogCRS as being equivalent to a datum, for example to think of the GeogCRS 'GDA94' as being the Australian GDA94 datum.

In many cases you can make the simplifying assumption that the 2D GeogCRS with the name of a datum is 'the datum' as used in Petrosys.

However you should always bear in mind that there may be different GeogCRS that refer to the same 'datum' for various reasons, such as

- 3D GeogCRS, which include elevation information, are more precise than 2D ones. Gravity data points, for example, are often defined on a 3D GeogCRS. If you apply 2D GeogCRS transformations to such data, you will lose significant information.
- There may be minor variants of an ellipsoid that have been used historically with the same datum, resulting in multiple GeogCRS.
- Organisations have been known to use different GeogCRS's to identify 'uncertainty' in the allocation of datums where the datum had not been recorded with the original data.

Commonly used datums

The ITRF (International Terrestrial Reference Frame) is the name used for the international standard datum. The physical representation of the ITRF varies in time owing to changes in surveying technology and the planet itself. To specify an ITRF datum the specific version, such as ITRF92, must be given.

The ITRF is rarely used in real EP data, but documentation frequently defines other datums with reference to it.

WGS84 is the most commonly used datum in the 1990's and 2000's. WGS84 has been defined to work effectively with satellite navigation systems build around the Global Positioning System (GPS). WGS84 is an approximation of ITRF version of 1992 - ITRF92.

In future, new satellite navigation systems may prompt the definition of alternate datums to WGS84. The European Galileo satellite radio system will be compatible with the GPS and in a 2003 document was described as requiring a positional shift of 'only a few centimetres' relative to WGS84. In 2007 there was also a Russian alternative to GPS under development.

Most petroleum exploration work was not 'datum aware' until the 1980's. At that time, most countries had national standard datums which had been established for many decades, and these datums were the basis of locations acquired until the early 1990's.

With the advent of GPS and WGS84, new datums that were more precisely related to WGS84 were adopted by many countries. The order of magnitude of the difference in locations specified in 'older' and 'current' datums is typically around 100 metres but can be as small as a few metres or as large as half a kilometre.

This table shows some common 'older' and 'current' datums for selected regions, with some comments on their establishment and relationship to one another. The table is provided solely to make the reader familiar with some commonly used datums, and should not be used to assign datums to locations for which the datum is unknown.

Region	Older Datum	Current Preferred Datum (2007)	Remarks
North America	NAD27	NAD83	NAD27 is still widely used in the USA as a lot of legal information, as well as a mass of government archival data, is specified in NAD27. The preferred transformations between NAD27 and NAD83 are significantly different between Canada and the USA.
Europe	ED50	ETRS89	
Australia	AGD66	GDA94	As at 2007, most companies are getting close to completing transformation of all data to GDA94.
Indonesia	ID74	DGN95	
New Zealand	NZGD49	NZGD2000	
Malaysia	various	GDM2000	
South America	various	SIRGAS2000	Argentina has it's own POSGAR98 datum.

The EPSG database includes cross references from locations to commonly used datums, along with historical information on the evolution of the relationship. This information is displayed in the detailed information windows in the various Petrosys CRS picking tools, and can be browsed using the <u>Petrosys EPSG CRS browser</u> on the Internet.

GeogCRS - Ellipsoid or Spheroid

An ellipsoid is simply a flattened sphere. The shape of the Earth is closer to an ellipsoid than to a sphere.

The ellipsoid, or spheroid, associated with a GeogCRS is an estimate of the 'best fit' ellipsoid for a particular model of the Earth's shape, without precisely locating that ellipsoid relative to the planet.

As the Earth is not an exact ellipsoid, a given ellipsoid is an approximation that will be a better fit on some parts of the Earth than on others. As a result, different ellipsoids are used in different parts of the World. Individual ellipsoids don't necessarily claim to be 'truer' than others, they simply work better in specific parts of the Earth.

In Petrosys the terms 'ellipsoid' and 'spheroid' are used interchangeably.

The ellipsoid can be defined in one of two ways.

- 1. The semi-major and semi-minor axis can be specified as lengths. These are the 'radii' from the centre of the ellipsoid to the widest and narrowest axis of the ellipsoid, respectively. They are typically around 6,378Km or 20,925,000 feet.
- 2. The semi-major axis can be specified as a length, as above, with an 'inverse flattening' value which typically has a value of around 297. The inverse flattening '1/f', semi-major axis 'a' and semi-minor axis 'b' are related by the formula:

(1/f) = 1 - (b/a)

In the EPSG database individual ellipsoids are specified in one or the other form, depending on what form the original definition of the ellipsoid was given. This is to avoid round-off errors.

Historical Ellipsoids

Some commonly used ellipsoids are

```
Clarke 1866
Clarke 1880
ANS (Australian National Spheroid)
WGS84
Everest 1830
International 1924
```

There are many variants of ellipsoids referred to by historical data. The EPSG database, for example, lists at least five variants of the Clarke 1880 ellipsoid. When working with historical data, it's important to match the ellipsoid parameters by their numeric value rather than just relying on the ellipsoid name.

Petrosys spheroid.dat file

Prior to Petrosys 16, ellipsoids (or spheroids) were defined by Petrosys in a file called 'spheroid.dat'. This file might exist either in the \$ps_misc, \$ps_local, or the local project directory.

The ellipsoid definitions from spheroid.dat were used in the creation of the projections used in map sheets, which in turn were used to specify projected CRS for easting northing coordinates in files and on maps.

GeogCRS - Prime Meridian

The prime meridian associated with a GeogCRS is the place representing the 'origin' of the longitudes, ie. the 'vertical' line around one half of the Earth at which the longitude in that GeogCRS is 0..

For most GeogCRS used in Petroleum EP the prime meridian is 'Greenwich', based on which the survey markers at Greenwich in the United Kingdom have a longitude of 0.

GeogCRS that have prime meridians other than Greenwich include the ATF(Paris) which has a prime meridian located in Paris, and for which the units are in grads rather than degrees.

You cannot create a GeogCRS with a non-zero prime meridian in Petrosys, and data supplied with prime meridians other than Greenwich may not be processed correctly.

GeogCRS - Transformations

Transformations relate GeogCRS to one another.

In Petrosys, a GeogCRS transformation or transform is essentially the same as a datum transformation.

One transform converts between one GeogCRS and another using one specific type of mathematical process and a specific set of parameters.

By chaining a sequence of transforms, Petrosys can undertake transforms between pairs of GeogCRS for which no direct transform exists.

A transform between a GeogCRS and WGS84 is usually required for such chaining of transforms to be effective.

GeogCRS Transform Methods

Petrosys supports the GeogCRS transformation methods shown here.

Molodensky	3 parameter transform. The least precise, fastest, and most widely used form.
Bursa	A 6 parameter transform.
HARN	Grid based transform for North America (High Accuracy Reference Network)
NADCON	Grid based transform for North America (North American Datum Conversion)
NTv2	Grid based transform for Canada (National Transformation Version 2)

Grid based transforms use collections of control points at which very precise offsets (grid shifts) are specified, and between which a specific form of interpolation is applied. These control point sets are provided in reference files, some of which are supplied by Petrosys in the \$ps_misc area.

A grid based transform will only work over the area for which grid shifts are specified. Errors will be reported for data lying outside of the area of interest of a selected grid based transform.

Selecting the Most Appropriate Transform

No GeogCRS transform (other than a 'no transform' transform) is perfect. Different compromises are selected to get fast computation with reasonable numeric results in different areas.

For popular GeogCRS pairs such as NAD27 to NAD83 there may be several GeogCRS transformations available.

You can select a specific GeogCRS transform for a pair of GeogCRS's from those available using the 'File/Preferences/Project Geographic CRS Transformations' in the mapping application. The transforms accessible in this option can be controlled on a site basis using the File/Maintain/CRS/CRS Configuration option.

Use the detailed information shown in the transformation selector to judge which is the most appropriate transformation in your environment.

Warning: Using the wrong GeogCRS transform will result in offset errors in maps and data based on the GeogCRS's involved.

ProjCRS

A projected CRS or ProjCRS is a two dimensional reference system measured in a plane that been juxtaposed on the Earth in some manner, often by wrapping into a conical or cylindrical shape.

A ProjCRS is built on a GeogCRS: every projected CRS is associated with an underlying geographic CRS. Selecting a defined ProjCRS therefore implicitly also selects a GeogCRS.

ProjCRS are inherently useful as it is easy to draw a map by scaling ProjCRS coordinates to fit to a rectangular reference system on a flat page.

In the terminology of Petrosys 15 and earlier, a projected CRS is the application of a specific map projection to a specific datum.

Selecting an Appropriate Projected CRS

The first step in selecting a projected CRS is to ensure that you know the geographic CRS within which it is defined, and that you have the appropriate GeogCRS transforms picked to make this work with any other data that you are using.

In general, the same geographic CRS will be used for almost all work in a given region: the only reason for using variants of this would typically be if you are accessing historical data based on an earlier GeogCRS. (for example NAD27 in a region based on NAD83, or AGD66 in a region based on GDA94).

Having picked a geographic CRS, your first preference for a projected CRS should be from amongst those already defined within that geographic CRS at your site. These will automatically be presented in the projected CRS selection tool. Creation of new CRS's should be approached with some caution, in particular in well established exploration areas where good mapping standards have been developed.

The selection process for a projected CRS within a geographic CRS is:

- Is your work an extension of existing work in a region, and is there general satisfaction with the mapping in that region? In that case, pick a projected CRS currently used in that region, or a CRS that reflects some lateral extension of the region within the same projection type (for example, a UTM projCRS in an adjacent zone).
- What projection type (eg. transverse Mercator, Lambert, ...) is most suitable? Stay with the projection types most commonly used in your region at that scale. Different projection types are commonly used for small and medium scale as opposed to regional scale maps.

If the main aim of your projected CRS selection is for map displays, the numeric characteristics of the projection type are not that important. If your projected CRS is to be used for volumetrics and area calculations, then you should try to understand the implications of linear and area distortions that some projections involve.

- Having decided on a projection type, the specific location of that projection on the Earth needs to be specified. The parameters for this vary with type of projection, but will usually require your consideration of whether you are in the northern or southern hemisphere, and what longitude is to be the central meridian or reference longitude for your projection.
- Your choice of a central meridian should take into account any established mapping standards in your region. The UTM system breaks the world down into zones each of which has a central meridian that is -177 degrees plus a multiple of 6 degrees. Lambert projections for specific states are often centered on some historic location in the state. If you see a central meridian with a large number of decimal places, try converting it to a degrees / minutes / seconds format to see if it was actually a 'round' number or minutes or seconds.
- Your choice of hemisphere is usually clear, however when working across the Equator

you may have the choice of using northern or southern hemisphere conventions in the 'other' hemisphere. Some early southern hemisphere projections are also based on using the south pole as a reference latitude.

ProjCRS - Projection

The projection component of a ProjCRS is the specific mathematical formula used to translate the latitudes and longitudes of the point to the ProjCRS values, which are typically eastings and northings.

A projection comprises a projection type and the parameters applied to that projection type in the specific instance.

Examples of projections:

UTM zone 11N	A UTM projection type applied with the parameters for zone 11 (which has a central meridian of 117W) in the northern hemisphere.
MGA zone 54	A UTM projection type applied with the parameters for use in the southern hemisphere zone 54, based on the standards for the 'Map grid of Australia' or MGA
SPCS83 Utah Central zone (US Survey feet)	A Lambert projection defined by government agencies for use in the state of Utah, USA, and having linear units of US survey feet.

ProjCRS - Projection Type

A projection type is a general mathematical formula for transforming spherical to cartesian coordinates, eg. latitudes and longitudes to eastings and northings.

Projection Characteristics

Since any projection cannot be done without distortion, you must choose the geometrical characteristic which is to be shown accurately at the expense of others, or instead select a compromise of several characteristics. There are many ways in which this can be done and as a result several hundred projections have been published, each preserving different geometrical characteristics.

The type of work and area to be mapped will dictate the choice of the projection.

Some characteristics normally considered in choosing a map projection are:

- Area A projection can be designed to be equal area, so that area is preserved.
- Shape Many of the most common projections in use today are conformal. This implies that every small feature of the map is shown correctly. Relative angles at each point are correct and the local scale in every direction around one point is constant. For example, on a conformal map meridians intersect parallels at right angles.
- Scale No map shows scale correctly throughout the entire map, but there are usually one or more lines on the map for which the scale remains true.
- Direction Conformal maps give the relative local direction correctly at every point. Azimuthal maps have the directions of all the points on the map correct with respect to the centre.
- Construction The construction method will be based on either the cone or a cylinder or a plane.

Conic and Cylindrical Projection Types

The most common projections used are either Conic or Cylindrical.

Conic projections are based on the concept of folding the map into a cone. A cone is placed over the globe, with the surface of the cone touching the earth along some particular parallel of latitude. The meridians of longitude and the parallels are projected onto the cone. The cone is cut along a meridian, unrolled and laid flat.

Cylindrical projections are similar to conic projections, except that a cylinder is wrapped around the globe so that its surface touches the equator.

Cylindrical projections are used primarily for world maps or for maps where the greatest extent is from north to south. Conic maps are commonly used for the opposite, namely those maps where the greatest extent is from east to west and for larger geographical areas.

The most common cylindrical projections are UTM and Transverse Mercator. The more common conic projections are the Lambert, Albers and equi-distant Conic.

Projection Parameters

Each projection has a number of parameters, some of which are set by the projection and others which must be defined. The types of parameters that may need to be defined for a particular projection include:

Central Meridian The line of longitude associated with the centre of the projection. This should typically be within a few degrees of lying on the map itself, and should be within the map for large regional maps. There are many conventions for assigning central meridians, such as the zone schemes

	described below.
False Easting	The easting coordinate assigned at the central meridian. This often takes on a large 6 digit value such as 500,000, which means that eastings to 500,000 units on either side of the central merdian will have positive values.
Reference Latitude	The line of latitude used as the base line for computation of north coordinates. For many projections the Equator (latitude=0) is used.
	Notable exceptions include Nigera, where a 4 degree reference latitude is commonly used; and some Gauss Kruger CRS for South America which have a 90S reference latitude.
	For stereographic projections a 90 degree reference latitude implies a polar stereographic projection; 0 an Equatorial stereographic projection; and any another value implies an oblique stereographic projection.
False Northing	The northing coordinate assigned at the reference latitude. In the northern hemisphere this often takes the value of 0. In the southern hemisphere 10,000,000 is often used, ensuring that all northings in the south remain positive.
Scale Factor	The scale factor - usually at the central meridian - is the linear distortion introduced by a projection at the reference space. UTM projections use a scale factor of 0.9996 along the central meridian, as the linear distortion in the projection increases computed distances as you get away from the central meridian. The factor of 0.9996 ensures that data about one-third and two-thirds of the way across the zone has the correct linear scale, whilst data on the outer parts of the zone is extended and data on the inner parts is compressed.
Standard Parallels	The lines of latitude where the 'folded map sheet' of a projection touches or intersects the ellipsoid. A projection that only touches the ellipsoid will have one line of latitude, whereas one that intesects it will have two. With a unit scale factor, linear distortion in the east-west direction will be least along the standard parallel. For regional maps, the standard parallels are usually within the map area. One cartographic convention for Lambert projections is to use standard parallels 1/6 of the way into the map from the southern and northern edges.

Projection Types Supported in Petrosys

The projection type names used in Petrosys software conform to the EPSG database standard.

More detailed information on specific projection types may be available in topics with headers of the form 'PROJECTION TYPES'.

Transverse Mercator	Cylindrical conformal projection, extensively used for small to medium scale maps and the basis of UTM map projections. The axis of the cylinder lies in the equatorial plane, as opposed to Mercator in which it is along the axis of rotation.
Mercator (1SP)	Cylindrical conformal projection with the axis of the cylinder being the rotational axis of the Earth.
Mercator (2SP)	Cylindrical conformal projection, extensively used for regional and navigation maps. As for Mercator (1SP) but with two standard parallels.
Oblique Mercator	Cylindrical conformal projection similar to Mercator but with the cylinder axis aligned neither with the Equatorial plane (as in a transverse Mercator) nor with the axis of rotation (as in a standard Mercator)
Hotine Oblique Mercator	Variant of Mercator used in Alaska and Malaysia.
Lambert Conic Conformal (1SP)	Conic conformal projection. The scale is true along the single standard parallel.
Lambert Conic Conformal (2SP)	Conic conformal projection, extensively used for onshore regional mapping. Parallels are unequally spaced arcs of concentric

circles, more closely spaced near the centre of the map. Meridians are equally spaced radii of the same circles, intersecting the parallels at right angles. The scale is true along either of the two standard parallels.
General conic projection which is neither conformal nor equal area, but which is equidistant. One or two standard parallels may be used.
Conic projection used in Brazil.
Azimuthal conformal projection used for mapping around the poles and other special circumstances. By setting the reference latitude to 0 this becomes an Equatorial stereographic projection, and by setting it to 90N or 90S it becomes a polar stereographic projection.
Conic equal area projection often used for regional maps in the USA. One or two standard parallels may be used.
Projection used to draw 'whole of the Earth' maps in a circle, which is neither equal area nor conformal.
A simplified form of an azimuthal equidistant projection used in the Pacific.

If you require support for a projection type not currently available in Petrosys, please let Petrosys support know, preferably with some enthusiastic supporting reasons for the use of the specific projection type.

UTM and Other Zones

Many cartographic conventions split the World into vertical zones along bands of longitude, to standardise the way in which central meridians are assigned for small to medium scale mapping across wide regions.

The most commonly used zone scheme at present is that associated with UTM (Universal Transverse Mercator) projections. In this the World is split into 6 degree wide zones each with it's own central meridian, starting with zone 1 from 180W to 174W and with a central meridian at 177W, and ending with zone 60 which spans 174E to 180E. The false Easting for each zone is repeated as being 500,000. UTM projection names will usually include the zone number, for example 'UTM Zone 17N' is a UTM projection for zone 17 (ie. a central meridian of 81W) in the Northern hemisphere.

In South America a zoning scheme based on Gauss Kruger projections is used. This uses 3 degree wide zones which work in NS-elongated countries like Chile and Argentina. The projection 'Argentina zone 5', for example, is based on a zone from 58.5W to 61.5W with a central meridian of 60W. This scheme has unique false eastings created by adding the zone number multiplied by 1,000,000 to 500,000, for example the false easting of zone 3 is 3,500,000.

An early Australian zone scheme, used until the 1980's, used Yards as coordinates and had zone numbers starting with 1 just beyond the Western edge of Australia.

Petrosys version 15 and earlier allowed the explicit definition of zone numbering schemes. This was to allow modelling of schemes such as the above as an alternative to specifying a central meridian.

References

References to the sources of specific projection types are accessible in the metadata field 'Information Source' of the EPSG database tables. This information is currently accessible on the EPSG CRS browser accessible through the Tools page of the Petrosys web site <u>http://petrosysguru.com</u>.

There are many excellent references on projection types, including the following books:

- 1. Cartographic Projection Procedures for the UNIX Environment A User's Manual: U.S. Geological Survey Open File Report 90-284 (May 13, 1990).
- 2. Geodetic Coordinate Systems in Australia: J. Manning and J. Steed (Preview August 1994).
- 3. Map Projections Used by the U.S. Geological Survey Geological Survey Bulletin 1532: Second Edition 1982.

On the Internet there are many good references on projections, which are best discovered using an Internet tool such as Google or Wikipedia. The USGS (<u>http://topomaps.usgs.gov</u>) and Geoscience Australia (<u>http://www.ga.gov.au</u>) are good starting points, unfortunately web sites get reorganised frequently and there are copyright implications on quoting web links so we won't try to provide more explicit links.

Unknown and Undefined CRS

Our ability to have CRS associated with all spatial data is still evolving. There is a lot of historical data which has no CRS defined, and some present data stores and applications don't carry over CRS information as yet. In addition, some existing CRS assignments may be unreliable.

Petrosys supports two distinct concepts in dealing with incomplete CRS knowledge.

A spatial data set has an undefined or a missing CRS if the source of the data or the data store was not CRS aware, ie. if there was simply no way of providing the CRS; or if a CRS aware store had never had an explicit CRS entry made in it, ie. you haven't had a chance to look at it as yet.

A spatial data set has an unknown CRS if there is some way of storing a CRS with the data, and that store has been specifically set to unknown. This is used in situations where you have made a concious decision that you can not determine the CRS for some data, and have recorded that decision against the data.

When an undefined CRS is encountered in the Petrosys application, a ProjCRS noted as the project default CRS is applied as the assumed CRS for the data.

When an unknown CRS is encountered in the Petrosys application, a ProjCRS noted as the 'CRS for unknown' is applied.

The default and unknown CRS can be set using the File/Select option in the main menu and the File/Preferences/CRS option in the mapping menu.

Coordinate Reference Systems/Data Management

International CRS Standards

Support for international standards for CRS encoding and parameters is critical for the long term development of spatial knowledge about our EP resources.

EPSG and OGP

The CRS used in Petrosys are based on the publications of the OGP (Oil and Gas Producers) Surveying and Positiong Committee and the EPSG (European Petroleum Survey Group).

The status of this group as at April 2007 is summarised by this extract from the web site $\frac{http://epsg.org}{http://epsg.org}$.

(Start of quote from web site epsg.org)

The OGP Surveying and Positioning Committee was formed in 2005 by the absorbtion into OGP of the now-defunct European Petroleum Survey Group (EPSG) which itself had been formed in 1986. The Surveying and Positioning Committee comprises specialists from OGP member companies working in the areas of surveying, geodesy, cartography and coordinate data management. Meetings are held twice yearly.

A short brochure about the OGP Surveying & Positioning Committee can be downloaded ... (from <u>http://www.epsg.org/AboutSnP.pdf</u>).

Objectives

The OGP Surveying and Positioning Committee has the following objectives:

- to develop and disseminate best practice;
- to provide a forum for the exchange of experiences and knowledge;
- to influence Regulators and Standards organisations;
- to liaise with industry associations;
- to be the voice of Surveying and Positioning in the Oil and Gas industry.

The main areas by which the Surveying and Positioning Committee work to achieve these objectives are: the EPSG Geodetic Parameter Dataset (<u>http://www.epsg.org/Geodetic.html</u>); the OGP Surveying and Positioning Guidance Notes (<u>http://www.epsg.org/guides/index.html</u>), maintenance of positioning data exchange formats (<u>http://www.epsg.org/ExchForm.html</u>) and through association with other organisations.

EPSG Geodetic Parameters

The OGP Surveying and Positioning Committee, through its geodesy sub-committee, maintains and publishes a dataset of parameters for coordinate reference system and coordinate transformation description. The EPSG Geodetic Parameter Dataset has been included as reference data in UKOOA and SEG positioning data exchange formats, the GeoTIFF interchange format for georeferenced raster imagery, the IHS Energy Iris21, PPDM and POSC Epicentre data models. The dataset is distributed in an MS Access relational database and SQL script files and may be downloaded here (http://www.epsg.org/Geodetic.html).

(End of quote from web site epsg.org)

Other CRS Sources

ESRI, the developers of the ARC suite of geographical information systems (GIS) products, have an established system of CRS codes that closely match those of EPSG. Petrosys 16 exchanges CRS knowledge with ESRI products quite reliably.

Oracle use a CRS coding system in their Oracle Spatial product. Contact Petrosys support for current information.

Petrosys welcomes the opportunity to exchange information about standardisation in CRS use

between applications and across regions.

XML Encoding - GML

The standard 'GML' or Geographic Markup Language encoding of coordinate reference data has not been adopted by Petrosys at this stage as it does not fully define the content of the EPSG standards.

XML encoding of coordinate reference data is discussed in the help topic <u>Reporting Your CRS</u><u>Use</u>.

Petrosys CRS Stores

Petrosys stores CRS definitions using a relational data model that closely follows that used in the EPSG / OGP database.

The data are physically stored in either Oracle or SQLite database instances. A hierarchy of storage locations is used to allow corporate, site, and project based CRS definitions to co-exist.

Oracle and SQLite Versions of CRS Definitions

Sites using both the non-Oracle 'pseis' menu system and the Oracle based 'pseis_db' will be running a mix of the Petrosys mapping program, which gets it's CRS information from an SQLite database, and dbMap, which gets it's CRS information from the Petrosys dbMap database.

Contact Petrosys support for further information on how this may affect your CRS data management.

Project and Site CRS Definitions

CRS shipped with Petrosys are stored as part of your Petrosys implementation at the site level in the \$ps_local area. Once installed, they are not automatically updated or modified by future Petrosys releases.

Many aspects of CRS, such as custom ProjCRS definitions, may be created at either the site or the project level. Use the project level if you are trying out some projection for short term use. Use the site level for work that needs to be shared.

You can not define GeogCRS at the project level. The definition of a geographic CRS has important data management implications. Any information, such as a grid, contour, or polygon file, which is created with locations referenced to a geographic CRS, becomes dependent on the knowledge of that CRS. It is not possible to reliably transfer the spatial content of such a data set to another project unless the geographic CRS is also accessible to that project.

For this reason, Petrosys does not allow the creation of geographic CRS's at the project level. Any geographic CRS that you create becomes available at the site level, so that any data created which refers to it can be reliably exchanged. If you are in any doubt as to the need to create a new geographic CRS, please consult your company geomatics expert or refer to Petrosys support.

Grid Shift Files for Datum Conversions

Some transformations such as Harn and NTV2 transforms between North American NAD27 and NAD83 GeogCRS's, are based on reference files. These reference files are sought along the 'PS_PATH', ie. in your project initially, then in the the Petrosys 'local' area, and finally in the Petrosys software 'misc' area.

Project Default CRS

The project default CRS, which is assigned to any files for which no CRS has ever been considered; and the project 'unknown' CRS which his assigned to data for which someone has stated that the CRS is specifically not known (as opposed being unavailable); are stored on a per project basis in the file 'panels.pnd' as at Petrosys 16.0.

In Petrosys 16.1 this information will be moved into a more general site information data store, as the panels.pnd file is frequently replaced for operational reasons.

SQLite Database Notes

As at Petrosys 16, Petrosys uses SQLite version 3.

Third party utility software is available to manipulate SQLite databases. The most commonly

used is sqlite. As successive versions of sqlite have been incompatible, it is necessary to use the sqlite3 utility with Petrosys SQLite databases.

The file name dot suffix for an SQLite database is sdb. On some Windows installations this results in Windows Explorer wrongly identifying SQLite databases as being of type 'AppFix'.

Petrosys EPSG CRS Browser

Petrosys maintains a web browseable version of the EPSG database in the 'Tools' section of it's web site http://petrosysguru.com.

This allows you to query the EPSG database to find projected and geographic CRS that are commonly used in different parts of the World:

1 More c	detailed information (can k	oe made availa	ble in a pop-up w	rindow by cli	cking or	n the data in	these	columns.		
ProjCR5 Code	ProjCRS Name Aliases	Pn Na	ojection 1 me	Projection Type	1 GeogCl	1 A	irea of Use	1	Remarks		
20256	AGD66 / AMG zone 56	Au Gr	istralian Map id zone 56	Transverse Mercat	or AGD66	á	Australia - 150 to leg E	o 156			
20356	AGD84 / AMG zone 56	Au Gr	istralian Map id zone 56	Transverse Mercat	or AGD84	6	Australia - 150 to leg E	0 1 5 6			
2317	P SAD 56 / ICN Regional	ICI	N Regional	Lambert Conic Conformal (25P)	PSADS	6 I	Jenezuela- onsh	nore			
28356	GDA94 / MGA zone 56	Ma Av	ep Grid of Istralia zone 56	Transverse Mercat	or GDA94	6	Australia - 150 to leg E	o 156			
102	Lake / Maracaibo Grid	Ma	eracaibo Grid	Lambert Conic Conformal (15P)	Lake	l a	Jenezuela- Mara Irea	caibo	Grid coordinat 34.678sec N; 7 triangulation co	es are (200000 '1deg 36min 20 pordinate listin) 200000) at Maracaibo Cathedral (10deg 38 0.224sec W; Lake datum). Used for Lake g.
2101	Lake / Maracaibo Grid M1	Ma CM	iracaibo Grid 11)	Lambert Conic Conformal (15P)	Lake	L a	Jenezuela- Mara rea	caibo	Grid coordinat 71deg 36min 2	es are (0 0) at h :0.224sec W; La	Maracaibo Cathedral (10deg 38min 34.678se ake datum). Used by Creole; MGO and Sun.
2103	Lake / Maracaibo	$\overline{\mathbf{v}}$	Petrosys E	EPSG Coordin	ate Refere	nce Br	owser - Ma	ozilla			20000) at Maracaibo Cathedral (10deg 38
	Onu ilis	IT.									4sec W; Lake datum). Used by Varco.
2066	Mount Dillon / Tobago Grid Mount Dillon / Tobago	ſ	Projection Coordinate Oper	Details M	laracaibo	Grid				PETROSIVE 7	→ +sec W; Lake datum). Used by Varco.
2066	Mount Dillon / Tobago Grid Mount Dillon / Tobago Trinidad 1903 /	T	Projection Coordinate Oper F	Details M ration 18261 Projection name	laracaibo Maracaibo I	Grid Grid				ретновув 77 р	≕ 4sec W; Lake datum). Used by Uarco.
2066 80200	Mount Dillon / Tobago Grid Mount Dillon / Tobago Trinidad 1903 / Trinidad Grid Trinidad 1903 / Trinidad 1903 /	I	Projection Coordinate Oper	Details N ration 18261 Projection name Projection type	laracaibo Maracaibo Lambert Co	Grid Grid Grid Cor	nformal (1 SF	°)		PETROGYS	4 Sec Wy Lake datum). Used by Varco.
2066 30200	Mount Dillon / Tobago Grid Mount Dillon / Tobago Trinidad 1903 / Trinidad 1903 / Trinidad 1903 / Trinidad		Projection Coordinate Ope	Details M ration 18261 Projection name Projection type Method code	laracaibo Maracaibo Lambert Co 9801	Grid Grid onic Col	nformal (1 SF	°)		PETRONY ふた	 foidad Grid (code 30/200) used by some
2066 30200 2314	Mount Dillon / Tobago Grid Mount Dillon / Tobago Trinidad Grid Trinidad Grid Trinidad 1903 / Trinidad 1903 / Trinidad Grid (ffCla)		Projection Coordinate Oper F Latitude c	Details M ration 18261 Projection name Projection type Method code of natural origin	Maracaibo Maracaibo Lambert Co 9801 10.1	Grid Grid	nformal (1 SF	°)		PETROSYS	finidad Grid (code 30200) used by some noco Trinidad.
2066 30200 2314 27120	Mount Dillon / Tobago Grid Mount Dillon / Tobago Trinidad 1903 / Trinidad 200		Projection Coordinate Oper F Latitude o Longitude o	Details N ration 18261 Projection name Projection type Method code of natural origin of natural origin	Maracaibo Maracaibo Lambert Co 9801 10.1 -71.362022	Grid Grid mic Cor	nformal (1SF	°)		PETROSYS R	fnidad Grid (code 30200) used by some noco Trinidad.
2066 30200 2314 27120	Mount Dillon / Tobago Grid Mount Dillon / Tobago Grid Mount Dillon / Trinidad 1903 / Trinidad 1903 / Trinidad 1903 / Trinidad 1903 / Trinidad Grid (ffCla) Naparima 1972 / UTM zone 200 Naparima 1972 / UTM zone		Projection Coordinate Oper F Latitude o Longitude o Scale fr	Details N ration 18261 Projection name Projection type Method code of natural origin of natural origin actor at natural origin	Maracaibo Maracaibo Lambert Co 9801 10.1 -71.362022 1	Grid Grid mic Cor	nformal (1 SF	°)		PETROSY'S	finidad Grid (code 30200) used by some
2066 30200 2314 27120 2067	Mount Dillon / Tobago Grid Mount Dillon / Tobago Grid Mount Dillon / Trinidad 1903 / Trinidad 0903 / Trinidad 1903 / Trinidad		Projection Coordinate Oper F Latitude of Longitude of Scale f	Details N ration 18261 Projection name Projection type Method code of natural origin of natural origin actor at natural origin False easting	laracaibo Maracaibo I Lambert Co 9801 10.1 -71.362022 1 200000	Grid Grid mic Cor	nformal (1SF	°)		PETROMYS	 Hidad Grid (code 30200) used by some noco Trinidad.
2066 30200 2314 27120 2067	Mount Dillon / Tobago Grid Inform Dillon / Tobago Grid Inform Dillon / Tobago Trinidad 1903 / Trinidad 1903 /		Projection Coordinate Open F Latitude c Longitude c Scale fi	Details Nation 18261 Projection name Projection type Method code of natural origin of natural origin actor at natural origin False easting False northing	Haracaibo Maracaibo I Lambert Co 9801 10.1 -71.362022 1 200000 147315.021	Grid Grid Inic Cor	nformal (18P	°)		PETBOLINE T	 Fridad Grid (code 30200) used by some noco Trinidad.
2066 30200 2314 27120 2067	Mount Dillon / Tobago Orid Mount Dillon / Tobago Orid Mount Dillon / Trinidad 1903 / Trinidad 1903 / Trinidad 1903 / Trinidad 0903 / Trinidad 0903 / Trinidad 0903 / Trinidad 0903 / Trinidad 0914 (Tcla) Naparima 1972 / UTM zone 2001 Naparima 1955 / UTM zone 2001		Projection Coordinate Ope F Latitude c Longitude c Scale f	Details N ration 18261 Projection name Projection type Method code of natural origin of natural origin actor at natural actor at natural False easting False northing Remarks	Iaracaibo Maracaibo I Lambert Cc 9801 10.1 -71.362022 1 200000 147315.02i Grid coordi Cathedral.	Grid Grid Inic Co 24 3 nates a	nformal (1 SF	°) 20000	0) at Maracaib	о С	 finidad Grid (code 30200) used by some noco Trinidad.

The EPSG browser is kept up to date with new EPSG releases, so it can be used to identify CRS that may not have been installed on your local Petrosys system as yet.

Petrosys Data Store CRS References

Petrosys data file structures are being progressively upgraded to incorporate CRS references. All file upgrades discussed in this section have been in a backward compatible manner between Petrosys 16 and 15. If you update one of the files in 15 the CRS information added by 16 will, however, usually be lost.

CRS references in Petrosys data files are recorded as well known text. This means that they can be matched to other systems in the future should the EPSG code definitions no longer be available.

Petrosys Grid Files

The single ProjCRS is recorded as being applied to the whole grid. All information in the grid is assumed to be in a ProjCRS. As Petrosys supports the 'Plate-Carree' projection which simply assumes that latitudes and longitudes are eastings and northings, it is possible to use a grid in which the units are decimal degrees.

Grid Sampled Data (GIP) Files

A single ProjCRS is recorded that applies to all the data in the file.

Petrosys Contour Files

A single ProjCRS or GeogCRS is recorded, depending on whether the contours are in projected or geographic coordinates. It is not possible to mix projected and geographic coordinates in one contour file.

Petrosys Polygon Files

A single ProjCRS is recorded which is assumed to apply to all polygons in the file. Note that a polygon file may contain a mix of projected and geographic coordinate polygons, or even have only geographic coordinate polygons in it. If there are no geographic coordinates in a polygon file, and there is no intent to ever add any, then any ProjCRS associated with the correct GeogCRS for the data can be used.

Petrosys Fault Files

A single ProjCRS is recorded which is assumed to apply to all faults in the file.

Well Data File

A single ProjCRS is recorded which provides the GeogCRS and the ProjCRS for all the data in the file.

DbMap Database

The dbMap database records individual CRS against individual data objects, so any combination of CRS can be supported.

Culture and Seismic SDF Files

As it is difficult to upgrade these file structures in a backward compatible manner, culture and SDF files do not currently record CRS information. The project default CRS is applied when these files are included in maps and computations.

Unknown and Undefined CRS in Petrosys Data

If a Petrosys file has not been updated to include CRS data as yet, then it's CRS content is deemed to be 'undefined' or 'missing'. When such a file is used on a map or in a computation the current project default CRS is applied to the data.

If a file is to be updated to including a CRS reference, but you do not know what CRS to assign, then you can assign the Petrosys custom GeogCRS or ProjCRS for an 'Unknown CRS' to the file. Once this is assigned you know that the file has been looked at and found to be genuinely in doubt, as opposed to possibly being of a known CRS but simply not having been touched as yet. Files with Unknown assigned as the CRS will have the Petrosys 'CRS for Unknown' applied when used in a map or computation.

Assigning CRS to Existing Petrosys Files

CRS can be assigned to existing Petrosys files using one of the following

- 1. Edit/Header options in the editors specific to the file type
- 2. File/Maintain/CRS/Assign CRS to files
- 3. File/Maintain/CRS/Convert project coordinates

See the help topic <u>Setting CRS in Existing Files</u> for more information on the last two options.

Projection Types from Older Versions of Petrosys

Prior to Petrosys 16, alternate names and codes were used for projection types.

When these older projection types are encountered they are replaced with the EPSG projection types as shown here. This table is still under review.

LAMBERT1	EPSG_LAMBERT_1SP_CODE=9801U;
LAMBERT2	EPSG_LAMBERT_2SP_CODE=9802U
MERCATOR	EPSG_MERCATOR_2SP_CODE=9805U
ТМ	EPSG_TRANSVERSE_MERCATOR_CODE=9807U
STEREOGRAPHIC	EPSG_STEREOGRAPHIC_CODE=9809U;
STEREOGRAPHIC[polar]	EPSG_POLAR_STEREOGRAPHIC_A=9810U;
NZMG	EPSG_NZMG_CODE=9811U
HOTINE_OBLIQUE_MERCATOR	EPSG_HOTINE_OBL_MERCATOR_CODE=9812U;
OBLIQUE_MERCATOR	EPSG_OBLIQUE_MERCATOR_CODE=9815U
POLYCONIC	EPSG_AMER_POLYCONIC_CODE=9818U
ALBERS1	EPSG_ALBERS_EQ_AREA_CODE=9822U;
ALBERS2	EPSG_ALBERS_EQ_AREA_CODE=9822U;
AZ_EQ_DIST	EPSG_AZ_EQ_DIST_CODE=9831U
NO PROJECTION	EPSG_PLATE_CARREE_CODE=9825U

Some projection types supported by Petrosys 15 and earlier were a mix of a projection type and specific parameters, and were replaced with individual projections rather than projection types in Petrosys 16:

RSO in metres was replaced with the EPSG projection Timbalai RSO metres (epsg 29873).

RSO in feet was replaced with the EPSG projection Timbalai RSO feet (epsg 29872).

NTF was replaced with the EPSG projection NTF Lambert zone 1 (epsg 27571).

Submitting CRS Proposals

All coordinate reference systems used in the EP industry should, ideally, be uniquely identified by codes with associated definitions in the EPSG database.

If you come across projections or projected or geographic CRS that you are confident of but which aren't yet defined then you can ask to have them included in future EPSG releases.

At the time of writing the best way of initiating such a request is to go to the EPSG web site <u>http://www.epsg.org</u> and to follow the links <u>EPSG Geodetic Parameter Dataset</u> then <u>CHANGE</u> <u>REQUEST</u> which is at the bottom of that page.

This change request might also be accessible through the OGP website at http://info.ogp.org.uk/geodesy/Comms/Comment.asp .

Updating your CRS Definitions

Your CRS definitions will initially be based on those shipped with a given version of Petrosys. These will be installed in your local configuration area \$ps_local.

It is anticipated that an updated version of the EPSG database will be available every 3-6 months or so.

Petrosys are currently developing scripts to help your systems administer audit the changes between your existing and any more current version of the EPSG database, and to synchronise your EPSG definitions with the latest ones.

Please contact Petrosys support for more information.

Coordinate Reference Systems/Tools

Choosing an Existing CRS

WDF/Edit/General

Mapping/Mapsheet/Edit/Projection-Details

You will be required to choose a CRS when:

- 1. you are setting the projection information for a map sheet
- 2. you are providing default CRS information for data sources that don't include it
- 3. a coordinate transform function has been selected

Petrosys has different selectors for Projected and Geographic CRS selection. The Projected CRS selector is a superset of the Geographic CRS selector, as you have to select a GeogCRS before you can pick one of the embedded ProjCRS:

	ordinate Refe	erence System						
Proje	Projected CRS GDA94 / MGA zone 55							
		Geographic CRS: GDA	94 Projection: Transv	verse Mercator Spheroid: GRS 1980				
- F	✓ Projected	CRS Selector			o x			
	<u>F</u> ile				<u>H</u> elp			
	Geograp	hic CRS	∇	Projected CRS				
nactive	Fiji 1986 Fort Mar GDA94 GGRS87 GR96 Gan 197 Garoua Grand C: Grand C: Greek (A Greek (A Greek (A	igot 10 0 ayman 1959 omoros thens) 1953		MGA zone 51 MGA zone 52 MGA zone 53 MGA zone 55 MGA zone 55 MGA zone 57 MGA zone 57 MGA zone 58 NSW Lambert SA Lambert TM CM 141				
	EPSG code Name Projectic Longitude Latitude Scale fac False eas False nor	e : 28355 : GDA94 / MGA on type: Transver: e at natural orig at natural orig ttor at natural o sting: 500000 rthing: 10000000	zone 55 se Mercator in: 147.000 [1. n: 0.000 [00 0] rigin: 0.99960	47 00 00E] 0 00N] 0				
	ОК	Cancel			Δ			

The ProjCRS for a given GeogCRS are presented in the left panel as you scroll through different GeogCRS.

Details of the currently highlighted ProjCRS are presented in the lower part of the panel.

If you don't see a GeogCRS or ProjCRS which you think has been defined, refer to your systems administrator and then to Petrosys support. The list of available CRS may have been reduced to meet the perceived needs of your site; or there may be a more recent version of the EPSG database available that has not yet been installed at your site.

Current EPSG CRS can be queried using the EPSG CRS browser in the Tools section of the Petrosys web site http://petrosysguru.com.

Defining a New CRS

Some of the situations in which you may need to define a new CRS are:

- 1. You want to create a map sheet with projection parameters not available in a currently available CRS. This is particularly common with Lambert and Mercator projections.
- 2. You need feet or US-feet units in an area normally measured in metres, or vice versa.
- 3. You want to create a map sheet for a geographic CRS with a non-standard datum.
- 4. You have been provided with data that is in a projection or datum not supported by a current CRS.
- 5. You want to define an alternate geographic CRS for a given datum to differentiate information based on your confidence in the datum assignment.

Before defining a new CRS you should critically review your choices:

- 1. Is the CRS required by you defined in the EPSG standard, but not visible at your site as it has been blocked by the administrator
- 2. Could your requirement for a non-standard CRS be based on some error in your data source, such as inadequate precision or a typing error in some values?
- 3. Could your requirement be based on a nomenclature issue, such as an alternate name for a supported datum?
- 4. Is there an existing convention related to selection of projection parameters that you can follow, to make it more likely that your proposed CRS will match those generated elsewhere? For example, using central meridians that conform to those of the UTM zones; using Lambert standard parallels offset by 1/6 of the way into a standard map sheet; and using a false northing of 10,000,000 metres in the southern hemisphere?

New CRS have to be defined in a hierarchical manner. If your datum and projection are all unsupported, then you have to define the new datum and any associated transforms first, then the geographic CRS, then the projected CRS within this.

New ProjCRS based on an existing GeogCRS

This is the most common scenario, in which an unsupported projection is to be added for an existing geographic CRS.

You can create a new projected CRS based on an existing geographic CRS by clicking the 'New' button against the Projection field in Mapping/ Mapsheet/ Edit/ Projection details, Main/ File/ Maintain/ CRS/ ProjectedCRS_Editor, or dbMap/Admin/CRS/Projected_CRS_Editor:

Projection UTM zone 28N New

This brings up the projection editor, described in the section **ProjCRS Editor - Projections**.

New Datum

A new datum is likely to be required if you are working with historical data or in an region not recently explored by EPSG member companies. Remember that a datum is a general standard for a collection of positioning information that conforms to one geodetic reference, and is typically defined by a source such as a national mapping organisation and some reference date, which is typically a year.

There may be many transformations for a given datum to other geographic CRS, including WGS84. Do not define a new datum if you have alternate datum transformation parameters for an existing datum.

To define a new datum use the 'New' button next to the datum selector field.

After defining a new datum you need to define the transformations from this datum to other datums. If you are going to mix data from this datum with data from other geographic CRS, then a transformation to WGS84 will usually be the minimum required.

New GeogCRS based on an existing Datum

This is most likely to be required as part of the support of a new datum, following on from the definition of that datum as described above.

You can create a new geographic CRS based on an existing datum by clicking the 'New' button at the foot of the geographic CRS editor (Main/ File /Maintain/ CRS/ GeographicCRS_Editor or dbMap/Admin/CRS/Projected_CRS_Editor)

♥ Geographic C	RS Editor	- 0	×
Owner	Code	Name V	_
	4143 4168 4201 4205 4206 4202 4202 4203 4204 4191 4169 4289 4196 4600 4601 4208 4208	Abidjan 1987 Accra Adindan Afgooye Agadez AGD66 AGD66 AGD64 Ain el Abd Albanian 1987 American Samoa 1962 American Samoa 1962 Amerisfoort Ammassalik 1958 Anguila 1957 Antigua 1943 Aratu Are 1950	
Owner	EPSG	New geographic CRS	
EPSG code:	4143	CRS file: Site v /ps rels/petrosvs/local/ps site crs.sdt	
Name:	Abidjar		
Datum:	Abidjan	Name:	
Remark:	Supers		
		Remark:	
Info source:	IGN Pa		FX
		Info source:	
Data source:	EPSG	Data source:	<u> </u>
Close	New		
		OK Cancel	Help

Note that you have to have defined the datum and any associated transforms before you can create the geographic CRS through which the datum can be used.

The definition of a geographic CRS has important data management implications. It is generally required to be consistently available in multiple projects to ensure a reliable means of exchanging spatial data between projects.

For this reason, Petrosys does not allow the creation of geographic CRSs at the project level. Any custom geographic CRS that you create is stored at the site level. If you are in any doubt as to the need to create a new geographic CRS, please consult your company geomatics expert or refer to Petrosys support.

GeogCRS Transformation Editor

File/Maintain/CRS/Geographic CRS Transformation Editor

GeogCRS transformations provide a conversion from one GeogCRS to another, typically being some form of datum conversion. You can define new GeogCRS transformations, and browse the definitions of existing ones, using the Geographic CRS transformation editor.

You can not change the definition of an existing EPSG transform, as this would compromise the integrity of your data relative to other sites.

Defining New Transforms

New GeogCRS transformations can be defined in the Geographic CRS Transformation Editor. Transformations added in this way will be assigned a large code number to differentiate them from the EPSG standard transformations.

A limited range of transformation methods is supported. Each method has a unique set of parameters (such as dx, dy, ...) which are presented in the dialogue when the transformation method is picked. See the help on <u>GeogCRS - Transformations</u> for more information.

To define a new Bursa-Wolff transformation, for example, the following screen is presented:

Transformation Editor		o x
CRS file: Site 💌	/ps_rels/petrosys/local/ps_	site_crs.sdb
Source geographic CRS		
Target geographic CRS		
Transformation method	ursa 🗾 💌	
Shifts to WGS84 (metres) Rotation to WGS84 (arc secor	nds)
dx	rX	
dy	rY	Scale correction
dz	rZ	to WGS84 (ppm)
<u>OK</u> <u>C</u> ancel		Help

Selecting Existing Transforms

Existing GeogCRS transformations can be browsed and selected using the GeogCRS Transformation Editor. EPSG transformations can not be edited. The parameters associated with the specific transformation are listed in the information panel of the dialogue as you scroll through the various transforms. For a Molodensky method transform, for example, only dx, dy and dz shifts are provided:

Owner Code	Name	∇				
1321 1322 1323 1324 1325 1326 15802 15802 1127 1527 1527 15804 1504 1128 1129 1130	Camacupa to WGS 84 (4) Camacupa to WGS 84 (5) Camacupa to WGS 84 (6) Camacupa to WGS 84 (7) Camacupa to WGS 84 (7) Camacupa to WGS 84 (7) Campo Inchauspe to WGS 84 (1) Campo Inchauspe to POSGAR 94 (1) Campo Inchauspe to WGS 84 (2) Cape Canaveral to WGS 84 (2) Cape to Hartebeesthoek94 (1) Cape to WGS 84 (1) Cape to WGS 84 (1) Cape to WGS 84 (2) Capt to WGS 84 (2) Cathage to WGS 84 (1) Cathage to WGS 84 (1)					
mer	EPSG		1			
urce geographic CRS	Campo Inchauspe					
get geographic CRS	POSGAR 94					
nsformation method	Molodensky					
Shifts to WGS84 (me	res)					
-148.000000000						
dy 136.00000000						

For a Bursa-Wolff transform there is a more complex collection of parameters:

•	Geographic CRS Transfo	ormation Editor	- 0 X
	Owner Code	e Name $ abla$	
	 1321 1322 1323 1324 1325 1326 15802 15782 15782 15782 15782 15782 15782 15804 1504 1504 1504 1128 1128 1129 1130 1588 	Camacupa to WGS 84 (4) Camacupa to WGS 84 (5) Camacupa to WGS 84 (6) Camacupa to WGS 84 (7) Camacupa to WGS 84 (7) Campa to WGS 84 (9) Campo Inchauspe to POSGAR 94 (1) Campo Inchauspe to POSGAR 94 (1) Campo Inchauspe to WGS 84 (1) Campo Inchauspe to WGS 84 (2) Cape Canaveral to WGS 84 (1) Cape to Hartebeestnoek94 (1) Cape to WGS 84 (2) Cape to WGS 84 (1) Cape to WGS 84 (1) Cape to WGS 84 (1) Carthage to WGS 84 (1) Carthage to WGS 84 (1)	х - -
	Owner	EPSG	_
	Source geographic CRS	Camacupa	
	Target geographic CRS	WGS 84	
	Transformation method	Bursa	
	Shifts to WGS84 (me	tres) Rotation to WGS84 (arc seconds)	
	d× -41.057000000	rX 0.00000000	
	dy -374.564000000	rY 0.00000000 Scale correction	
	dz -226.287000000	rZ 0.554000000 to WGS84 (ppm) 0.219000	1
		· · · · · · · · · · · · · · · · · · ·	
l	Close New	Save Save As Delete	

GeogCRS Transformation Configuration - Project

Mapping/File/Preferences/Project geographic crs transformations

Within a project you can select alternate GeogCRS transforms to the default ones for a site by using the File/Preferences/Project geographic crs transformations option from dbMap or the mapping application:



Pick the source GeogCRS for which a transform is to be selected in the left pane. The GeogCRS for which transforms from this are available will be listed in the middle pane.

Pick the target GeogCRS from these, which results in all available transforms for the pair appearing in the right pane. Details about each transform can be viewed in the lower pane as you scroll through the transforms. See <u>GeogCRS Transformations</u> for more information on transformation types.

Check the required transform to be used and exit. You should only select one transform for any given GeogCRS pair.

GeogCRS Transformation Configuration - Site

File/Maintain/CRS/Configuration

Site admnistrators can use the File/Maintain/CRS/Configuration option to restrict the GeogCRS transformations that are visible at a site, and to direct users to the preferred transformations.

Restricting the GeogCRS visible to those that are to be used at your site is an effective way of simplifying the user interface and avoiding possible errors from chosing the wrong CRS. It merely affects the visibility of the information, not of the ability to store or work with data that uses the CRS.

The user interface is similar to that of the project based transformation configuration, however it includes an additional column to select the visibility of transformations at a site:



Start by selecting the source GeogCRS in the left pane. The target GeogCRS for which transforms have been defined are then automatically displayed in the central pane.

To make a GeogCRS accessible at a site, check the GeogCRS in the 'Source Geographic CRS' column. Use the right mouse button to quickly check or uncheck all GeogCRS.

Then highlight the target GeogCRS for which transforms are to be configured. Available transforms are then tabulated in the right pane. Detailed information about the transforms is listed in the lower pane as you scroll from transform to transform. See <u>GeogCRS</u> <u>Transformations</u> for more information on transformation types.

All transforms that are defined in your site CRS database are visible in this dialogue. To allow a transform to be accessed by all users at your site, check the box in the left hand column (with the eye icon in the header). This simply means that a user will see the transform and can chose it if they want.

To make a transform the default transform for the currently highlighted GeogCRS pair, check the transform in the second checkbox column, which has a 'traffic light' icon in the header. You should only have one transform selected as a default for a given GeogCRS pair, to avoid ambiguity in processing results.

ProjCRS Editor

File/Maintain/CRS/Projected CRS Editor

The projected CRS editor allow you to create new projected CRS based on existing projections and GeogCRS; to create new projections based on alternate parameters with existing projection types; and, if you really need to, to define new GeogCRS and the associated components.

You can not modify existing ProjCRS definitions, as it is assumed that these may be referred to by data somewhere in your system, and a change in the ProjCRS would impact the validity of that data.

The projected CRS editor starts off with a selection screen showing existing projected CRS:

Projected CRS Editor								
Owner	Code	Name $ abla$						
200 335 335 223 234 234 234 234 234 221 221 221 221 221 221 221 221 221 221 221 221 221 221 221 221 221 221 221 222 22 2 22 2	92 96 97 97 93 92 93 81 82 83 84 85 85 86 85 86 86 87 71 72 73	Pampa del Castillo / Argentina zone 2 PD/83 / 3-degree Gauss zone 3 PD/83 / 3-degree Gauss zone 4 Pointe Noire / UTM zone 32S Porto Santo / UTM zone 28N Poto Santo / 1995 / UTM zone 28N POSGAR 94 / Argentina 1 POSGAR 94 / Argentina 2 POSGAR 94 / Argentina 3 POSGAR 94 / Argentina 4 POSGAR 94 / Argentina 5 POSGAR 94 / Argentina 5 POSGAR 94 / Argentina 7 POSGAR 94 / Argentina 7 POSGAR 98 / Argentina 1 POSGAR 98 / Argentina 1 POSGAR 98 / Argentina 2 POSGAR 98 / Argentina 3						
Owner Name:	Owner EPSG Name: Porto Santo 1995 / UTM zone 28N							
Geographic CRS	Geographic CRS Porto Santo 1995 New							
Projection UTM zone 28N New								
Close New Save Save As Delete								

Use the New button in the screen footer to trigger creation of a new ProjCRS, as described in <u>ProjCRS Editor - Projected CRS</u>.

ProjCRS Editor - GeogCRS Component

Projected CRS Editor/Geographic CRS ... New

A new GeogCRS can only be created at the site level, as a GeogCRS has strong implications for data management.

You can start creation of a GeogCRS by using the New button against the GeogCRS selector in the ProjCRS editor:



ProjCRS Editor - GeogCRS Datums

Projected CRS Editor/Geographic CRS ... New/Datum ... New

In the event that you come across a datum not yet recorded in EPSG, the GeogCRS editor allows you to create a new datum at the site level.

	rojecteo	CRS Editor graphic CRS Editor				- 0		×	
		✓ Datum Editor							
		Owner	Code	Name	∇			Ellipsoi	
		663: 663: 663: 663: 663: 663: 663: 663: 663: 663: 664: 664:		Philippine Reference System 1992 Phoenix Islands 1966 Pico de la Nieves Pitcaim 1967 Point 58 Pointe Geologie Perroud 1950 Porto Santo 1936 Porto Santo 1936 Posiciones Geodesicas Argentinas 1994 Posiciones Geodesicas Argentinas 1998 Potsdam Datum/83 Provisional South American Datum 1956		Clarke 1 Internatio Internatio Clarke 1 Internatio Internatio GRS 198 GRS 198 Bessel 1 Internatio	866 onal 1924 onal 1924 onal 1924 880 (RGS) onal 1924 onal 1924 onal 1924 00 00 841 onal 1924	-	
0		6139	1	Puerto Rico Pulkovo 1942		Clarke 1 Krassow	866 sky 1940	V	
N	Owr	<u> </u>							
P	G EPS P Nam Datu Datu Datu Datu Datu Datu			anto 1995					
	Rem	Ellipsoid:	Internati	onal 1924		[New	1	
		Prime meridian:	Greenwi	ch			New	il	
	Info	Datum scope:	Topogra	uphic mapping.				1	
	Data	Origin description:	SE Base of the 1	e on Porto Santo island. Origin and orientation 336 adjustment.	constra	ined to t	hose		
	C	Realisation epoch:	1995						
Ĩ	Classical and GPS observations. Supersedes 1936 adjustment (datum c 6615). μFor Selvagens see Selvagem Grande (datum code 6616).						code		
	Info source:					.pt/			
		Data source: EPSG							
		Close New	S	iave Save As Delete					

You should avoid adding new datums unless you are confident that they are really unique. In general this will be in situations where you are working with historical data from locations that have not had a lot of recent petroleum EP activity.

ProjCRS Editor - GeogCRS Ellipsoids

Projected CRS Editor/Geographic CRS ... New/Datum ... New/Ellipsoid ... New

A new ellipsoid or spheroid needs to be registered in the rare cases where a GeogCRS datum is based on an ellipsoid not yet recorded in EPSG.

Before creating a new ellpsoid or spheroid please check carefully that none of the existing ellipsoids may be the one that you want, but under a slight variant of the name or with the numeric encoding in a different format such as using the flattening rather than the semi-minor axis.

Creation of an ellipsoid is triggered using the New button against the Ellipsoid field of the datum editor:

Y Pr	ojected	CRS Ed	itor				X			
	✔ Geo	graphic (CRS Editor				1			
			1							
		♥ Datur	m Editor							
			Ellipsoid Editor							
	1		-				_			
15		8	Owner	Lode		Name				- 17
11.1	<u>)</u>		7036	i GRS 1967 GRS 1967 (S4	4069)					
11	6	🍝	7019	GRS 1980	нD03)					
	0		7048	GRS 1980 Aut	uthalic S	iphere				
11		6	7053	Hough 1960						
1.1	🎳	0	J 7021	Indonesian Na	ational	Spheroid				
	0		7022	International 1	1924					
			7024	NWI9D	1940					
		6	7032	OSU86F						
Ц Ч.			7033	OSU91A						
N	Owr		7027	Plessis 1817						
G	EPS		7028	Struve 1860						
Р	Nam	Own .	7020	U. War Offica						- <u>M</u> -
÷	Datu	Datu	Owner	EPSG						1
		Datu	Ellipsoid id:	7022						
	Rem	Ellip	Ellipsoid name:	International 1924]	
		Prim	Semi-Major axis (a)	6378388		Semi-Minor axis (b)	6356911.9461	2		
	Info	Datu	Flattening (f)	0.003367003		Inverse flattening (1/f)	297			
	Data	Orig	Eccentricity (e)	0.081991890		Second eccentricity (e')	0.082268890			
	Data	0.1.9		Adopted by IUGG 192	24 in	Madrid. Based on Hay1	ford 1909/191	0	8	
	C	Real	Remark:	rigures.						
		11000							EAL EAL	
Rem Info source:										
			Data source:	FREE					<u> </u>	
		Data source: EPSG								
		Data	Close New	Save Save	As	Delete				
										· · · · · · · · · · · · · · · · · · ·

Please remember to insert appropriate remarks as to why you created the ellipsoid entry.

ProjCRS Editor - GeogCRS Prime Meridians

Projected CRS Editor/Geographic CRS ... New/Datum ... New/PrimeMeridian ... New

A new prime meridian needs to be registered in the rare cases where a GeogCRS datum is based on some location other than the Greenwich meridian.

Many such cases are likely to have already been defined in the EPSG system, so please ensure that you have the correct information at hand before taking this step. Remember to check for minor round off errors that may be insignificant in your context.

Creation of a prime meridian is triggered using the New button against the Prime Meridian field of the datum editor:

Y Pr	ojected	CRS E	iditor	_ D X	
	✓ Geog	graphic	: CRS Editor		
	6	♥ Dati	um Editor		
			Deimo Maridian Editor		
			Prime Meridian Editor		
114	<u> </u>		Owner Code	Name $ abla abla$	
			 8912 8907 8904 	Athens Bern Bogota	
	2		8910 E	Prussels Ferro	
	ğ		8901 C	Greenwich	
			8902 L	isbon	
			8913 C	vadrid Dslo	
o -			8903 F	?aris Rome	
N	Owr		🧃 8911 ຮ	Stockholm	
G	EPS				
Р	Nam	0.			
I F	Datu	Da	Owner	EPSG	
	_	Da	Prime meridian code:	8901	
	Rem	EIII	Prime meridian name:	Greenwich	
		Pri	Prime meridian from Greenwich	. 0	
	Info	Da	Remark:		
	Data	Ori			
ī	C	Re	Info source:		
		Re	Data source:	EPSG	
		Infe	Close New Sat	ve Save As Delete	

Please remember to insert appropriate remarks as to why you created the prime meridian entry.

ProjCRS Editor - Projected CRS

File/Maintain/CRS/Projected CRS Editor/...New

A new projected CRS needs to be created when the combination of a projection type, projection parameters, and geographic CRS are not yet defined amongst the CRS on your system.

Use the New button in the Projected CRS editor to create a new ProjCRS:

V Projected	CRS Editor		_ O X	
Owne	ehn) I	Name	V	
	2277 3033 3032 02107 2275 32138 2776 3214 2279 32140 2278	NAD83 / Texas Centra, iffUS) NAD83 / Texas Centric À bers Equa NAD83 / Texas Centric A bers Equa NAD83 / Texas North (fUS) NAD83 / Texas North (fUS) NAD83 / Texas North Central NAD83 / Texas South Central NAD83 / Texas South (fUS) NAD83 / Texas South Central NAD83 / Texas South Central	Ial Area onformal	
1 ž	3131	New Projected CRS		
	2231 32142	CRS 1le Project 💌	ps_project_crs sdb	
Owner	EPS	Name: Geographic CRS		
Nanie. Geographi	CRS NAD	Frojection		
Frojection	SPCS			
Close	New.	<u>OK.</u>		<u>H</u> elp

As long as you have the appropriate privileges, you can create projected CRS both at the Project and the Site level. The 'CRS File' window notes where the CRS will ultimately be stored. If you are just experimenting with some parameters, then you should restrict your projected CRS to being at the project level. On the other hand, if the analysis is part of a long term corporate interpretation, or the mapping is an extension of existing corporate standards, then you may want to define the projected CRS at the site level.

When assigning a name, take into account existing standards both at the EPSG and your company level.

Pick the geographic CRS within which your ProjCRS is to be defined. This establishes the geodetic datum. In general, you would use the established GeogCRS for other work in this project unless there is a really good reason not to.

Now pick the projection to be applied within this GeogCRS to create your ProjCRS. The list of existing projections is displayed. You can click on the column headers to sort the list for easier selection. For example, if you are looking for Lambert projections, click on the 'Type' column header so that you can scroll to the part of the list that contains all Lambert projections.

Each of the established projections is the combination of a projection type with a specific set of parameters, which usually tie that projection down to it's use within a particular latitude and longitude range.

If the projection that you need is not there as yet, then use the 'New' button to create an additional projection around one of the supported projection types. This is described in the help topic <u>ProjCRS Editor - Projections</u>.

ProjCRS Editor - Projections

Projected CRS Editor/Projection ... New

A new projection can be created when the required combination of projection type and parameters does not yet exist. This will usually be where a projection type is to be applied in an area where it has not been used before, or covering a significantly different extent.

Creation of a new projection is usually triggered from the projected CRS editor:



Use the New button at the foot of this screen to define a new projection:

`	Projecte	d CRS E	ditor							×			
ГÍ	♥ Proje	ction Ed	itor									x (
Ē		wner	Code			Nan	ne		$\overline{\nabla}$			Ту	
			16124	UTM zo	ne 24S					Transverse M	lercator	$\overline{\Delta}$	
		New P	rojection										o x
		CRS fil	e	Site	•	/ps_rels/	petro:	sys/local/ps_si	ite_crs.sdb				
	8	Project	ion Name										
		Project	ion type	Fransve	rse Mercator		-	Remarks					EN
		Referen	nce latitude										Ĩ
		Central Sector	l meridian Teotor			_							
ſ		Ealse r	actor easting			_							
		False r	northing			_							
	Proi	Units	Ť	Metres	•								
	Proj												
1	Proj												
Ľ	Refe												
	Cen												
	Sca	<u>O</u> K	<u>C</u> ancel									Hel	lp
	False	northing	,										
	Units	nonuning	, o Metr	es 💌]								
	Clo	ise	New	Save	Save As	Delete						1	

Select the appropriate projection type, then enter the parameters appropriate to that projection type. The dialogue for projection parameters will vary in accordance with the requirements of the selected projection type.

See the help on <u>PROJCRS - PROJECTION TYPE</u> for more information on specific parameters.

Reporting Your CRS Use

It's important to report the coordinate reference systems used in your maps, reports and data sets.

CRS Information in Scale Bars and Title Blocks

You can include the projected and geographic CRS names and codes in custom scale bars and title blocks using the CGM clear text substitution strings:

MAP.PROJECTED_CRS_CODE	EPSG code for projected CRS
MAP.PROJECTED_CRS_NAME	Name of projected CRS
MAP.GEOGRAPHIC_CRS_CODE	EPSG code for geographic CRS
MAP.GEOGRAPHIC_CRS_NAME	Name of geographic CRS
MAP.CRS_WKT	Full well known text string for all parameters in the projected CRS. This is a long string which may not work correctly in title blocks.

Including a string such as

ProjCRS: <<MAP.PROJECTED_CRS_NAME>> (epsg <<MAP.PROJECTED_CRS_CODE>>)

in the 'footer text' part of a custom scale bar (using Edit/Scale-bar in the mapping, then picking that custom scale bar as part of the Mapsheet/Layout, or by using Display/Scale-bar), you will get a scale bar which includes ProjCRS information:



Text substitution has been used in the Petrosys example title block PetrosysTitleBlock16.cgm, which is shipped in the \$ps_misc area, to show CRS information in the title block footer:

	Example	title block of CRS paramete	
	www.pel	rosys.com.au	
Units: Units: Metres	Scale 110000		ate : April 25, 2007
Emjected CRE 1 CEA14 / VCA	zone 54 (epsg 28354)	l Dranner by ∨	opped by :
Daturni, GDA94 using r	G.R. S. 1930 apt eru d	Mapsheet GLENELG OFFLAF	
		Mapfie: clenelq basemapich	m

CRS Information in Gridding, Volumetrics and other XML Reports

The projected CRS is extremely important in gridding and volumetrics, as the spatial information is based on scaled values that have been computed through a projection and based on a given datum.

In a Petrosys gridding workflow task list XML or workflow log XML file all CRS information involved in the workflow is included at appropriate levels of the XML, and should be taken into account when this XML is published.

Most of the XML tags involving the CRS will have the upper case string CRS as part of their name.

For example, in a grid workflow log XML, information about the projected CRS applied in the output grid is available both as the CRS name and as the well known text (the quotes have been expanded from " to ', and the text has been wrapped, for clarity in this example):

```
<OutputProjectedCRS>
 PROJCS['AGD84 / AMG zone 48',
   GEOGCS['AGD84',
      DATUM['Australian Geodetic Datum 1984'.
        SPHEROID['Australian National Spheroid',6378160,298.25,
         AUTHORITY['EPSG','7003']
        1.
        AUTHORITY['EPSG','6203']
      1.
      PRIMEM['Greenwich',0],
      UNIT['degree',0.0174532925199433],
      AUTHORITY['EPSG','4203']
    1.
   PROJECTION['Transverse_Mercator',
     AUTHORITY['EPSG','17448']
    1
   PARAMETER['latitude_of_origin',0],
   PARAMETER['central_meridian',105],
   PARAMETER['scale_factor',0.9996],
```

```
PARAMETER['false_easting',500000],
PARAMETER['false_northing',10000000],
UNIT['metre',1],
AUTHORITY['EPSG','20348']
]
</OutputProjectedCRS>
<OutputProjectedCRSName>
AGD84 / AMG zone 48
</OutputProjectedCRSName>
```

Setting CRS in Existing Files

File/Maintain/CRS/Assign CRS to files

File/Maintain/CRS/Convert project coordinates

It is important to upgrade existing data stores so that they have an explicit knowledge of CRS embedded in them.

See <u>Petrosys Data Store CRS References</u> for a description of files that can support storage of CRS information.

Files created by Petrosys 16 and later will contain CRS information if the file supports this.

Files created by earlier versions of Petrosys can be updated to include a CRS using individual header editors such as the polygon header editor; or they can be upgraded using one of the two bulk editing options File/Maintain/CRS/Assign CRS to files and File/Maintain/CRS/Convert project coordinates.

Assigning CRS to a Group of Files

The recommended way of setting CRS to a collection of files from the same spatial context is to use the option File/Maintain/CRS/Assign CRS to files.

Assign CRS to Petrosy	s data source	- 0 ×
File selection method:	Jse file listing	
	/users/voiker/dev/pmsumm/ship_tesv/dump_tesv/ire_iist.txt	
Projected CRS	NAD83 / UTM zone 16N	
☐ Overwrite existing	project default projected CRS 🛛 🖉 Overwrite CRS in data source	
📕 Backup files	Verwrite existing backup	
Backup mode:	Use mirrored file 💌	
Backup root directory		
<u> </u>	Trial run Actual run	
	pick a file list containing the names of the files you want to convert.	
Close	pick a life list containing the names of the files you want to convert.	Help

This will convert all relevant files in a given directory, or files listed in a text file, to having a single projected CRS (or the associated GeogCRS) assigned to them.

If you are uncertain of the status of CRS implementation in a project, uncheck the option to overwrite CRS in the data source. This will preserve any previously converted or computed CRS information and only modify those files not yet assigned a CRS.

In general you should use both the backup files option and do a trial run.

The assign CRS option assigns a new CRS without taking into account any existing knowledge of the CRS in a file, and does not need the project default CRS.

Converting Project Coordinates

The option File/Maintain/CRS/Convert project coordinates will also assign a single CRS to a group of files, however it will convert the coordinates in the files from any existing or default CRS to do so. Control is similar to that of the Assign option, but you are also reminded to review the project default CRS as this will be applied as the 'input' CRS for any files in which the CRS has not yet been defined:

Coordinate context conversior	n. """"""""""""""""""""""""""""""""""""	×
File selection method:	Use file listing	
	/users/volker/dev/pmsumm/ship_test/dump_test/file_list.txt	
Project default projected CRS	Default (NAD27 / UTM zone 15N)	
Output projected CRS	NAD83 / UTM zone 16N	
☐ Overwrite existing project	default projected CRS	
📕 Backup files	Verwrite existing backup	
Backup mode:	Use mirrored file	
Backup root directory		
🔲 Resample grid to new proj	ected CRS 🔄 Resize grid	
Trial r	un Actual run	
	pick a file list containing the names of the files you want to convert.	
Close		<u>H</u> elp

The 'convert project coordinates' option should NOT, in general, be used in upgrading projects from pre-CRS to post-CRS versions of Petrosys, as it is slower and may modify the coordinate data itself, in other words it will apply a datum conversion if the project default datum or the datums in existing files are different to the output datum; and an easting-northing conversion of projected coordinates if there is a mismatch in the projected CRS.

Grid origin and node locations will change when coordinates are converted. The 'resample grid' option can be used to ensure that the new grid reflects the underlying data in the same way as the version in the original CRS, albeit with different grid cell locations.