

MUJI

EYELASH CURLER
Model KLC-R940

User's Manual

- Thank you for your purchase.
- In order to use this product properly, please first read this User's Manual before use.
- Please keep this User's Manual stored in a handy location even after reading it, and refer to it when necessary.

Safety advice	1-2
Part names	3
Inserting the battery	4
How to use	5
Handy techniques	6
Concerning maintenance and storage	7
Note (for Europe)	8



Accessory
User's Manual (This sheet)

Safety advice

- * Prior to use, please thoroughly read and follow these safety instructions.
- * The precautions in this User's Manual are listed in order for the product to be used safely and to prevent injuries and material losses to yourself or others. The precautions are divided into 2 categories, "Warning" and "Caution", based on the scale of damage that might occur from incorrect handling. Please follow these precautions as they are all important safety instructions.




- WARNING** WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
- CAUTION** CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Meaning of symbols and examples



-  This symbol indicates prohibited conduct. Details on the prohibited conduct will be drawn and described in and around the symbol. (The symbol on the left indicates "disassembly prohibited")
-  This symbol indicates compulsory items. Details on the compulsory conduct will be drawn and described in the symbol. (The symbol on the left indicates "unplug from power socket")


- * Please keep this User's Manual stored in a handy location even after reading it, and refer to it when necessary.

Warning

-  Do not perform modifications. Do not perform disassembly. This may cause fire, electric shock or injury.
-  Do not allow children to use unattended, or use within reach of infant's hands. This may cause electric shock or injury.
-  Do not splash water on the product. Do not use with wet hands. This may cause a short-circuit or electric shock.

Caution


-  Do not leave product immersed in water. Do not store in locations with high humidity such as bathrooms. This may cause a short-circuit or electric shock.
-  Do not drop or knock the product. This may cause electric shock or fire.
- Do not use for purposes other than the maintenance of eyelashes. Do not use on infants. This may cause injury or malfunction.
- Do not hold the comb against the eyelids.
- Stop use if abnormalities occur in eyes.
- Do not use while wearing contact lenses.
- Do not place in locations open to the general public.
- Do not share the curler with family members or others.

-  Always check the condition of the comb (deformities or damages) before using. If not, this may cause injury to the eyes or eyelids.

Part names

KLC-R940

Body

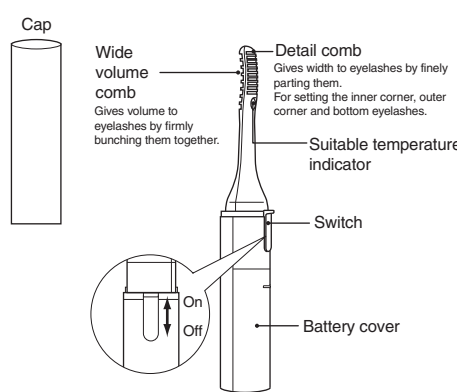

Specifications

Power source	DC1.5V AAA/LR03 Battery x1 (Sold separately)
Size	Approx. 17(W) x 17(D) x 130(H) mm
Product weight	Approx. 20g (without batteries)

Battery life (Estimate) |||||
1 AAA/R03 battery, if used once a day for 3 minutes, can last approx. 2 weeks.
Varies based on maintenance and surrounding temperature.

Inserting the battery

- Please ensure that the switch is turned off.

- Caution** Please wipe the body dry when it is wet.

- 1 Pull the battery cover in the direction indicated by the arrow.
- 2 Insert the battery according to the sign in the battery case and reattach the cover.

- Caution**
 - Do not reverse the negative and positive ends.
 - Use only alkaline batteries.
 - When there is difficulty curling the eyelashes or when the color of the suitable temperature indicator does not change, please exchange the battery with a new AAA/LR03 alkaline battery.

Caution when handling the battery


- Please obey the following. If not, these may cause injury or damage to the surroundings due to overheating, rupture or leakage of the battery.
- Use only alkaline batteries
 - Obey the cautions labeled on the batteries
 - Insert the battery correctly, taking note of the +/- ends
 - Remove the used batteries immediately and dispose of it according to your local rules
 - Remove the batteries when the product will not be used for a long time
 - Only use batteries that are still within their recommended usage period
 - Do not throw into fire

How to use

- Use at room temperature between 15°C ~ 35°C (59°F ~ 95°F).

1 Remove the cap and turn the switch on.

- It will take the Suitable Temperature Indicator approx. 2 ~ 3 minutes to change from black to blue. (At room temperature of 25°C)
- As long as a portion of the indicator turns from black to blue, the product is ready for use. (The change in color may take longer if the room temperature or battery level is low.)

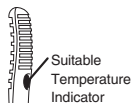

2 Curl eyelashes (refer to Handy Techniques)

After use

- Turn the switch off and reattach the cap.

Handy techniques

Upper eyelashes

- 2 styles can be created by using the different combs.

Volume style


- A style with lots of volume created by bunching the eyelashes
- Combs used
Step 1 → Wide volume comb
Step 2 → Wide volume comb

Separate style

- A style with lots of width created by finely parting the eyelashes
- Combs used
Step 1 → Wide volume comb
Step 2 → Detail comb

Step1

- Apply the comb for approx. 3 seconds on the roots (①), pull the eyelashes upwards and apply for approx. 3 seconds (②).

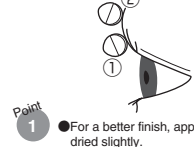


Step2

- Move the comb slowly from the roots to the tip (①), and lightly push (②) the ends of the eyelashes.



Inner and outer corners

- Using the **Detail comb**, lightly push the eyelashes from the roots to the tip.

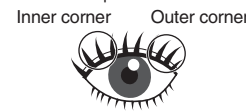

Lower eyelashes

- Using the **Detail comb**, slowly move downwards from the roots to the tip.



Regarding mascara

- Using the product immediately after applying mascara may cause the mascara to be removed.
- Do not apply too much mascara.
- Allow some time for the mascara to dry.


- Caution**
 - In order not to injure the eyes or eyelids, please use the product in front of a mirror.
 - Do not apply the comb on the eyelids. If the comb comes in contact with skin and the comb feels hot, immediately rinse with cold water.

Concerning maintenance and storage

- Please ensure that the switch is turned off.

Concerning maintenance

- If the exterior of the body becomes dirty, remove the dirt by wiping with a dry cloth.
- If the comb becomes dirty, remove the dirt by cleaning with a dry cotton swab. (Ensure that the cotton does not remain on the comb after cleaning.)

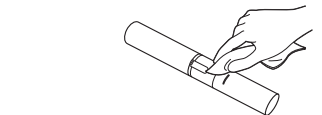

Caution

- Do not wash with water.
- Never use Benzene or paint thinners.

Storage

- Store in a location out of reach of small children.
- Do not store in locations with high humidity such as bathrooms, or in locations exposed to direct sunlight.



This product complies with the EMC requirements of the European Community.



The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

MEMO