



# Countertop Bluetooth® Speaker

Model: ITSB-332



## INSTRUCTION MANUAL

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USING  
AND KEEP IT FOR FUTURE REFERENCE



## TABLE OF CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>2</b>
<b>USAGE</b> .....	<b>5</b>
<i>BUTTONS AND CONTROLS</i> .....	5
<i>IN THE BOX</i> .....	5
<i>USB CHARGING</i> .....	6
<i>TURN ON/OFF THE APPARATUS</i> .....	6
<i>FUNCTION SELECTION AND INDICATION</i> .....	6
<i>BLUETOOTH CONNECTIVITY</i> .....	6
<i>CONTROLLING YOUR EXTERNAL DEVICE</i> .....	7
<i>AUX-IN FUNCTION</i> .....	7
<b>TROUBLESHOOTING</b> .....	<b>7</b>
<b>SPECIFICATIONS</b> .....	<b>8</b>
<b>FCC STATEMENT &amp; OTHER WARNINGS</b> .....	<b>9-10</b>

## IMPORTANT SAFETY INSTRUCTIONS



**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Also, do not remove the cover or back. No user serviceable parts inside. Refer servicing to qualified service personnel.



The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

**Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.**

1. **Read these instructions** - All safety and operating instructions should be read before the product is operated.
2. **Keep these instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed all warnings** - All warnings on the product and in the operating instruction

manual should be adhered to.

4. **Follow these instructions** - All operating and use instructions should be followed.
5. **Do not use this apparatus near water** - Do not use the product near water and moisture, for example: near a bathtub, washbowl, and kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
6. **Clean only with dry cloth** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. Placing the product on a bed, sofa, rug or other similar surface, should never block the openings. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.
15. **Power source** - The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. **Power lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken keep from touching such power lines or circuits as contact with them might be fatal.
17. **Overloading** - Do not overload wall outlets and extension cords as this can result in a risk or fire or electric shock.



Portable Cart Warning

18. **Object and liquid entry** - Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
19. **Outdoor antenna grounding** - If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges, section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.
20. **Service** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified servicing personnel.
21. **Replacement parts** - When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.
22. **Safety check** - Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. The marking information is located at the bottom of the apparatus.
24. **Wall or ceiling mounting** - The product should be mounted to a wall or ceiling only as recommend by the manufacturer.
25. **Damage requiring service** - Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A: when the power-supply cord or plug is damaged.
  - B: if liquid has been spilled or objects have fallen into the product.
  - C: if the product has been exposed to rain or water.
  - D: if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - E: If the product has been dropped or the cabinet damaged in any way.
  - F: when the product exhibits a distinct change in performance -this indicates a need for service.

**Warning:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.


**Caution:**

1. Use of controls and adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.
2. If this product develops trouble, contact qualified service centers, and do not use the product in a defective state.
3. Danger of explosion if battery is incorrectly replaced. Do not open or service the unit.

## USAGE

1. Before Use, choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact your dealer.
3. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
5. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as while on vacation.
6. Keep this manual in a safe place for future reference.

## BUTTONS AND CONTROLS

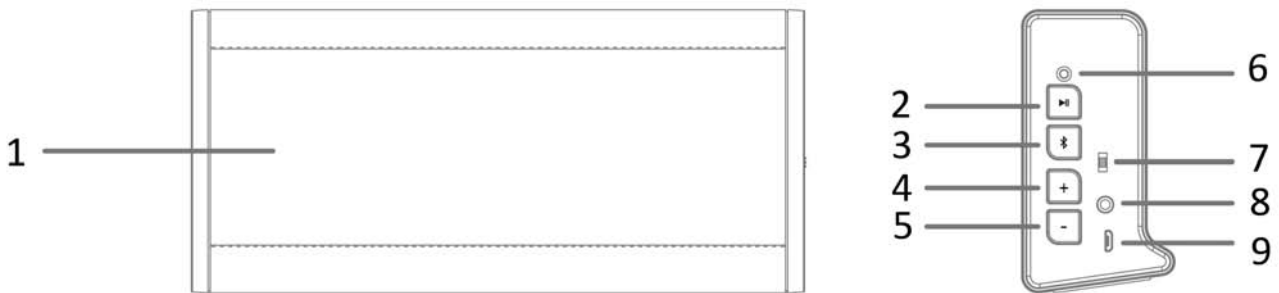

- |                               |                                    |
|-------------------------------|------------------------------------|
| 1. SPEAKER                    | 6. INDICATOR (RED AND GREEN LIGHT) |
| 2. ▶   PLAY/PAUSE BUTTON      | 7. ⏻ ON/OFF SLIDE SWITCH           |
| 3. 📶 BLUETOOTH BUTTON         | 8. AUX-IN SOCKET                   |
| 4. VOLUME + / NEXT BUTTON     | 9. MICRO USB CHARGING PORT         |
| 5. VOLUME – / PREVIOUS BUTTON |                                    |

## IN THE BOX

- 1x CONUNTERTOP BLUETOOTH SPEAKER
- 1x MICRO USB TO USB CHARGING CABLE
- 1x USER MANUAL

## USB CHARGING

Devices that have a Full Sized USB Port can charge the apparatus.

1. Plug the Micro USB cable into the Micro USB Charging Port of the apparatus.
2. Then plug the Full Sized USB end of the cable into a Full Sized USB Port; this can be a Computer or Laptop or any port with a USB Charge voltage of 5V.

**Note:** *The red indicator light will light up while charging. The red light will turn OFF once it is finished charging.*

## TURNING ON/OFF THE APPARATUS

- **Turning ON the unit**

Slide the on/off slide switch into the ON position to turn the unit on. The indicator will light up green or start flashing.

- **Turning OFF the unit**

Slide the on/off slide switch into the OFF position to turn off the unit.

## FUNCTION SELECTION AND INDICATION

- When there is no AUX-IN cable plugged into the AUX-IN socket, the unit is in Bluetooth mode.
  - The Green indicator will blink quickly, indicating that it is searching for a Bluetooth device.
  - The Green indicator will stay lit, indicating the Bluetooth connection is successful.
  - The Green indicator will blink slowly, indicating the music playback is successful.
- When the AUX-IN cable is plugged in, the unit is in AUX-IN mode.
  - The Green Indicator will stay lit.

## BLUETOOTH CONNECTIVITY

External devices, which have a built-in Bluetooth feature, can be connected to this unit to playback music through the speakers. To Use Bluetooth Mode follow these directions:

1. Turn the Unit ON and Select Bluetooth mode by pressing the Bluetooth Button.
2. While the Unit is ON, turn the Bluetooth Setting on your external device to ON.
3. Allow your External device to Search for the Unit.

**NOTE:** *The effective distance between your external device and this apparatus is 33 feet (10 meters).*

4. Wait a moment, then look for the "ITSB-332" under the Devices list of your external device. Press "ITSB-332" to connect.



**NOTE:** In Some instances a window will ask you for a password. Just type "0000", then press "OK" on your external device.

5. After a few moments you will hear a rising tune and the Green Indicator stay lit.

***You are now connected via Bluetooth!***

## **CONTROLLING YOUR EXTERNAL DEVICE**

*You can control your external device using this Speaker Unit via Bluetooth.*

1. The Green Indicator will stop flashing once your external device paired. (See “Bluetooth Connectivity”).
2. Turn ON the music player on your external device and press Play. Or press the  Play Button on the Speaker Unit to play.
3. Just press the - button to reduce the volume.
4. Just press the + button to increase the volume.
5. Press and hold the - button to restart the current song or go to a previous song.
6. Press and hold the + button to skip to the next song.
7. Press the  button to pause or play the current song.

**Note:** However, some buttons may not work due to the variable music player programs. (e.g. For some devices, pressing and holding the + button may go to the previous song. For other devices, it may restart the current song.)

## **AUX-IN FUNCTION**

The apparatus can play music from devices that have 3.5mm Aux-in Socket.

1. Plug the Aux-in Cable (not included) into the Aux-in Socket of the apparatus and plug the other end of Aux-in Cable into the Aux-in Socket of the computer or external device.
2. Turn ON the music player on your external device and press Play.
3. Press the + or - button to adjust volume.

**Note:** To control the playback operations please refer to your external device.

## **TROUBLESHOOTING**

### ***No power:***

- The battery may be used up. Connect the unit to a USB power source to charge it.


### ***Unable to connect to the speaker:***

- Check if the Bluetooth Indicator is flashing, please switch OFF the power, then switch ON and reconnect the device again.
- Check if the Bluetooth connection is activated on your Bluetooth device. If not, activate the connection. See “Bluetooth Connectivity”.

**Connected but no sound from Bluetooth source:**

- Check and make sure the AUX IN cable is connected. If it is, unplug the AUX IN cable.
- The Bluetooth connection may be out of working distance. Move it closer to the speaker so that it is in range.
- Check to see if your Bluetooth Source is in playback mode. If it is not, put it in playback mode.

**SPECIFICATIONS**

SPEAKER SYSTEM SECTION		
Type	.....	2-way
Impedance	.....	4 Ohm
Output Power	.....	2 x 2W
Frequency Response	.....	100 to 16,000 Hz
GENERAL		
Power Requirements	.....	The built-in lithium battery voltage 3.7V Lithium battery capacity:1000mA
Dimensions (W x H x D)	.....	220 x 101.5x 56.5 mm (approx.) 8.6 x 4 x 2.2 inches (approx.)
USB Charge	.....	USB charge voltage 5V  1A
Standard Accessories	.....	Operating Instruction USB cable
BLUETOOTH		
Bluetooth Version	.....	V2.1
Bluetooth Profiles	.....	HFP, A2DP, AVRCP
Bluetooth Frequency range	.....	2.4GHz-2.480GHz
Operating Distance	.....	10 meters (33 feet)

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Made in China.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
Other trademarks and trade names are those of their respective owners.



## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## CALIFORNIA PROP 65 WARNING

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address: <http://www.oehha.ca.gov/prop65.html>

## INDUSTRY CANADA

*This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

*Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.*

## WARRANTY

### **Innovative Technology Electronics Corp. Limited Warranty: 90 Days Labor, One Year Parts**

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is

determined to be defective at “No Charge”. It is further agreed that IT will cover the cost to repair or replace damaged “Parts” only for a total period of “One Year” from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent. **To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at [www.ithomeproducts.com](http://www.ithomeproducts.com) to request an RMA (Return Material Authorization) number to return products for service or replacement.** Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer “Must” include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser’s failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support).

Innovative Technology Electronics Corp.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

**Website for support: [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support)**

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.