

SMMCON Manual SMRCON Remote Servo Control Cabinet



SMRCON
Remote Control Cabinet



SMMCON
Manual Control Cabinet

PUSHCORP, INC.

Dallas, Texas

Table of Contents

| | |
|---|----------|
| 1.0 LIMITED WARRANTY | 2 |
| 2.0 GENERAL OVERVIEW..... | 4 |
| 3.0 INSTALLATION..... | 4 |
| 3.1 Cabinet Mounting..... | 4 |
| 3.2 Electrical Connections..... | 5 |
| 4.0 OPERATION..... | 7 |
| 5.0 TECHNICAL SPECIFICATIONS AND SCHEMATICS..... | 9 |

1.0 Limited Warranty

Duration:

One year from date of delivery to the original purchaser.

Who gives this warranty (warrantor):

PushCorp, Inc.

Telephone: (972) 840-0208

Corporate Address:

P. O. Box 181915

Dallas, Texas 75218

Shipping Address:

3001 W. Kingsley Rd.

Garland, Texas 75041

Who receives this warranty (purchaser):

The original purchaser (other than for purposes of resale) of the *PushCorp, Inc.* product

What products are covered by this warranty:

Any *PushCorp, Inc.* Adjustable Force Device or Adjustable Force Device accessory supplied or manufactured by the Warrantor.

What is covered under this warranty:

Defects in material and/or workmanship which occur within the duration of the warranty period.

What is NOT covered in this warranty:

- A. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANT-ABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. ANY INCIDENTAL, INDIRECT, OR CONSEQUENTIAL LOSS, DAMAGE or EXPENSE THAT MAY RESULT FROM ANY DEFECT, FAILURE, MALFUNCTION OF THE *PUSHCORP, INC.* PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.
- C. Any failure that results from an accident, purchaser's abuse, neglect, unauthorized repair or failure to operate the products in accordance with the instructions provided in the owner's manual(s) supplied with the product.

Responsibilities of the Warrantor under this warranty:

Repair or replace, at Warrantor's option, products or components which have failed within the duration of the warranty period.

Responsibilities of the purchaser under this warranty:

- A. Deliver or ship the *PushCorp, Inc.* product or component to PushCorp, Inc. Service Center, Dallas, TX. Freight and insurance costs, if any, must be borne by the purchaser.
- B. Use reasonable care in the operation and maintenance of the product as described in the owner's manual(s).

When warrantor will perform repair or replacement under this warranty:

Repair or replacement will be scheduled and serviced according to the normal work flow at the service center, and depending on the availability of replacement parts. Purchasers requiring quicker repair may receive such with payment of a *PushCorp, Inc.* predetermined expediting fee.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

2.0 General Overview

The *PushCorp* SMMCON and SMRCON control cabinets provide a highly integrated, easy to use solution to controlling *PushCorp* servomotor equipment. Installation is simply a matter of mounting the cabinet and connecting 3-phase, 208 – 480VAC, electrical power. The SMRCON Remote Control Console allows servo equipment to be controlled via a remote PLC or robot controller with a minimum number of digital and analog I/O. The SMMCON Manual Control Console has front panel displays and controls so that the servomotor equipment can be easily controlled and monitored by a human operator.

3.0 Installation

3.1 Cabinet Mounting

The cabinet is designed to be wall mounted outside the robot work area in a relatively clean environment. Figure 1 shows the mounting dimensions of the electrical enclosure.

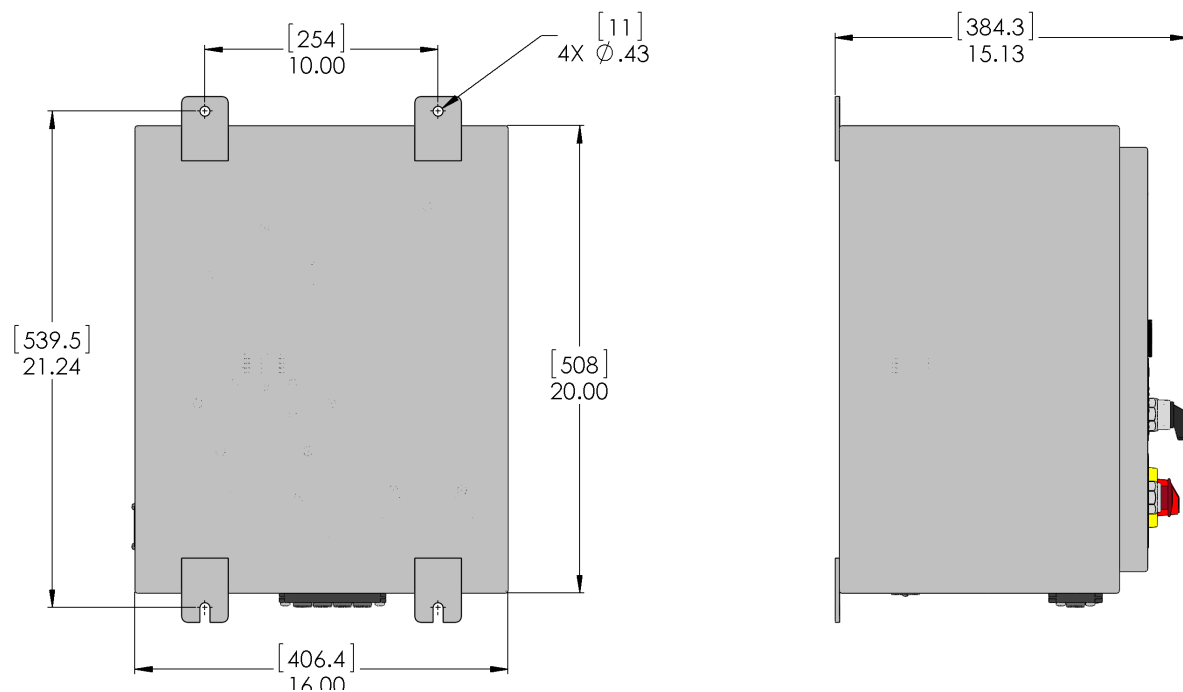


Figure 1. Cabinet Mounting

It is the responsibility of the installer to punch holes in the enclosure for conduit and/or cord grips as required for the electrical supply power wiring and low-voltage control signals.

3.2 Electrical Connections

The cabinet requires 208 - 480 VAC, 3-Phase, 50-60 Hz. power to operate. This should be supplied via conduit connection to the cabinet as shown in Figure 2. The control signal connections are made to the External Interface Blocks as shown in Figure 3.

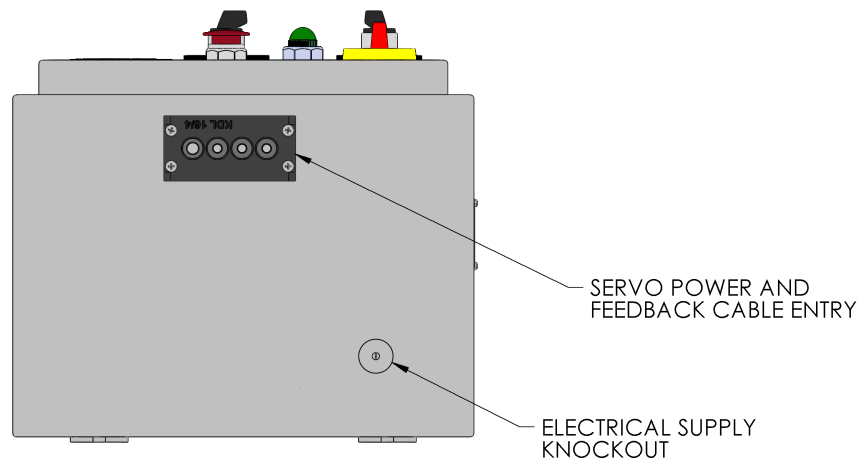


Figure 2. Electrical cable entry locations

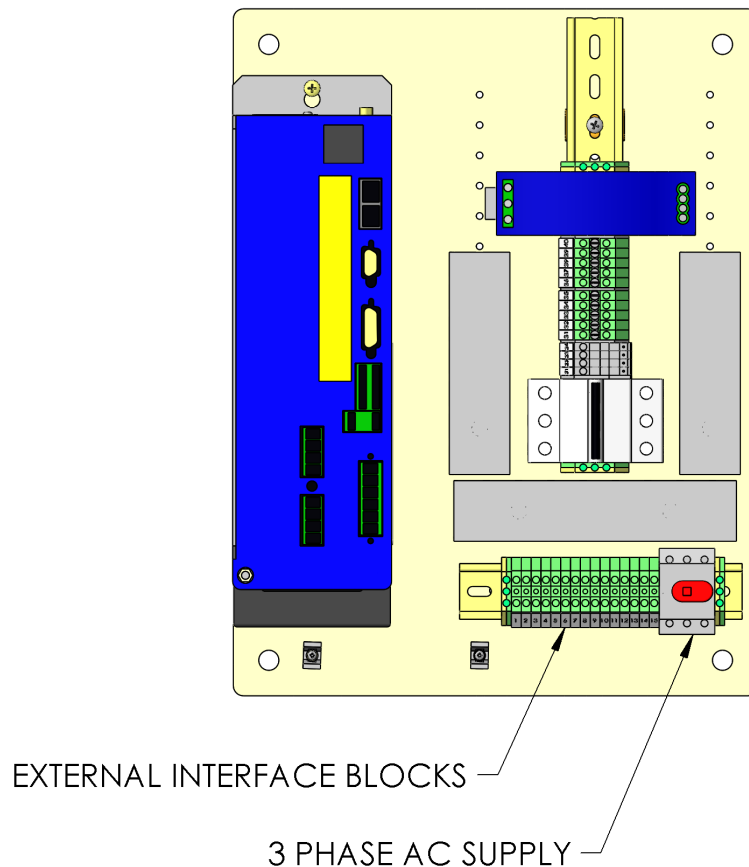


Figure 3. Console electrical panel

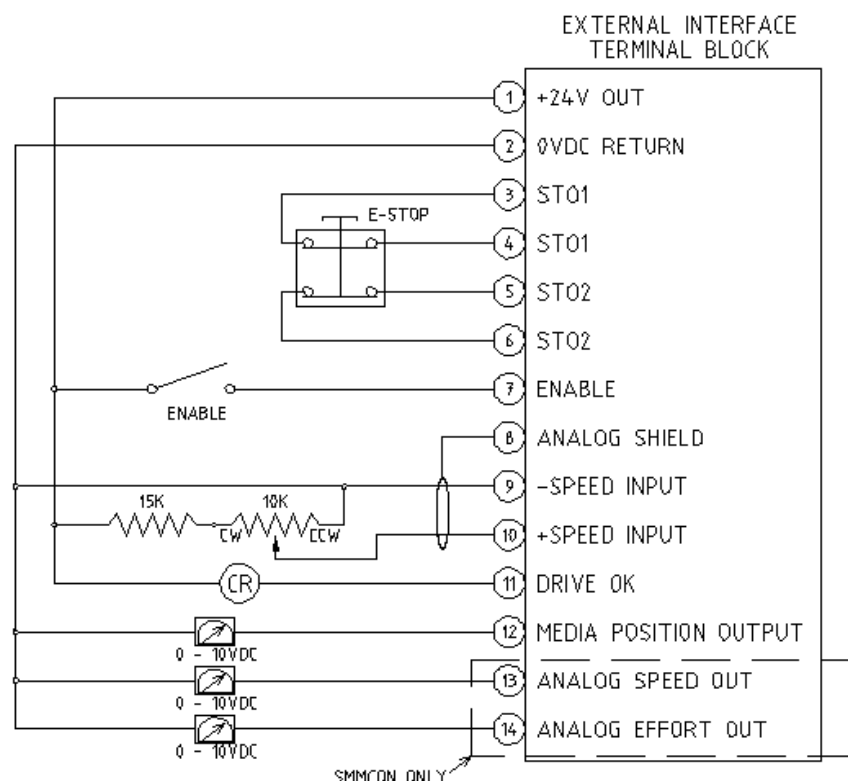


Figure 4. Typical External Interface Schematic

The circuit diagram in Figure 4 shows an example of how the SMRCON (Remote) cabinet could be wired for operation. The SMMCON (Manual) cabinet already includes these elements on the front panel for control. **All digital I/O is designed for 24 VDC control voltages.**

The motor rotational speed is controlled via a 0 - 10VDC analog signal applied to terminals 9 and 10. The analog input is a true floating differential signal connected directly to the servo amplifier. The circuit shown in Figure 4 is an example of how the shaft speed may be controlled with a simple panel mount linear potentiometer. If remote robot teach pendent adjustment is desired, the potentiometer would be replaced with an analog signal from a PLC or robot analog output card connected directly to Pins 9 and 10.

WARNING: The differential voltage applied to terminals 9 and 10 should not exceed 10 VDC or damage will occur to the servo amplifier.

Terminal 7, shown in Figure 4 provides the servo amplifier enable signal. Connecting Terminal 7 to +24VDC enables the servo amplifier and applies voltage to the servo motor. Removing voltage from terminal 7 disables the amplifier.

The “DRIVE OK” output on Terminal 11 should be continuously monitored by the End-user control system. This signal should be “ON” during normal operation. An “OFF” condition indicates a drive fault. The cause of the fault will be indicated by a flashing code on the servo drive amplifier. The end-users should contact *PushCorp* directly for support regarding drive amplifier faults.

OPERATION SHOULD CEASE UNTIL THE FAULT CONDITION IS CORRECTED.

Each Electrical Control box includes a built-in E-Stop push button that, when pressed, immediately removes all electrical power from the motor causing it to coast to a stop. If desired, the control box can be connected to an external, dual-channel, E-Stop circuit by connecting to the STO1 and STO2 signals on Terminals 3, 4, 5, and 6 as shown.

It is the responsibility of the System Integrator and/or End-user to follow all applicable electrical codes and OSHA safety standards when wiring the control cabinet. This includes the proper and judicious use of ground termination, fuses, contactors, cut-off switches, lock-out switches, and Emergency Stop circuits. PushCorp, Inc. assumes no responsibility or liability for the electrical system design and implementation of the control cabinet in the End-user application. Refer to OSHA rules and regulations, as well as the CE Machinery Regulations (IEC 204-1), when designing systems that include motors and drives to ensure that the user is protected.

PushCorp will provide answers to any questions regarding the servo drive system and will be responsible for any warranty issues.

NOTE: Please contact PushCorp, Inc. (Tel 1.972.840.0208) directly for any technical support.

4.0 Operation

Figures 5 and 6 below show the front panel layout for the SMRCON Remote Control Cabinet and SMMCON Manual Control Cabinet respectively. The SMRCON, being designed exclusively for remote control, includes only an Main Power switch and an Emergency Stop (E-STOP) button.

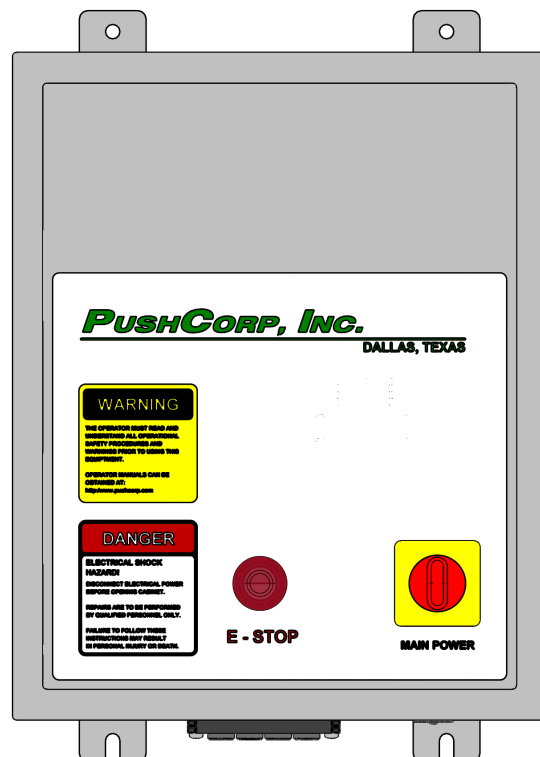


Figure 5. SMRCON Remote Control Cabinet Front Panel

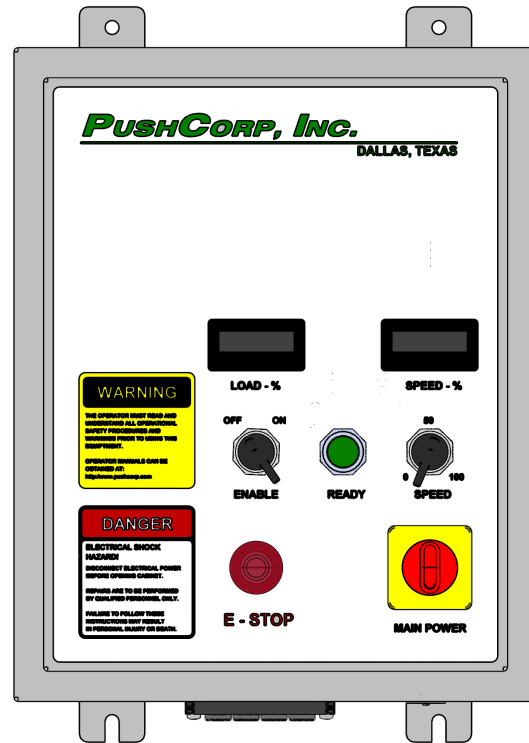


Figure 6. SMMCON Manual Control Cabinet Front Panel

The SMMCON cabinet includes additional controls and digital indicators that allow the servo equipment to be operated manually.

INDICATORS

LOAD – Digital percentage display of maximum rated “load” (Output Torque) at which the motor is operating. It is recommended that the long-term continuous load not exceed 70% for reliable operation in production environments.

SPEED – Digital percentage display of maximum rated speed at which the motor is operating.

READY – When illuminated, indicates that the servomotor is ready to operate. If not illuminated, a fault exists. The fault can be reset by disabling and then re-enabling the servo system via the Enable switch.

CONTROLS

ENABLE – The Enable switch enables or disables output power to the servomotor.


DANGER!!! THE CONSOLE ENABLE SWITCH SHOULD ONLY BE “ON” WHEN THE SERVOMOTOR POWER CABLE IS FULLY CONNECTED TO THE SERVOMOTOR. ENABLING THE SERVOMOTOR POWER WHILE DISCONNECTED COULD RESULT IN INJURY OR DEATH.

SPEED – The control knob allows the speed to be set from zero to 100% of the maximum rated speed of the servomotor. The speed can be varied at any time while the servomotor is enabled or disabled. The actual measured percent speed will be displayed on the digital Speed indicator.

5.0 Technical Specifications and Schematics

Supply Voltage: 208 - 480 VAC, 3-Phase
Max. Cont. Current: 30 Amps
Max. Peak Current: 60 Amps (2 Seconds)

Specifications subject to change without notice.

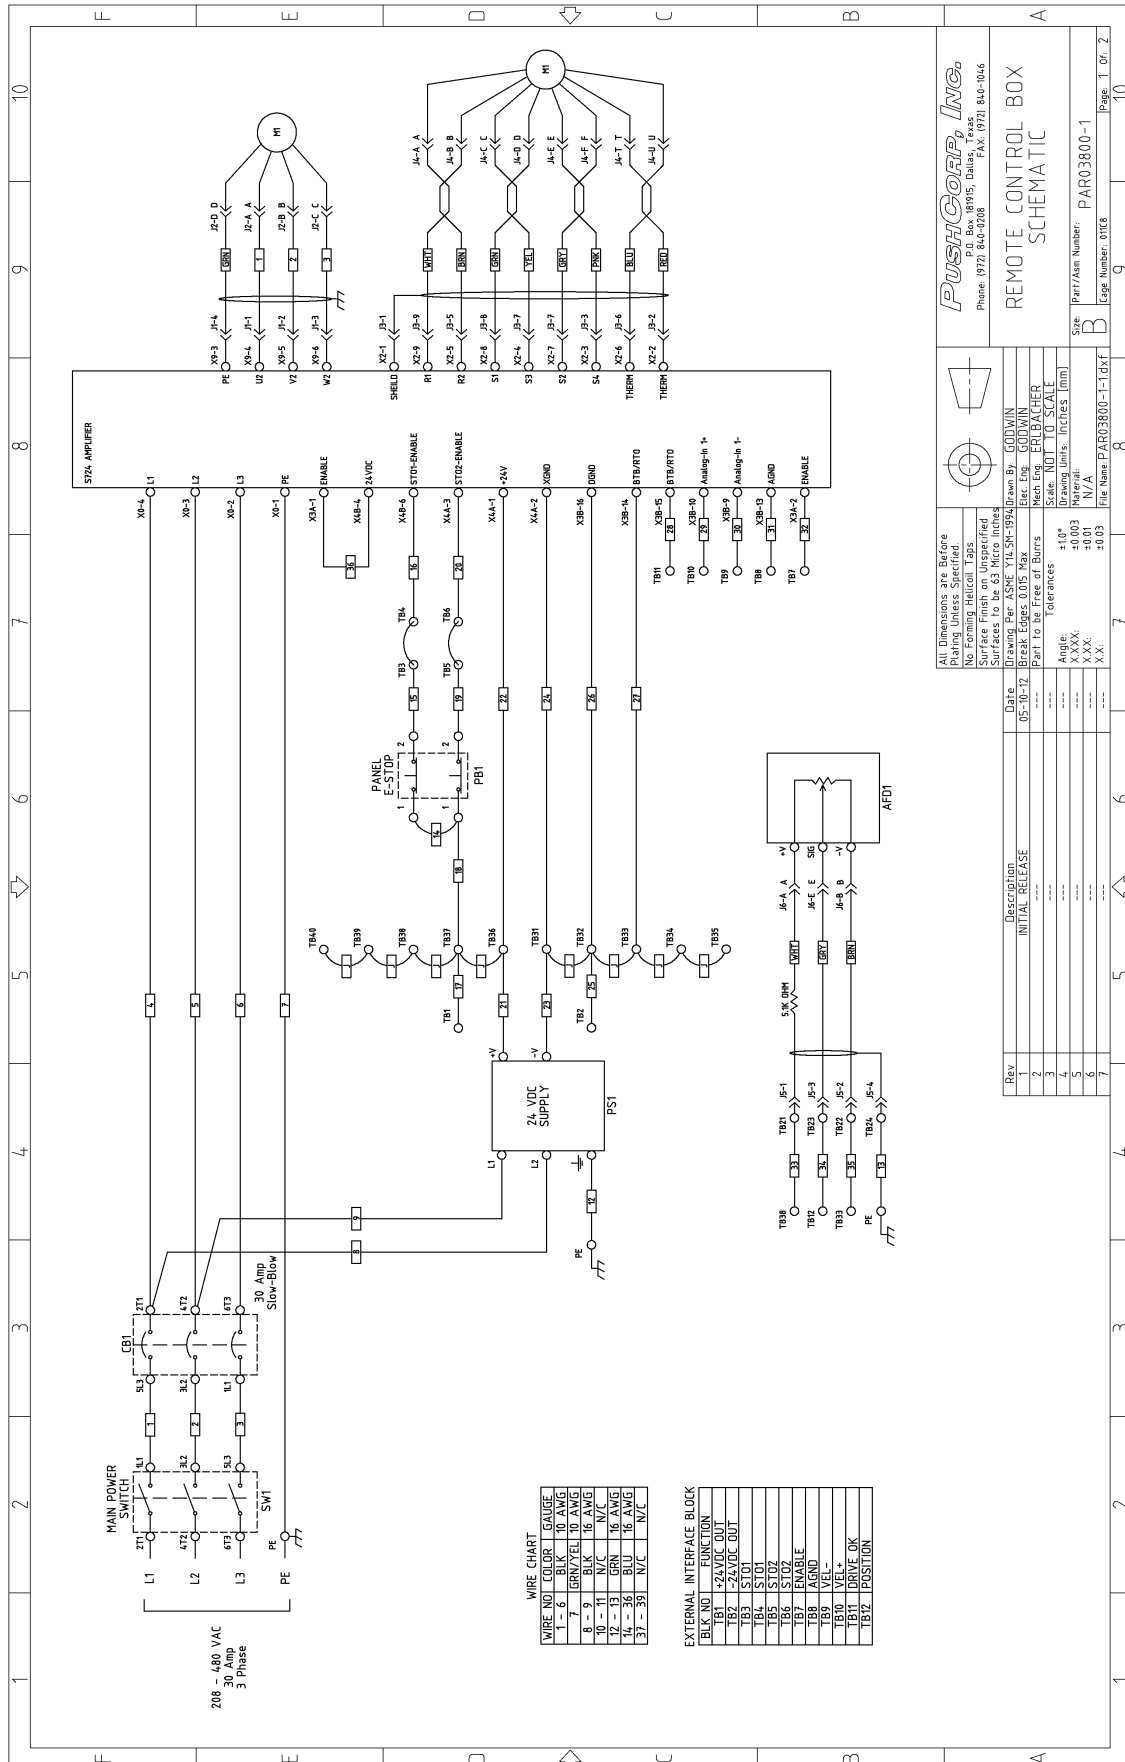

PUSHCORP, INC.
P.O. Box 18915, Dallas, Texas
Phone: (972) 840-9208 FAX: (972) 840-9446



All Dimensions are Before
Plating Unless Specified.
Surface Finish on Unspecified
No Forming Helical Taps

DATE
05-10-12

DESCRIPTION
INITIAL RELEASE

Rev
1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

